

# GREETINGS

---

## **Thank you for purchasing OPPO products!**

This user manual lends support for you to operate this player securely, so please read it carefully before operating.

After purchasing this machine, do not forget to register on [www.oppo.com](http://www.oppo.com) to get rights as a VIP user.

After registration to be a VIP user on official website of OPPO, you can enjoy following rights.

1. OPPO professional technical workers serve 12 hours online to solve your player problems.
2. Download amounts of videos for free without format switch, which can be played directly by OPPO player.
3. Enjoy preference participation of OPPO online, outline activities.
4. VIP email service. You can get the latest news through your email address you provide in registration, such as latest information about products, firmware upgrading, promotion information.

This player is produced according to Q/OPPO 1004-2006 corporation standard.

# PRECAUTIONS

---

## WORKING DIRECTIONS

- Avoid places with too high temperature (above 35°C), too low temperature (below -5°C) or too much humidity.
- Never strike this player severely and never place heavy objects on it.
- Prevent foreign materials entering this player.
- Never touch chemical materials such as benzene or thinner.
- Prevent from splashing or dripping.
- Keep away from direct beam or heat emission objects.
- Keep away from ash-rich places.
- Never disassemble, repair or refit by yourself.

## ABOUT TRAFFIC SAFETY

- Do not use headphones when riding bicycle or motorcycle, for it is very dangerous and that you are likely to go against traffic rules. When walking (especially through zebra lines), it will be very dangerous if the headphone volume is too large.

## HEARING PROTECTION

- According to doctor's suggestion, if you listen in too high volume for a long time, your hearing will probably be damaged. When tinnitus appears, please decrease volume or stop using.

## WORKING DIRECTIONS OF LITHIUM BATTERY

- If you do not change with correct battery, explosion will occur. You can only change with the same type or the equal effect battery.
- To avoid the performance of lithium battery decreasing, please charge on a regular basis (at least once in a month).
- If you do not use for a long time, the battery capacity may probably be too low that you can not power on. Please charge it for half an hour before using it.

All images in this manual are sketch illustrations for reference only, please reference to player for details.

# CONTENTS

---

## CHAPTER ONE QUICK OPERATION

BUTTONS AND JACKS ILLUSTRATION .....	4
POWER ON / OFF .....	6
USE MOBILE STORAGE FUNCTION .....	7
DISCONNECT USB SAFELY .....	7
CHARGE .....	8
RESET .....	8
HOW TO PUT IN/OUT MICRO SDCARD .....	9

## CHAPTER TWO USAGE INTRODUCTION

MAIN MENU ILLUSTRATION .....	10
MUSIC PLAYING INTERFACE ILLUSTRATION .....	11
VIDEO PLAYING INTERFACE ILLUSTRATION .....	12
TUNING INTERFACE ILLUSTRATION .....	12
RECORDING INTERFACE ILLUSTRATION .....	13

## CHAPTER THREE BASIC OPERATION

PLAY MUSIC .....	14
MEDIA UPDATING .....	15
A-B REPEAT FUNCTION .....	16
SEARCH MUSIC .....	16
EQ MODE .....	17
MY EQ SETUP .....	17
MICROSOFT EQ SETUP .....	18
PLAYING MODE, SCREEN DISPLAY .....	19
VIDEO PLAYING .....	21
BROWSE PICTURE .....	22
PICTURE SETUP .....	22

# CONTENTS

---

BREAKPOINT PLAY	23
RESOURCE MANAGER	23
RECORDING	25
TUNING	26
E-BOOK BROWSING	29
E-BOOK SETUP	29
ADDITIONAL FUNCTIONS	32

 
## CHAPTER FOUR SETUP




DISPLAY SETUP	33
DESKTOP SETUP	33
POWER ON PASSWORD	34
FILE ENCRYPTION	34
LANGUAGE SELECTION	35
CUSTOM MAIN MENU, MUSIC MENU	35
TIMING POWER- OFF	36
FACTORY SETTINGS	36
IMPORTANT PROMPT	36
DATE AND TIME	37
VOLUME RESTRICTION	37
SCREENSAVER ACTIVATION MODE	37
PRESS BUTTON CONTROL	38
SYSTEM INFORMATION	38
FIRMWARE UPGRADE	38

## CHAPTER FIVE OTHER INFORMATION

FORMAT	39
TROUBLESHOOTING	39
ADDITIONAL INFORMATION	41
SPECIFICATION	42
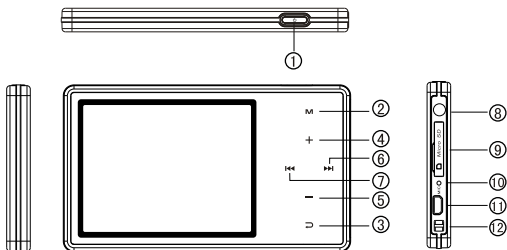
## QUICK OPERATION **BUTTONS AND JACKS ILLUSTRATION**



- ①  :
- Press for short in POWER OFF state → POWER ON
  - Press for long in POWER ON state → POWER OFF
  - Press for short in playing interface → pause/playing switch
  - Press for short in recording → pause recording
  - Press for short in stopwatch timing state → record time
  - Press for short in tuning state → mute
- ②  :
- Press for short when operating menu → enter into option or confirm setting
  - Press for short in stopwatch timing interface → pause timing / eliminate timing
  - Press for short in music playing, video, tuning, e-book browsing, picture browsing interface → eject online menu
- ③  :
- Press for long in music playing interface → A-B repeat
  - Press for short in file browsing interface → return to previous catalog
  - Press for short when operating menu → not save setting and exit menu
  - Press for long in picture, e-book, video playing interface → adjust brightness

## QUICK OPERATION **BUTTONS AND JACKS ILLUSTRATION**

⑤  ④  :

- Press for short in video, music playing or tuning interface → adjust volume
- Press when browsing e-book → turn over lines
- Press for short in "my EQ setup" → adjust db value
- Press for short in breakpoint playing interface → switch to choose breakpoint

⑦  . ⑥  :


- Press for short in playing interface → previous song/ next song
- Press for long in playing interface → fast backward/fast forward
- Press for short in tuning pre-set state → select channel
- Press for short in tuning searching state → searching channel by hand
- Press for long in tuning searching state → semi-automatic channel searching
- Press for short in "My EQ setup" → select frequency band which needs to be set
- Press for short in picture browsing → switch picture
- Press when browsing e-book → turn-over lines
- Press when operating menu → move cursor
- Press for short in breakpoint playing interface → switch the current breakpoint



⑧ Earphone Jack    ⑨ Micro SD Card Jack    ⑩ MIC: Microphone

⑪ USB Jack    ⑫ Hanging rope hole

- POWER ON



Press  button for short to power on, power-on picture appears and enters main menu.

If there is no power-on password, you need to input password and press  or  button for short to enter main menu.

- POWER OFF




Press  button for long to power off.


**NOTICE:**

- The player would automatically power off if playing, tuning or recording functions are not used in given time.

## BASIC OPERATION USE MOBILE STORAGE FUNCTION


This player may be used as mobile storage in Windows ME/2000/XP operating system. Under Windows 98SE operating system, the player may be used as mobile storage after drive program is being installed (please download it from OPPO official website).

Connect MP3 player and computer with USB transmission line. After the bottom right corner of desktop appears “” symbol, the mobile storage function of MP3 player may be used normally.


- NOTES:**
- To avoid abnormality of the player appears, you are suggested to power off firstly before connecting MP3 player with computer, and then use USB transmission line to connect MP3 player, then connect computer.
  - In Windows 98 system, there is no “” symbol.

## BASIC OPERATION DISCONNECT USB SAFELY

After operation finishes, click “” symbol on bottom right corner of Windows desktop with right button of mouse, and disconnect USB safely according to the computer prompt.

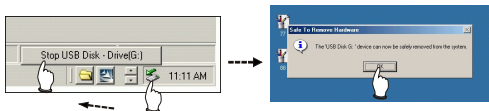



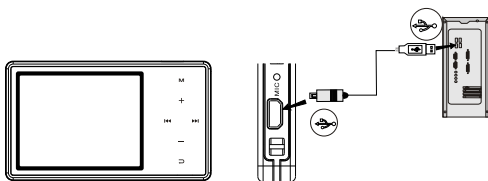

This player adopts lithium-ion battery to supply power. In any case, connect this player to computer with USB line, it will power on and begin to charge automatically. To charge this player fully by computer, it needs about 2.5 hours. After fully charged, the player will stop charging automatically.


Before unplugging USB transmission line, please stop using USB memory function firstly. Data may be lost or player may be damaged if you unplug it directly.

### CAUTION:

- When charging, the player body is slightly hot, and this belongs to normal phenomenon, so please take it easy to use it.
- When electric charge is too low and when USB power supply is lower than 100mA, it begins to charge, screen may probably have no display, and even battery charge is unavailable.


When this player cannot be operated, please reset it.

Method for reset:

Push  button for about 10 seconds. After reset finishes, power on again and you may use it normally.

## QUICK OPERATION **HOW TO PUT IN/OUT MICRO SD CARD**


1. Insert Micro SD card: use fingernail to take out glue plug gently and insert Micro SD card according to the following picture.

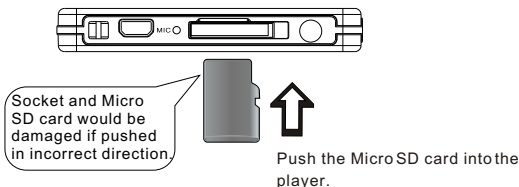

### **CAUTION:**

- There are various of Micro SD card in market, some of which are not supported, please try before you buy.

2. Take out Micro SD card: unplug glue plug, use force to press Micro SD card and it ejects.

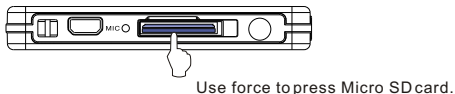

### **CAUTION:**

- To avoid damaging player or Micro SD card, please plug or unplug Micro SD card in power off state.
- Use forceps to take out Micro SD card if there is distortion, blot or other things, which may cause the Micro SD card can not eject smoothly.
- The maximum supported capacity of the Micro SD card is about 2GB.



- Music playing  
Save audio files



- Video  
Save video files



- Picture browsing  
Save picture files



- E-book  
Save text files



- Recording  
Select recording to  
enter recording  
mode



- Tuning  
Select to enter  
tuning mode



- Additional functions  
Select “additional  
functions” to enter  
calender, stopwatch  
and other modes.



 
- Settings  
Select “settings” to  
set system options.



- Resource manager  
Display all files.



- Breakpoint play  
Play from the place  
where the music,  
movie and e-book  
stopped last time.

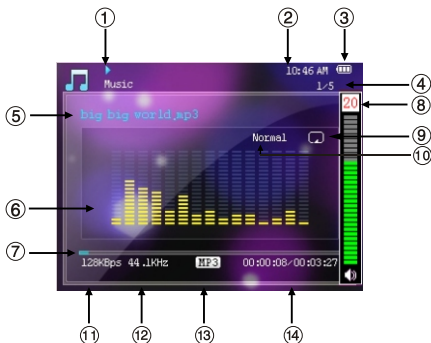

1. Music playing state	7. Playback progress bar
2. Clock display	8. Volume
3. Battery capacity	9. Playback mode
4. Current track serial number/ total track number	10. EQ mode
5. Song name	11. Bit rate
6. Screen display: spectrum, ID3 information, lyrics.	12. Sampling rate
	13. Music file format
	14. Current playback time/ total track time.

## USAGE INTRODUCTION VIDEO PLAYING INTERFACE ILLUSTRATION



1. Playback state
2. Video file name
3. Clock display
4. Battery capacity
5. Time that has been played/total time

## USAGE INTRODUCTION TUNING INTERFACE ILLUSTRATION



1. Tuning state	5. Frequency of the current radio station
2. Clock display	6. Station search progress bar
3. Battery capacity	7. Preset mode/search mode
4. Single channel/stereo	8. Radio station serial number

## USAGE INTRODUCTION RECORDING INTERFACE ILLUSTRATION




1. Recording state	4. Name of recorded file
2. Clock display	5. Recording quality
3. Battery capacity	6. Time that has been recorded /the left recordable time

As for the name of the recorded file "VREC005.WAV": 005 is serial number of the current recorded track and arranged in sequence; WAV is the file format after recording.

## ➤ PLAY MUSIC

In main interface, select "Music" and press **M** button to enter. Select your desired filetype to browse and press **M** button to enter; select a track and press **M** button for short to play music.

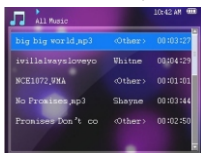

- All Music: list all tracks.
- Play List:
  - New media list: press **⏮**/**+** button to select songs that needs to be added into list and press **M** button for short to confirm. After selecting all required songs, press **⏮**/**⏭** button for short to "YES" and press **M** button for short to confirm.
  - Edit media list: select playback list that needs to be edited. Add songs according the method stated in reset playback list and choose "YES" to save list.
  - Edit media list: press **M** button for short to enter and select the playback list that needs to be deleted. Then press **M** button for short to delete playback list.
- Artist: array all songs according to all artists and unknown artists.
- Album: array all songs according to albums and unknown albums.
- Style: array all songs according to all genres and unknown styles.



## CAUTION:

- When full pathname of the song is too long, it may cause this song playback unavailable.
- Songs can not be added in the same playback list.
- 5 resetting playback lists can be produced at most and 100 songs can be added in.


## ➤ PAUSE MUSIC


When playing music, press **⏮** button for short to switch into playback pause state and press **⏮** button for short again to continue playback.

**➤ NEXT and PREV**



When playing, press  button for short to skip to next track to play; press  button for short to skip to previous track to play.

**➤ FF and FB**

In playing, press  button for long without loose to realize fast forward.

In playing, press  button for long without loose to realize fast backward.


**➤ ADJUST VOLUME**


In playback or tuning interface, press  /  button for short or long to adjust volume.

**CAUTION:**

- APE files with NORMAL, FAST decode format of mainstream 3.95, 3.97, 3.98, 3.99 are supported by this machine.
- In some operating system (such as complex font Windows), the operation of copying lyrics/song file and changing song's name may probably lead to display mess code. When playing some songs which are not standard or some special format songs, it may cause noise.

When files are deleted by hand, you can organize music sorting information again through updating media.

In "Music" menu, select "mediaLib update" and press  button for short to confirm and the media begins updating. During that, it may cost some time, please wait.

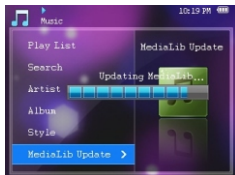


**CAUTION:**

- Music would be stopped if you operate media updating when playing music.




 



 
 

## BASIC OPERATION A—B REPEAT FUNCTION


When playing, if you want to listen to content of a certain segment repeatedly, please use A-B repeat function.

Press  button for long for the first time to select the beginning point that you want to play repeatedly and screen displays "A"; press  button for long for the second time to select the end point that you want to play repeatedly and screen displays "A-B" and system begins to repeat during "A-B" period; press  button for long for the third time to cancel A-B repeat and playing continues.



## BASIC OPERATION SEARCH MUSIC


In "Music" menu, select "search" and press  button for short to eject searching column. Then input the first letter of the file name of the song and press  button for short to confirm. After input the letter, press  button for short to clear away. For example, if you want to search "hey", use  /  button and  button to select "H" in searching column and press  button for short to confirm, then input "E" and "Y" in sequence. Searching column displays "hey", press  button for short, thus you can search the song.

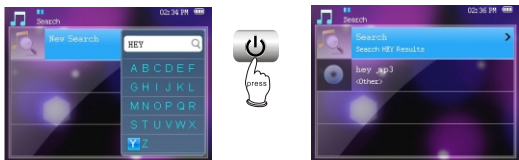

### CAUTION:

- If the first letter of the song name is number, it can not be searched.

In "Music" menu, press / button to select "EQ Select" and press button for short to enter. Move the cursor by pressing / button, and choose suitable EQ mode.

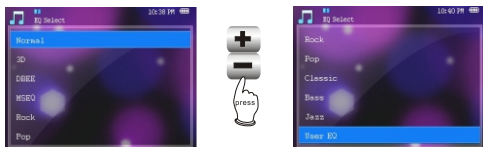

Choose "User EQ", it would correspond with the EQ that you already set in "User EQ setup" in music playing menu.

When cursor moves to a certain EQ mode, press button for short to select this EQ mode.

In "User EQ setup" interface, the range value (dB) of each frequency range may be increased or decreased.

If you want to adjust the range of median (1K), you may operate according to the following diagram:




Press / button to select adjusted frequency, press / button to adjust range value. Press button for short to confirm.

In "MSEQ" interface, you can setup Microsoft EQ, which can bring you the equivalent sound effect with vista platform. It mainly includes three kinds of technology.

- 3D surround: the advanced space surround technology breaks the past dual-channel music experience, which enables the normal head-phone produce 3D stereo space effect and bring you rich and substantial feeling and music level sense.
- Pure bass: pure and clear bass can be produced through adjustable bass intensifier, thus vertical and deep sense of music can be highlighted. That makes headphone produce same striking sound effect with big power loudspeaker.
- Volume balance: provides same hearing sense in different tracks playing procedure, which can bring you harmonious and pleased music experience.

#### SETUP METHOD:


Press **⏮** / **⏭** button to select adjustable Microsoft EQ and press **M** button for short to switch effect.

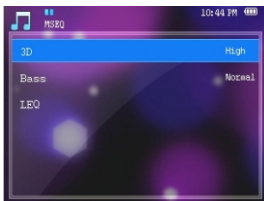






## BASIC OPERATION PLAYING MODE, SCREEN DISPLAY

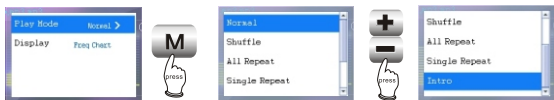Press **M** button for short when playing music to eject online menu: "play Mode" and "Display".

### ► PLAYBACK SETUP




The playing mode icons displayed in playback interface are shown as follows:

-  Repeat all: repeat to play all tracks.
-  Playback in sequence: play in tracks sequence.
-  Single circular: repeat to play a single track.
-  Playback scanning: each track is played for about 10 seconds.
-  Random playback: play any track at random.

### ► SCREEN DISPLAY

You can set ID3, lyrics and spectrums display.

For example: press **M** button for short to switch to "lyric", press **⏮** button for short to exit music playing interface, thus you can see lyrics synchronous display.

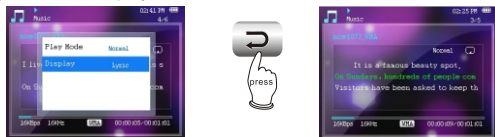

### CAUTION:

- When screen display is set to be "lyric", it would switch to be "ID3" display automatically if you play tracks without lyrics.

After entering "video" menu, press **M** button for short to enter browsing interface of videofiles. Press **←/→** button for short to select movie file and then press **M** button for short to play. Press **⏏** button for short to pause/play.

In playing interface, press **⏮/⏭** button for short to skip to previous or next movie. Press **⏮/⏭** button for long to fast forward/fast backward. Press **←/→** button to adjust volume.

In video playing state, press **⏮** for short to return to previous catalog, press **⏮** button for long to adjust brightness. Press **M** button for short to enter online menu in video playing state.



### CAUTION:

- For video file with big capacity, you may have to wait a few seconds to begin playing after pressing **M** button.
- If there is any abnormal during playing, please try to copy this video file again.
- AVI video file with DivX 3.0 encoding format is not supported by this machine.

- Online menu: time to playback

When playing video, press **M** button for short to eject online menu. Press **⏮** / **⏭** button for short to select "time to playback" and press **M** button for short to enter. Use **⏮** / **⏭** button and **⏪** / **⏩** button to set time.

Only video file with more than 1 minute playback time is available for this function.




- Online menu: screensaver


You can set screensaver when playing video. Screensaver is effective only after you set screensaver time in "setup" of main menu.

For example:

after you set the screensaver time to be 15 seconds, select "screen saver" when playing video, press **M** button for short to switch to be "on" and press **⏮** button for short to exit. After video is played for about 15 seconds, screen would enter blank screen state automatically.

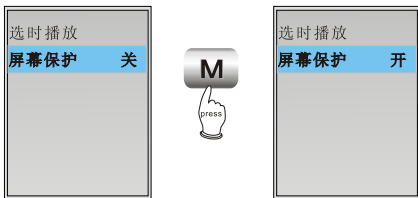

After selecting picture files, press **M** button for short to enter picture browsing, press **⏮**/**⏭** button for short to switch pictures:  
 Press **☰** button for long in picture browsing state to adjust brightness;  
 Press **⏮** button for short to return to previous catalog.

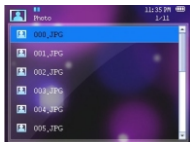

Press **M** button for short when browsing pictures to enter “online menu”, you can set “zooming out, whirling, background and music control.”

#### CAUTION:

- Pictures can be zoomed out only when its resolution is more than 320×240.
- There is no button lock function when browsing pictures.

#### ➤ PICTURE BROWSING TIME

You can set the stay time of automatic picture browsing. And it can be set to be 2S, 3S, 5S, 10S, 20S and custom.

You can set custom time (0-60 seconds) through **⏮**/**⏭** and **☰**/**+** buttons. And you can switch it by hand if you set it to be 0 second.

#### ➤ INTERIM EFFECT


You can set the displayed effect when switching pictures.


 
 
You can set it to be none, random, gradual change, shutter and moving.



#### ➤ BROWSING MODE

When you set browsing mode to be “Filelist”, all picture files would be listed according to file name in browsing state.

When you set browsing mode to be “Miniature”, all picture files would be listed by previewing all pictures.


In main menu, select "Resume play", then press  button for short to enter, in which you can select "AudioContinue", "video Continue", "EBook Continue". This player can support two break-points.




For example: select "music breakpoint", press  button for short to enter breakpoint option, press  for short to select a breakpoint and press  button for short. Thus the song can be played from the last place that it stopped.

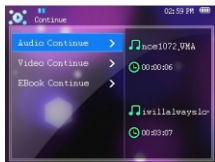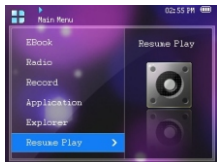

In main interface, enter "Explorer", you can open and delete all files and encrypt or decrypt for files.


### ➤ BROWSE FILE

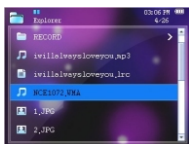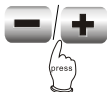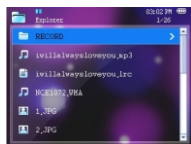

In music, video and e-book files browsing interface, or in "Explorer", press  button for short to select files to browse.





**➤ DELETE FILE**

After enter resource manager, select files that need to be deleted, press  button for short to eject online menu.

Press  button to select "delete" and press  button for short to confirm, thus the file can be deleted.





**CAUTION:**


Music would be stopped if you delete files when playing music.

**➤ ENCRYPT AND DECRYPT FOR FILES**

Before you encrypt for files, please set code for files in "settings" of the main menu.

You cannot set code for files directly in resource manager.


After select the files that need to be encrypted, press  button for short to eject online menu. Press  /  for short to select "encrypt", and then press  button for short to confirm.

Select "decrypt" in online menu, input code and press  button for short to decrypt. Before you reboot player next time, all encrypted files are in decryption state.

**CAUTION:**

After you set password, please save it carefully. If you lose it, please send this player to OPPO after-sales service. All files in player can be searched through backup by connecting USB with computer.

In main menu, select "Record" and press **M** button for short to enter, press **⏏** / **+** button for short to select "Start Record". Press **M** button for short to enter recording ready state. Press **⏏** button for short to recording/pause recording. Press **⏏** button for short to eject dialogue box for saving, choose select and press **M** button for short to save the recorded file. The recordable file is saved in "Recording files" in "Record" menu.

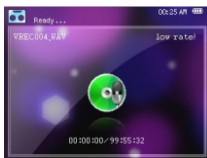

### CAUTION:

- To avoid sudden machine down during recording, you can not record when power is low; full disc is also unavailable, it may have "disc space is full" prompt to exit recording if it is in recording.
- Button pressing sound may be recorded if you press button during recording.

### ➤ ALL RECORDING FILES

It contains recording files, including FM recording file. Select the recorded file and press **M** button for short to play.

### ➤ RECORDING QUALITY

The recording quality is higher, the fidelity is better, and the occupied space is larger. Both the recording quality adopt ADPCM format encoding and are effective for MIC recording.

Press **M** button for short to switch between high and low quality.



### ► ENTER TUNING MODE

Enter "Radio" in main menu, select "Radio Player" and press **M** for short to enter tuning mode. Then put on headphone and you can listen to radio.

Press **ESC** button for short to exit tuning interface to main menu, but the tuning is continuous.

When listening to radio, press **M** button for short to enter online menu.

### ● ONLINE MENU: MODE

In online menu, select "mode" and press **M** button for short to switch in modes.

#### 1. Preset mode

In this mode, press **Next** button for short to switch to next channel, press **Prev** button for short to switch to previous channel.

#### 2. Searching mode

there are two searching methods which are "by hand" and "automatic".

##### ■ Search channel by hand

0.1 MHz is increased for each short pressing **Next** button; 0.1 MHz is decreased for each short pressing **Prev** button.

Press **Next** / **Prev** button for long to continuously increase/decrease frequency, and it will not stop until a channel is searched.


For example:







## 2. Search channel automatically

In online menu, select "Auto Search" and online menu would be ejected. Choose "YES" to start fully automatic searching. All the searched channels would be saved.

### CAUTION:



Channel searching will stop when pressing  button for short during (fully automatic/semi-automatic) channel searching.

## ● ONLINE MENU: SAVE STATION

After you search the station by hand or semi-automatic searching mode, press  button for short to enter online menu. Select "save" and press  button to eject dialogue box, then press  /  button for short. After that choose "YES" to save station.



 
## ● ONLINE MENU: DELETE STATION

If you want to delete the station that you saved before, you can press  button for short in tuning interface to enter online menu, select "delete" item and press  button for short to eject dialogue box. After that select "YES" and press  button for short to confirm.

### ● ONLINE MENU: FM RECORDING

When listening to radio, press **M** button for short to eject “online menu”, select “Record” to enter FM recording; press **M** button for short to produce recording file, then exit to tuning state. FM recording file is WAV format.

This file is saved in “Record files” of “Record” in main menu.

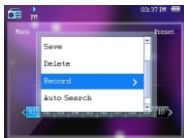

### ➤ STATIONLIST

This menu lists the saved stations.

Select the listed stations, press **M** button for short to start listening automatically.

### ➤ INPUT STATION

After enter “Radio” in main menu, select “Set Frequency”, use **←** / **→** and **⏮** / **⏭** buttons to input station frequency. Then press **M** button for short to listen to this channel.

### ➤ FREQUENCY SETUP

Move the selection bar to “Set Channel”, press **M** button for short to select FM tuning range.





The frequency range on campus is 76MHz~87.0MHz.



The frequency range that used in common is 87.0MHz~108MHz.


### ➤ STEREO SETUP

 
 
Set “Mono channel” and “automatic”.


In e-book browsing state, press  button for short to select text file, press  button for short to browse e-book.

Turn pages by pressing  /  button and turn lines by pressing  /  button.

Press  button for short to enter online menu; press  button for short to return to previous catalog.

Press  button for long to adjust brightness.

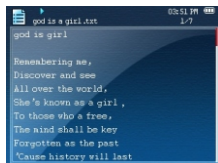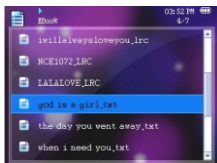

When browsing e-book, press  button for short to enter “online menu”. In online menu, you can set page skipping, bookmark saving, bookmark selection, bookmark deleting, font size, font colour, automatic page turning, style selection and music playing.

### ➤ SKIP PAGE

Use  /  and  /  buttons to set page skipping.

 
 
For example:



After finish setup, press  button to confirm.

➤ SAVE BOOKMARK

In online menu, select “savemark” and press **M** button for short to enter. Press **⏮** / **⏭** to select place to save, then press **M** button for short to set the current page to be bookmark.



➤ SELECT BOOKMARK

In online menu, select “LoadMark” and press **M** button for short to enter. Then press **⏮** / **⏭** button for short to select your desired bookmark and then press **M** button for short to confirm.

➤ DELETE BOOKMARK

After select “DelMark”, press **M** button for short to eject dialogue box, select “YES” and then press **M** button for short to delete bookmark.



➤ FONT SIZE

There are large, medium and small fonts for selection.

➤ FONT COLOUR

After select “Setcolour”, press **M** button for short to switch in font colour.

➤ AUTOMATIC PAGE TURNING


Press  button for short to enter online menu, select "Flip Time" and press  button for short to switch in automatic page turning time, which are 10, 15, 20, 25 and 30 seconds.

When time is set to be "off", you can turn pages by hand.

➤ SELECT STYLE

After select "Style set", press  button for short to switch style.

➤ PLAY MUSIC

After enter "Back Play", press  button for short to set "Back Play" to be "on", then you can browse e-book and listen to music at the same time.



In this menu, you can set "calender", "stopwatch", "Worldtime" functions.


### ► CALENDER

 Press **M** button forshort to enter "calender", then you cancheck it.





### ► STOPWATCH

In "Stopwatch" menu, press **power** button for short to start timing, press **power** button for short to save recording during timing and press **M** for short to stop timing.

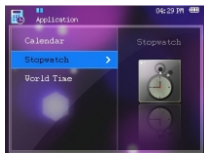




### ► INTERNATIONAL TIME

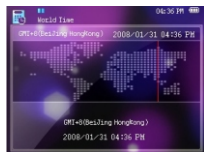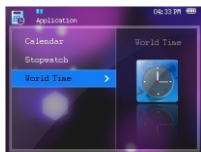  Press **left arrow** / **right arrow** button for short to check the time of 24 time zones. The time of eastern eighthzone is default (Beijing, Hong Kong).






**➤ SCREENSAVER TIME**

Press  /  button to select screensaver time, then press  button for short to confirm. For example, if screensaver time is 15 seconds, and there is no any operation in 15 seconds, player would enter blank screen state automatically.


**CAUTION:**

- Screensaver time is approximate, there would be difference in different format music playing.
- There is no screensaver function in stopwatch, e-book automatic page turning and picture browsing interface.





**➤ ADJUST BRIGHTNESS**

Press  /  button to select suitable brightness and press  button for short to confirm.

**➤ INTERFACE STYLE**

You can set two different interface styles, press  /  button to select suitable style and press  button for short to confirm.

**➤ DEFAULT INTERFACE**

Press  button for short to eject dialogue box, and press  /  button to choose "YES", then press  button for short to resume default interface.

**➤ DESKTOP SETUP**

 
In this menu, you can set default background and custom background.

## SYSTEM SETUP POWER ON PASSWORD

### ► POWER ON PASSWORD

You can set power on password.

Use / and / buttons to set numbers and press button for short to confirm.


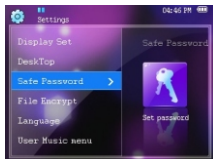


### CAUTION:

After you set password, please save it carefully. If you lose it, please send this player to OPPO after-sale service. All files in player can be searched through backup by connecting USB with computer.

## SYSTEM SETUP FILE ENCRYPTION

  You can set passwords for all files in "File Encrypt".

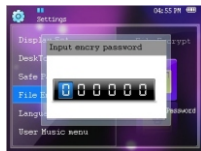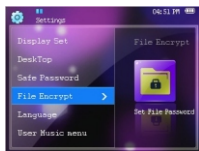





You can set password through / and / buttons.

If you want to decrypt password, you only need to input once again the past password and press button for short to confirm.

### CAUTION:

After set the password, please save it carefully. If you lose it, you can decrypt through upgrading firmware. It is suggested to delete the upgrading firmware after finishing upgrade.





**➤ SELECT LANGUAGE**

Set the languagesorts in menu, Chinese and English are supported. Press  button to enter setup, and press  /  button to select language, then press  button to confirm.

---

**SYSTEM SETUP CUSTOM MAIN MENU, MUSIC MENU****➤ CUSTOM MAIN MENU**




Except for “Music”, “video” and “settings”, custom hiding and display are available for all main menu.






Take “EBook” hiding for example, press  /  button to select “EBook”, press  button for short, the green icon in front of “EBook” would disappear. Return to main menu at this time, “EBook” menu is hidden. Enter “custom main menu” again, press  button for short by following the above operation, the “EBook” menu would display.

**➤ CUSTOM MUSIC MENU**

Except for “All Music”, custom hiding and display are available for all options in music menu. Operation method is same with the above.



**➤ TIMING POWER- OFF**

Press  /  button to set the time of timing power-off, after that, press  button for short to confirm. For example, set the time to be 15 minutes, player would power off automatically if there is not any button pressing operation.

You can also set power-off time by yourself. After select "custom", use  /  and  /  buttons to set time and press  button for short to confirm.



 


**CAUTION:**


- It is defaulted to be ineffective for each time power on.
- Time of timing power-off is approximate, there would be deviation.
- Please do not set time power off during recording to avoid unavailable recording file playing.

If you want to full factory default setting (material and song files would not be deleted), you can select "Default Set". Press  button for short to enter this menu, after dialogue box is ejected, select "YES" and press  button for short to resume "Default Set".

Provide important prompt information for this player.

## ➤ DATE/TIME SETUP

 In this menu, you can set year, month, date, clock and time system. You can set the current year, month, date, time and time system through   and   buttons. Press  button to confirm. Time system is 12 hours or 24 hours.

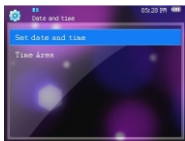





## ➤ TIME ZONE

In this menu, you can set default time zone.

After set volume restriction to be "on", the range of adjustable value of volume is 0~26.

## SYSTEM SETUP SCREENSAVER ACTIVATION MODE

## ➤ SCREENSAVER ACTIVATION METHOD

In this menu, you can set screen saver activation method after player enters screensaver. Press  button for short to enter "screen activate" and press   button to select your desired screensaver activation method, "Any KeyStart" or "Press PLAY Start" button. Press  button for short to confirm.




**CAUTION:**

PLAY button is  button.

## SYSTEM SETUP      PRESS BUTTON CONTROL

---


### ➤ AUTOMATIC KEYLOCK

Press  /  button to select time of automatic key lock and press  button for short to confirm.

### ➤ UNLOCK METHOD OF KEYBOARD

In this menu, you can set the unlock method after keyboard is locked.

### ➤ BUTTON PRESSING SOUND

After enter this menu, you can set to turn on or turn off button pressing sound. Press  button for short to switch between "on" or "off".

## SYSTEM SETUP      SYSTEM INFORMATION

---

### ➤ SYSTEM INFORMATION

You can check memory capacity, remaining capacity and version number information.

### CAUTION:

As the firmware may occupy a certain space, the displayed memory capacity may be different with the actual capacity.

## SYSTEM SETUP      FIRMWARE UPGRADE

---

### ➤ FIRMWARE UPGRADE

This player supports firmware upgrade. For detail upgrade method, please refer to detailed instructions on OPPO website.

---

**► FORMAT**

When using computer to format this player. Please select FAT 32 file system. Otherwise this player will work abnormally.

---

**I have lost my data?**

- The loss of some data is because unstable power supply in the course of downloading (You are suggested to reserve data firstly. As for the loss of user's data, our company will not take any responsibility.).
- 

**Cannot connect to computer correctly?**

- Windows 98SE: Connect again after installing USB drive program.
  - Windows Me: Delete USB drive program, install again and connect.
  - Windows 2000/XP: Connect again after restarting up computer.
- 

**Drive program/upgrading program does not work?**

- Please refer to recommended PC configuration.
- 

**Why some WMA format songs cannot play after they are downloaded into MP4 player?**


- To protect rights and benefits of song owners, some WMA songs on site are with DRM (license) copyright protection, and cannot play unless been authorised.
- 

**Why function operation of my MP4 player has slow response?**

- Large numbers of files are saved in player, after repeated operation of delete and copy, file system will generate much scraps, which leads to the slow function operation of player. In this case, please copy the data required to save into the computer firstly and then use PC to format hard disk directly.



MP4 player has system failure and cannot be operated?

- If this case happens, please reset Mp4 player. Press  button for 10 seconds until reset finishes and then you may power on again to use.
- 

MP4 player cannot power on?

- If you do not use for a long time, the battery capacity may be too low, now please charge for half an hour before use.
- 

**Why different songs have different volume?**

- Because volume level adjustment parameter is different in the course of recording, you may hear different volume.
- 

**Cannot download file.**

- Please confirm whether drive program in computer has been correctly installed.
  - Please confirm whether computer and player has been correctly connected.
  - Please confirm whether disc is fully used. Examine the left capacity in system information.
- 

**MP4 player has powered off?**

- If function of playing, tuning or recording has not been used in a specified period, MP3 player will power off automatically.
- The player will also power off automatically when battery is low.
- Check whether timing power-off has been set.

### ➤ LONGEST PLAYINGTIME

- In default volume, "normal" sound effect, locked button and screensaver state, the longest playing time for Mp3 musical files with 128kbpsbit rate, 44.1kHz sampling rate is about 13 hours. Playing time in other cases will be different.

### ➤ Accessories

- Headphone
- User manual
- USB transmission line
- Warranty card
- Hanging strip

### ➤ The lowest computer configuration requirement

- Above Windows98SE/2000/XP/ME
- Pentium 200MHz centre processor or above
- CD-ROM drive
- 40MB spare disc space
- 32MB memory
- USB jack

## SPECIFICATION

---

Model	S9L	S9H	S9I
Memory Capacity	1G	2G	4G
Lithium battery	3.7V 520mAh		
Continuous play time	Longest continuous playing time for MP3 is about 13 hours.		
Size/weight	Size 86mm×50mm×6.9mm Weight 59g		
Audio SNR	≥92dB		
Headphone output	12mW+12mW 32 ohm (25mW+25mW when headphone impedance is 16 ohm)		
Frequency range	18Hz~20kHz		
FM tuning range	76MHz~108MHz		
Working temperature	0℃~35℃		
Audio file	MPEG 1/2 Layer 3(16kbps~320kbps)、WMA(16kbps~320kbps)、WAV、OGG、APE、FLAC		
Picture file	Support DCF standard JPEG format. (6~20 million pixel at most is supportable. Picture width will not excess 2506 pixel) BMP, GIF		
Video file	Rm (720×576) resolution RMVB (720×576) resolution AVI (800×576) resolution FLV (512×512) resolution		

Design and specifications of product are subject to change without notice.