


CREATIVE DC-CAM 4200ZS



Quick Start

About Your Camera

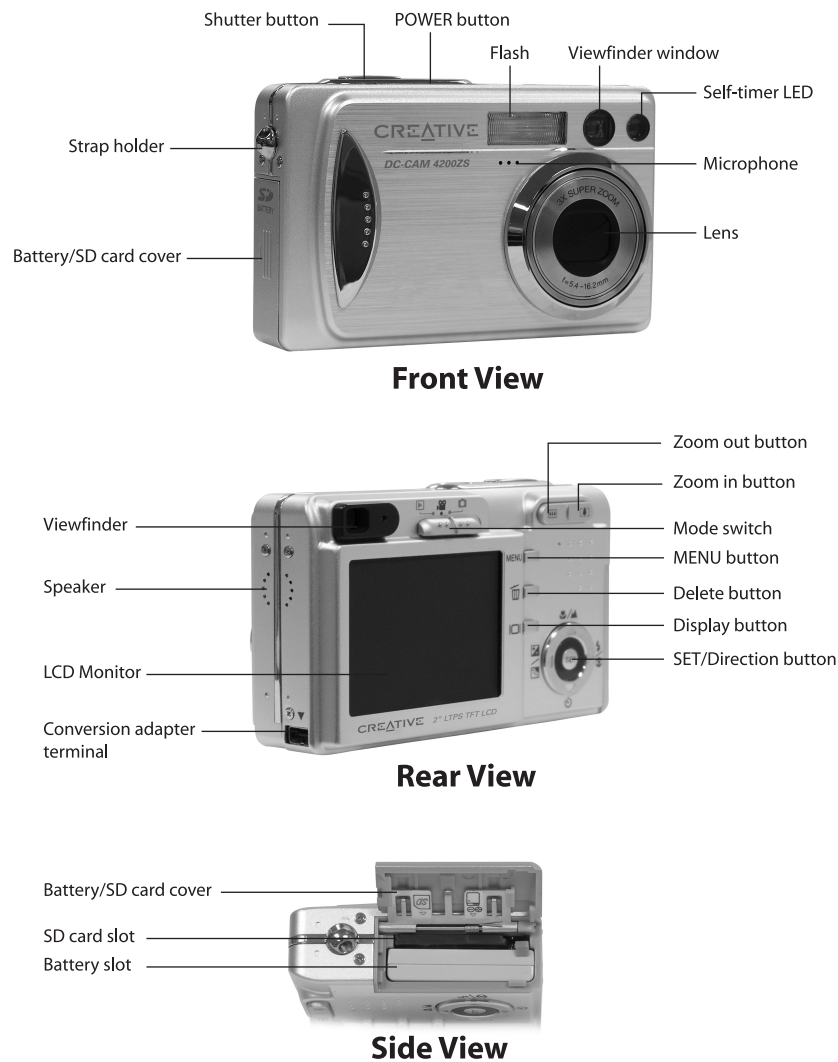

1 Inserting the Battery and SD card

1. Push the battery/SD card cover in the direction of the arrow (Figure 1).
2. Orient the battery so that its label is facing the rear side of the camera, and then insert the battery into the battery slot.
3. Hold the SD card with its front side (printed arrow) facing the rear side of the camera, and then insert the card into the SD card slot (Figure 2).
4. Close the battery/SD card cover.




2 Charging the Battery

1. After inserting the battery, insert the conversion adapter into the conversion adapter terminal of the camera (Figure 3).
2. Insert one end of the AC power adapter into the DC IN terminal of the conversion adapter (Figure 4).
3. Insert the other end of the AC power adapter into a wall outlet.

The viewfinder LED flashes green when charging starts, and lights green when charging is completed. You can use the camera while charging the battery.

If the battery does not charge, turn on and then turn off the camera.

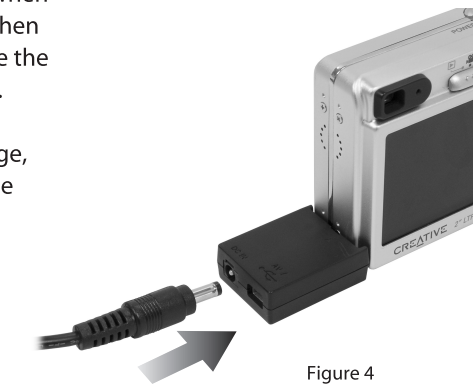

3 Formatting the SD Card (Optional)

1. Press the **POWER** button to turn the power on. If the "Format Error" message appears on the LCD monitor, follow the steps below to format the SD card. If you do not see the message, you do not need to format the SD card. Proceed to the next section, "Taking Photos and Recording Videos".
2. Slide the mode switch to **□**.
3. Press the **MENU** button. The **Setup** menu is displayed.
4. Select **Format** with the **▲/▼** buttons, then press the **SET** button.
5. Select **Execute** with the **▲/▼** buttons, and press the **SET** button. To cancel formatting, select **Cancel** and press the **SET** button.

Product Registration

Enjoy a host of benefits by registering your product during installation, or at www.creative.com/register. Benefits include:

- Service and Product Support from Creative
- Exclusive updates on promotions and events

Creative Knowledge Base

Resolve and troubleshoot technical queries at Creative's 24-hour self-help Knowledge Base. Go to www.creative.com and select your region.

Keep this document for future reference.

Safety Advice



4 Taking Photos and Recording Videos

While recording, do not open the battery/SD card cover, or remove the battery or SD card. Doing so might damage the SD card or destroy the data on the SD card.

Taking Photos

1. Make sure that the camera is turned on and the SD card inserted.
2. Slide the mode switch to **□** and compose your photo in the viewfinder.
3. Press the shutter button.

Viewing Photos on Your Camera

1. Slide the mode switch to **□**. The last photo appears on the screen.
2. Select and view photos with the **▲/▼** buttons.

Recording Videos

1. Slide the mode switch to **□**.
2. Compose the picture with the zoom button.
3. Fully press the shutter button. The recording of the video starts. Pressing the shutter button one more time ends the recording and records the video into the SD card.

Viewing Videos on Your Camera

1. Slide the mode switch to **□**. The last video appears on the screen.
2. Select the desired video with the **▲/▼** buttons.
3. Press the **SET** button. Press the **▶/◀** buttons during playback to enable fast forward or fast reverse.

Deleting Photos or Videos

1. Slide the mode switch to **□** or **□**.
2. Press the **□** button. The last photo or video, and Quick Delete menu, appear on the screen.
3. Press the **SET** button to delete the photo or video.

5 Transferring Files to Your Computer

Step 1: Install software

1. Insert the installation CD into your CD-ROM/DVD-ROM drive. Your CD should start automatically. If it does not, follow the steps below:
 - i. Start **Windows Explorer**.
 - ii. On the left pane, click the **My Computer** icon.
 - iii. Right-click the CD-ROM/DVD-ROM drive icon, and then click **AutoPlay**.

2. Click the driver or applications that you want to install on your computer.

For Windows 98 users, click **INSTALL USB DRIVER** to install the USB driver. Installing the USB driver on computers running Windows XP/Me/2000 is not necessary.

For Mac OS 9.0 or higher, the computer automatically recognizes the camera and loads its own USB drivers. Mac OS 8.6 users must install a USB driver.

- i. Double-click **Digital Camera Driver Installer**.
- ii. Select **Install Location** and click **Install**.

3. Follow the instructions on the screen.
4. When prompted, restart your computer.

Step 2: Connect the camera to your computer

The data saved on the SD card may be damaged if the power to the camera is cut off during image transfer. You can use the AC power adapter when connecting the camera to the computer.

1. Connect one end of the USB cable or the USB conversion adapter to the conversion adapter terminal of the camera (Figure 5).

2. If you are using the conversion adapter, connect one end of the supplied USB cable to this adapter.

3. Connect the other end of the USB cable to an available USB port on your computer (Figure 6).



Step 3: Download files to your computer

Windows

1. Make sure your camera is turned on and connected to the computer.
2. Launch Windows Explorer on your computer. Your camera is recognized as a Removable disk in Windows Explorer.
3. Double click the **Removable Disk** icon and locate the **DCIM** folder.
4. Double click the **DCIM** folder. Your recorded images and videos are inside these folders.
5. You can drag files from the **DCIM** folder to a folder on your computer.

Macintosh

1. Double click the **untitled** disk icon.
2. You can drag files from the **DCIM** folder to a folder on your computer.

Viewing Videos on Your Computer

You can download Windows Media Player (www.microsoft.com) to view the video files recorded on your camera. For information on using this media player, refer to its Help file.

Editing Photos

Use PhotoSuite® to edit photos and PhotoVista® to create spectacular 360 degree panoramic images. For more information on using these applications, refer to their Help files.