



**DIGITAL STILL CAMERA**  
**USER'S MANUAL**

# ENGLISH

## Basic Reference

Congratulations on your selection of this camera!

This basic reference provides you with the general information you need to start using it.

### CONTENTS

---

|                                       |      |
|---------------------------------------|------|
| General Information .....             | E-2  |
| Quick Reference.....                  | E-8  |
| Downloading photos\videos to the PC.. | E-32 |
| Trouble shooting.....                 | E-45 |

## *Basic Reference*

### **Safety Precautions**

- ① Should you ever notice smoke or a strange odor coming out of the camera, immediately turn it off. Next, taking care you do not burn your fingers remove the camera's battery and/or unplug the AC adaptor from the power outlet.
- ① You should be responsible for the damage to the camera or materials caused by your improper operation to the digital camera!
- ① Do not expose the digital camera to moisture and make sure no water get into the camera.
- ① Do not touch the power plug during a thunderstorm if you are using the AC adaptor. This may cause an electrical shock.
- ① Do not place the digital camera in an unstable location on a wobbly table or sloping surface.
- ① Do not attempt to modify this digital camera!
- ① Do not operate the digital camera when you are driving.
- ① Do not cover or wrap the digital camera or the AC adaptor with a cloth. It should be placed in well-ventilated locations.
- ① Handle the digital camera carefully and do not bump it into any hard object.
- ① Do not move the digital camera while it is switched on. (If you are using the AC adaptor, unplug the adaptor from the AC power outlet after you have switched off the camera.) Ensure that any connector cords or cables to other devices are disconnected before moving the camera. If the digital camera will not be used for a long time, you would better unplug battery.

### **Feature**

- CMOS sensor, up to 12 Mega pixels Interpolated resolution.
- 3-inch LTPS TFT color LCD monitor screen.
- Long battery life.
- 8X digital zoom
- 32MB internal flash memory, supports max. 2GB SD card or MMC card.
- Voice recording.
- 10 seconds or 20 seconds self-timer
- PICT print
- Slide show
- WEB cam

### **Handling Precautions**

- The camera may become slightly warm during use. This is normal and does not indicate malfunction.
- Do not touch the lens or monitor screen with your fingers.
- Never perform other abnormal operation.

## *Basic Reference*

### Package Contents

Please check if the following items are in the package when purchasing the product:

- ◆ Camera
- ◆ Strap
- ◆ AV cable
- ◆ Pouch
- ◆ CD-ROM
- ◆ AC adaptor
- ◆ Basic reference
- ◆ Rechargeable Li-ion battery
- ◆ USB cable



Camera



Strap



 
USB\AV cable



Pouch



CD-ROM

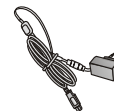

AC adaptor




Basic reference



Rechargeable Li-ion battery

## *Basic Reference*
 
### Getting to know your Video Camera

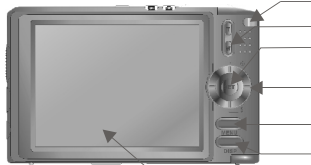

Strap holder  
Zoom button  
SET button  
Direction button  
Menu button  
Display button



LCD screen  
Microphone  
Power  
Shutter button  
Capture button  
Playback button  
LED



Macro switch  
USB port  
TV port



Flash  
Lens



Battery cover  
and memory  
card slot

Tripod

## *Basic Reference*

### Loading the battery into the camera

1. Slide the battery cover and then swing it open.
2. Align the **(+ -)** mark on the battery with **(+ -)** mark on the camera and slide the battery into the camera .
3. Close the battery cover.




### Charging the battery

#### **There are two ways for charging the battery.**

1. Connect the AC Adaptor to the camera, there will be a red light flickering on the camera.
2. Connect the camera to the PC with the USB cable.
3. It takes about 2 or 3 hours to charge fully.

**Note: when charging is over, the light will turn green.**





### **Note**

-  While the battery is weak, the camera will suddenly shut off.
-  Any pre-setting date/time value will be retained in the camera's memory for about 1 minute when replacing the battery.
-  Make sure you remove the battery from the camera when you do not plan to use it for a long time. A battery left in the camera discharges very small amounts of power even when power is off, which can lead to a dead battery or the need for longer charging before the next use.

### Using a Memory Card

1. The camera has 32 MB built-in memory for recording.
2. The camera supports max 2GB SD card or MMC card.








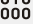

#### **Note:**


-  When there is a memory card inserted, it will be the top priority for saving data. If you want to store data in the built-in memory, please remove the memory card first.
-  Be sure to orient the card correctly when inserting it in. Never try to force a memory card into the slot when you feel resistance.
-  While the camera cannot read the memory card, please clean metal interface softly with soft cloth. And then reload.
-  Never remove a card from the camera while the camera is working. Doing so can cause the file save operation to fail, and even damage the memory card.






## Basic Reference
 
### Monitor Screen

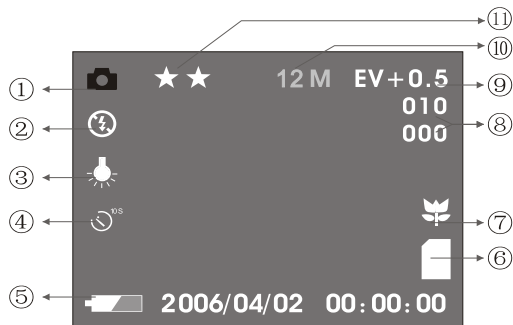- |  |  |  |
|--|--|--|
| ①  Capture Mode | ②  Flash Mode     | ③  White Balance |
| ④  Self Timer   | ⑤  Power Capacity | ⑥  SD Card       |
| ⑦  Macro Mode   | ⑧  Counter        | ⑨ <b>EV+0.5</b> EV Value   |
| ⑩ 12M Resolution   | ⑪  Image Quality  | 2006/04/02 Date<br>00:00:00 Time   |










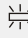







### Recording an image

1. Press  to enter the capture mode.
2. Point the camera at the subject, and use the monitor screen to compose the image.
3. Holding the camera still, gently press the **[SHUTTER]** button. When the image shown on the screen turning left, indicating the image is recorded.
4. In the capture mode, you can press **[MENU]** to set up the white balance, EV, resolution etc, press **[SET]** to confirm and back to upper menu, press **[MENU]** to back to standby mode.
  - Press **[MENU]** enter the submenu to select the recording mode: continuous, 10s self-timer, AVI or WAV recording.
  - Press  to switch recording mode: single, continuous, 10s self-timer, movie or voice recording.
  - Press  to switch the flash mode: auto, flash off, flash on, red-eye reduction.
  - Press **[WT]** button to adjust the digital zoom.

## Basic Reference

### Icon indicator

|                     |                 |   |                      |              |   |                   |                   |   |              |       |       |
|---------------------|-----------------|---|----------------------|--------------|---|-------------------|-------------------|---|--------------|-------|-------|
| <b>Capture mode</b> | Single          |  | <b>White Balance</b> | Auto         | AWB   | <b>Flash mode</b> | Auto              |  | <b>Frame</b> | 30fps | 30fps |
|                     | Continuous      |  |                      | Sunny        |  |                   | Flash on          |  |              | 25fps | 25fps |
|                     | 10s Self-timer  |  |                      | Tungsten     |  |                   | Red-eye Reduction |  |              | 15fps | 15fps |
|                     | Movie           |  |                      | Fluorescent  |  |                   | Flash off         |  |              | Best  | ***   |
|                     | Voice recording |  |                      | Cloudy       |  |                   | <b>EV</b>         | +/-2.0  |              |       |       |
| <b>Color Effect</b> | Color           |   | <b>Time/Date</b>     | On photo     |  | Basic             |                   |   | *            |       |       |
|                     | Black and White |   |                      | Not on photo |  |                   |                   |   |              |       |       |

## Basic Reference

 
### Icon indicator

|                   |           |      |               |                |        |                  |                |                   |       |
|-------------------|-----------|------|---------------|----------------|--------|------------------|----------------|-------------------|-------|
| <b>Resolution</b> | 4000x3000 | 4000 | <b>SET UP</b> | <b>Startup</b> | On     | <b>Frequency</b> | 50Hz           | <b>Power Save</b> | 1MIN  |
|                   | 2560x1920 | 2560 |               |                | Off    |                  |                |                   |       |
|                   | 2048x1536 | 2048 |               | <b>Beep</b>    | On     |                  | 60Hz           |                   | 2MIN  |
|                   | 1600x1200 | 1600 |               |                | Off    |                  |                |                   |       |
|                   | 1024X768  | 1024 |               | <b>Format</b>  | Cancel | <b>USB Mode</b>  | <b>Default</b> | Cancel            |       |
|                   | 640X480   | 640  |               |                | Format |                  |                | PC camera         | Setup |
| 320X240           | 320       |      |               | Mass storage   |        |                  |                |                   |       |

|               |                     |                 |                 |         |          |          |          |         |             |
|---------------|---------------------|-----------------|-----------------|---------|----------|----------|----------|---------|-------------|
| <b>SET UP</b> | Recording memory    | Built-in memory | <b>Language</b> | English | 中文繁体     | Espanol  | Italiano | Version |             |
|               |                     | External card   |                 | 中文简体    | Japanese | Fracaese | Deutsch  | TV OUT  | NTSC<br>PAL |
| Date /Time    | 2006/4/2 18: 47: 00 |                 |                 |         |          |          |          |         |             |

## Basic Reference

### CAPTURE

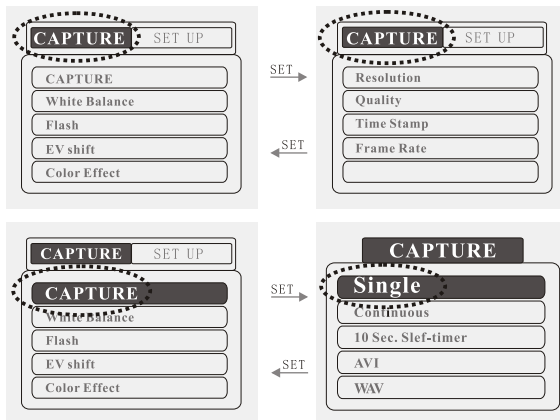


Function: You can select different capture mode, movie (AVI) or voice (WAV).

### 😊 Note:

 
When you are taking pictures, please hold the camera stably in order to shoot good pictures.

### White Balance

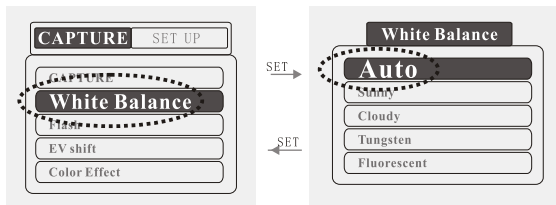

Function: Five different effects can be selected. According to your requirement, you can adjust the color of pictures.


### Flash

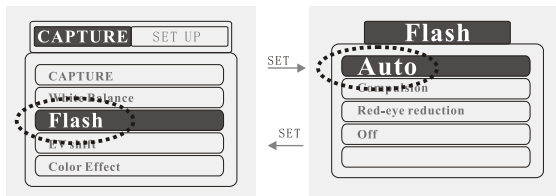 

Function: According to the light source, select the right flash mode to make the better pictures.

## Basic Reference

 
### EV shift

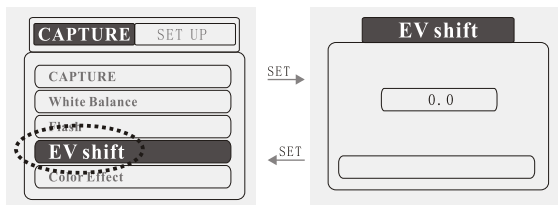

Function: According to the current light source, adjust the exposure value. Normally, when the light is dark, the value should be plus; contrarily, the other way should be minus.


😊 **Note:** If the LCD is too dark, please adjust EV shift.

### Color Effect

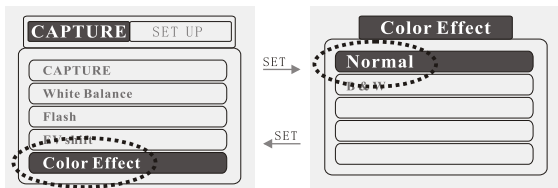 


Function: According to your favourite, set up different color effects.

### Resolution

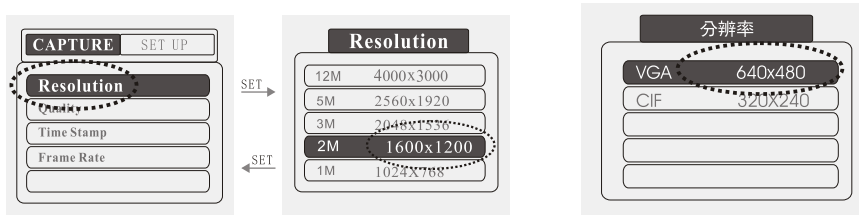 

Function: According to your requirement, adjust the different resolution.

### Quality

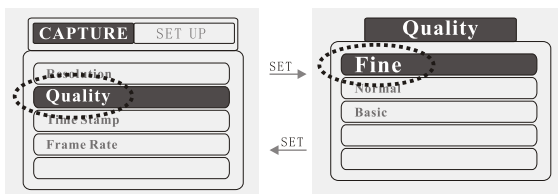 


Function: Three quality modes can be selected. Better quality, more storage the picture takes.




## Basic Reference
 
### Time Stamp

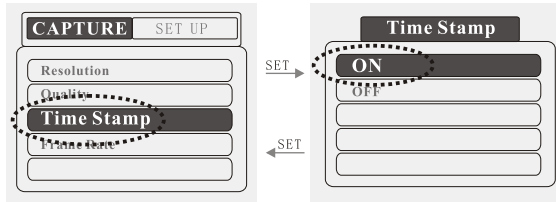


Function: Before setting time stamp, please adjust time in setup mode. When it is set to ON , the capture time will be stamped on the below right of the photo.

### Frame Rate

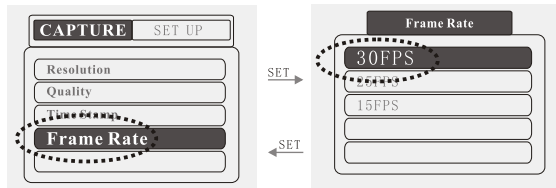 


Function: According to your requirement, set the frame rate of the movie. Larger rate, larger movie file size it will be.

**Setup mode**

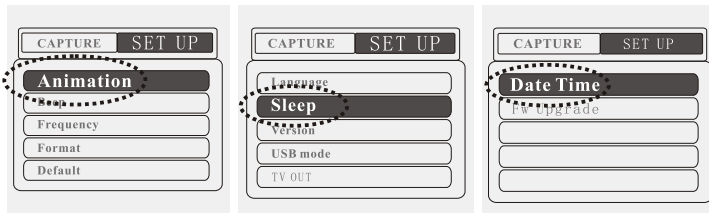 


**Animation**

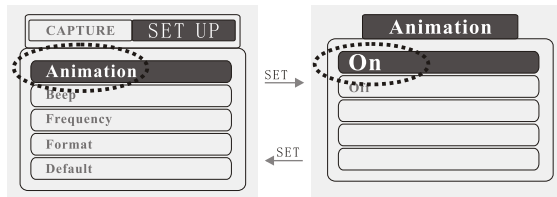 

Function: When this mode is set to be on , a logo which appointed by the system will be shown after the digital still camera is turned on.


## Basic Reference
 
### Beep

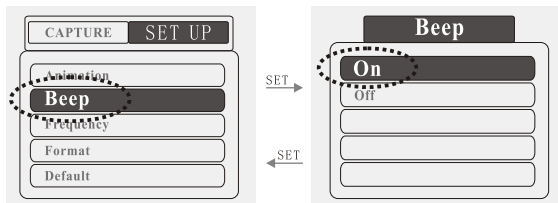


Function: Beep in use can be convenient to make sure your operations to the menu have been done.

### Frequency

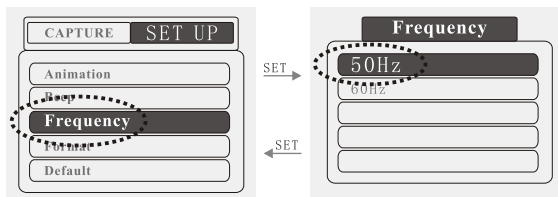 


Function: According to the different light source, you can set up the right flicker frequency to make the image and monitor screen be in the best work studio.

### Format

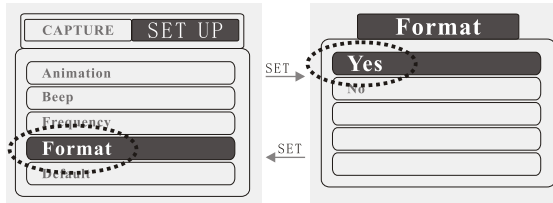 

Function: Formatting the current media deletes all the data including protected images stored in it. Note that the data deleted by formatting can not be recovered. Check to make sure you do not need any of the data in memory before you format it..

### Default

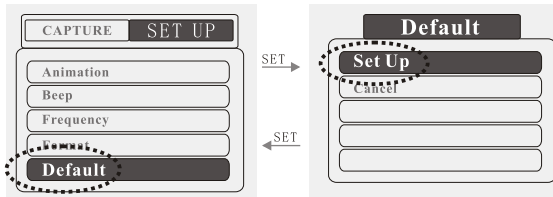 

Function: Default settings can be used to make the digital camera system back to manufacturer' s setting.


## Basic Reference
 
### Language




Function: You can select your native language in eight supported languages.

### Sleep

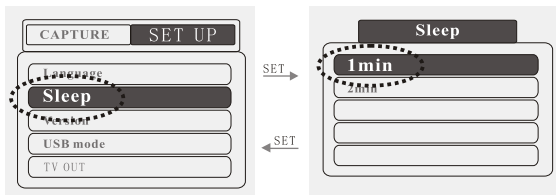


Function: When you set up to 1 minute or 2 minutes, the camera will turn off automatically when no operation is performed for 1 minute or 2 minutes. This function enables you to save power.

### Version

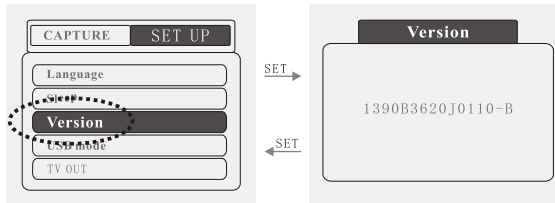 

Function: You can check the firmware version of your digital camera system.


### USB mode

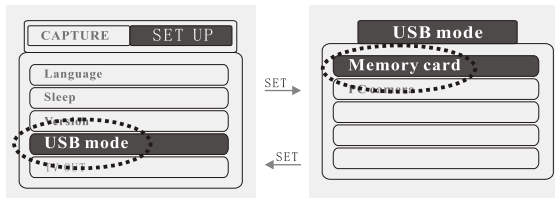 

Function: Browse and edit the files in the camera via your computer or set it to webcam.


## Basic Reference
 
### TV out

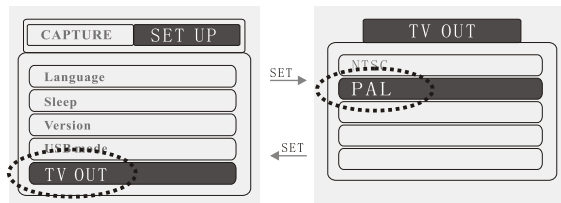


Function: You can select the right TV- OUT system to fit your TV set.

### Date Time

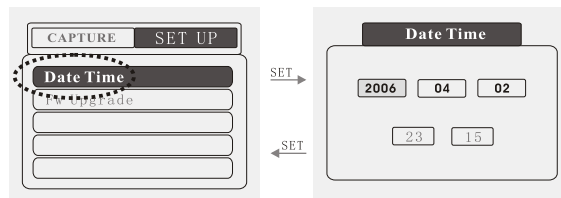 

Function: The right date and time can be indicated on the pictures or videos you take.

### Fw Upgrade

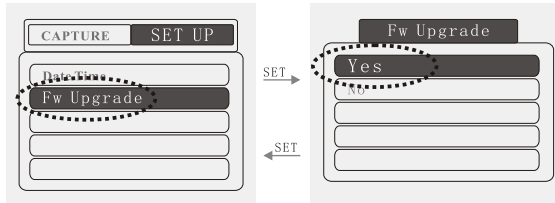 

Function: You can upgrade the firmware version of your digital camera system.

### Recording Video

1. Press **▲** to select video mode, an icon will display on screen.
2. Holding the camera still, press the **[SHUTTER]** release button fully to start video recording. A red dot and the recording will appear on the display. Press **[SHUTTER]** again to stop video recording.
3. In the video mode, you can press **[MENU]** to set the white balance, EV, resolution etc. Press **[SET]** to confirm and back to upper menu, press **[MENU]** to back to standby mode.



## *Basic Reference*

### Recording Video



### 😊 Note:

- Press **[MENU]** to enter capture mode and setup mode.
- Press **▲** to switch recording mode: single, continuous, 10s self-timer, movie or voice recording.
- Press **[W T]** button to adjust the digital zoom.

### Recording Voice

1. Press **[CAMERA]** to enter the capture mode.
2. Press **[MENU]** to enter capture mode menu select **[Voice recording]**, press **[SET]** to confirm and back to upper menu, press **[MENU]** back to standby mode. Voice recording interface will display on screen.
3. Press the **[SHUTTER]** release button fully to start video recording. Press it again to stop.



 
## Basic Reference

### Playback

1. Press **[▶]** playback button.
2. Use **[◀▶]** until the image you want to display.
  - When the file is movie or voice, press **[SET]** to play, press **[SET]** again to stop.
  - When the file is photo format, please press **[SET]** button and press **[MENU]** to enlarge the photo, press **[DISP]** to minify the photo.
  - Press **[MENU]** to enter edit menu.


|          |            |        |         |     |
|----------|------------|--------|---------|-----|
| Playback | Delete one | Delete | Index   | 2x2 |
|          |            | Cancel |         | 3x3 |
|          | Delete all | Delete |         | 4x4 |
|          |            | Cancel | On      |     |
|          | Print      |        | Startup | Off |
|          |            |        |         |     |

### Delete Current

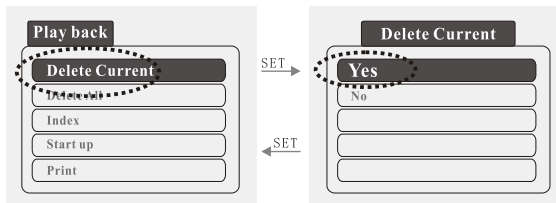

Function: You can delete the current file.


### Index

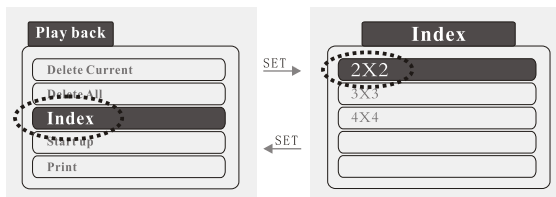 

Function: This function enables you to display your pictures, movie in 2X2, 3X3, 4X4.


## Basic Reference
 
### Start up

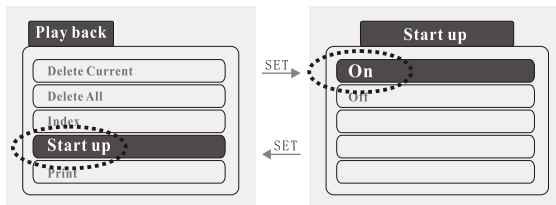

Function: When this mode is set on, a logo which appointed by the system will show when the digital camera is turned on.

### Print

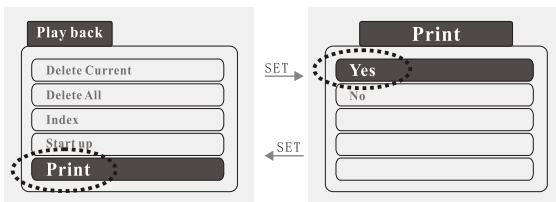 

Function: Press SET to print the picture

### **USB MODE**

In USB mode, you can choose mass storage to use the camera as a removable disk, and choose PC camera as a webcam.

### **Mass Storage**

#### **Download photos and videos to computer**

**Install Device Driver for USB Driver only use under WIN 98 / 2000 XP.**

1. Insert CD into CD-ROM.
2. Finish installation according to the indication on screen.
3. Restart your computer.

#### **Connect your computer and camera.**

1. Set your camera to USB mode, and choose the mass storage.
2. Connect your computer and camera with the USB cable.
3. Find out the removable disk in My computer, and the photos and video you have taken are stored in this path My Computer/ Removable Disk/ DCIM/ 100 coach.

#### **Download photos and videos**

Have your camera power on and connect it to computer with the USB cable. Set your camera to PC mode, and choose the mass storage. Then you can use your camera as a removable disk. You can copy the pictures or videos that you have taken to your computer or other CDs.

## *Basic Reference*


### PC Camera

1. Have your camera power on. Set your camera to PC mode.
2. Connect your camera and computer with the USB cable.
3. Open the software Video Edit Tool and so on. you can set your camera to webcam.

### ☺ **Note:**

Before Using PC Camera, you should insert CD in CD-ROM Driver to install Video Edit Tool.

### How to connect with a printer

Print the picture directly via a PictBridge printer. Power-up the camera, enter Playback mode, choose the Picture which one will be printed, connect the printer through USB cable; There will be an icon  display on the Left-top corner, press **[Menu]** button, enter Print Menu. Waiting for the system finish the operation, and choose **[YES]** to print.

 


**How to connect with a TV**

You can skip your pictures and videos on TV

😊 **Note:**


1. Have your camera and TV power on
2. Use the supplied AV cable to connect the TV and camera.
3. Press down the direction button to review the pictures and vedios on TV.

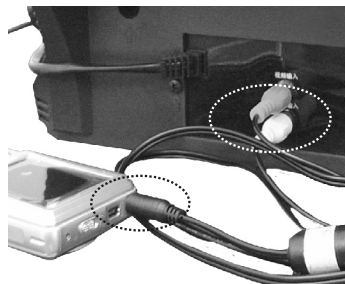



## *Basic Reference*
 
### **How to connect with a computer**

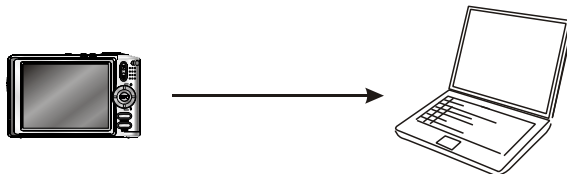

### **😊 Note:**

1. Have the camera and computer on.
2. Choose the USB mode in setup mode and then use the USB cable to connect the computer and camera.  
You can download images to your computer.

### **Downloading photos / videos to the PC**

**Instructions to install USB driver and application softwares to you computer. Please read the following instruction carefully before installing driver program.**

1. Please insert the software CD into the CD driver before connecting the camera to the computer (this CD is attached in the package.) and the install program will run automatically. (If the CD-ROM drive resists to run automatically, please double-chick Bdvdrun. Exe in the CD root folder).

**Downloading photos / videos to the PC**

2. Installation mass storage driver and PC camera driver.

- ① Select the icon of “Install Windows ME/2000/XP Driver” , the installation could be finished as the indication shown on the screen.
- ② Turn the camera into the PC Camera mode; connect the camera to the computer with the USB cable attached in the package.
- ③ The computer could recognize the camera automatically and finish the setting. If the dialog box “This installing program is not authorized by Microsoft, Go on or Not?” Pops up, clickthe “go on installing” to finish the installation.
- ④ If the operating system is Windows 98, please pull out the USB cable after the above operations. Restart the camera, turn the camera turn the camera to the Memory Card mode and connect it with the USB cable again. The system will identify the camera automatically and also finish the setting. You can use the camera as a moveable Flash Disk.
- ⑤ If there is something wrong with the automatic installation, you could also finish the installation manually according to the guide to install the hardware. The corresponding driver program could be found in the drivers\ manual folder in the CD root folder. Please read “ help file readme. Txt” in this folder.

## *Basic Reference*

### Downloading photos / videos to the PC

⑥ **Take Windows XP for example:**

- a. Do not connect the camera to computer. Insert the software CD into the CD-ROM, and the CD will run automatically. Following dialog box appears:



Install Device Driver ←

**Downloading photos / videos to the PC**

b. Click “Install Windows ME/2000/XP Driver” , and the following dialog box appears:



**Next** ←

## *Basic Reference*

### Downloading photos / videos to the PC

c. Click “NEXT” , the following dialog box appears:



**Install(i)** ←

**Downloading photos / videos to the PC**

d. Click “Install” to copy the document, the following dialog box appears:



e. Select “Finish” .

**Finish** ←

## *Basic Reference*

### Downloading photos / videos to the PC

- f. Welcome to the Xvid Setup Wizard, click NEXT to continue.



**Downloading photos / videos to the PC**

- g. Please read the following License Agreement. You must accept the terms of this agreement before continuing with the installation.



 
**Next** ←



## *Basic Reference*

### Downloading photos / videos to the PC


h. Select Destination Location, and click NEXT to continue.

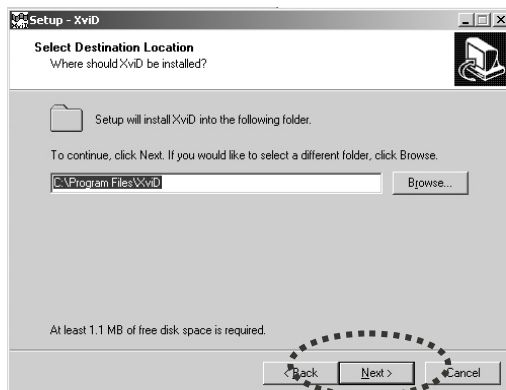

**Next** ←

**Downloading photos / videos to the PC**

 i. Click “NEXT” , the following dialog box appears:

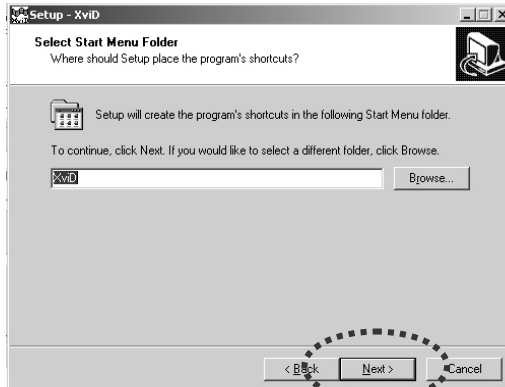


**Next** ←

## *Basic Reference*
 
### Downloading photos / videos to the PC


- j. Select the additional tasks you would like Setup to perform while installing XviD, then click NEXT.

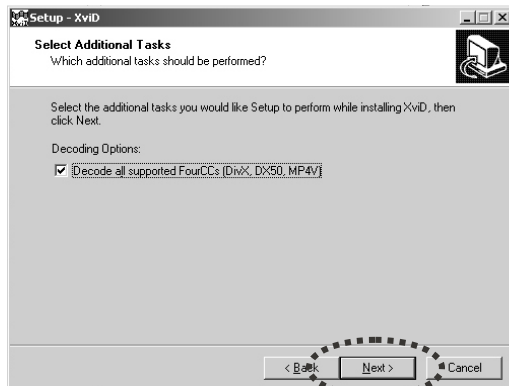

**Next** ←

**Downloading photos / videos to the PC**

 k. Click Install to continue with the installation.

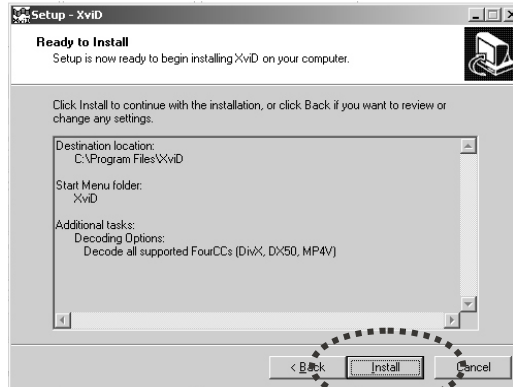


**Install** ←

## *Basic Reference*
 
### **Downloading photos / videos to the PC**

I. Click Finish to complete installation.

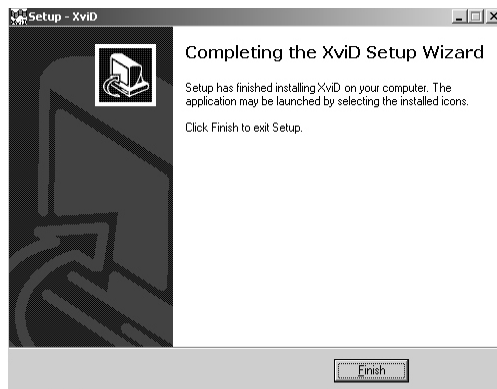

**Trouble shooting**

**Power does not turn on**

- The battery is not oriented correctly. Please orient the battery correctly.
- The battery is dead. Please charge the battery.

**After turning on, camera suddenly turns off.**

- The battery goes dead soon. Please charge the battery.

**The camera turns off automatically.**

- The battery goes dead soon. Please charge the battery.
- The camera is set to turn off automatically 1 min or 2 min when no operation performed for 1 min or 2 min.

**After inserting a memory card, screen indicates mistake message.**

- The memory card is not format or not the FAT or FAT 32 format. Please re-format it to FAT or FAT32.

**A memory card is loaded, camera cannot record.**

- Memory card is locked. Please unlock it.
- Memory card is full. Please transfer the files you want to keep to your computer and then delete files from memory, or use a different memory card.

## *Basic Reference*

### **Trouble shooting**

#### **Image is not recorded when the shutter button is pressed.**

- The camera is not in the capture or video mode. Please press **[video]** or **[capture]** button to enter the currently selected recording mode.
- Flash unit is being charged. Please wait until the flash unit finished charging.
- Memory card is full. Please transfer the files you want to keep to your computer and then delete files from image memory, or use a different memory card.

#### **The color of the photo taken is not normal.**

- Please reset the white balance.

#### **The image is too dark or too bright.**

- Flash off is selected as the flash mode. Please select a different mode.

#### **The date displayed is not correct.**

- Please reset the date and time in setup mode.

#### **All button and switches are disable.**

- Circuit problem caused by electronic charge, impact, etc. While the camera is connected to another device, please remove the battery from the camera, reinsert it, and then try it again.

**Trouble shooting**

**Camera can not work as web cam over a USB Connection.**

- The USB mode is not set as “PC camera” .
- Check the connection between the camera and USB cable.
- USB driver is not installed. Please install the USB driver on your computer.

**Camera can not transfer files over a USB connection.**

- The USB mode is not set as “Mass storage” .
- Check the USB connection between the camera and computer.
- USB driver is not installed. Please install the USB driver on your computer.

**Icons disappear on the monitor screen.**

- Please press **[DISP]** button to set the camera display icons on the screen.

**Can not delete the files in camera.**

**Can not print the photos.**

- The camera is not in the print mode. Please set the camera as print mode and check the connection of USB.

**Cannot set protection or copy for the photos, video or voice.**

- Please check if the files are selected or not.

**Camera becomes warm.**


- This is normal and does not indicate malfunction.



## *Basic Reference*

### **Trouble shooting**

#### **The image is blurry.**

- ① You are moving the camera. Hold the camera still for a moment when you shoot or mount the camera on a tripod.
- ① You are trying to use the macro mode when shooting a scenery or portrait shot. Please move the macro switch to .