

Installation for driver

Installation for Win 98

A.) INSTALLATION OF THE DRIVER AND SOFTWARE

A.) NECESSARY INSTALLATION

Installing window device driver. (include camera device driver and TWAIN software)

B.) OPTIONAL INSTALLATION

Installing option software that manufacturer offer, that is determined by designer.
(include TWAIN software,)

A.) NECESSARY INSTALLATION

Installing window device driver. (include camera device driver and TWAIN software)

For Microsoft Windows series Operating System

Operating System must support USB device first.

For example: Windows 98/98 SE/ME/2000/ ...

Step 1. Digital camera is power on and ready as below.

a) CF card in camera and has pictures in it.

b) Switch camera to PC mode.

c) Connect PC and digital camera with USB cable.

Step 2. O.S. find new hardware.

Step 3. Insert camera driver (CD-ROM) .

Installation for Win 98



Step 4. Press "Next" button.



Step 5. Select item "Search for the best driver for your device. (Recommended) .", let O.S. search driver for you, press "Next" button.

Installation for Win 98




Step 6. Select "CD-ROM drive" location and press "Next" button.



Step 7. Press "Next" button.

Installation for Win 98

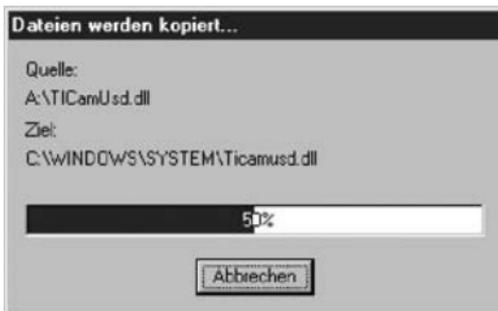

Step8. Copying files, please wait for a few minute.



Step 9. Installation is successful, please press "Finish" button .

Step10. Remember reboot your computer. Most time you do not need to reboot computer, and digital camera already can work.

Installation for Win 98

B.) OPTIONAL INSTALLATION

Installing option software that manufacturer offer, that is determined by designer.
(include TWAIN software,)

Step 1 . Make sure that your computer had been finished all starting computer steps,
and all devices were installed finish.

Step 2 . Insert camera driver (CD-ROM) .

Step 3 . CD will auto run, guide you to install software.



Step 4 . Press "Next" button.

Installation for Win 98



Step 5 . Reading the license, if you agree, press "Yes" button.



Step 6 . If you are satisfied with the settings, click Next to begin copying files.

Installation for Win 98



Step 7 . Program is copying files, please wait a moment.



Step 8 . Installation was successful, please press "Finish" button.

Uninstallation for Win 98



Step 3. Please press "OK" button .



Step 4. Please click the "Add/Remove Programs" item .

Uninstallation for Win 98



Step 5. Please select "TRAVELER SX330Z " from the list and click the "Add/Remove ..." button.



Step 6. Uninstall successfully completed and please click the "OK "button.

Troubleshooting the Driver Software Installation

1. Making sure CF card had been inserted to the Digital Camera.
2. Making sure Digital Camera had switched to the PC mode.
3. Making sure the USB device in device manager is not a unknown device, if was, please remove it, and then install the driver.
4. Please follow the menu installation procedure.
5. If windows 2000 system displays virtual memory is not enough, please use the right button of the mouse to click the icons as follows, My Computer-> Properties->Advanced -> Performance Options, and then change Initial size status and Maximum size status.
6. If the setup is completed, please restart the computer.

Installation for Win 2000

INSTALLATION OF THE DRIVER AND SOFTWARE

A .) NECESSARY INSTALLATION

Installing window device driver. (include camera device driver and TWAIN software)

B .) OPTIONAL INSTALLATION

Installing option software that manufacturer offer, that is determined by designer.
(include TWAIN software,)

Installation for Win 2000

A.NECESSARY INSTALLATION

A .) NECESSARY INSTALLATION

Installing window device driver. (include camera device driver and TWAIN software)

For Microsoft Windows series Operating System

Operating System must support USB device first.

For example: Windows 98/98 SE/ME/2000/ ...


Step 1. Digital camera is power on and ready as below.

- a) CF card in camera and has pictures in it.
- b) Switch camera to PC mode.
- c) Connect PC and digital camera with USB cable.

Step 2. O.S. find new hardware.

Step 3. Insert camera driver (CD-ROM) .

Installation for Win 2000

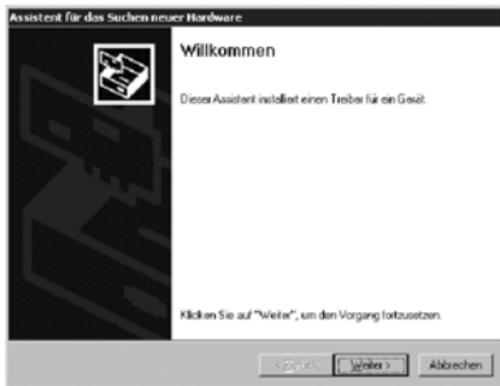

Step 4. Please press "Next" button.



Step 5. Select item "Search for the best driver for your device. (Recommended) .", let O.S. search driver for you, press "Next" button.

Installation for Win 2000



Step 6. Select the "CD-ROM drives" location and press "Next" button.



Step 7. O.S. find digital camera device, press "Next" button.

Installation for Win 2000



Step 10. Installation is successful, please press "Finish" button .

Step 11. Remember reboot your computer. Most time you do not need to reboot computer, and digital camera already can work.

B .) OPTIONAL INSTALLATION

Installing option software that manufacturer offer, that is determined by designer.
(include TWAIN software,)

Step 1 . Make sure that your computer had been finished all starting computer steps, and all devices were installed finish.

Step 2 . Insert camera driver (CD-ROM) .

Step 3 . CD will auto run, guide you to install software.

Installation for Win 2000



Step 4 . Press "Next" button.



Step 5 . Reading the license, if you agree, press "Yes" button.

Installation for Win 2000



Step 6 . If you are satisfied with the settings, click Next to begin copying files.



Step 7 . Program is copying files, please wait a moment.

Uninstallation for Win 2000



Step 8 . Installation was successful, please press "Finish" button.

UNINSTALL OF THE DRIVER AND SOFTWARE

Step 1. Digital camera is power on and ready as below.

- a) CF card in camera and has pictures in it.
- b) Switch camera to PC mode.
- c) Connect PC and digital camera with USB cable.

Uninstallation for Win 2000



Step 2. Please click the "Uninstall TRAVELER SX330Z" item.



Step 3. Please press "OK" button .

Uninstallation for Win 2000




Step 4. Please select the "My computer" then press the right button of the mouse and click the "Properties" item .



Step 5. Please click the "Device Manager.." button.

Uninstallation for Win 2000

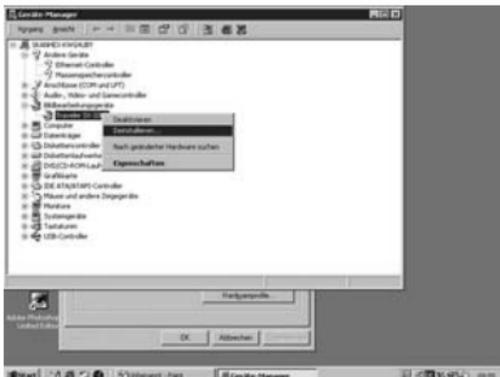

Step 6. Please select the "Traveler SX330z" then press the right button of the mouse and click the "Uninstall.." item .



Step 7. Please click the "Add/Remove Programs " item .

Uninstallation for Win 2000



Step 8. Please select the "Traveler SX330z" then press click the "Change/Remove" button .



Step 9. Uninstall successfully completed and please click the "OK" button.

Troubleshooting the Driver Software Installation

- 1 .Making sure CF card had been inserted to the Digital Camera.
2. Making sure Digital Camera had switched to the PC mode.
3. Making sure the USB device in device manager is not a unknown device, if was, please remove it, and then install the driver.
4. Please follow the menu installation procedure.
5. If windows 2000 system displays virtual memory is not enough, please use the right button of the mouse to click the icons as follows, My Computer-> Properties->Advanced -> Performance Options, and then change Initial size status and Maximum size status.
6. If the setup is completed, please restart the computer.

Installation for Win ME

A.NECESSARY INSTALLATION

A .) NECESSARY INSTALLATION

Installing window device driver. (include camera device driver and TWAIN software)

For Microsoft Windows series Operating System

Operating System must support USB device first.

For example: Windows 98/98 SE/ME/2000/ ...

Step 1. Digital camera is power on and ready as below.

- a) CF card in camera and has pictures in it.
- b) Switch camera to PC mode.
- c) Connect PC and digital camera with USB cable.

Step 2. O.S. find new hardware.

Step 3. Insert camera driver (CD-ROM) .

Installation for Win ME



Step 4. Please press "Next" button.




Step 5. Copying files, please wait a few minutes.

Installation for Win ME



Step 6. Please press "Yes" button .

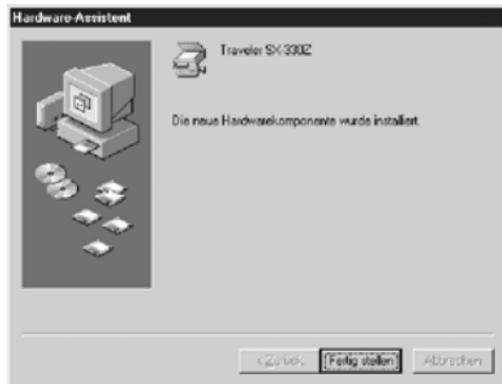

Step 7. Installation is successful, please press "Finish" button .

Installation for Win ME

B.) OPTIONAL INSTALLATION

Installing option software that manufacturer offer, that is determined by designer.
(include TWAIN software,)

Step 1 . Make sure that your computer had been finished all starting computer steps,
and all devices were installed finish.

Step 2 . Insert camera driver (CD-ROM) .

Step 3 . CD will auto run, guide you to install software.



Step 4 . Press "Next" button.

Installation for Win ME



Step 5 . Reading the license, if you agree, press "Yes" button.



Step 6 . If you are satisfied with the settings, click Next to begin copying files.

Installation for Win ME



Step 7 . Program is copying files, please wait a moment.



Step 8 . Installation was successful, please press "Finish" button.

Uninstallation for Win ME

UNINSTALL OF THE DRIVER AND SOFTWARE


Step 1. Digital camera is power on and ready as below.

- a) CF card in camera and has pictures in it.
- b) Switch camera to PC mode.
- c) Connect PC and digital camera with USB cable.



Step 2. Please click the "Uninstall TRAVELER SX330Z" item.

Uninstallation for Win ME

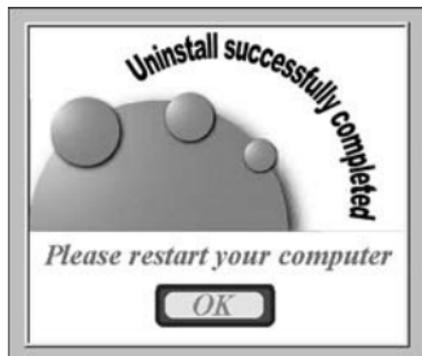

Step 3. Please press "OK" button .



Step 4. Please click the "Add/Remove Programs" item .

Uninstallation for Win ME



Step 5. Please select "TRAVELER SX330Z " from the list and click the "Add/Remove ..." button.



Step 6. Uninstall successfully completed and please click the "OK "button.

Troubleshooting the Driver Software Installation

1. Making sure CF card had been inserted to the Digital Camera.
2. Making sure Digital Camera had switched to the PC mode.
3. Making sure the USB device in device manager is not a unknown device, if was, please remove it, and then install the driver.
4. Please follow the menu installation procedure.
5. If windows 2000 system displays virtual memory is not enough, please use the right button of the mouse to click the icons as follows, My Computer-> Properties->Advanced -> Performance Options, and then change Initial size status and Maximum size status.
6. If the setup is completed, please restart the computer.

Installation for Win XP

A .) INSTALLATION OF THE DRIVER AND SOFTWARE

A.) NECESSARY INSTALLATION

Installing window device driver. (include camera device driver and TWAIN software)

B .) OPTIONAL INSTALLATION

Installing option software that manufacturer offer, that is determined by designer.
(include TWAIN software,)

A .) NECESSARY INSTALLATION

Installing window device driver. (include camera device driver and TWAIN software)

For Microsoft Windows series Operating System

Operating System must support USB device first.

For example: Windows 98/98 SE/ME/2000/ XP/...

Step 1. Digital camera is power on and ready as below.

a) CF card in camera and has pictures in it.

b) Switch camera to PC mode.

c) Connect PC and digital camera with USB cable.

Step 2. O.S. find new hardware.

Step 3. Insert camera driver (CD-ROM) .

Installation for Win XP



Step 4. Please click [Next] button to proceed.




Step 5. O.S. find digital camera device and please wait a few minutes.

Installation for Win XP



Step 6. Please click [Continue Anyway] button to proceed.

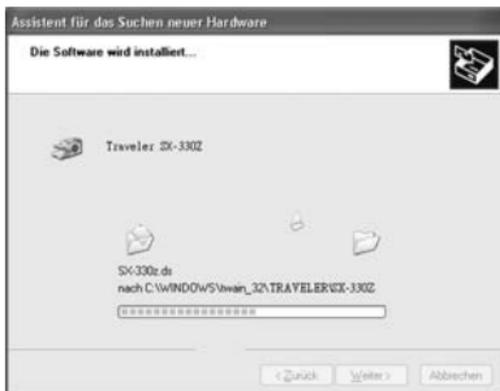

Step 7. Copying files, this may take several minutes please wait ...

Installation for Win XP



Step 8. Installation is successful, please click [Finish] button .

B .) OPTIONAL INSTALLATION

Installing option software that manufacturer offer, that is determined by designer.
(including TWAIN software,)

Step 1 . Making sure that your computer had been finished all starting computer steps,
and all devices were installed finish.

Step 2 . Insert camera driver (CD-ROM) .

Installation for Win XP



Step 4 . Please click [Next] button to proceed.



Step 5. Reading the license, if you agree ,click [Yes] button.

Installation for Win XP



Step 6. If you are satisfied with the settings, click [Next] to begin copying files.



Step 7. Program is copying files, please wait a moment.

Uninstallation for Win XP

Uninstallation for Win XP

Step 1. Digital camera is power on and ready as below.

- a) CF card in camera and has pictures in it.
- b) Switch camera to PC mode.
- c) Connect PC and digital camera with USB cable.



Step 2. Please click the "Uninstall Traveler SX-330z " item.

Uninstallation for Win XP




Step 3. Please press [OK] button .




Step 4. Please select and click the [Printers and other Hardware] item .

Uninstallation for Win XP

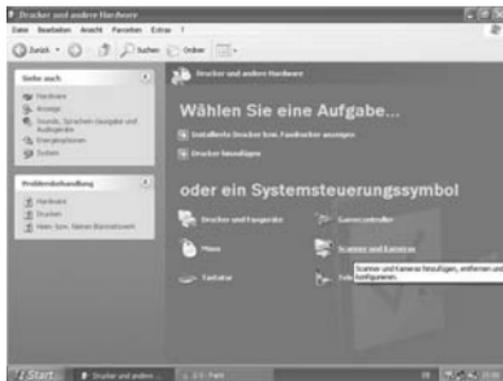

Step 5. Please select and click the [Scanners and Cameras] item .

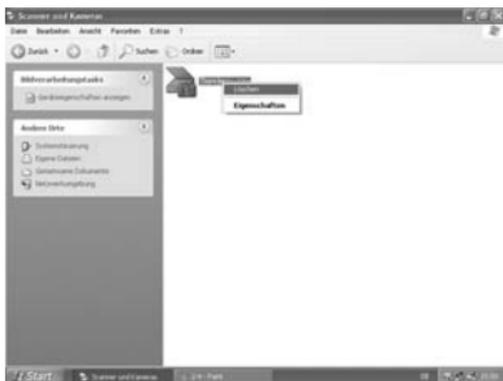

Step 6. Please select the " Traveler SX-330z" then press the right button of the mouse and click the [Delete] item .

Troubleshooting the Driver Software Installation



Step 9. Uninstall successfully completed and please press [OK] button.

Troubleshooting the Driver Software Installation

1. Making sure CF card had been inserted to the Digital Camera.
2. Making sure Digital Camera had switched to the PC mode.
3. Making sure the USB device in device manager is not a unknown device, if was, please remove it, and then install the driver.
4. Please follow the menu installation procedure.
5. If windows 2000 system displays virtual memory is not enough, please use the right button of the mouse to click the icons as follows, My Computer-> Properties->Advanced -> Performance Options, and then change Initial size status and Maximum size status.
6. If the setup is completed, please restart the computer.

Installation for Mac

The following operation is required for both OS 8.6 and OS 9 X.



1 Select appropriate driver for your operation system.

2 Double click icon for installation



3 When "Welcome" dialog box appears, click [Continue..]

Installation for Mac



4 Click the install button to install.



5 Look the warning message then click the continue button. If you want to leave, please click cancel to leave.

Installation for Mac



6 Install was successful.

**7 Click the restart button to initial your system.(sug-
gests)
or click continue, if you wish to perform this TWAIN
driver immediately.**

620-330013-00