

ITEM# K40

PORTABLE MEDIA PLAYER USER'S MANUAL



©2007 Nextar™ Inc
www.nextar.com

nextar™ 

About the Multi-Media Digital Player

The PMP is a kind of portable multi-media player that can play, record and store video, audio and image files.

The PMP is able to process digital coding, and it can store and play the signal via the AV In jack from external audio devices such as cassette recorders, CD players, and video devices (e.g., television).

The PMP is embedded with an FM module and is capable of recording FM radio and saving it in mp3 format.

Safety Declaration

In order to ensure the safe and accurate operation of this device, please read the information below before use.

Illustration



Warning

Warning

Users should comply with the information provided with these labels, in order to ensure personal safety.



Caution

Caution

Users should comply with the information provided with these labels, in order to prevent any damage to your PMP.



Tips

Tips

Additional information provided for users can be found with these labels.



Caution



 
Do not use this device if your hands are wet, and do not use this device near water.




Caution




Avoid prolonged exposure to loud music. Using this device at maximum volume may damage your hearing.

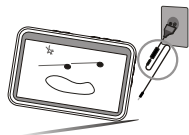

 Please use standard power supply adapter. Using a non-standard power supply adapter may damage this device.

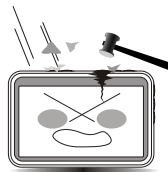

 Avoid bumping, scraping, or hitting the device with other objects as this may cause damage to the PMP.




Please ensure that when you plug this device into an electrical outlet, the outlet is grounded.



Do not wear earphones while driving. It may cause traffic accidents.



 Please ensure that the power supply adapter is plugged firmly into the socket.

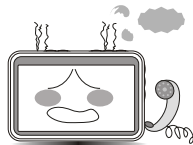


If this player begins to emit smoke or is very hot to the touch, stop using it immediately, and contact the customer service center.



Store this device between 0°C and 40°C.



 Store this device in a clean, dry place. If the device gets wet or dirty, please contact the customer service center.

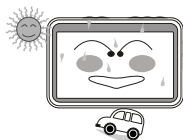


Do not expose the player to the sun, and when using the FM Radio, keep away from the automobile.



Do not use a credit card, magcard etc, in the vicinity of this device, as it may cause damage to the card's magnetic strip.



 Clean the player with a dry, soft cloth. Do not use detergent.

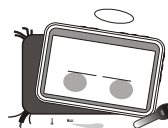

To reduce the risk of electric shock, and to avoid damage to the player, do not remove the cover or attempt to fix the device by yourself.

Catalogue

Safety Declaration	01
Illustration	01
Caution	02
Catalogue	06
Product Introduction	08
Product Functions	08
Package Content	09
Function Display	09
Connection	10
Disconnection	10
Charge	10
Power on / Power off	11
Player's Function Operation Introduction	11
Main Menu	11
Play Video	12
Play Music	14
Change Lyrics	15
View Picture	15
Set Background	16
Read E-Book	16
Radio	17
Manual Search	17
Auto Search	17
Synchronous Recording	18
Background Playing	18
External Program Recording	18
File Operation	18
Copy	18
Move	18

Paste	18
Delete	18
Rename	19
New Folder	19
Resume	19
Setup Menu	19
Display	19
System	19
Power	20
Playing Mode	20
Clock	20
Speaker	20
Video Play on TV	20
Code Conversion Program	20
Supplement	22
Technical Specification	23
Safety Declaration	23
Copyright Declaration	24

Product Introduction

Product Functions

Compatible with audio format

This device can play files in Mp3 / WMA / AAC formats.

Compatible with video format

This device is compatible with the following video formats: AVI / ASF / WMV9.

Support the function of picture browsing

This device is compatible with files in JPEG/BMP/GIF formats.

Support the function of E-book

This device is compatible with the E-book format of TXT (in unicode).

Support the function of recording and FM radio

This device can be used to listen to FM radio, and record in mp3 format.

Support the function of folder browsing

This device allows you to browse through all folders.

Embedded with 4 inches TFT LCD screen

This device is embedded with a 4-inch TFT real color LCD screen to show high definition pictures and videos.

Easy to be upgraded

This device is easily upgraded via firmware/software downloads providing new functionality.

Portable Disk

This device can function as a portable hard disk when connecting to a PC via a USB cable.

Built-in rechargeable battery

This device has a rechargeable 2000MAh Li-Polymer battery.

 
Video Format Conversion Software

This device has video format conversion software, which allows you to convert video files unable to be played into playable formats.

Package Content

1. PMP
2. Manual
3. Power Adapter
4. AV line
5. USB line
6. Earphone
7. Carry case

Function Display

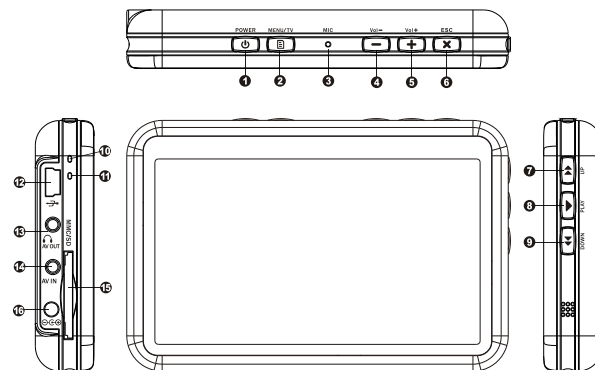


- | | |
|----------------------------|----------------------------|
| ❶ ⏻ POWER | ❾ ⏮ Down button / Next |
| ❷ 📺 MENU/TV | ❿ 🔌 CHG Indicator |
| ❸ 🎤 MIC | ⓫ 🔌 POWER Indicator |
| ❹ - VOI Down | ⓬ 🔌 USB Port |
| ❺ + VOI Up | ⓭ 🔌 AV OUT / Earphone Jack |
| ❻ ✕ ESC | ⓮ 🔌 AV IN |
| ❼ ⏪ Up button / Previous | ⓯ 🔌 MMC / SD Card Slot |
| ❸ ▶ Play / Pause / Confirm | ⓰ 🔌 DC IN |

Disconnection

The exterior sound source connection:
Connect the PC to the exterior sound source via the Line-in cable Equipment.

 Stereo earphone connection: Insert the stereo earphone to the earphone jack.

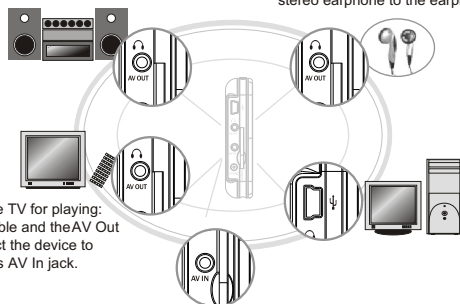

Connect to the TV for playing:
Use an AV cable and the AV Out jack to connect the device to the television's AV In jack.

Connect with the TV to record: With the AV cable, connect the TV input jack with the mainframe AV In jack.

1. Right-click the Plug and Play icon in the taskbar and select "safely delete the hardware."
2. Select the hardware to stop, and click Stop.
3. Select the driver to stop, and click OK.
4. Click Close to finish the operation.



Caution: Damage may be caused to this product if it is incorrectly disconnected from the computer.

Charge

Rechargeable 2000MAh Li-Polymer Battery is included with this product, and is used to supply power when playing music, movies or connecting to a computer as an external hard disk.

Recharge Mode

The power adapter can be connected to the player's power adapter jack to recharge directly. During recharging, the indicator light is red. When charging while the power is on, the icon will flash, once the battery is full, the icon will stop flashing and display "charge finished".



The battery life while playing films is about 240minutes.
The battery life while playing music is about 540minutes.

Power Indicator



Full

 


Nearly empty



Empty

Power on / Power off



Power on

Insert the SD/MMC card and press and hold the POWER button for 3 seconds. When the POWER indicator light turns red, the Power is on.

Power off

Press and hold the POWER button for 3 seconds. When the POWER indicator light turns off, the Power is off.

Player's Function Operation Introduction

Main Menu

Main Menu Interface

There are 9 icons in the main menu interface: video, music, picture, e-book, recording, folder, resume, radio and setting. Volume, power and time are indicated at the bottom right.