





Precautions

Very important information. Please read this section carefully before using this product.

This product is intended to provide turn-by-turn instructions to safely guide you to your desired destination. Please make sure that all persons using this navigation software carefully read these precautions and the operating instructions in the Nextar manual.

Nextar cannot accept any responsibility whatsoever for accidents resulting from failure to observe these precautions.

Your personal judgment, traffic regulations, and common sense must always take precedence over instructions produced by the software.

- This product is not a substitute for your driving technique, driving knowledge or especially your personal judgment. Route suggestions made by this navigation system should never supersede any traffic regulations, your personal judgment, or your knowledge of safe driving practices. If you feel that a route suggestion made by the software instructs you to perform an unsafe or illegal maneuver, places you in an unsafe situation, or routes you into an area that you consider unsafe, do not follow the instructions. Your personal judgment, traffic regulations, and common sense must always take precedence over instructions produced by the software.
- When your vehicle is moving, keep your eyes on the road instead of looking at the screen. If you need to look at the screen for a prolonged time, always park the car in a safe manner and in accordance with all traffic regulations.
- Do not select or input destinations, change settings or otherwise manually operate this software unless you have parked your car in a safe manner, observing all traffic regulations.
- If you are responding to an emergency, it may not be prudent to rely on this system unless you have no other means to obtain accurate directions. The database does not include all of the facilities and streets necessary for emergency response, and the system's maps may not reflect recent changes in roads, traffic controls and driving conditions. Use your own judgment in these situations.
- The database utilized by this software is the most accurate and up-to-date database available. Because of road closures, construction, weather, new roads and other conditions, the data-base might not contain accurate information regarding all streets and locations. If so, the system might not be able to correctly guide you on your route or may inaccurately estimate the time needed to reach

your destination. Please use your judgment in these cases. Renewing your subscription to the database will aid in keeping it up-to-date.

• There are situations when the navigation system will incorrectly display the vehicle's position on the map. Usually this situation will correct itself automatically. Use your own judgment at all times. If you need to reset the position, pull over in a safe manner observing all traffic regulations.

Points to Observe for Safe Usage



- Read this manual carefully and make sure you understand the cautions. Nextar is
 not responsible for problems resulting from failure to observe the precautions,
 warnings, and instructions in this manual. Store this guide where it will be accessible
 at all times, for example in your
 glove compartment.
- The driver must not manually operate the software while driving the vehicle. This may lead to traffic accidents. If the driver is to operate the software with the controls, the driver must pull over in a safe manner observing all traffic regulations.
- When your vehicle is moving, keep your eyes on the road instead of looking at the screen. Listen to the voice prompts for guidance instructions. If you wish to look at the display, pull over in a safe manner observing all traffic regulations.
- Immediately stop using the software if a problem arises. Problems might include no sound or display errors.
- Always comply with all traffic regulations.
- Regardless of the guidance instructions, do not enter roads on which your type of vehicle is prohibited or which appear unsafe. Always observe signs.
- Keep the volume low enough so that you can hear outside sounds.
- Stop the vehicle before performing any GPS operation that could interfere with driving. Always pull over in a safe manner observing all traffic regulations.

Contents

Precautions	1
Points to Observe for Safe Usage	3
Contents	4
1 —GPS Basics	5
Main Map Display	5
Map Displays Modes	5
Turn-By-Turn Views	6
Browsing the Map Display	7
Zooming In and Out	8
Data Entry	8
2 — Set Destinations	
To Set a Destination Using an Address	9
To Set a Destination Using a Point Of Interest	10
To Set a Destination Using Cross Roads	.11
To Set a Destination Using an Item in Favorites	12
To Cancel a Route	12
To Save a Destination as a Favorite or Home Location	13
3 — Program Settings	15
Map Settings	15
Language	15
Set Origin	15
Route Settings	16
Demo Mode	16
Map Selection	17
Exit	17
GPS Status	17
About GPS	17
4 — Icons and Controls	18
Compass and GPS	18
User Interface Controls and Icons	18
Turn-By-Turn Icons	20
Copyright	22

1-GPS Basics

Nextar GPS is a navigational voice guidance program that uses statistical and probability analysis to help you select and set destinations quickly and easily. As you travel, Nextar GPS displays your location on the map. Voice guidance tells you when and where to turn. The main screen displays turn directions, compass heading, distance to next maneuver, and street names. If you leave your route, Nextar GPS calculates a new route to your destination automatically.

Main Map Display

On startup, Nextar GPS displays your current position, street names, and Point of Interest icons.



Map Displays Modes

Tap the Map Display Mode button to choose a map display option as described below.

Heading Up

The vehicle icon points toward the direction of travel; the map rotates under the icon as you travel.



North Up

North is at the top. The vehicle icon points in the direction of travel.



3D

The map displays a 3D perspective.



Turn-By-Turn Views

Once you set a destination and select GO, the screen displays Turn-By-Turn views.

Main Turn-by-Turn View



Blue line shows route. Next maneuver. Tap to repeat the voice instruction.


Distance to next maneuver.

Estimated arrival time and distance to destination

Tap to select next guidance view.



Split Map View

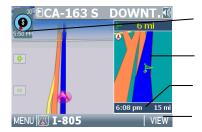

The left pane displays travel progress in 3D, Heading Up, or North Up mode.

The right pane displays a close up view of the approaching maneuver. Estimated arrival time and distance to destination

Tap to select next guidance view.

(N)	CA-103 S DOWNTOWN	3D 5:50 PM
	6 mi (touch to show on map)	f ^{≋ 6:08} pm 15 mi
CA 162		

Maneuvers List View

3.4 mi
 CA-163
 CA-163
 O.2 mi
 MENU []
 I-805
 VIEW

Next maneuver

List of required maneuvers route. Tap to jump to first maneuver in the list

Tap to scroll up.

Tap to scroll down.

Tap to jump to last maneuver in the list.

Tap to select the next guidance view.

Browsing the Map Display

Tap on the map to enter Browse Mode. (See below.)



To exit **Browse Mode**, tap the "X" in the upper right corner.

Zooming In and Out

Tap + or - to change the zoom level.



Data Entry

When you set a destination, Nextar GPS may prompt you to enter required information, such as the name of a city or the name of a street. As you enter information, the screen highlights the characters that are likely to be next.



To make corrections, tap on the **BACKSPACE** button. To view a list of selections that match what you have entered so far, tap **LIST**, or tap on a matching selection in the "mini-list" that appears at the top. To exit, tap **MAP**.

If you tap **LIST**, a full list of selections appears. To scroll the list, tap on the **Up** or **Down** arrow on the scroll control. Tap directly on an item to select it. Otherwise, tap **KEYS** to enter more characters, or tap **MAP** to exit.

	Û
LOS	X
LOS ALAMITOS, CA	REAR
LOS ALAMOS, NM	
LOS ALAMOS, CA	
LOS ALTOS, CA	
LOS ALTOS HILLS, CA	
LOS ANGELES, CA	

2 — Set Destinations

To Set a Destination Using an Address

	0	
Choose:		
MENU > DESTINATION	> ADDRESS	5
ENTER DES	TINATION X	
M ADDRESS	🔍 POI	
START WITH CITY START START START START	ET IN CENTER	
Decross Road	₩ FAVORITES	
Select an option a		address in a city you choose.
		,,

CENTER Use this option to go to the center of a city you choose.

Follow the prompts to set a destination. Nextar GPS displays the destination location. (See below.)



Choose **GO**. Voice instructions will guide you to your destination while the screen displays your present location and Turn-By-Turn information.

To Set a Destination Using a Point Of Interest Choose:

CHOUSE				
MENU >	DESTINATION	>	🔍 POI	
	ENTER DES	TINATIO	N X	
	ADDRESS	Q,	POI	
POI BY CITY		POI NEAR VEHICLE	POI NEAR DEST.	
⊕¢ 0	ROSS ROAD	S∯≲ FA	VORITES	
POI BY CITY	an option a Use this op			int of interest in a city you choose.
POI BY NAME	Use this o	ption to g	go to a po	int of interest you choose by name.
POI NEAR VEHICLE	Use this c	ption to	go to a p	pint of interest near your current location.
POI NEAR DEST.	Use this o	ption to g	go to a po	int of interest near your destination.
				ion. Once you set a destination, Nextar GPS displays (See below.)
				\/



Choose **GO**. Voice instructions will guide you to your destinations while the screen displays your present location and Turn-By-Turn information.

To Set a Destination Using Cross Roads Choose:

MENU > DESTINATION	> CROSS ROAD
ENTER DES	
START WITH CITY	START WITH STREET IN SAN DIEGO
Decross Road	Se FAVORITES

Select an option as follows:



START WITH CITY Use this option to go to an address in a city you choose.



Use this option to go to an address in a region you choose.

Follow the prompts to set a destination. Once you set a destination, Nextar GPS displays the destination location on the map. (See below.)

LINDBERGH FIE	ELD 🗙
SAN DIEGO (619)-2312100	
12 mi (Direct)	GO
	💾 SAVE & GO
HARBOR	FAST A ROUTE
C RENT-A-CAR	📩 SET ORIGIN

Choose GO. Voice instructions will guide you to your destinations while the screen displays your present location and Turn-By-Turn information.



To Set a Destination Using an Item in Favorites Choose:

	MENU >	DESTINATION	>	FAVORITES	
		ENTER DES			
	\bowtie	ADDRESS	Q,	POI	
	ROUTE TO FAVORITE		RENAME FAVORITE	DELETE FAVORITE	
	\$	CROSS ROAD	S∯S FA	VORITES	
;	Select a	an option a	as follows	3:	
	()				
	ROUTE TO FAVORITE	Use this c	option to	go to a lo	ocation name in the Favorites list.
	SET FAVORITE AS HOME	Use this c	ption to	set a loca	ation or destination as Home.
	A				
	RENAME FAVORITE	Use this c	option to	rename	a location in the Favorites list.
	DELETE	Use this o	ption to	delete a l	ocation in the Favorites list.

To Cancel a Route





To Save a Destination as a Favorite or Home Location

Set a destination, and then choose:

Next:



Enter a name, and then tap **OK** or tap the **HOME** icon to save the destination as a **Home** location.

—Or—

Browse to the desired location on the map, and then choose:





Enter a name, and then tap **OK** or tap the **HOME** icon to save the destination as a **Home** location.

—Or— Choose:



Select an item in the list, and then choose:

💾 SAVE & GO




Enter Name	X
ABCDEFGHI	
JKLMNOPQR	HÔME
S T U V W X Y Z _	MAP
12345-&'.	ок
6 7 8 9 0 , 🗢	

Enter a name, and then tap **OK** or tap the **HOME** icon to save the destination as a **Home** location.

3 — Program Settings

Map Settings	
MENU SETTINGS MAP MAP SETTINGS	T
Map Mode Map Mode NORTH UP HEADING UP 3 3D VIEW Show/Hide POI Icon POI ICON ON	Tap to select options, and then tap OK .
Language	
MENU > SETTINGS > LANGUAGE	Tap to select an option, and then tap OK .
English (Prançais () Praníol English (Prançais () Praníol () ()	
●日本語 🤣 中文 ● 한국미	
Set Origin	
MENU - SETTINGS - SET ORIGIN	
	15

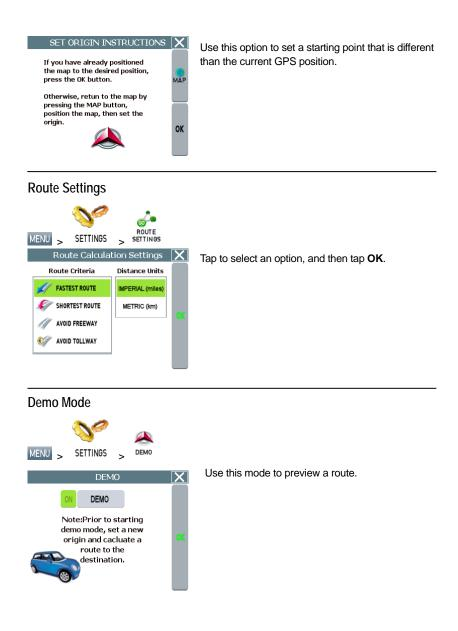

Map Selection	
MENU > SETTINGS > SELECTION	
MAP SELECTION Select Map Region Continental US & Puerto Rico Alaska	Tap to select the appropriate map region. When asked to confirm, tap Yes . The application will restart.
Exit	
GPS Status	
MENU > SETTINGS > OPS STATUS	
About GPS	
MENU > SETTINGS > ABOUT	

4 — Icons and Controls

Compass and GPS

lcon	Name	Description
۹	Heading-Up	The vehicle icon points toward the direction of travel. The map rotates under the icon as you travel.
÷	North-Up	North is at the top. The vehicle icon points in the direction of travel. The compass displays the direction of travel.
3D	3-D	The map displays in 3D perspective.
12:06 PM	Compass	Current compass heading and time.

User Interface Controls and Icons

lcon	Name	Description
	Current Vehicle Position and Heading Icon	Indicates the current car position and heading on the map display.
+	Browse Mode Cursor	Tap and drag to scroll the map. Press and hold to center the map at the selected location.
END MAP BROWSE	Browse Mode indicator	Displays the distance from the current vehicle position to the location indicated by the cursor. Tap "X" to exit Browse mode.
	Current Street / Next Cross Street Toggle	Tap to view the name of the current street or the name of the next cross street along the bottom of the screen.
0	Information Button	Tap to view additional information about the location at the cursor position.
	Volume icon	Tap to activate the popup volume control.

lcon	Name	Description
*	Zoom Control	Tap + to zoom in. Tap - to zoom out.
×	Close Button	Returns you to the previous screen.
₽	Backspace	Deletes characters like a Backspace key.
МАР	Map Button	Tap to return to the main map display.
	Auto-Complete Keys	Displays the next valid characters only. The highlighted characters represent the three most likely characters.
BCLM	Highlighted keyboard letters	Displays all characters. The highlighted characters represent the next most likely characters.
LIST	List Button	Lists all possible selections based on the characters entered thus far.
EMPTY	Empty	When available, allows you to delete the contents of a user-defined or user-created list.
KEYS	Keys	When available, returns you to the data entry screen.
	Scroll Buttons	When available, allows you to scroll a list of items.

lcon	Name	Description
ок	OK Button	Accepts entered text and advances to the next action.
VIEW	VIEW Options Button	Cycles the main display through three views: Main Turn-by-Turn, Split Map, and Maneuvers List.
G0	GO / SAVE & GO	GO: Tap to start voice guidance and Turn-By-Turn views to the selected location. SAVE & GO: Tap to save the selected location in the Favorites list, and then start guidance to the selected location.
FAST A ROUTE	Route Calculation Criteria button	Tap to cycle through the route calculation criteria options.
	SET ORIGIN	Tap to set the current location as the starting vehicle position.
	POI Icons	These icons denote locations of interest, including restaurants, banks, hotels, and more.
2	Green Flag	Location of the next maneuver.
2	Checkered Flag	Destination location.

Turn-By-Turn Icons

Control	Description
	Turn-by-Turn start.
*	Turn-by-Turn end.

Control	Description
RAMP	The next maneuver is a distance away. (The arrow points left or right as appropriate.)
RAMP	The next maneuver is closing in. (The arrow points left or right as appropriate.)
	The next maneuver is imminent. (The arrow points left or right as appropriate.)
EI-80 / CA-99 S RENO .1	The name of the street on which you will be turning next appears at the top of the display. The background color changes from grey to red as you approach the intersection to make the next maneuver.
	Approaching destination

Copyright

No part of this manual may be copied, republished, reproduced, transmitted or distributed in any way without prior written consent of Nextar, Inc. Any unauthorized distribution of this manual is expressly forbidden.

Nextar may find it necessary to modify, amend, otherwise change, or update this manual. We reserve the right to do this at any time, without any prior notice. All specifications and features are subject to change without notice. All screen shots shown are simulated and may not represent the actual screen on production unit sold to consumers.

Mapping database copyright © 2007 NAVTEQ $^{\rm TM}.$ NAVTEQ ON BOARD $^{\rm TM}$ is a trademark of NAVTEQ $^{\rm TM}$



GPS software Copyright © 1997 - 2007 Infogation Corp



For information on this product its operation and accessories, visit us on the web at: http://www.nextar.com

Or write to us at:

© 2008 NEXTAR (HONG KONG) LIMITED 1661 FAIRPLEX DRIVE LA VERNE, CA 91750 USA All products distributed by Nextar Inc. unless otherwise indicated www.nextar.com Made in China

© 2008 Nextar (Hong Kong) Limited. Nextar is a trademark and service mark of Nextar (Hong Kong) Limited. All other brand names, trademarks and service marks are property of their owners.

Nextar[™], a trademark of Nextar (Hong Kong) Limited.

22

M30608ES01