
Table of Contents

Safety Information	F-1
CDRH Regulations.....	F-1
CE Marking (Declaration of Conformity)	F-4
Ozone release (for all users).....	F-5
Welcome	F-6
Trademark Acknowledgments.....	F-6

1 Quick Guide PagePro 18L

1.1	STEP 1: Unpacking the Printer	1-1
1.2	Reference 1: Printer Parts	1-3
1.3	Reference 2: Control Panel	1-4
	When the Ready LED is on	1-5
	When the Error LED is on	1-7
	Fatal Error	1-9
	When the Error LED is on	1-9
1.4	STEP 2: Attaching the Face-Down Tray and Tray 1.....	1-10
1.5	STEP 3: Loading Paper.....	1-12
1.6	STEP 4: Connecting the Power Cord	1-14
1.7	STEP 5: Turning the Power On/Off.....	1-15
	Turning the power ON.....	1-15
	Turning the power OFF.....	1-15
1.8	STEP 6: Connecting the Printer to the Computer (Local Connection).....	1-16
1.9	STEP 7: Installing the Printer Driver	1-17
	Windows 95/98/NT 4.0 – Installing from the CD-ROM.....	1-17
1.10	Reference 3: Troubleshooting	1-18
	Clearing a Paper Misfeed.....	1-18
	Clearing a Paper Misfeed.....	1-19
	Solving Print Quality Problems.....	1-19
	No output.....	1-19

2 Introduction

2.1	Features.....	2-1
2.2	Printer Parts and Accessories	2-2
2.3	Control Panel	2-4
	Indicator Lights	2-5
	Action Key	2-5
	When the Ready LED is on	2-6
	When the Error LED is on.....	2-9

3 Setting-up

3.1	Installation Precautions	3-1
	Selecting a Location for the Printer	3-1
	Power Source	3-2
	Grounding	3-2
	Space Requirements	3-3
3.2	Operational Precautions	3-4
	Operating Environment.....	3-4
	Printer	3-4
	Printer Supplies	3-6
3.3	Setting-up	3-7
	Installing the Face-Down Tray	3-7
	Installing Tray 1	3-8
	Connecting the Power Cord	3-9
	Loading Paper	3-10
	Turning On the Printer	3-12
	Connecting to a Computer.....	3-13
3.4	Options	3-14
	SIMM (Single In-line Memory Module)	3-14
	Installing the Optional SIMM.....	3-15
3.5	Duplex Unit.....	3-20
	Installing the Duplex Unit.....	3-20
3.6	Second/Third Paper Cassette Unit.....	3-23
	Installing the Optional Second/Third Paper Cassette Unit	3-23
3.7	Network Interface Card (NIC).....	3-26
	Installing the Optional Network Interface Card	3-26

4 Using the Printer

4.1	Paper	4-1
	Type	4-1
	Size	4-2
	Envelopes (Tray 1 and Manual Feed Tray).....	4-2
4.2	Loading Paper	4-4
	Loading Paper onto Tray 1.....	4-4
	Loading Paper onto Tray 2/Tray 3	4-6
	Loading Paper onto Manual Feed Tray.....	4-10
	Printing on Envelopes	4-12
	Duplex Printing.....	4-14

5 Printer Driver and Status Display

5.1	System Requirements	5-1
5.2	Installing the Printer Driver Under Windows 95/98.....	5-3
	To Install the Printer Driver from the CD-ROM	5-3
	To Uninstall the Printer Driver	5-12
5.3	Installing the Printer Driver Under Windows NT 4.0	5-16
	To Install the Printer Driver from the CD-ROM	5-16
	To Uninstall the Printer Driver	5-26
5.4	Registering the Status Display	5-30
	Registering the Status Display Under Windows 95/98.....	5-30
	Registering the Status Display Under Windows NT 4.0.....	5-34
5.5	Displaying the Driver Setup Dialog (Windows 95/98/NT 4.0).....	5-37
	To Display the Driver Setup Dialog Under Windows 95/98.....	5-37
	To Display the Driver Setup Dialog Under Windows NT 4.0.....	5-38
5.6	Using the Printer Driver Under Windows 95/98/NT4.0.....	5-40
	Common Buttons	5-40
	Paper.....	5-41
	Paper Size.....	5-41
	Page Layout.....	5-43
	Image	5-47
	Device Option.....	5-49
	About.....	5-49
5.7	Using the Printer Status Display	5-50
	Opening the Printer Status Display	5-50
	Using the Printer Status Display	5-51
	Controlling Pop Up Messages.....	5-52
	Switching Between the Expanded and Reduced Views.....	5-52

On-line Help.....	5-53
Displaying Printer Information...	5-53

6 Maintenance

6.1 Replacing the Imaging Cartridge	6-1
To Replace the Imaging Cartridge.....	6-2
6.2 Cleaning the Printer	6-5
Cleaning the Outside of the Printer	6-5
Cleaning the Paper Transport Roller	6-5

7 Troubleshooting

7.1 Clearing a Paper Misfeed.....	7-1
Inside the Printer	7-1
Paper Output Misfeed.....	7-4
Paper Input Misfeed (from Tray 1).....	7-4
Paper Input Misfeed (from Manual Feed Tray).....	7-4
Paper Input Misfeed (from Second/Third Paper Cassette Unit)	7-5
7.2 Paper Misfeed in the Duplex Unit.....	7-6
Upper Misfeed	7-6
Lower Misfeed	7-6
7.3 Print Quality Problems.....	7-7
Blank pages	7-7
Black pages	7-7
Printout too light.....	7-8
Printout too dark	7-8
Blurred background	7-8
Uneven print density.....	7-9
Irregularities	7-9
White or black line	7-9
Toner smudges.....	7-10
7.4 No output.....	7-10
Are you using the correct type of printer cable?	7-10
Are your computer's communications port settings correct?	7-10
7.5 Messages	7-11
When the Ready LED is on	7-12
When the Error LED is on	7-16

8 Specifications

8.1	PagePro 18L Printer.....	8-1
8.2	Second Paper Cassette Unit (Option)	8-2
8.3	Third Paper Cassette Unit (Option)	8-3
8.4	Duplex Unit (Option)	8-3
8.5	Interface Connector and Cable	8-4
8.6	SIMM (Option).....	8-4

9 Quick Reference

9.1	The LED Display.....	9-1
	Indicator Lights.....	9-1
	Action Key	9-1
	When the Ready LED is on.....	9-2
	When the Error LED is on	9-4
	When the Error LED is on (Fatal Error).....	9-6

10 General Information

10.1	END USER LICENSE AGREEMENT	1
10.2	Contrat utilisateur de la licence.....	4
10.3	ENDVERBRAUCHER-LIZENZVERTRAG	7
10.4	CONTRATTO DI LICENZA D'USO	10
10.5	Addresses MINOLTA-Partners in Europe	13
10.6	MINOLTA GUARANTEE CERTIFICATE	16

11 Glossary

12 Index



Safety Information

- **Laser Safety**

This is a page printer which operates by means of a laser. There is no possibility of danger from the laser, provided the printer is operated according to the instructions in this manual.

Since radiation emitted by the laser is completely confined within protective housing, the laser beam cannot escape from the machine during any phase of user operation.

- **Internal Laser Radiation**

Maximum Radiation Power:

1.03 (mW) at laser aperture of the print head unit

Wavelength: 770-810 (nm)

This product employs Class IIb Laser Diode. Laser Diode and Scanning Polygon Mirror are incorporated in the print head unit.

The print head unit is not a field service item. Therefore, the print head unit should not be opened under any circumstance.

- **Laser Safety**

This printer is certified as a Class 1 Laser product under the U.S. Department of Health and Human Services (DHHS) Radiation Performance Standard according to the Radiation Control for Health and Safety Act of 1968. This means that the printer does not produce hazardous laser radiation.

CDRH Regulations

The Center for Devices and Radiological Health (CDRH) of the U.S. Food and Drug Administration implemented regulations for laser products on August 2, 1976. Compliance is mandatory for products marketed in the United States. The label shown on the following page indicates compliance with the CDRH regulations and must be attached to laser products marketed in the United States.



WARNING

- ➔ Use of controls, adjustments or performance of procedures other than those specified in this manual may result in hazardous radiation exposure.
 - ➔ This is a semiconductor laser. The maximum power of the laser diode is 5mW and the wavelength is 770-810 nm.
-

For Denmark Users



ADVARSEL

- Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.
 - Klasse 1 laser produkt der opfylder IEC825 sikkerheds kravene.
-

For Finland, Sweden Users



VAROITUS

- Laitteen käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyttäjän turvallisuusluokan 1 ylittävälle näkymättömälle lasersäteilylle.
-



VARNING

- Om apparaten används på annat sätt än i denna bruksanvisning specificerats, kan användaren utsättas för osynlig laserstråling som överskrider gränsen för laser klass 1.
-



VARO

- Avattaessa ja suojalukitus ohitettaessa olet alttiina näkymättömälle lasersäteilylle. Äjä katso säteeseen.
-



VARNING

- Osynlig laserstråling när denna del är öppnad och spärren är urkopplad. Betrakta ej strålen.
-


For Norway Users



ADVARSEL

- Dersom apparatet brukes på annen måte enn spesifisert i denne bruksanvisning, kan brukeren utsettes for usynlig laserstråling som overskrider grensen for laser klasse 1.
- Dette er en halvleder laser. Maksimal effekt til laserdiode er 5mW og bølgelengde er 770-810 nm.

Warning Label

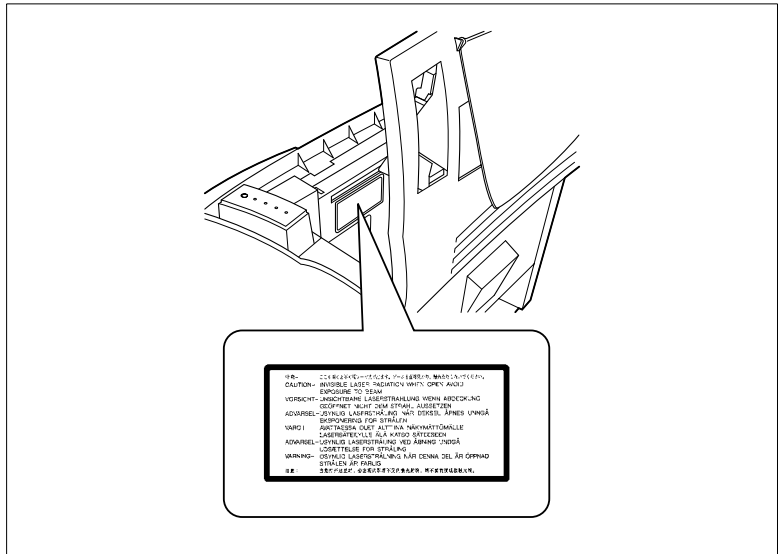

CE Marking (Declaration of Conformity)

We declare under our sole responsibility that the printer and option to which this declaration relates is in conformity with the specifications below.

This declaration is valid for the area of the European Union (EU) only.


Product Type	Laser Beam Printer
Product Name	PagePro 18L
Options Accessories	Second Paper Cassette Unit (4166) Third Paper Cassette Unit (4166), Duplex Unit (4168) DRAM SIMM (Maximum 16MB), Network Interface Card (4179-452)
Standard	Safety: EN60 950/1992 (A1: 1993, A2: 1993, A3: 1995, A4: 1997, A11: 1997) :Safety of information technology equipment, including electrical business equipment EN60825-1/1994(A11: 1996) :Radiation safety of laser products, equipment classification, requirements and user's guide EMC: EN55 022(Class B)/1994 (A1: 1995, A2: 1997) :Limits and method for measurement of radio disturbance characteristic of information technology equipment(ITE) EN61000-3-2(Class A)/1995 :Electromagnetic compatibility(EMC) - Part 3:Limits Section 2:Limits for harmonic currents emissions (equipment input current≤16A per phase) EN61000-3-3/1995 :Electromagnetic compatibility(EMC) - Part 3: Limits Section 3 :Limitation of voltage fluctuations and flicker in low-voltage supply systems for equipment with rated current ≤16A EN50 082-1/1997 :Electromagnetic compatibility - Generic immunity standard Part1: Residential, commercial and light industry EN61000-4-2 :Electrostatic discharge immunity test EN61000-4-3/1996, ENV50204/1995 :Radiated radio-frequency electromagnetic field immunity test EN61000-4-4/1995 :Electrical fast transient/burst immunity test EN61000-4-5/1995 :Surge immunity test EN61000-4-6/1996 :Conducted disturbances induced by radio-frequency electromagnetic field immunity test EN61000-4-8/1993 :Power-frequency magnetic field immunity test EN61000-4-11/1994 :Voltage dips, short interruption and voltage variations immunity test
EC Directive	Safety: 73/23/EEC, EMC: 89/336/EEC and 93/68/EEC

This device must be used with a shielded interface cable and shielded network (10/100BaseT) cable. The use of non-shield cables is likely to result in interference with radio communications and is prohibited under 89/336/EEC rules.

Ozone release (for all users)

During printer operation, a small quantity of ozone is released. This amount is not large enough to harm anyone adversely. However, be sure the room where the machine is being used has adequate ventilation, especially if you are printing a high volume of materials, or if the machine is being used continuously over a long period.

Warning label

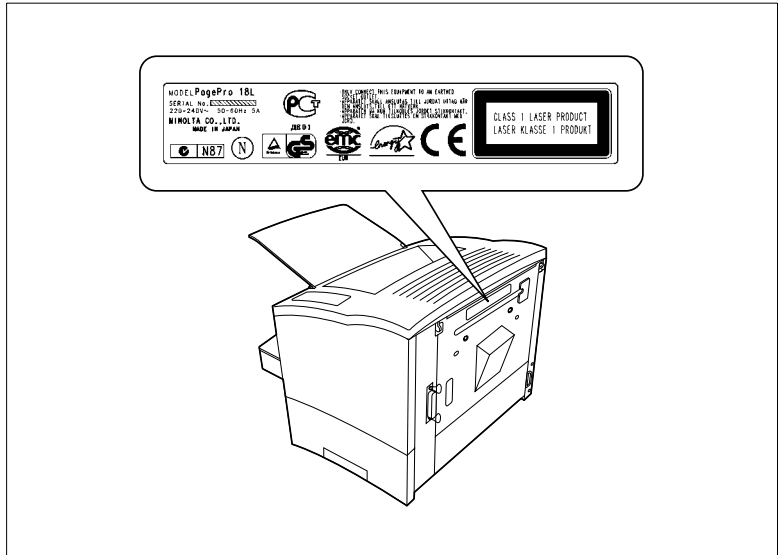



Welcome

And thank you for selecting a Minolta PagePro 18L Printer!

This User's Manual explains the functions of the printer and how it operates. It also provides you with troubleshooting tips as well as general precautions you should observe when operating the printer. To ensure the top performance and effective use of your printer, read this manual carefully from cover to cover, and keep it at hand for later reference.

No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into other languages without the express written prior consent of Minolta Co., Ltd.

The contents of this manual are subject to change without notice.

Trademark Acknowledgments

PCL is a registered trademark of Hewlett-Packard Company.

Centronics is a registered trademark of Centronics Inc.

Microsoft, Windows, and Windows NT are registered trademarks of Microsoft Corporation.

IBM is a registered trademark of International Business Machines Corporation.

Adobe and PostScript are registered trademarks of Adobe Systems, Inc.


PagePro is a trademark of Minolta in Europe, Japan and Asia.

All other brand or product names are trademarks or registered trademarks of their respective companies or organizations.

1 Quick Guide PagePro 18L

1.1 STEP 1: Unpacking the Printer


Before operating your printer, read the Set-Up Instructions carefully from cover to cover. Use this guide for reference.

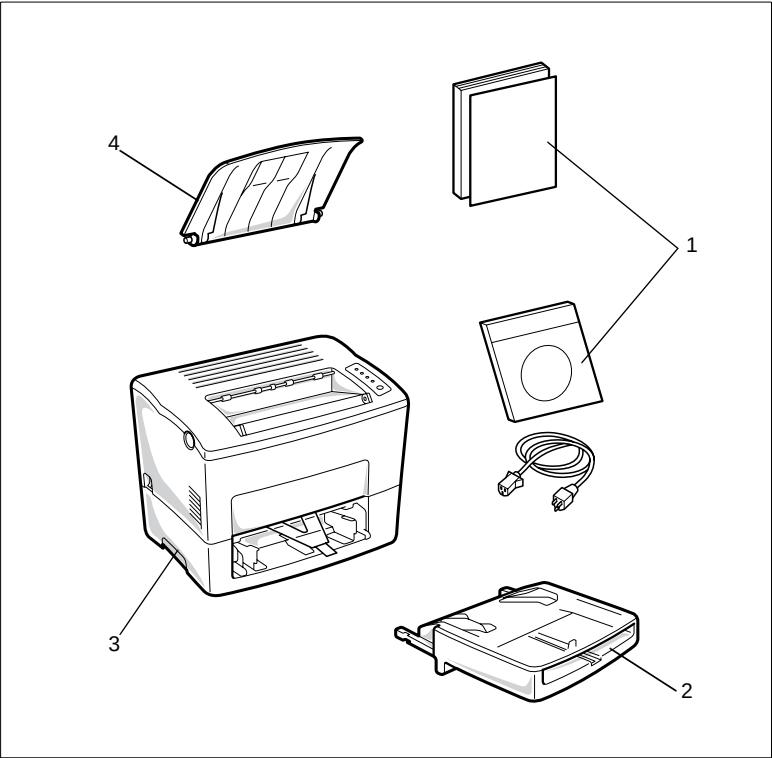


Pos.	Name	Pos.	Name
1	Accessories • User Kit including CD-ROM • Power cord	2	Tray 1
		3	Printer
		4	Face-down tray

- 1 Take the items and accessories shown above out of the carton.
- 2 Remove the plastic bag and peel off the shipping tape from the printer.


- 3 Pull out the plastic-lead strip from the paper feed inlet.

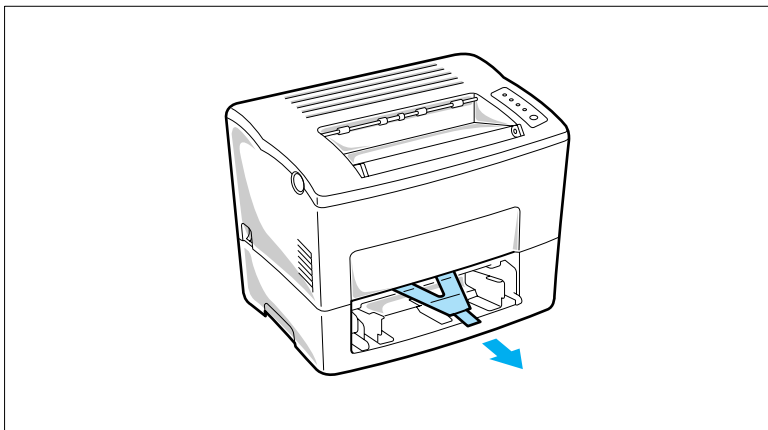

- 4 Remove the tape strip from the back of the printer.

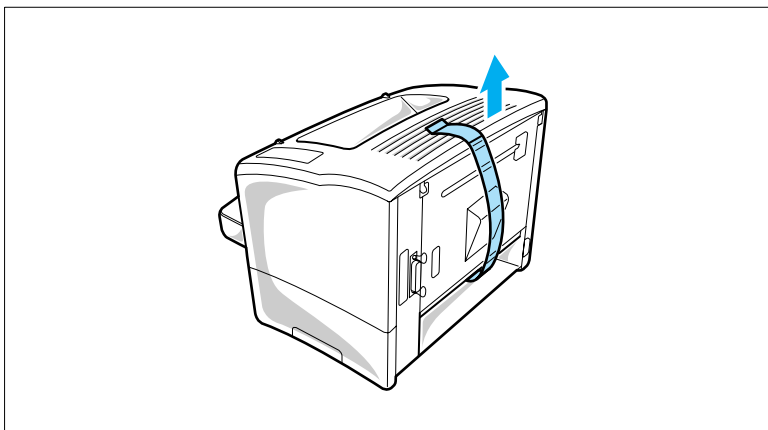


1.2 Reference 1: Printer Parts

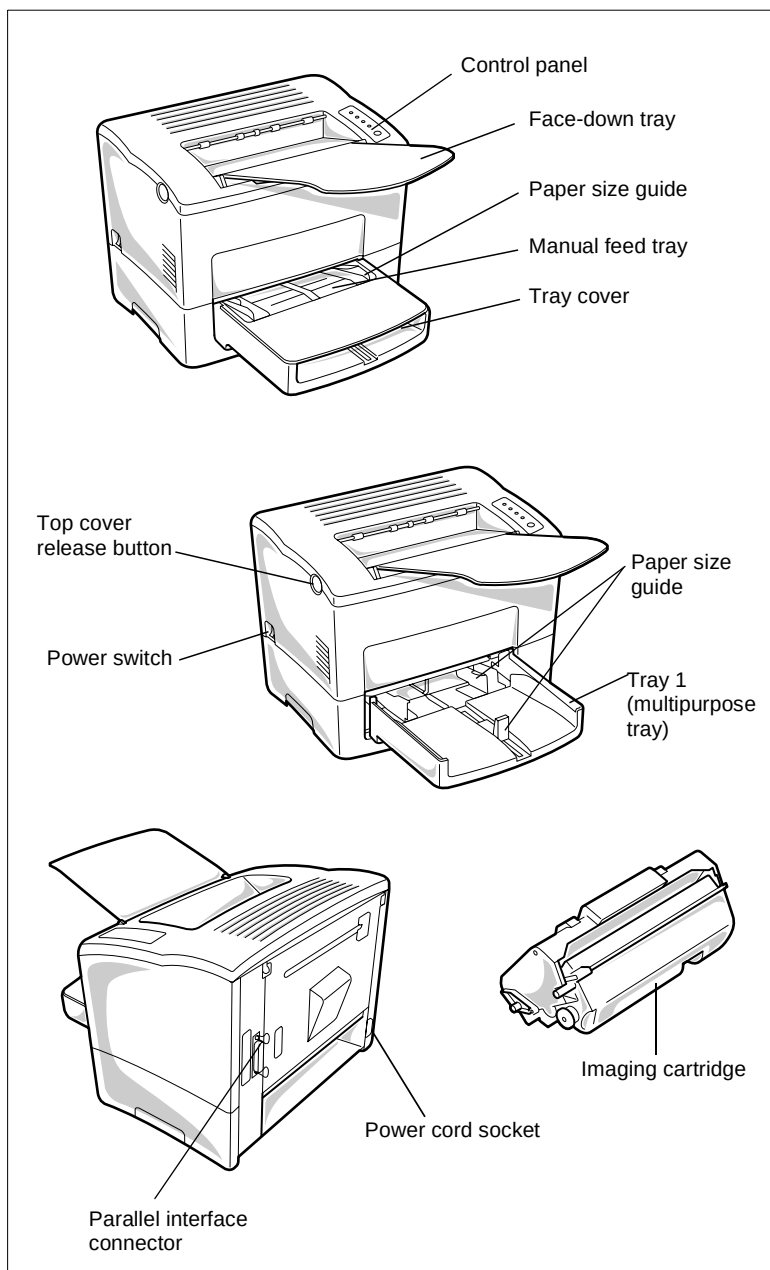

1.3 Reference 2: Control Panel

The control panel has four indicator lights and one button.

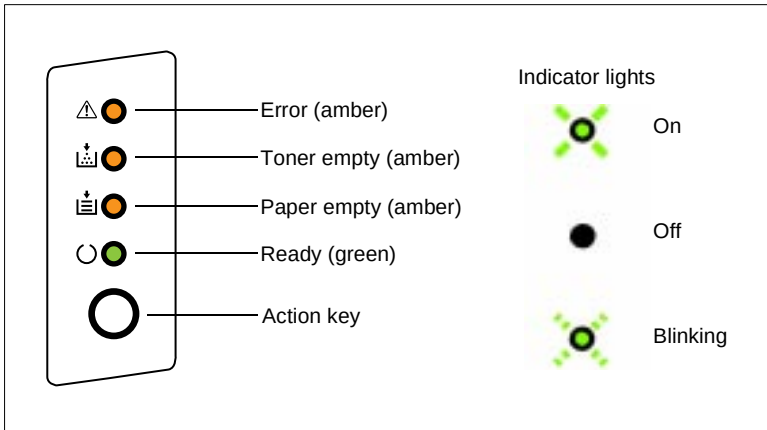

LED	Status	For the explanation . . .
	On or blinking Ready LED	see page 1-5
	On or blinking Error LED	see page 1-7






NOTE



→ The LED display will change as you press the Action key.







→ The appearance of this icon throughout this manual indicates when you need to press the Action key

When the Ready LED is on

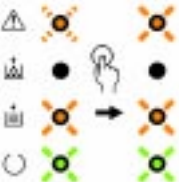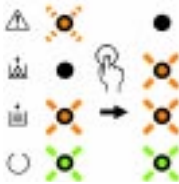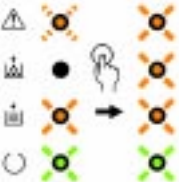Ready  Printer is ready and able to print, see page 7-12 of the User's Manual.	Power Save  Printer has entered the Power Save Mode, see page 7-12 of the User's Manual. Slowly blinking
Initializing  Power on, initializing, see page 7-12 of the User's Manual.	Warming Up  Printer is warming up, see page 7-12 of the User's Manual.
Tray 1 Paper Empty  The paper supply of Tray 1 is empty, see page 3-10 and see page 4-4 of the User's Manual.	Tray 2 Paper Empty  The paper supply of Tray 2 is empty, see page 4-6 and see page 7-12 of the User's Manual.
Tray 3 Paper Empty  The paper supply of Tray 3 is empty, see page 4-6 and see page 7-12 of the User's Manual.	Toner Low  The imaging cartridge is low on toner but printing is still possible, see page 6-1 and see page 7-12 of the User's Manual.

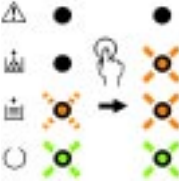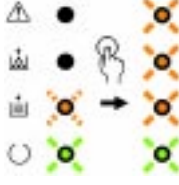Wait Action  Press the Action key in the event of a paper size error or when operating in the manual mode, see page 7-12 of the User's Manual.	Size Mismatch  The wrong size of paper has been detected in Tray 1, Tray 2 or Tray 3, see page 4-2 and see page 5-41 of the User's Manual.
Tray 2 No Cassette/No Tray 2  The cassette for Tray 2 is not in place or a print job was sent using the Tray 2 setting in the printer driver, even though Tray 2 is not installed on the printer, see page 3-23 and see page 5-40 of the User's Manual.	Tray 3 No Cassette/No Tray 3  The cassette for Tray 3 is not in place or a print job was sent using the Tray 3 setting in the printer driver, even though Tray 3 is not installed on the printer, see page 3-23 and see page 5-40 of the User's Manual.
Duplex Unit Not Available  A duplex print job has been sent to a printer that is not equipped with a duplex unit, see page 5-40 and see page 5-49 of the User's Manual.	

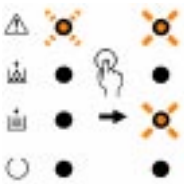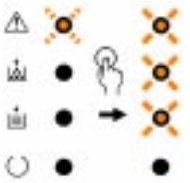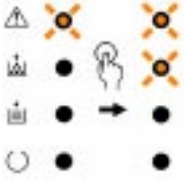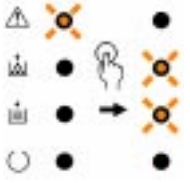Paper Misfeed 3  A paper misfeed occurred near Tray 3, see page 7-1 and see page 7-16 of the User's Manual.	Paper Misfeed 4  A paper misfeed occurred near the manual feeding tray, see page 7-1 and see page 7-16 of the User's Manual.
Paper Misfeed 5  A paper misfeed occurred near the lower-duplex unit, see page 7-6 and see page 7-16 of the User's Manual.	Paper Misfeed 6  A paper misfeed occurred near the imaging cartridge, see page 7-1 and see page 7-16 of the User's Manual.
Paper Misfeed 7  A paper misfeed occurred near the fuser, see page 7-1 and see page 7-16 of the User's Manual.	Paper Misfeed 8  A paper misfeed occurred near the upper-duplex unit, see page 7-6 and see page 7-16 of the User's Manual.
I/O Error (Parallel)  A controller error occurred at the parallel port, see page 7-16 of the User's Manual.	I/O Error (Network)  A network port error occurred, see page 7-16 of the User's Manual.

Fatal Error

Requires servicing.


Turn the power to the printer off and then on again. If the same LED message continues to be displayed, contact your dealer.

When the Error LED is on

HSYNC Abnormal	Polygonal Mirror	Main Motor
Fuser Low Temperature	Fuser Overheat	SRAM, DRAM, ROM, Engine I/F, CPU
Fuser Warm Up	Fuser Fan	P/H Fan


1.4 STEP 2: Attaching the Face-Down Tray and Tray 1

- 1 With both hands, gently bend the face-down tray inwards and insert one of its tabs into its holder on the upper portion of the printer. Continue to bend the face-down tray so that it curves enough for the second tab to fit into its holder and release the tray into position.

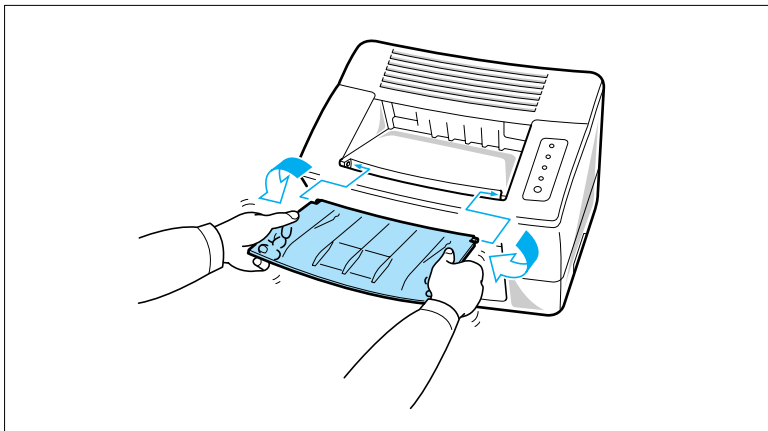


NOTE


- Be sure to close the face-down tray before opening the top cover to prevent injuries.

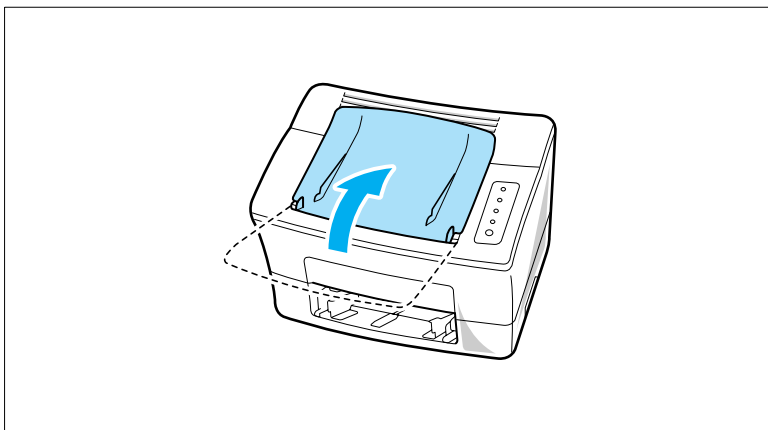

- 2 Using the left and right slots in the printer as guides, gently push Tray 1 until it cannot be inserted any further (as shown in the illustration)

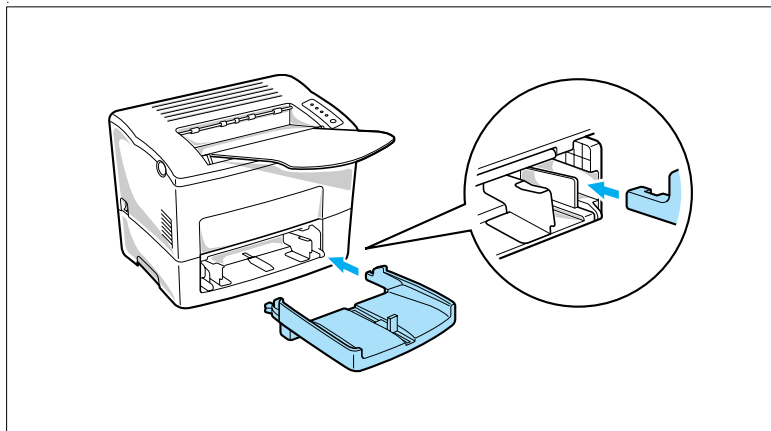


- 3 Attach the tray cover onto Tray 1.

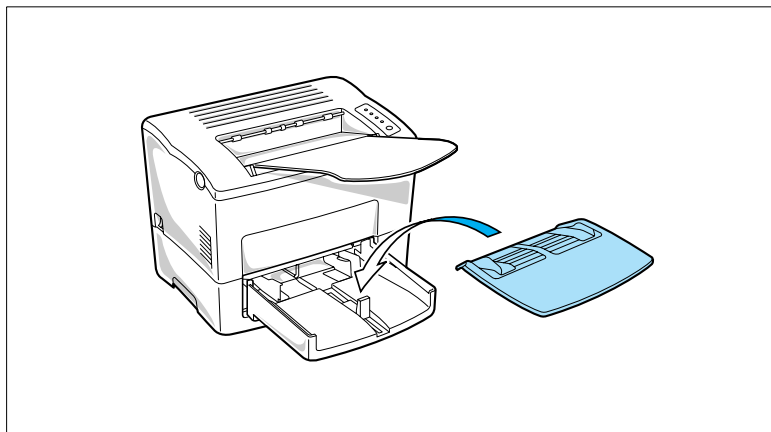


1.5 STEP 3: Loading Paper


- 1 Remove the tray cover from Tray 1.

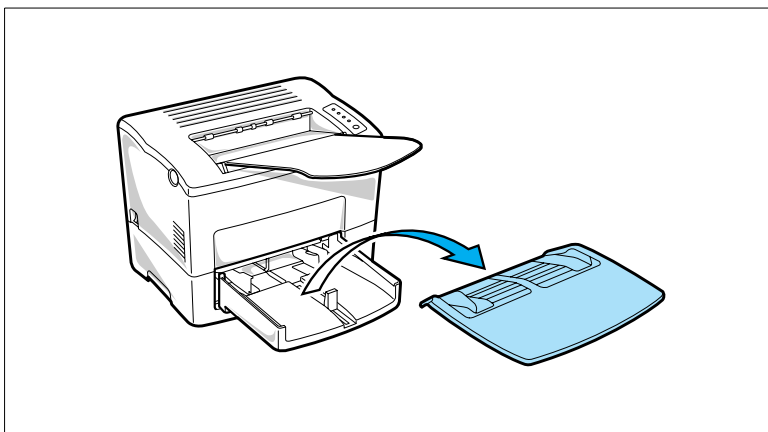


- 2 Open all three of the paper size guides.

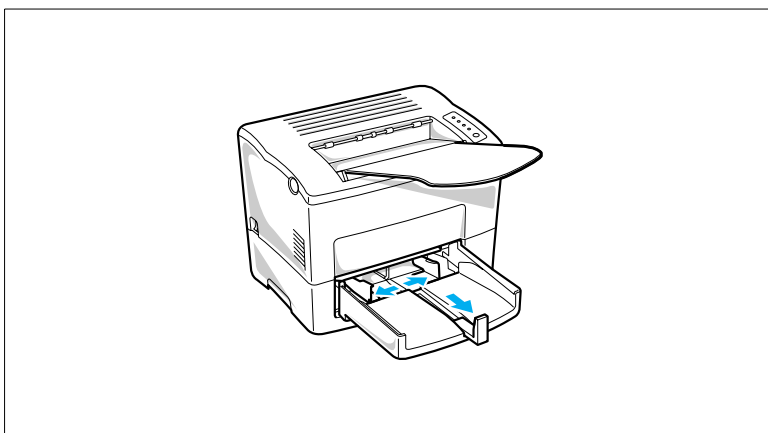

- 3** Place the paper stack onto the tray, print-side up. Secure the stack by adjusting the paper size guides.

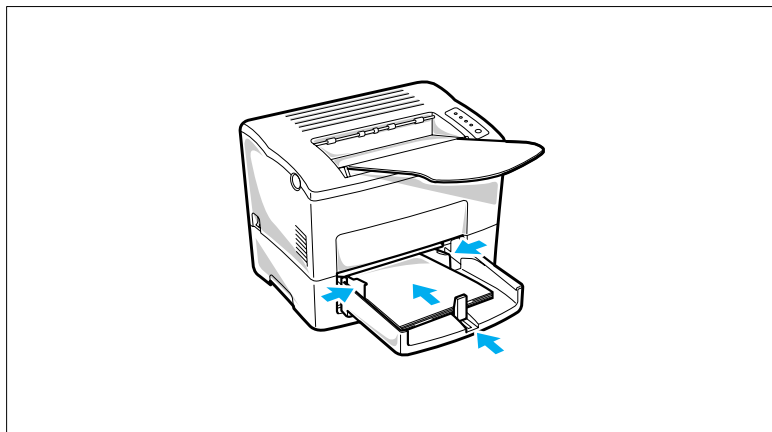


- 4** Replace the tray cover onto Tray 1.

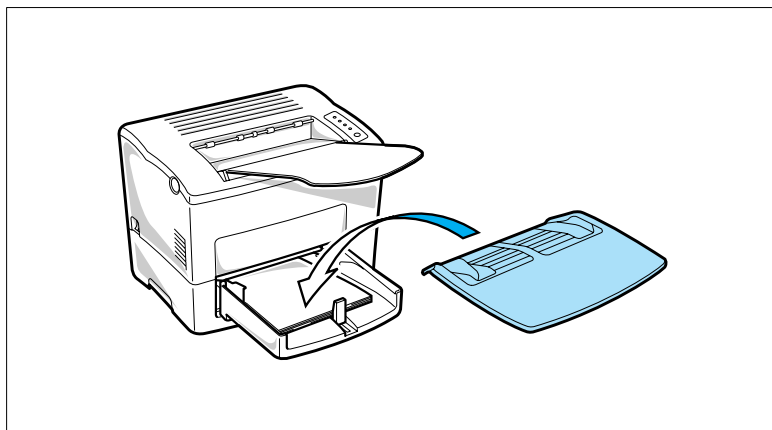


1.6 STEP 4: Connecting the Power Cord

- 1 Make sure that the printer's power switch is in the O (Off) position.

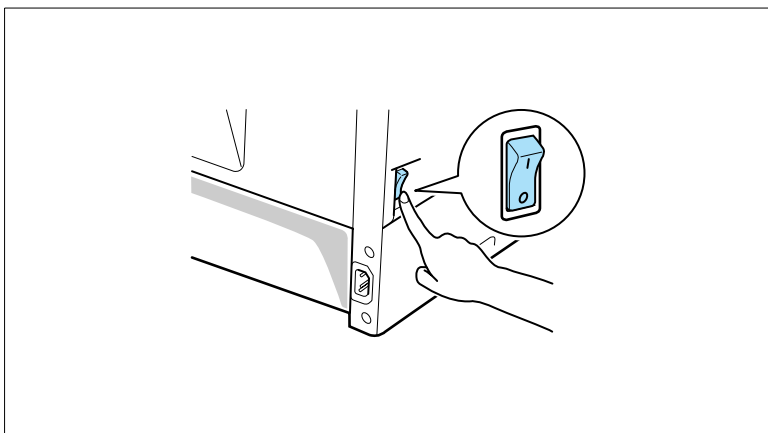


- 2 Connect one end of the power cord that comes with the printer to the power cord socket. Plug the other end into a power outlet.

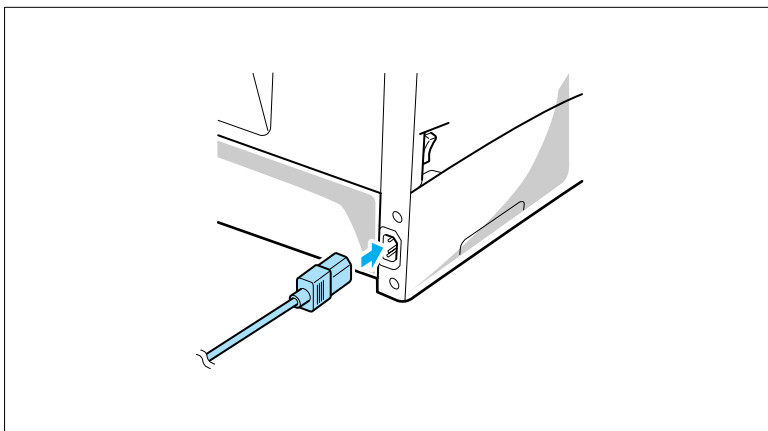

1.7 STEP 5: Turning the Power On/Off

Turning the power ON

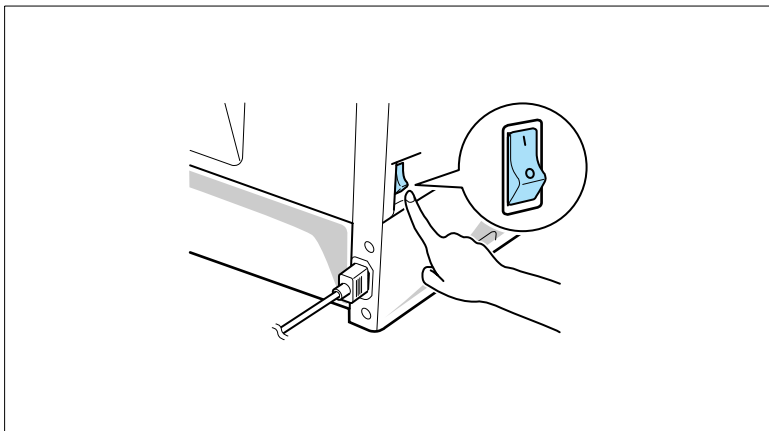

After connecting the printer to a power outlet, press the power switch to the I (On) position.

Turning on the printer causes all the indicators on the control panel to light, which indicates that the printer is warming up. In about 23 seconds only the READY indicator remains lit, indicating that the printer is ready to print

Turning the power OFF

Press the power switch to the O (Off) position to turn the printer off.




NOTE

DO NOT turn the power OFF while:

- printing
- the printer is receiving the data from the computer (Ready indicator on the control panel is blinking)

1.8 STEP 6: Connecting the Printer to the Computer (Local Connection)

- 1 Make sure that the printer and the computer you are connecting it to are both turned off.
- 2 Connect one end of the interface cable to the parallel port of the computer.
- 3 Connect the other end of the cable to the parallel connector on the back of the printer. Secure the cable using the two clips on the parallel connector.

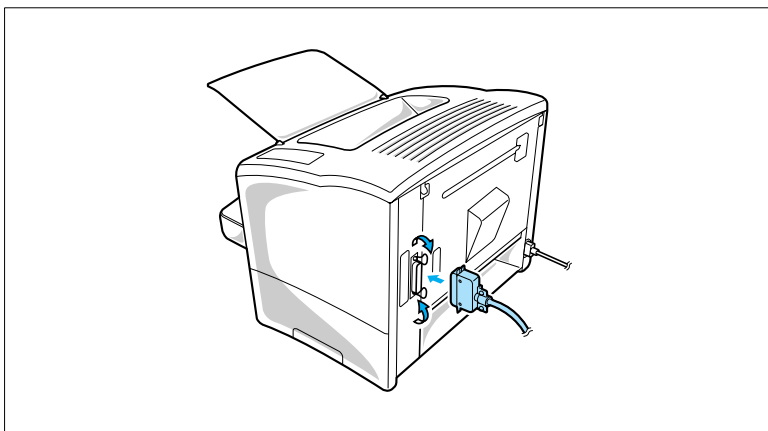

1.9 STEP 7: Installing the Printer Driver

Install the printer driver to control the printer from your computer.

You can install the printer driver for Windows 95, Windows 98 or Windows NT 4.0 from the Printer Driver CD-ROM.

Follow the instructions below and for more details, see Chapter 5 of this manual.

Windows 95/98/NT 4.0 – Installing from the CD-ROM

The printer driver must be installed using the CD-ROM's setup.exe.

- 1 Turn on your computer and start up Windows 95, Windows 98 or Windows NT 4.0.
- 2 Insert the Printer Driver CD-ROM into your computer's CD-ROM drive. In this example, we will assume that D: is the name of the CD-ROM drive.
- 3 Open the Windows Explorer, browse to the CD-ROM drive and navigate to: D:\DRIVER\WIN95NT\GB.
- 4 Double-click setup.exe.



NOTE


- The printer driver must be installed using the CD-ROM's setup.exe. Do not use the Add Printer wizard from the Printers folder. Installation through the Add Printer wizard will prevent the printer from performing properly.
-

After installing the printer driver, the Minolta PageWorks/Pro 18L printer icon appears in the Printers folder.


1.10 Reference 3: Troubleshooting

Clearing a Paper Misfeed

Remove the misfed sheet of paper by pulling it in the direction indicated by the arrow.

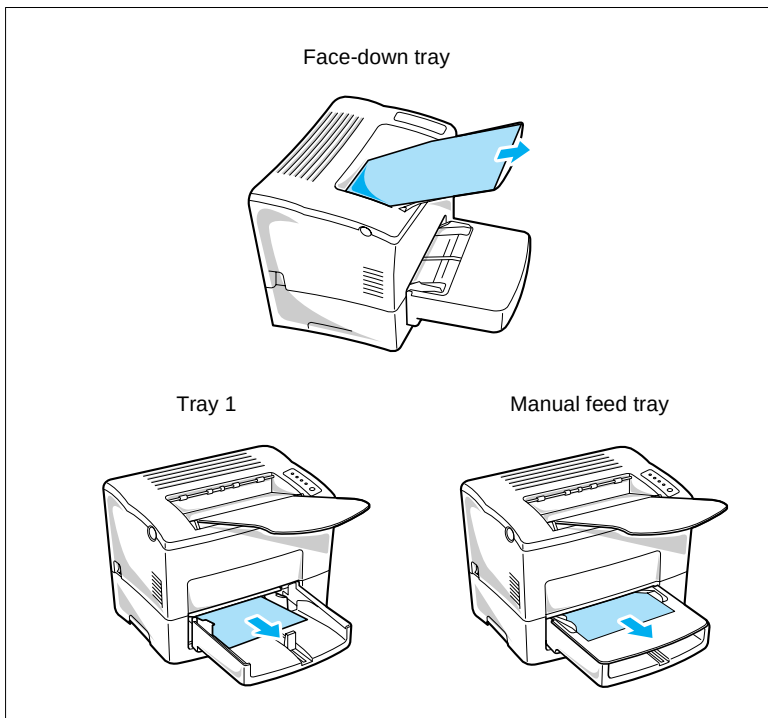

Clearing a Paper Misfeed

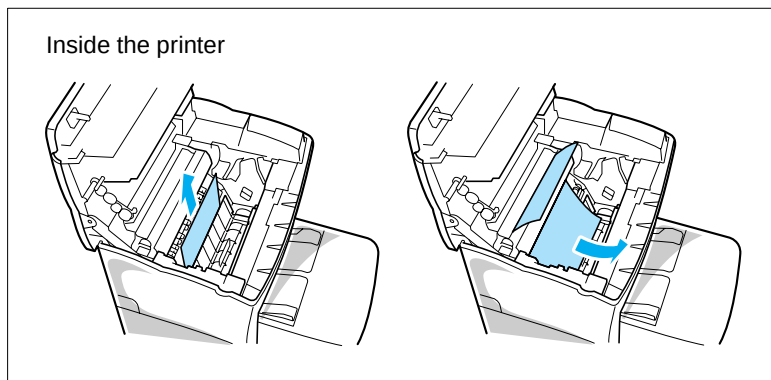

CAUTION

- The fusing unit inside the printer can become very hot during operation.
Do not touch the area to avoid injury.
- Do not touch the image transfer roller.

Solving Print Quality Problems

- Remove the imaging cartridge and gently shake it a few times to distribute remaining toner.
- Remove the imaging cartridge and check it for damage. Replace the imaging cartridge with a new one if necessary.
- Clean the inside of the printer. (Refer to the User's Manual.)

For more details, refer to the "Troubleshooting" and "Maintenance" sections of the User's Manual.

No output

- Make sure that the printer is plugged in.
- Make sure that power is turned on.
- Make sure that you are using the correct type of printer cable.
- Make sure that your computer's communication port settings are correct.

For more details, refer to the User's Manual.

2 Introduction




2.1 Features



The Minolta PagePro 18L is a laser printer developed exclusively for use with Windows 95, Windows 98, and Windows NT 4.0 operating systems.

The various features listed below make the Minolta PagePro 18L the perfect printer for any size office.

- Fast 18-page per minute print speed
- Powerful Windows[®] printing technology for fast output
- Real 1200 × 600 dpi resolution
- Optional 10/100BaseT Ethernet NIC
- Windows host based PostScript level 2 standard for expanded software compatibility
- 250-sheet paper capacity
 - 1,250-sheet maximum paper-holding capacity with optional second and third cassette units installed


2.2 Printer Parts and Accessories

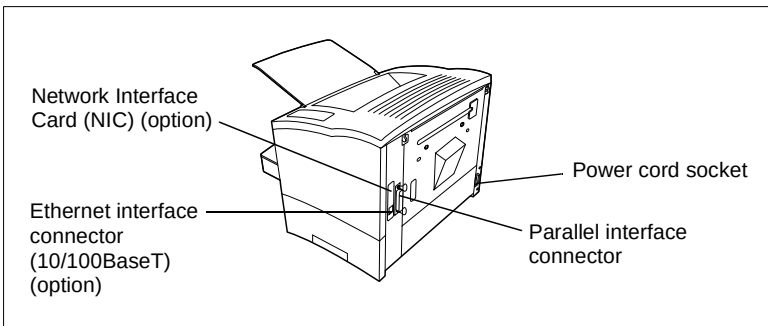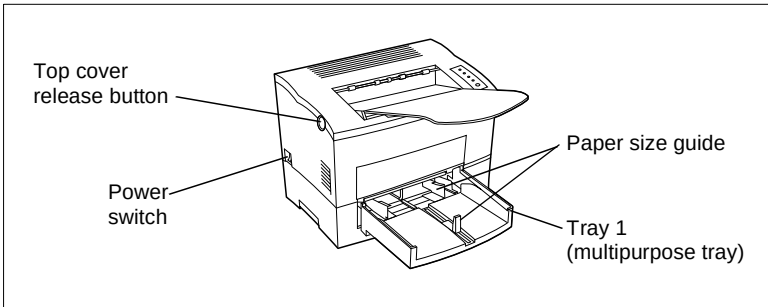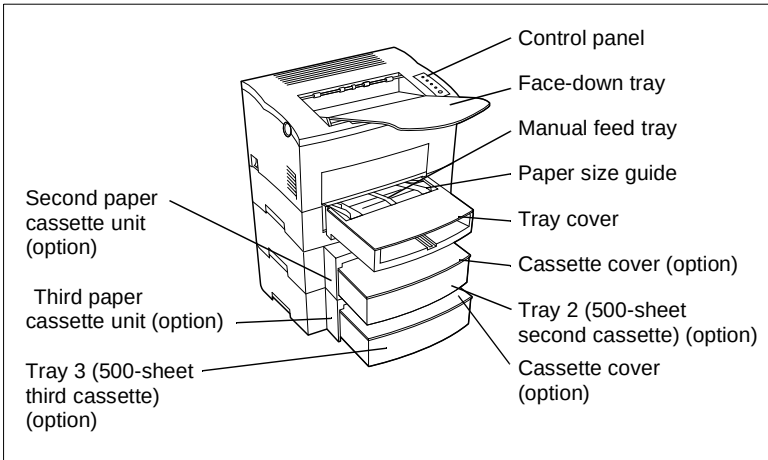

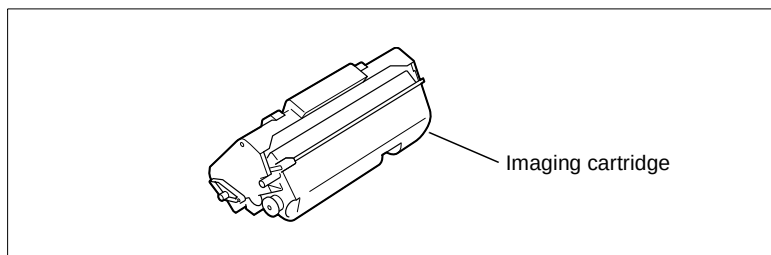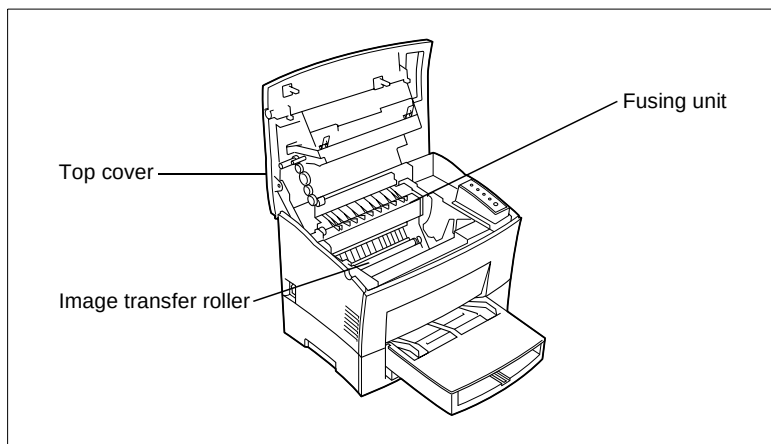

2.3 Control Panel


The control panel has four indicator lights and one button.

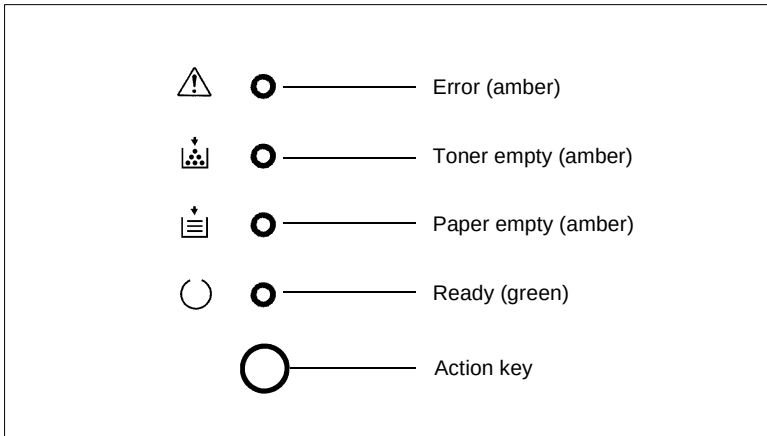

LED	Status
 	Error LED ON: A Fatal Error has occurred BLINKING: A recoverable error has occurred OFF: Normal
 	Toner Empty LED ON: The imaging cartridge is empty BLINKING: The imaging cartridge is almost empty OFF: Normal
 	Paper Empty LED ON: The selected paper tray is empty OFF: Normal
 	Ready LED ON: The printer can receive print jobs BLINKING: The printer is warming up OFF: The printer is off line
	Action Key Press this key if an error should occur in order to have the current condition of the printer displayed through the LED.

Indicator Lights

The four indicator lights turn on, off, or blink in combination to let you know the current status of the printer. You can find out details of the printer's status by checking the information that appears on your computer screen.

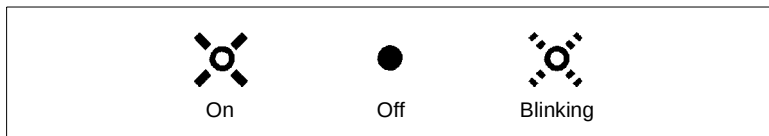

Action Key

 
 


The LED display will change as you press the Action key.

The appearance of this icon throughout this manual indicates when you need to press the Action key.



Examples of the messages that can be displayed by the LED are presented on the following page. For details, see page 7-11.

When the Ready LED is on

LED Display	Description	Response Required
Initializing 	Power on, initializing.	
Warming Up 	Printer is warming up.	
Ready 	Printer is ready and able to print.	

LED Display	Description	Response Required
Power Save    	Printer has entered the Power Save Mode.	
Paper Empty    	The paper supply of one of the trays is empty.	Press the Action key to see which tray is out of paper. For details, see page 7-12.
Size Mismatch    	The wrong size of paper has been detected in Tray 1, Tray 2 or Tray 3.	Load the specified size of paper into the appropriate tray or press and hold the Action key for about 10 seconds until all of the LED's are on to cancel the print job, see page 4-4.

When the Error LED is on

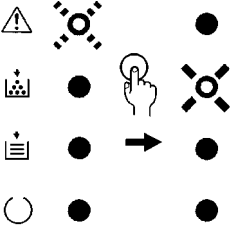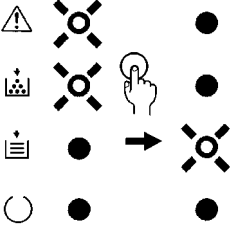LED Display	Description	Response Required
Paper Size Error 	The paper-size setting of the printer driver does not match the size of paper that has been detected in the tray.	Load the correct size of paper or cancel the print job (by pressing the Action key) and change the paper-size setting in the driver (see page 4-4 and see page 7-16).
Paper Misfeed 	A paper misfeed occurred near the Multipurpose tray, Tray 2, Tray 3, Manual feeding tray, Lower-duplex unit, Drum unit, Fuser or Upper-duplex unit.	Press the Action key to see where the paper misfeed occurred. For details, see page 7-16.
Replace Imaging Cartridge 	The imaging cartridge is out of toner.	Replace the imaging cartridge. For details, see page 6-1.

3 Setting-up

3.1 Installation Precautions

Note the following important precautions when selecting a location for the printer and when connecting it to a power source.

Selecting a Location for the Printer

A proper location helps to ensure that your printer provides you with the long service life for which it is designed. Double-check to make sure that the location you select has the following characteristics.

- ✓ Choose a location that is well-ventilated.
- ✓ Make sure there is no chance of ammonia or other organic gases being generated in the area.
- ✓ The power outlet you plan to connect to should be nearby and unobstructed.
- ✓ Make sure that the printer is not exposed to direct sunlight.
- ✓ Avoid areas in the direct airflow of air conditioners, heaters, or ventilators, and areas subjected to temperature and humidity extremes.
- ✓ Choose a sturdy, level surface where the printer will not be exposed to strong vibration.
- ✓ Keep the printer away from any objects that might block its heat vents.
- ✓ Do not locate the printer near curtains or other combustible objects.
- ✓ Choose an area where there is no possibility of the printer being splashed with water or other liquids.
- ✓ Make sure that the surrounding area is clean, dry, and free of dust.

Power Source

The following are the power source requirements for this printer.

- Power source: 220 - 240 V at 50 - 60 Hz
- Voltage fluctuation: Within 220 - 240 V "10%
- Frequency fluctuation: Within "0.3%



NOTE

- Use a power source with minimal voltage and frequency fluctuation.
 - Only use an outlet that is rated for the voltage capacity specified for this printer.
 - Be sure to plug the power cord all the way into the outlet. The outlet should be located near the printer and be easily accessible so you can unplug the power cord immediately if necessary.
 - Make sure the outlet you use is visible, and not hidden behind the printer or any other object.
 - If any other electrical equipment is plugged into the same outlet, make sure that the capacity of the outlet is not exceeded.
 - If you use an extension cord, make sure its capacity is greater than the power consumption of the printer. Using an extension cord with a lower capacity creates the danger of fire.
 - Never use a multiple socket to connect other appliances or machines to the same outlet being used to power the printer.
-

Grounding

Always ground the printer to guard against the danger of electrical shock. To ground the printer, connect the grounding wire to the ground terminal of the electrical outlet you are plugging into or to a grounding contact that complies with local electrical standards in your area.




NOTE

- Never connect the grounding wire to a gas pipe, the grounding wire for a telephone, or to a water pipe.
-

Space Requirements

Be sure to provide space around the printer as indicated below, to ensure easier printer operation, paper and toner replacement, and maintenance.

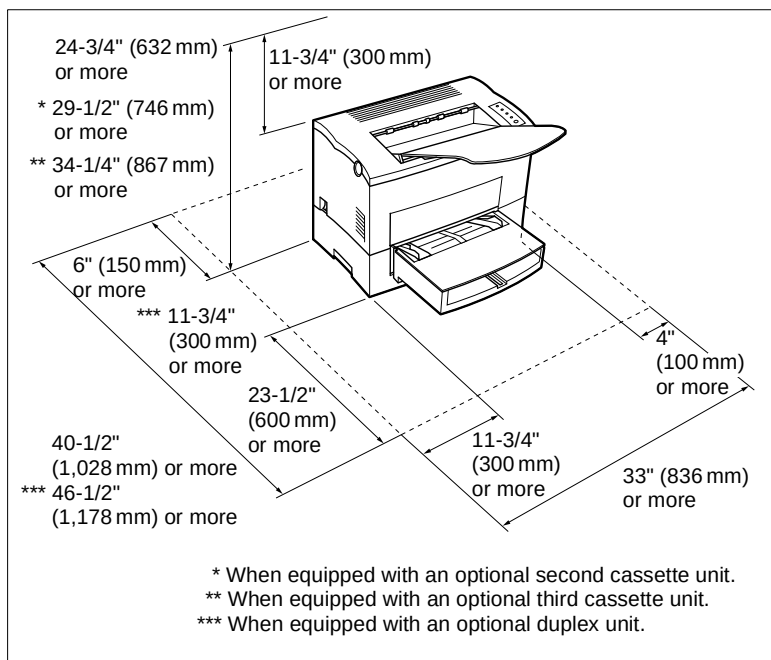

3.2 Operational Precautions

Note the following important precautions whenever using the printer.

Operating Environment

The following describes the operating environment required when using the printer.

- Temperature: $10\pm^{\circ}\text{C}$ to $35\pm^{\circ}\text{C}$ ($50\pm^{\circ}\text{F}$ to $95\pm^{\circ}\text{F}$) with fluctuation of $10\pm^{\circ}\text{C}$ ($18\pm^{\circ}\text{F}$) per hour
- Humidity: 15% to 85% with fluctuation of 20% per hour

Printer

The following describes precautions for using the printer.

- Never turn the printer off or open any of its covers during a print operation.
- Never place flammable gasses, liquids or objects that generate magnetic forces near the printer.
- When unplugging the power cord, always grasp the plug and never pull on the cord. A damaged cord creates the danger of fire or electrical shock.
- Never touch the power cord when your hands are wet. Doing so creates the danger of electrical shock.
- Always unplug the power cord before moving the printer. Failure to do so can damage the power cord, creating the danger of fire or electrical shock.
- Always unplug the power cord if you do not plan to use the printer for a long time.
- Never try to remove any secured panel or cover. The interior of the printer contains high-voltage circuitry which creates the danger of electrical shock when exposed.
- Never try to modify the printer. Doing so creates the danger of fire or electrical shock.
- Never place any heavy objects on the power cord, pull on it or bend it. Doing so creates the danger of fire or electrical shock.
- Always make sure the printer is not placed on the electrical cord or the communications cables of any other electrical equipment. Also make sure that cords and cables do not get into the printer's mechanism. Any of these conditions create the danger of malfunction and fire.
- Always take care so that paper clips, staples, or other small pieces of metal do not get into the printer through its vents or other openings. Such objects create the danger of fire or electrical shock.

- Do not allow water or other liquids to spill on or near the printer. Fire or electrical shock can occur should water or liquid come into contact with the printer.
- Should liquid or any piece of metal accidentally get inside the printer, immediately turn it off, unplug the power cord, and contact your dealer. Failure to take this immediate action creates the danger of fire or electrical shock.
- Whenever the printer emits unusually high amounts of heat, smoke, an unusual odor, or noise, immediately turn it off, unplug it, and contact your dealer. Failure to take this immediate action creates the danger of fire or electrical shock.



NOTE

- Be sure to locate the printer in a well-ventilated location. A minimal amount of ozone is generated during normal operation of this printer. Because of this, an unpleasant odor may result when the printer is used for extensive printing in a poorly ventilated area. For comfortable, and safe operation, be sure to locate the printer in a well-ventilated area.
-

Printer Supplies

Note the following precautions when handling printer supplies such as the imaging cartridge, and paper.

- Avoid storing printer supplies in the following locations:
 - Areas subjected to direct sunlight. Additionally, the imaging cartridge must be protected from fluorescent light.
 - Areas exposed to open flame.
 - Areas subjected to high humidity.
 - Areas subjected to large amounts of dust.
- Keep paper that has been removed from its wrapper, but not yet loaded onto the printer tray, in a sealed plastic bag and store it in a cool, dark location.
- Only use imaging cartridges that are expressly specified for this printer.
- Keep supplies out of the reach of children.
- Should your hands become soiled with toner, immediately wash them with soap and water.



NOTE

- Whenever you remove the imaging cartridge from the printer, immediately wrap it with a cloth to protect it from overexposure to light.
-

3.3 Setting-up

See the Quick Guide for Installation and Reference printer before unpacking.

Set-up the printer according to the following instructions.




NOTE

- Always use a shielded interface cable. Use of an unshielded cable can result in radio interference with data.
 - Keep all the boxes and packing materials that the printer comes in for later use when transporting the printer
-


Installing the Face-Down Tray

With both hands, gently bend the face-down tray inwards and insert one of its tabs into its holder on the upper portion of the printer. Continue to bend the face-down tray so that it curves enough for the second tab to fit into its holder and release the tray into position.

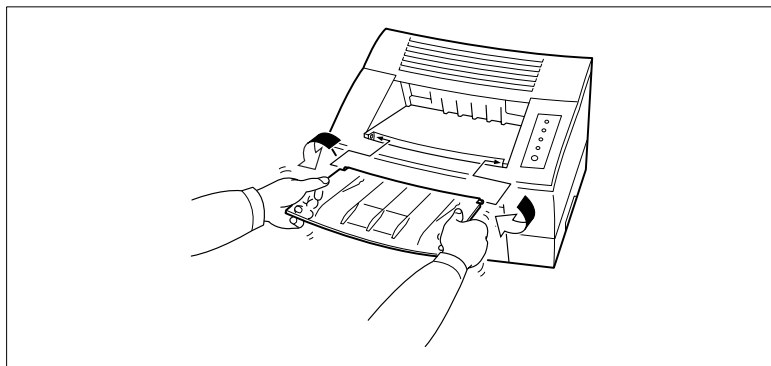


Installing Tray 1

- 1 Using the left and right slots in the printer as guides, gently push Tray 1 until it cannot be inserted any further (as shown in the illustration).

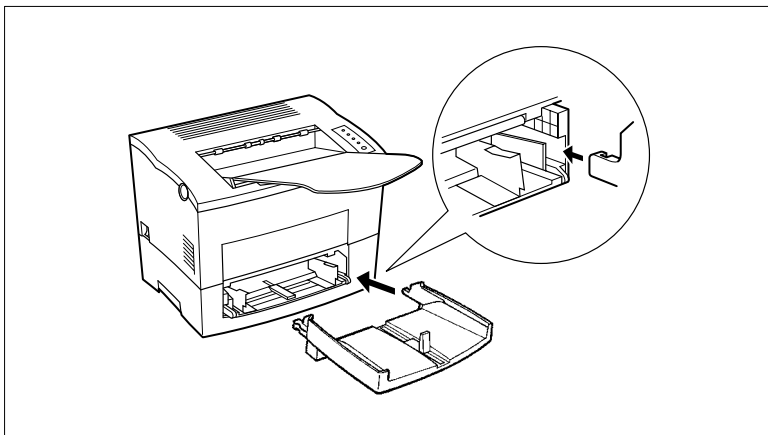


- 2 Attach the tray cover onto Tray 1.

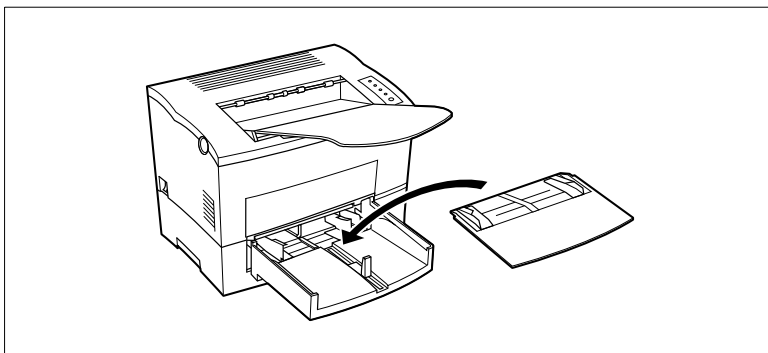


Connecting the Power Cord

- 1 Make sure that the printer's power switch is in the O (Off) position.

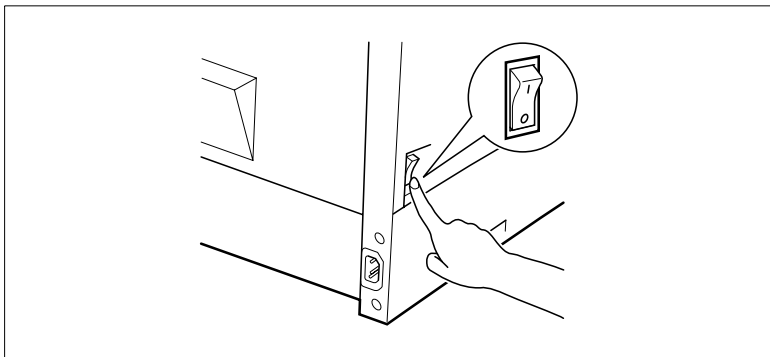


- 2 Connect one end of the power cord that comes with the printer to the power cord socket. Plug the other end into a power outlet.

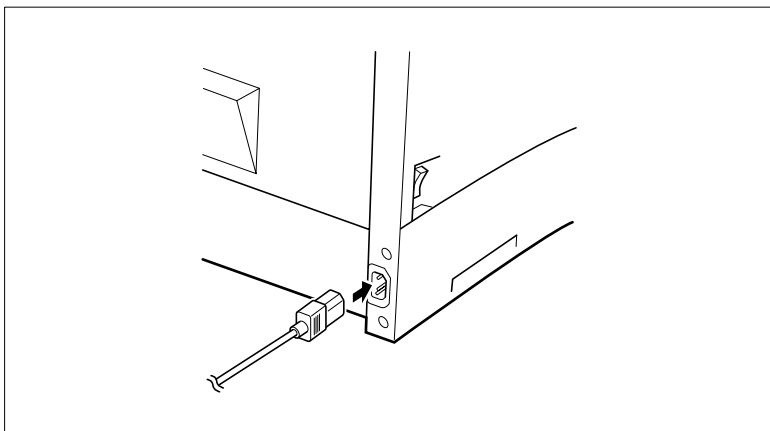


Loading Paper


- 1 Remove the tray cover from Tray 1.

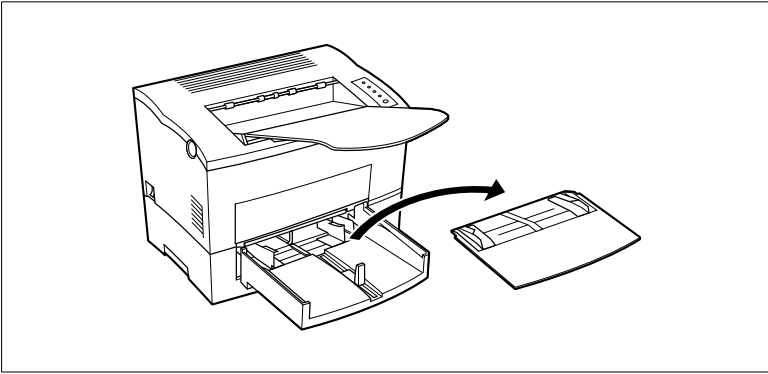

- 2 Open all three of the paper size guides.

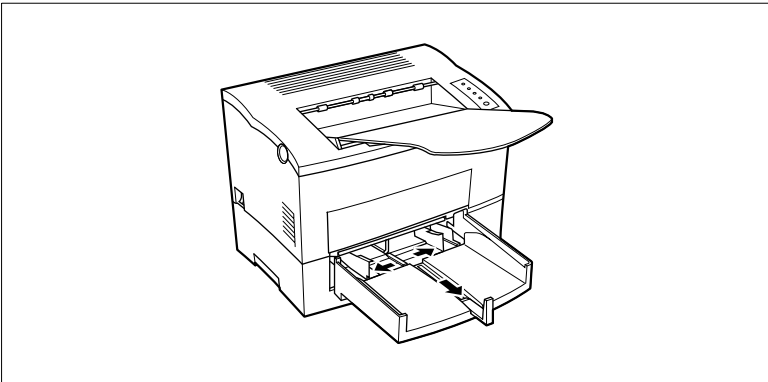


- 3 Place the paper stack onto the tray, print-side up. Secure the stack by adjusting the paper size guides.

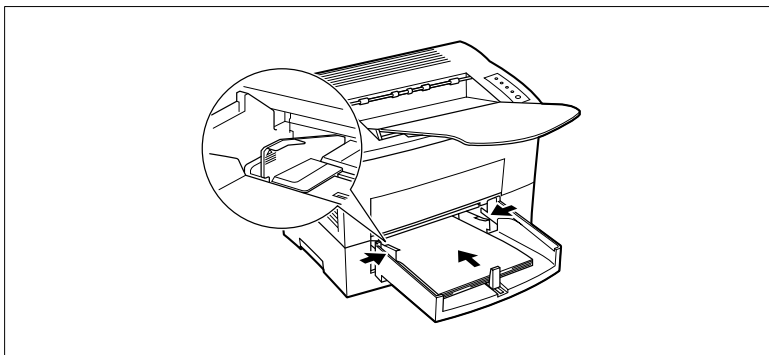**NOTE**


- A maximum level mark on the paper size guide shows how high you can stack paper on Tray 1. Make sure that paper is stacked no higher than this mark.

- 4 Replace the tray cover onto Tray 1.

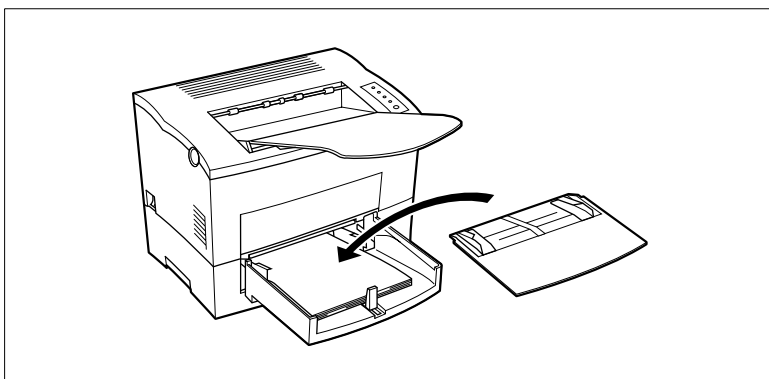


Turning On the Printer

After connecting the printer to a power outlet, press the power switch to turn it on.

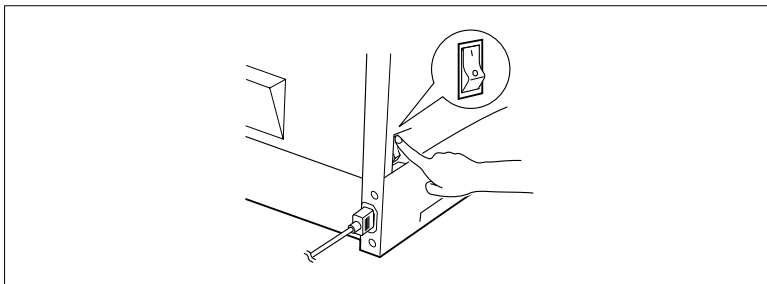

Turning on the printer causes all the indicators on the control panel to light, which indicates that the printer is warming up. In about 23 seconds only the ready indicator remains lit, indicating that the printer is ready to print.

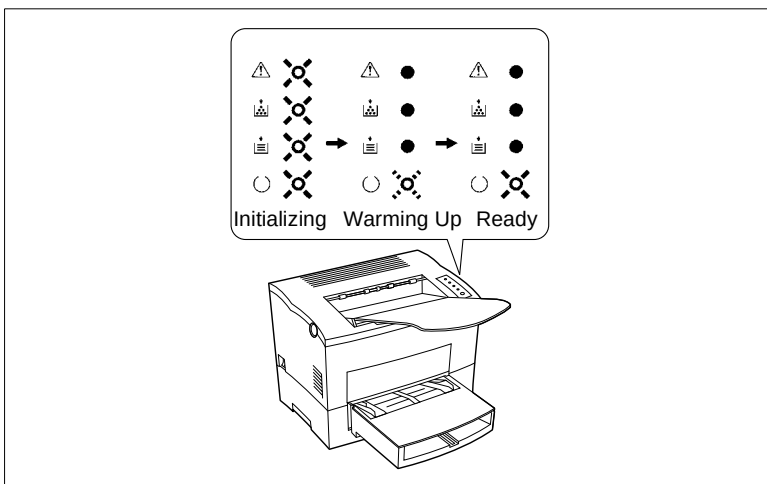


NOTE

- ➔ The printer automatically enters a power saving mode if it receives no print commands for about 15 minutes. Whenever the printer receives a print command while in the power saving mode, it starts to warm up again and takes about 23 seconds before it is ready to print.

Connecting to a Computer

- 1 Make sure that the printer and the computer you are connecting it to are both turned off.
- 2 Connect one end of the interface cable to the parallel port of the computer.
- 3 Connect the other end of the cable to the parallel connector on the back of the printer. Secure the cable using the two clips on the parallel connector.

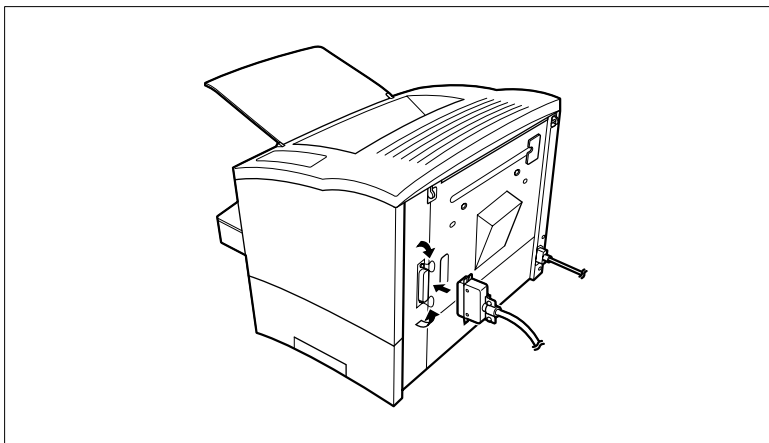

For cable specifications and pin assignments, see page 8-4 of this User's Manual.

3.4 Options

This section describes the optional items that are available for this printer: Memory SIMM(s), Duplex Unit, Second Paper Cassette Unit, Third Paper Cassette Unit, and the Network Interface Card.

SIMM (Single In-line Memory Module)

Many errors caused by data overload can be avoided by installing additional memory into the printer.

This printer comes with 2 MB of memory. You can increase memory capacity to up to 16 MB by installing an optional 8 or 16 MB SIMM into the memory connector located inside of the printer.



NOTE

- ➔ Memory capacity can be increased to 16 MB by installing a 16 MB SIMM into the printer. The successful installation of the expansion memory can be confirmed by displaying the Printer Information in the Printer Status Display. For details, see page 5-53 “Displaying Printer Information...”.
- ➔ Installation of an optional SIMM will increase the memory capacity of your printer. However, the memory of the optional SIMM will not be combined with the initial 2 MB that came with the printer.

Installing the Optional SIMM




WARNING


Electric shock hazard!

- Do not remove any cover of the printer that is not directly specified for removal in the User's Manual.

- 1 Turn off the printer and unplug the power cord.
- 2 Disconnect the parallel cable from the printer.
- 3 Press the top cover release button and open the top cover.
- 4 Using a screwdriver, loosen and remove the two screws that secure the exterior side cover to the printer.

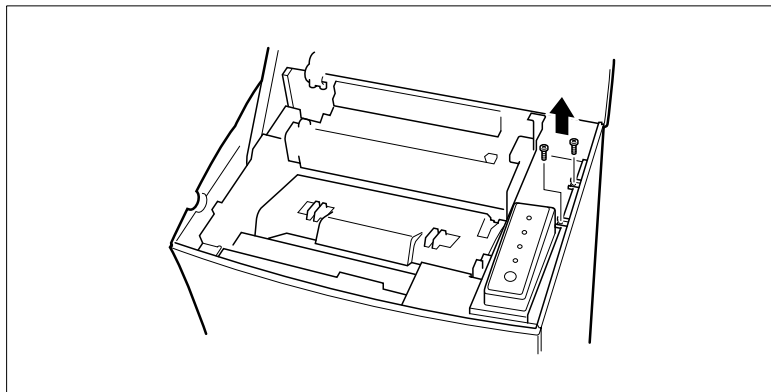


- 5 Clips secure the exterior side cover from the inside of the printer. Gently maneuver the exterior side cover until the clips release (see illustration).

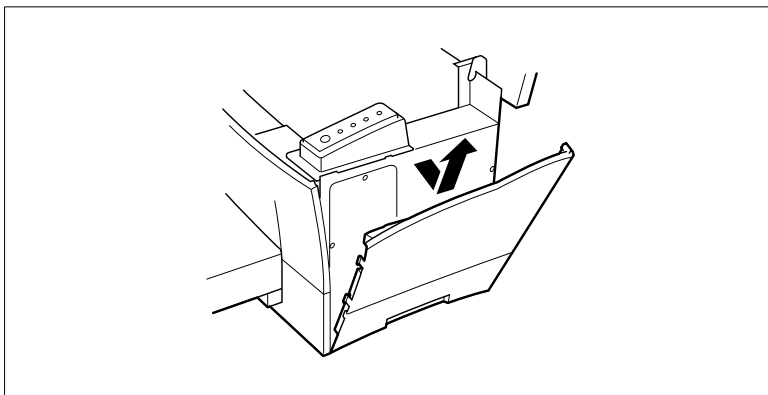


CAUTION

→ Do not touch any part of the main circuit inside of the printer.

- 6 With the exterior side cover removed, the internal side cover of the printer is exposed. With the screwdriver, loosen and remove the four screws that secure the internal side cover.

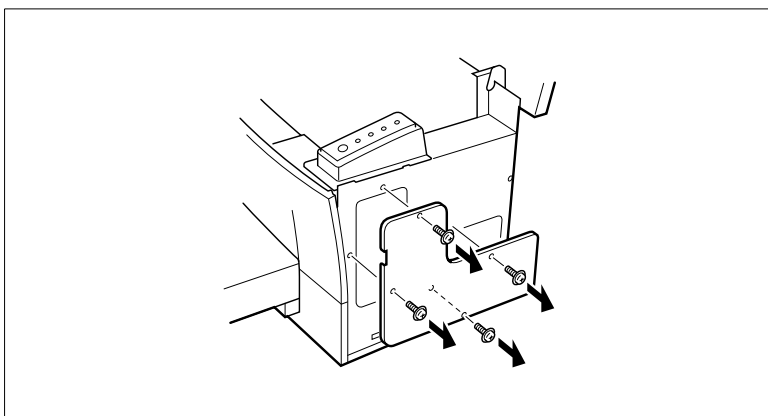


- 7 Remove the internal side cover to expose the main circuit.

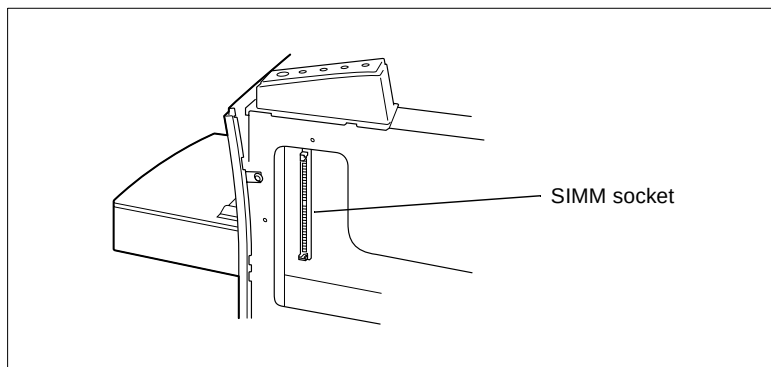


- 8 Being careful not to touch the connection points along the edge of the SIMM, insert the SIMM into the socket on the main circuit.

Insert the SIMM at an angle as shown and gently swing it into the socket.


Apply pressure until the SIMM locks into place.

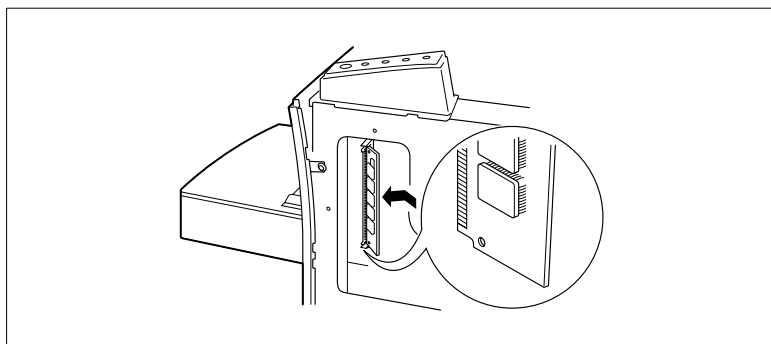


- 9** Make sure both clips on the socket are pushed through the holes on the SIMM.

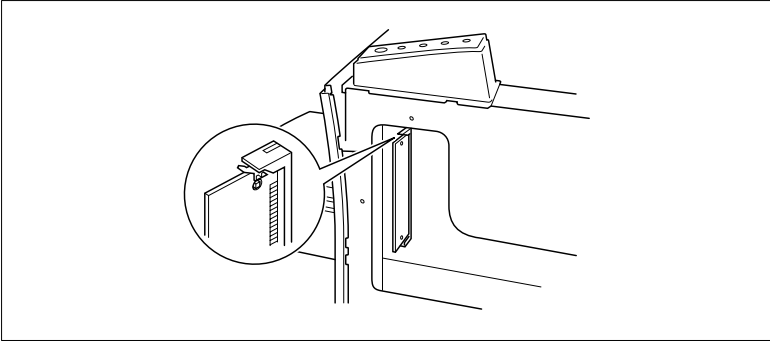

- 10** Replace the internal side cover using the four screws.

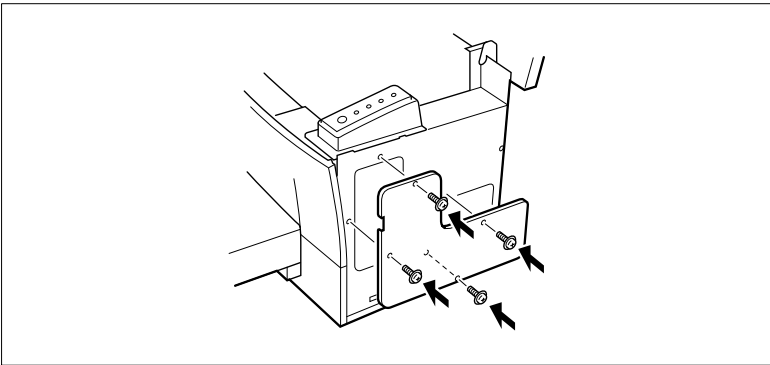

- 11** Replace the external side cover using the two screws.

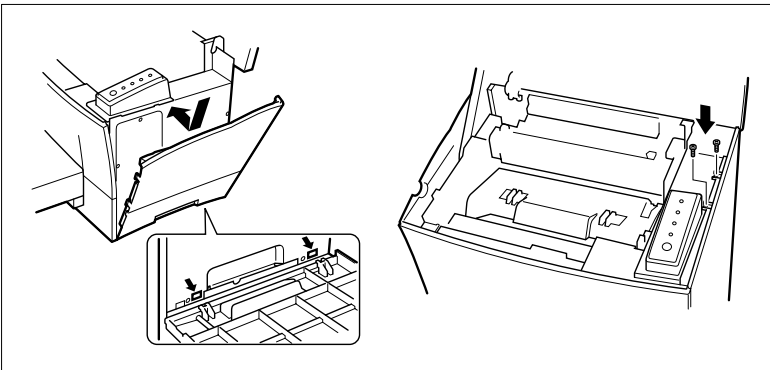


- 12** Select the Printer Information in the Printer Status Display and check to make sure that the “Printer Memory” item correctly shows the increase in memory capacity. If it does not, repeat the above steps making sure that the SIMM is installed correctly.

For details, see page 5-53 “Displaying Printer Information...”.



NOTE

- To release the SIMM from the socket, push out on the metal taps on each side of the socket.
- Installation of an optional SIMM will increase the memory capacity of your printer. However, the memory of the optional SIMM will not be combined with the initial 2 MB that came with the printer

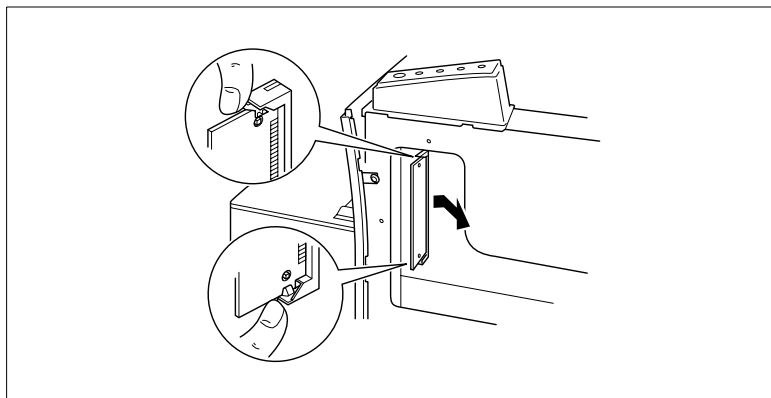


3.5 Duplex Unit

Your printer supports double-sided printing if the optional duplex unit is installed. Double-sided documents can be generated for binding along either the short or long edges of the paper through the printer software. For more information, see page 4-14.


- Take the duplex unit out of the shipping box.
- Remove the plastic bag and all shipping materials.
- Turn the printer off and then disconnect the power cord and interface cable from the printer.

Installing the Duplex Unit

- 1 With a screwdriver or similar instrument, remove the flat clip that is attached to the back of the main unit of the printer.

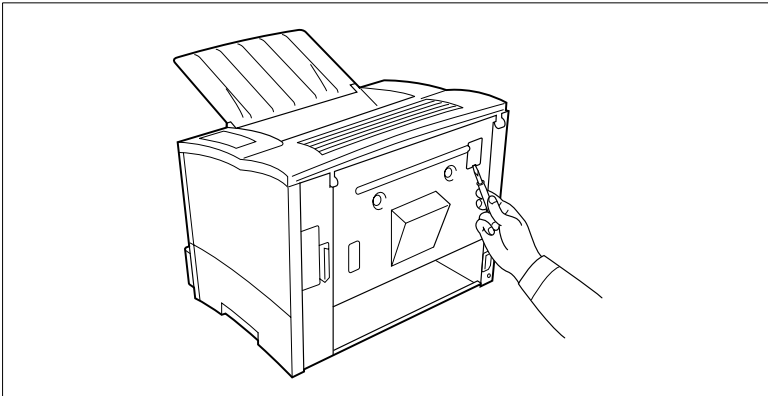


- 2 Align the “L” shaped duplex unit to the back of the main unit of the printer so that the bottom of the “L” is inside of the opening at the bottom of the printer.

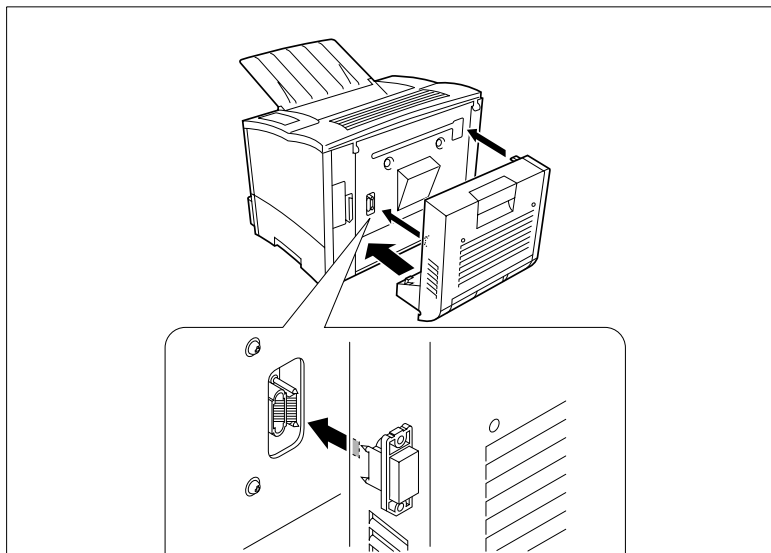**NOTE**

- Make sure that the connector of the unit is inserted into the printer securely.

- 3 With one hand holding the duplex unit in position, use a Phillips screwdriver to tighten the screws that are permanently attached to the back of the duplex unit.

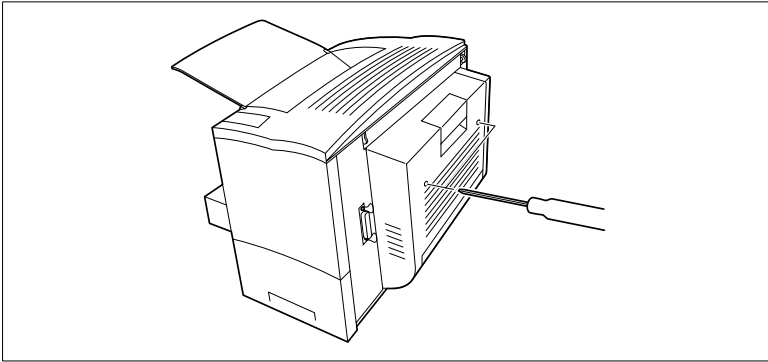

NOTE

- Hold up the duplex unit with your hand during installation until it is secured to the printer with the screws.
-


- 4 Connect the power cord to the printer and then turn the printer on.
“Connecting the Power Cord”, see page 3-9,
“Turning On the Printer”, see page 3-12.
- 5 Select the Printer Information in the Printer Status Display to verify that duplex unit is displayed in the Printer Information dialog. For details, see page 5-53 “Displaying Printer Information...”.

3.6 Second/Third Paper Cassette Unit

You can increase the paper-holding capacity of your printer by installing an optional second/third paper cassette unit. Each paper cassette unit can hold up to 500 sheets of paper. The second and third paper cassette units are interchangeable and can increase paper-holding capacity to 1,000 sheets when installed together.

Installing the Optional Second/Third Paper Cassette Unit

- Take the paper cassette unit out of the shipping box.
 - Remove the plastic bag and all shipping materials.
 - Turn the printer off and then disconnect the power cord and interface cable from the printer.
- 1 Place the paper cassette unit in the location you have chosen (see page 3-1 "Selecting a Location for the Printer"). Pull out the paper tray.

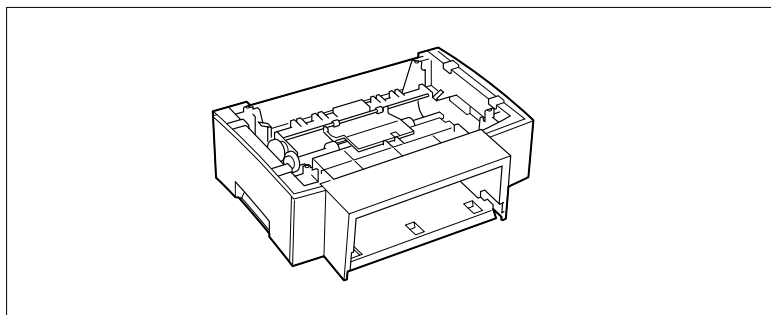


- 2 Set the printer onto the paper cassette unit using the coupling pins as a guide.




NOTE

- The printer weighs approximately 18 kg (39.7 lbs.) with the optional second paper cassette unit installed. Two people are recommended to lift it when necessary.

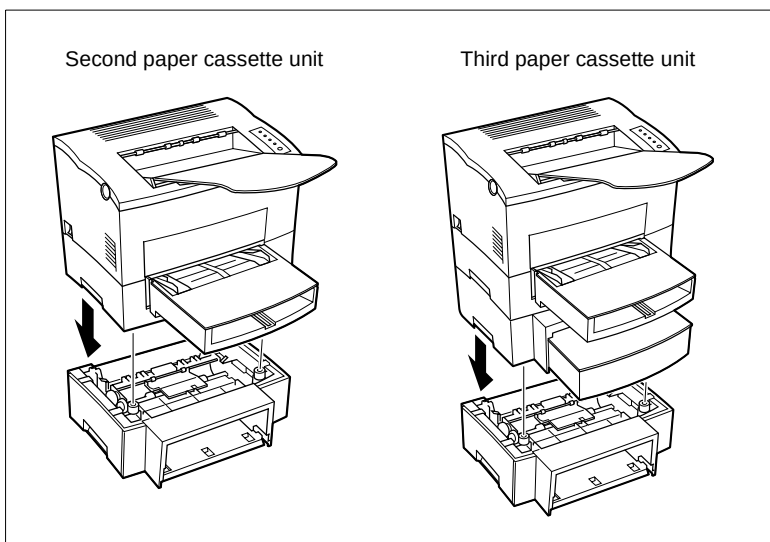


3 Insert Tray 2 or Tray 3 into the paper cassette unit.

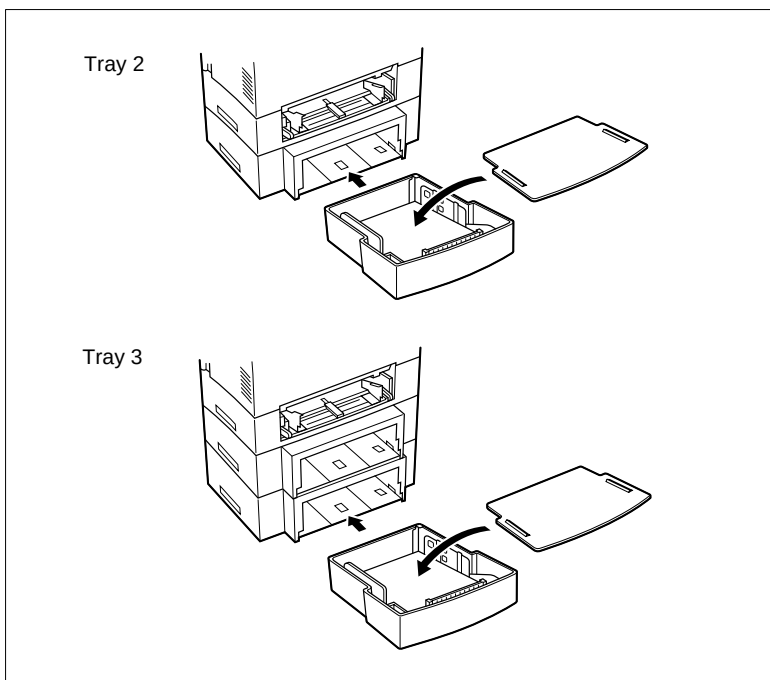

**NOTE**


- Be sure to use both hands whenever Tray 2 or Tray 3 is being removed from or inserted into the paper cassette unit

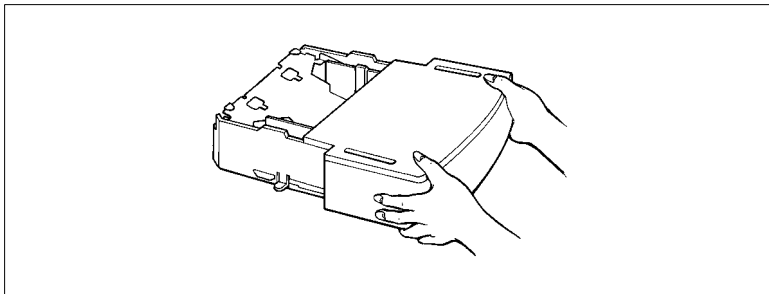

- 4 Connect the power cord to the printer and then turn the printer on.
"Connecting the Power Cord", see page 3-9,
"Turning On the Printer", see page 3-12.
- 5 Select the Printer Information in the Printer Status Display to verify that Tray 2 or Tray 3 is displayed in the Printer Information dialog. For details, see page 5-53 "Displaying Printer Information...".


3.7 Network Interface Card (NIC)

There is an optional 10/100BaseT network interface card that is supported by this printer. For details, please see the User's Manual for the Network Interface Card.

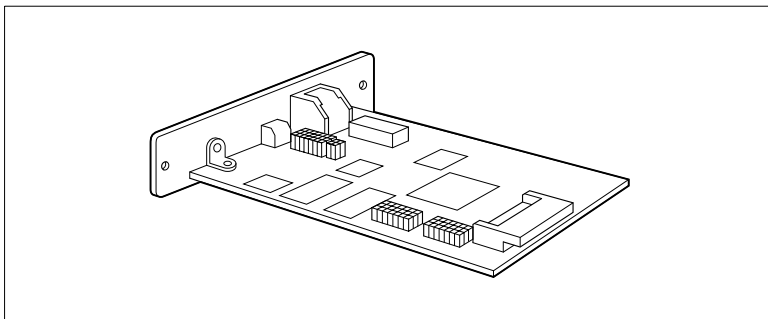


Installing the Optional Network Interface Card

- 1 Turn the printer off and unplug the power cord from the printer. Disconnect the cable from the interface connector.

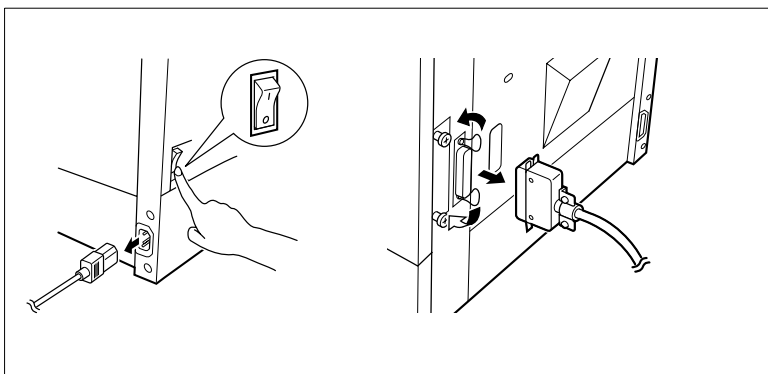

- 2 Remove the screw that secures the cover panel to the back of the printer. Remove the cover panel.

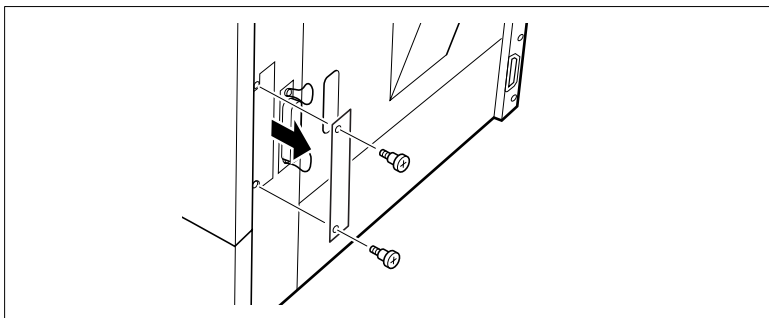**NOTE**


- Make sure that you do not misplace the cover panel or screws when you remove them. The screws will be used after the optional NIC is installed.

- 3 Take the NIC out of its carton.


**NOTE**

- When the NIC is taken out of its conductive bag or off its mat, hold it by its edges to avoid touching the terminals or the patterned surfaces.

- 4 Insert the NIC as shown in the diagram.

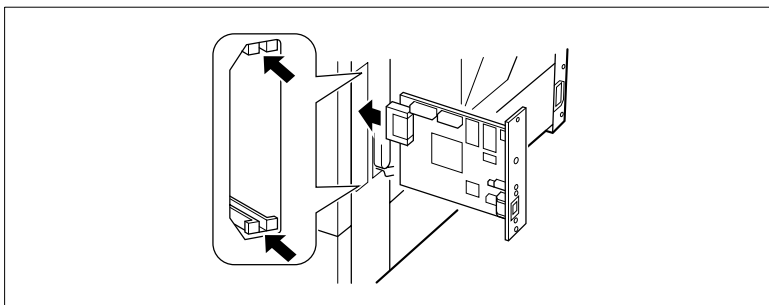

- 5 Secure the NIC into place using the same screws that were used to hold the cover panel.

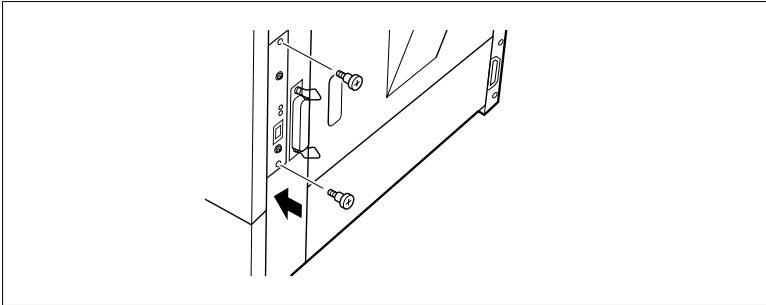

NOTE

→ Follow the NIC's installation procedure in reverse to remove the NIC.

- 6 Connect the power cord to the printer and then turn the printer on.
"Connecting the Power Cord", see page 3-9,
"Turning On the Printer", see page 3-12.

4 Using the Printer

4.1 Paper



CAUTION

→ This printer is designed to print on only the following types of paper.

Type

Paper Feeding Port	Plain Paper weighing: 60 to 90 g/m ² 16 to 24 lbs.	Special Paper						
		Recycled Paper weighing: 60 to 90 g/m ² 16 to 24 lbs.	Transparency Sheet	Labels	Letterhead	Envelopes	J-Post (Postcard) size: 100 x 148 mm 4" x 5-3/4"	Thick Paper weighing: 90 to 163 g/m ² 24 to 43 lbs.
Tray 1								
Tray 2			None	None	None	None	None	None
Tray 3			None	None	None	None	None	None
Manual Feed Tray								

Size

Standard size

Paper Feeding Port	A4 210 × 297 mm 8-1/4" × 11-3/4"	JIS B5 182 × 257 mm 7-1/4" × 10"	A5 148 × 210 mm 5-3/4" × 8-1/4"	Legal 216 × 356 mm 8-1/2" × 14"	Letter 216 × 279 mm 8-1/2" × 11"	Executive 184 × 267 mm 7-1/4" × 10-1/2"	Invoice 140 × 216 mm 5-1/2" × 8-1/2"
Tray 1							
Tray 2*			None				None
Tray 3*			None			O	None
Manual Feed Tray							

* Each of the five cassettes of Tray 2/Tray 3 support one of the five types of paper that are compatible with this printer.

Envelopes (Tray 1 and Manual Feed Tray)

Paper Feeding Port	Env. Com10 105 × 241 mm 4-1/8" × 9-1/2"	Env. DL 110 × 220 mm 4-5/16" × 8-11/16"	Env. C5 162 × 229 mm 6-3/8" × 9"	Env. Monarch 98 × 190 mm 3-7/8" × 7-1/2"
Tray 1				
Manual Feed Tray				

* Specialty paper is not supported for duplex printing.

**NOTE**

- Do not use the following types of paper to avoid reduced print quality, a misfeed or a print failure.
 - Paper already used in a thermal transfer printer or ink jet printer.
 - Paper that is too thin or too thick.
 - Paper folded, curled or torn.
 - Paper having binding holes or perforations.
 - Paper with surfaces that are too smooth or too rough or with varying surfaces.
 - Paper having special coatings on their surfaces such as carbon paper, heat-sensitive paper and pressure-sensitive paper.
 - Sheets of various sizes.
 - Paper not cut on right angles.
 - Paper bound by glue, staples or clips.
 - Paper affixed with labels which are easy to peel.
 - Post cards that are warped or bent.
- Envelopes should meet the following requirements:
 - Sharp folds and edges.
 - General mailing envelopes without seals on the glued portion.
 - Having flaps the full width of the envelope (unacceptable if the flap is glued).
 - Wrinkle-free, no fasteners.
- Generally, envelopes perform well, but some types may wrinkle. We strongly recommend testing any type of envelope before buying it in large amounts.
- For more information, refer to "Loading Paper".

4.2 Loading Paper

There are two primary sources that can be used to feed paper into the printer: Tray 1 and the manual feed tray.

Tray 1 is the standard source for supplying paper to the printer. Various types and sizes of paper can be fed from this tray.


Tray 2/Tray 3 are available as optional paper sources. See the section of this User's Manual entitled "Loading Paper onto Tray 2/Tray 3" for details on using these trays.

Always remember that paper storage conditions greatly affect print quality. Store paper in its original package. Keep paper out of areas subject to extreme temperatures or humidity.


Loading Paper onto Tray 1

You can load up to 250 sheets of standard paper onto Tray 1. For details, see page 4-1.


- 1 Remove the tray cover from Tray 1.

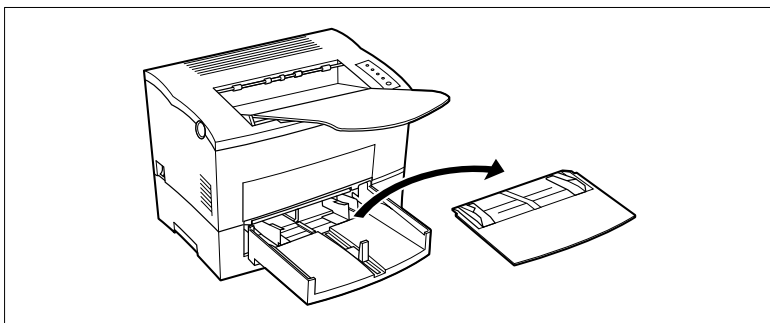

- 2 Open all three of the paper size guides.

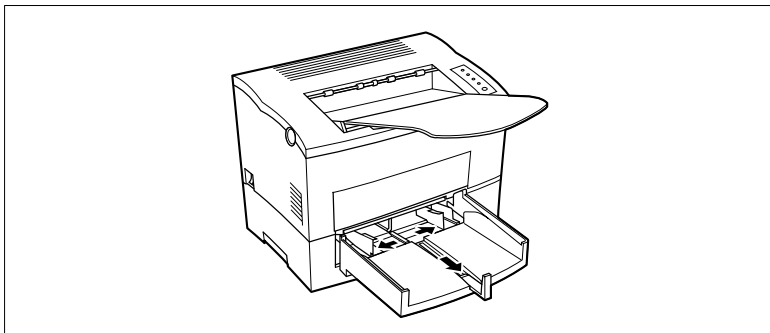


- 3 Place a stack of paper in the center of Tray 1. Adjust the paper size guides so that both the left and the right sides of the paper stack are secure.

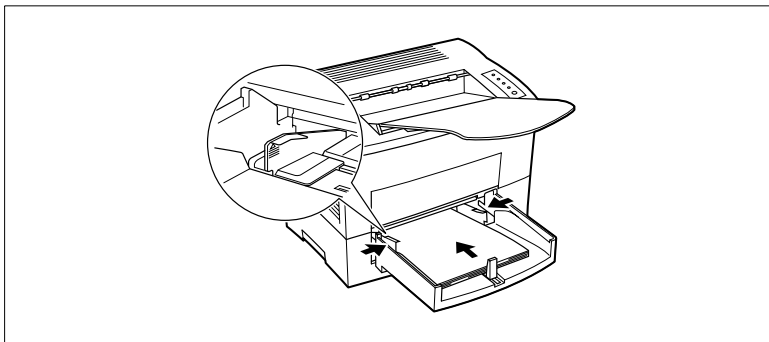**NOTE**

- A maximum level mark on the paper size guide shows how high you can stack paper on Tray 1. Make sure that paper is stacked no higher than this mark.
- Do not load additional paper until the paper currently loaded onto Tray 1 is completely used.

- 4 Replace the tray cover onto Tray 1.

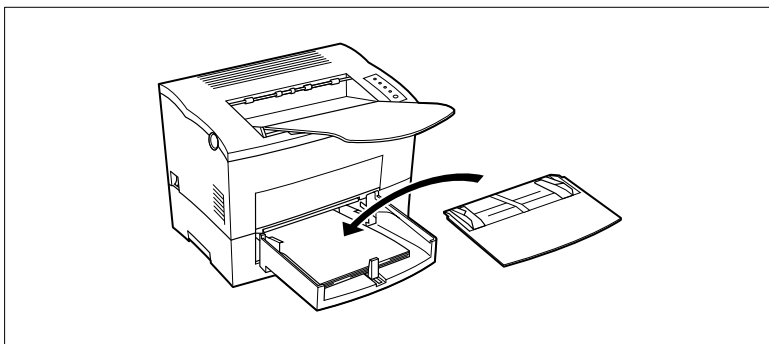


Loading Paper onto Tray 2/Tray 3



NOTE

- ➔ Make sure that the Tray 2/Tray 3 cassette for the proper size of paper to be used for printing has been installed into the second/third paper cassette unit. For instructions on inserting (and removing) the Tray 2/Tray 3 cassette into (and from) the second/third paper cassette unit, refer to Chapter “Setting-up”.


- 1 Slide Tray 2/Tray 3 out of the second/third paper cassette unit as illustrated.

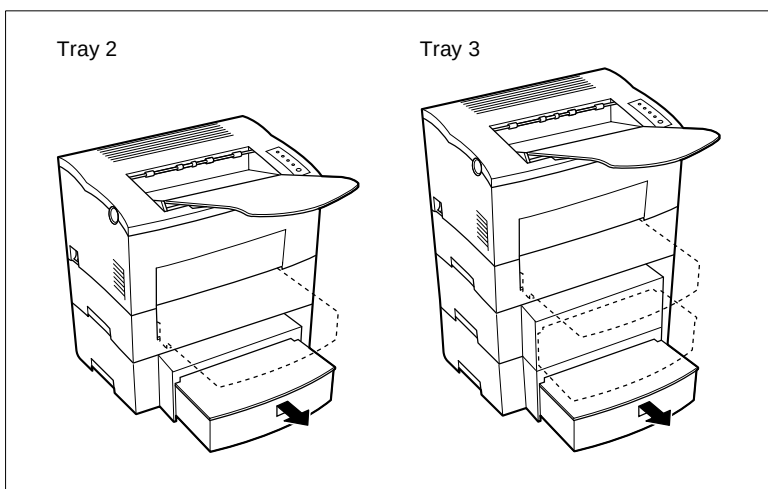


NOTE

- ➔ The cassette is designed to remain in the unit during the normal loading and operation of the printer. To remove Tray 2/Tray 3 from the unit, pull it out as far as it will go without force. Then gently raise the forward-end up, and remove Tray 2/Tray 3 from the unit.
- ➔ Tray 2 and Tray 3 are available as an option for this printer. Contact your dealer to find out how you can acquire this tray to increase the capabilities of your printer.


- 2** Remove the cassette cover from Tray 2/Tray 3.

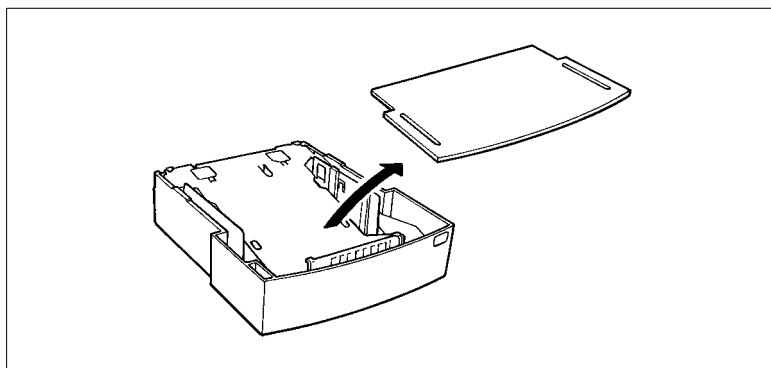

- 3** Press down on the paper lifting plate located inside of Tray 2/Tray 3 until it locks.

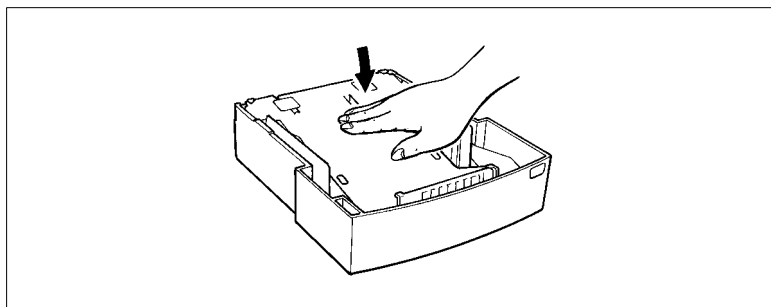


- 4** Place a stack of up to 500 sheets of paper into Tray 2/Tray 3 so that the side that was facing up when the paper was unwrapped is still facing up.

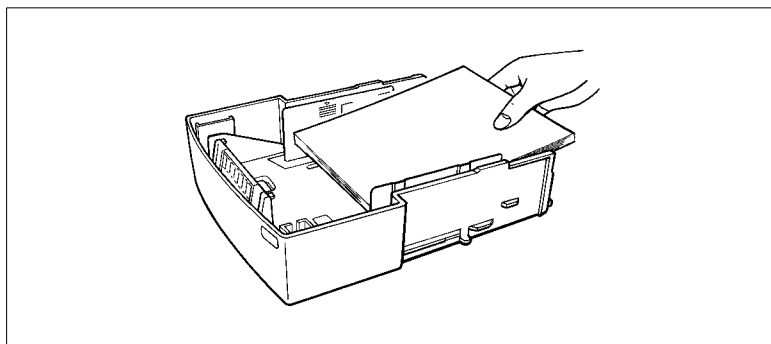


**NOTE**

- A maximum level mark inside the inlet of Tray 2/Tray 3 shows how high you can stack paper. Make sure that paper is stacked no higher than this mark

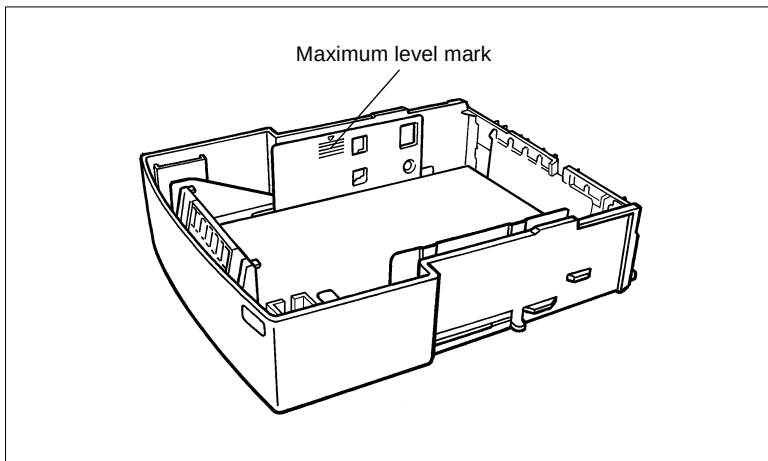


- Tray 2/Tray 3 does not support landscape-oriented paper-feeding.
- Do not load additional paper until all the paper currently on Tray 2/Tray 3 is completely used up.

- 5 Replace the cassette cover and insert Tray 2/Tray 3 into the second/third paper cassette unit.

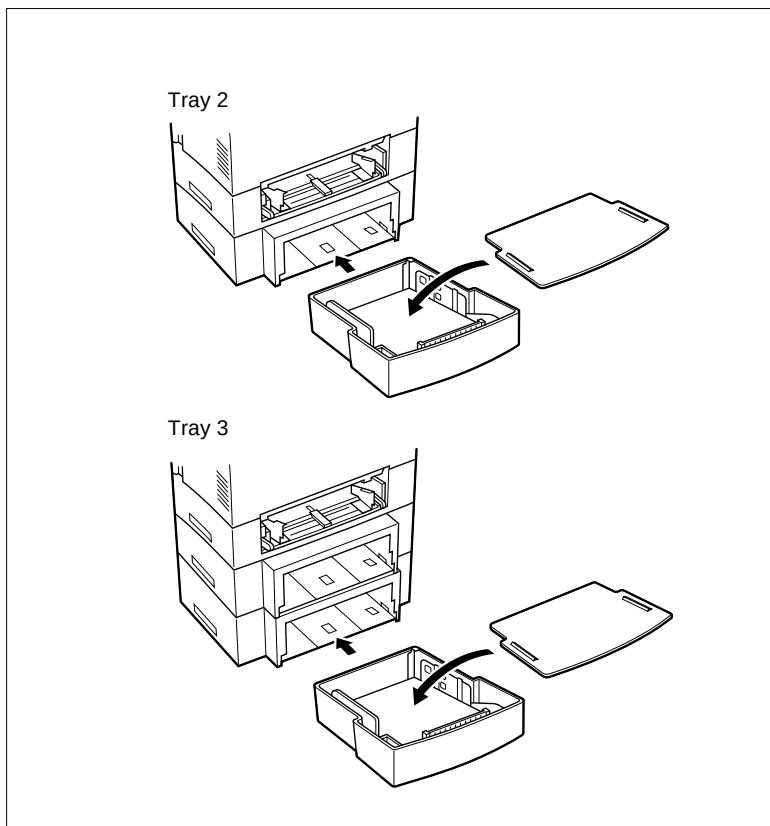


Loading Paper onto Manual Feed Tray


- 1 Make sure that the tray cover is properly attached to Tray 1.
- 2 Open the paper size guides.

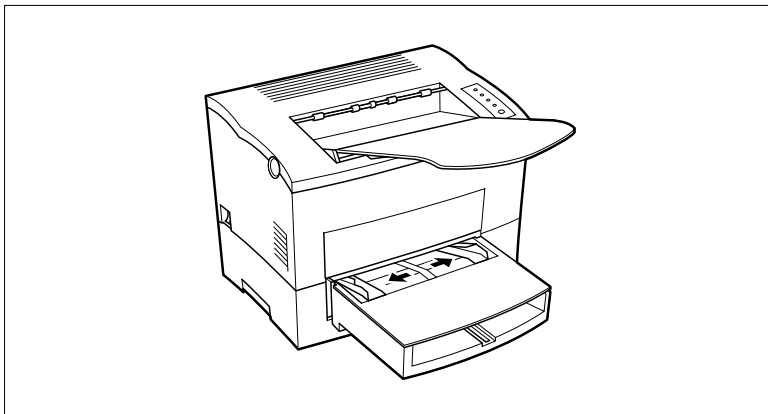

- 3 Insert the sheet of paper into the manual feed tray with the side to be printed facing up.

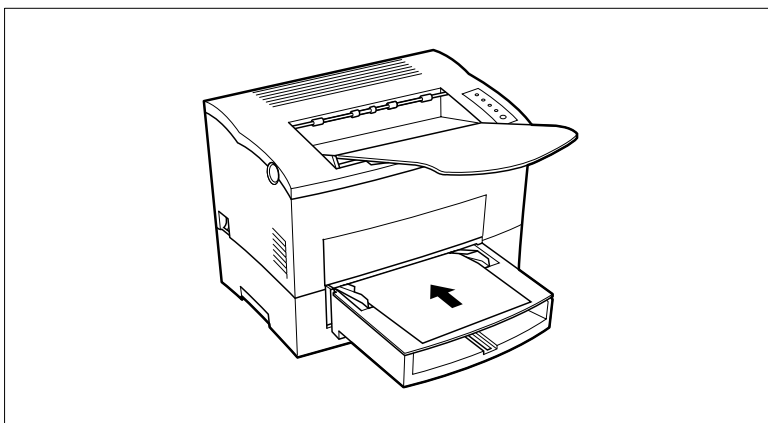

- 4 Adjust the paper size guides so that both sides of the paper are secure.

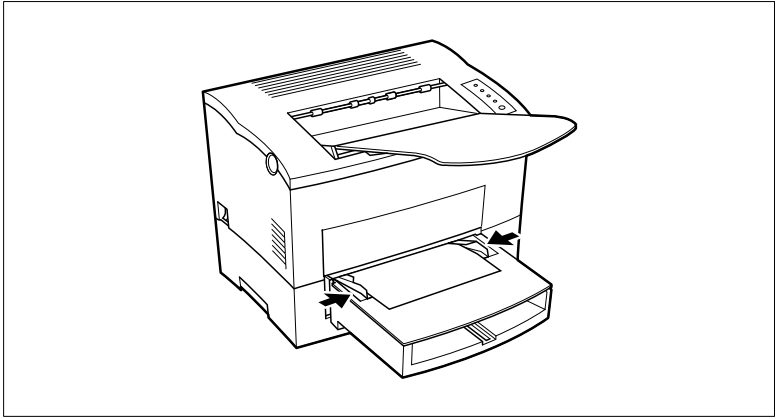**NOTE**


- Insert only one sheet of paper or one envelope at a time when feeding manually.

Printing on Envelopes

The manual feed tray supports feeds of Commercial 10, Monarch, DL and C5 envelopes.

Manually feed envelopes one by one into the manual feed tray.

- 1 Place the envelope with the side to be printed facing up on the tray. The flap of the envelope should be facing down and to the left.
- 2 Make sure that the envelope is placed in the center of the tray and that it is secured by the paper size guides.

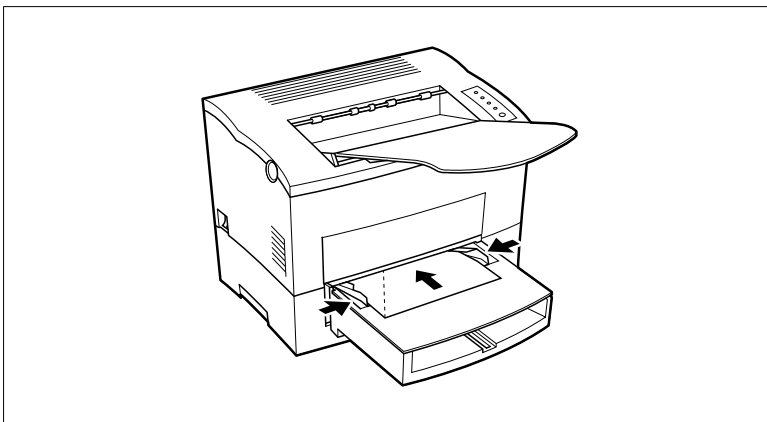

NOTE

- Because there is great variation in the quality of paper used for envelopes, we suggest that you produce test prints of various types before purchasing any envelope in large quantities for use with this printer.

Note the following points whenever printing on envelopes:


- Make sure that all edges are creased sharply and that all flaps are folded correctly.
- Do not use envelopes that are self-adhesive. Use only envelopes that have standard sealing that sticks after it is moistened.
- Use envelopes of which flaps run the entire length of the envelope. Envelopes that seal at one end will not feed properly.
- Do not use envelopes that have a window. Such envelopes can seriously damage the printer.
- Do not use envelopes that are wrinkled.
- Never use envelopes that have clasps or any other type of fastener that can damage the printer.
- Do not store envelopes in an area that is subject to high humidity.

Duplex Printing


This feature prints document data on both sides of a sheet of paper. Installation of the optional duplex unit is required to perform duplex printing.

You can choose either Long Edge Binding or Short Edge Binding when generating duplex documents.

1. Long Edge Binding

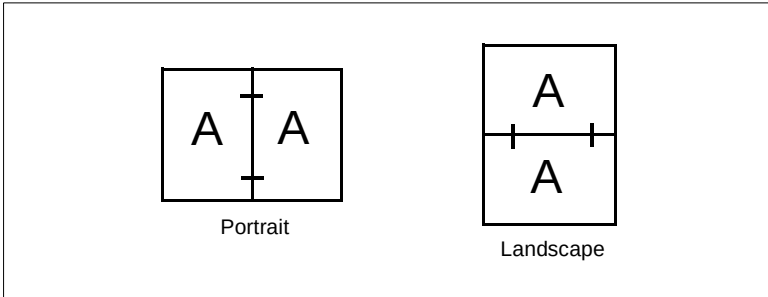

2. Short Edge Binding

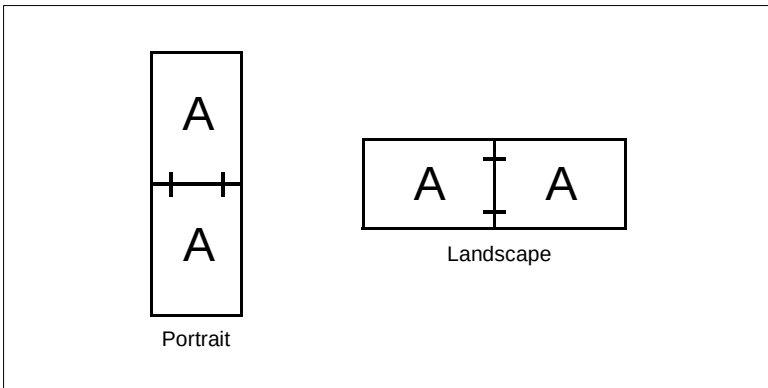

The supported paper types and sizes for duplex printing are as follows.

- Paper Type
Plain paper: 64 to 90 g/m² (17 to 24 lb)
Recycled paper: 64 to 90 g/m² (17 to 24 lb)



NOTE

- Do not use special paper (transparencies, labels, envelopes, letterhead, J-Post and thick paper) for duplex printing.
-

- Paper Size
A4, A5, JIS B5, Letter, Legal, Executive, Invoice.

Remember the following points when generating duplex documents:

- The size of both original documents that will be used to make one duplex document must be the same.
- The original document that is loaded first into the duplex unit will be output face down.

5 Printer Driver and Status Display

This printer driver was especially designed to provide true Windows-based printing for your Minolta printer. The driver consists of three programs: the printer status display, Masquerade and the driver itself.



IMPORTANT

- ➔ This printer driver is located on the CD-ROM that comes with your printer. If your computer does not have a CD-ROM drive or you wish to download the updated printer driver, please contact a Minolta dealer.

5.1 System Requirements

The following describes the minimum system requirements for running the Minolta PageWorks/Pro 18L printer driver.

Operating System: Microsoft Windows 95, Windows 98 or Windows NT 4.0

Personal Computer: IBM-compatible PC with at least a 486DX 66MHz CPU (Pentium processor recommended)

Disk Drive: One, CD-ROM drive is required for installation

I/O Interface: IEEE 1284/ ECP/ EPP/ compatible

Memory	
Windows 95/98	At least 16 MB of PC RAM (32 MB recommended)
Windows NT 4.0	At least 32 MB of PC RAM (64 MB recommended)

Free Hard Disk Space: At least 20 MB for files



NOTE

- Use of a poor quality parallel cable may adversely affect input.
 - In order to achieve the best results for your printed documents, your computer should be equipped with at least 16 MB (Windows 95/98), or 32 MB (Windows NT 4.0) of RAM. Additional RAM beyond the recommended 32 MB (Windows 95/98), or 64 MB (Windows NT 4.0), will allow your printer to provide you with the high standards of performance for which it was designed. If your computer's current memory capacity is less than 16 MB (Windows 95/98), or 32 MB (Windows NT 4.0), the installation of additional memory is highly recommended.
-

5.2 Installing the Printer Driver Under Windows 95/98

This section provides information on installing the printer driver under Windows 95/98. It also tells you how to uninstall the printer driver when necessary.

The printer driver must be installed using the CD-ROM's setup.exe.

To Install the Printer Driver from the CD-ROM


- 1 Turn on your computer and start up Windows 95 or Windows 98.
- 2 Insert the Printer Driver CD-ROM into your computer's CD-ROM drive. In this example, we will assume that D: is the name of the CD-ROM drive.
- 3 Open the Windows Explorer, browse to the CD-ROM drive and navigate to: D:\DRIVER\WIN95NT\GB.
- 4 Double-click setup.exe to start up the installer.




NOTE

- The printer driver must be installed using the CD-ROM's setup.exe. Do not use the Add Printer wizard from the Printers folder. Installation through the Add Printer wizard will prevent the printer from performing properly.


- 5 Click [OK].

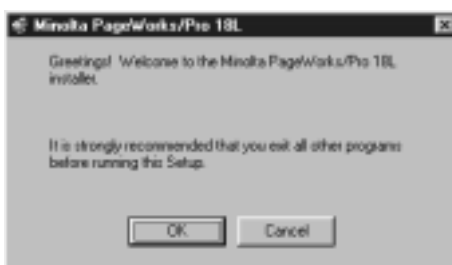

- 6 Select Local printer if the printer is connected directly to your computer or Network printer if the printer is connected through a network, and click [OK].

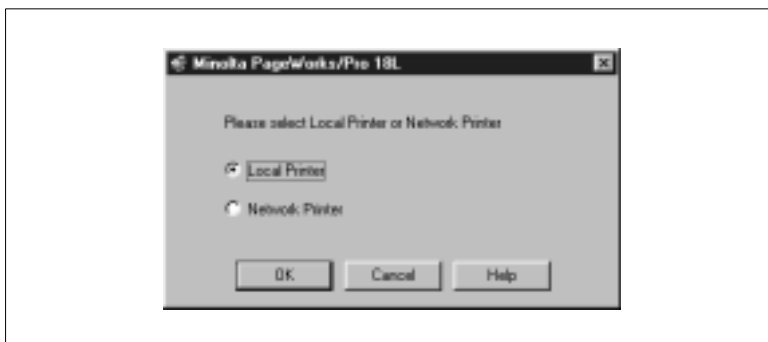

- 7 Select an installation option, and click [OK].

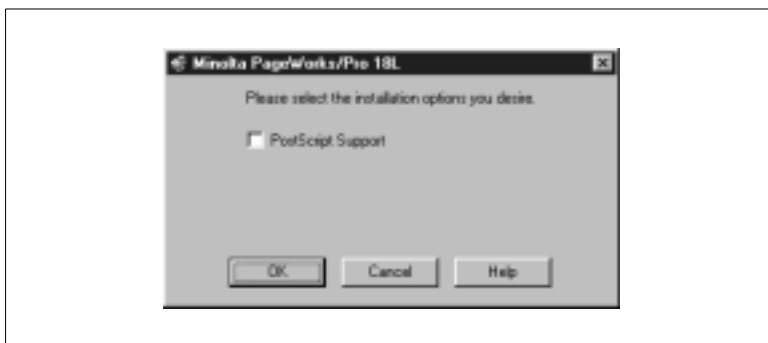


**NOTE**

- We strongly recommend that you select PostScript Support. This option allows the printer driver to switch automatically to a PostScript Driver (ZScript) when the GDI Printer Driver is unable to produce a satisfactory printout of an image. Though this happens very rarely, it is a good idea to select this option to ensure optimum printing results.
- Instructions for installing the PostScript Driver (ZScript) are provided after the installation instructions for the GDI Printer Driver (Steps 15 through 20, see page 5-3 ff). If PostScript Support has been selected, be sure to install the PostScript Driver (ZScript) using Masquerade.
- For a detailed description of ZScript, see the Zenographic's ZScript User's Guide (file name: ZScript.pdf) from the Manual folder in the CD-ROM.


Displaying Zenographic's ZScript User's Guide File

1. After you complete installation of the GDI Printer Driver, insert the Printer Driver CD-ROM into your computer's CD-ROM drive. If you have just installed the printer driver, the CD-ROM should already be in the drive.
2. Open the Windows Explorer, browse to the CD-ROM drive and navigate to: D:\Acrobat\WIN95NT\GB. Double-click ar32x301.exe. This starts installation of Adobe Acrobat Reader. Follow the instructions that appear on the screen. If your system already has Adobe Acrobat Reader installed, skip this step (Step 2) and jump directly to Step 3.
3. Double-click ZScript.pdf from the Manual folder in the CD-ROM. This displays Zenographic's ZScript User's Guide.


- 8 Select the appropriate port.
- 9 Check Set as default printer if you want to use the printer as this default printer or leave this option unchecked if you do not want it as the default.

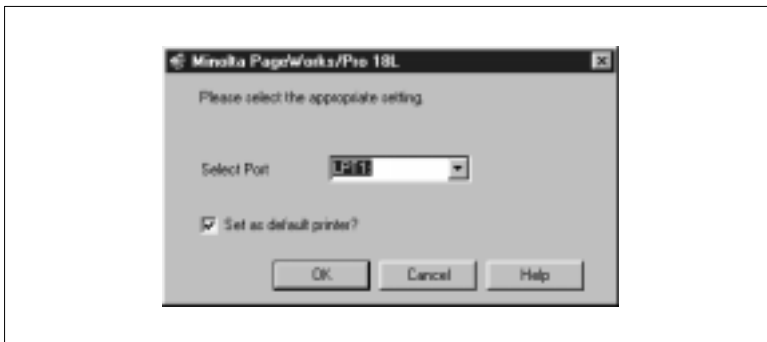


- 10 Click the [OK] button to display the next dialog.
- 11 Rename the printer if you want and then click [OK]. To proceed without renaming the printer, just click [OK].

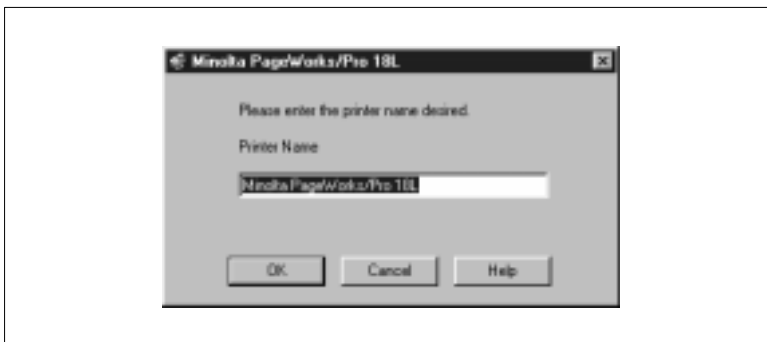

- 12** Change the directory name if you want or leave the default directory name. Next, click [Install] to start actual GDI Printer Driver installation.

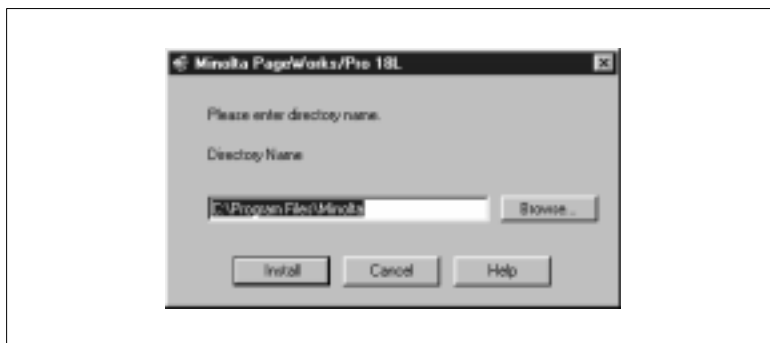

- 13** Click [Yes] (recommended) to print a test page or [No] if you want to proceed without printing a test page.

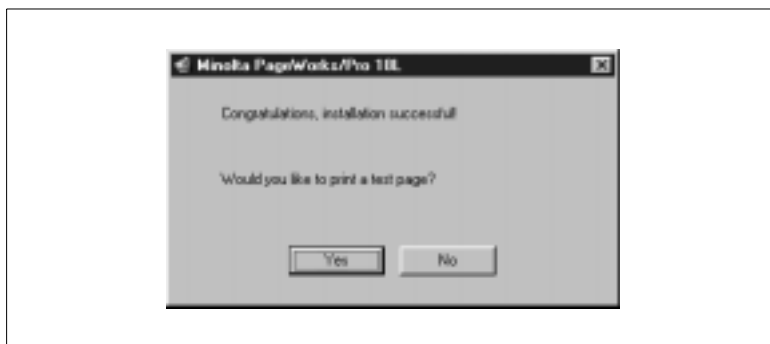

- 14** The Minolta Printer Utilities dialog on your computer screen contains icons for Minolta PageWorks-Pro 18L Help, Minolta PageWorks-Pro 18L Status, and Uninstall. If you selected the PostScript Support option in Step 6 of this procedure, it also has a Masquerade icon.




NOTE

- ➔ The Masquerade icon is not displayed if you did not select the PostScript Support option in Step 6.
- ➔ If you selected the PostScript Support option in Step 6, make sure to continue from step 15 to install PostScript Driver (ZScript).
- ➔ If you did not select the PostScript Support option, Step 14 completes your installation of the GDI Printer Driver.



- 15** On the Installer screen, click the [Quit] button.

- 16** To start installation of PostScript Driver (ZScript), double-click the Masquerade icon in the Minolta Printer Utilities dialog.

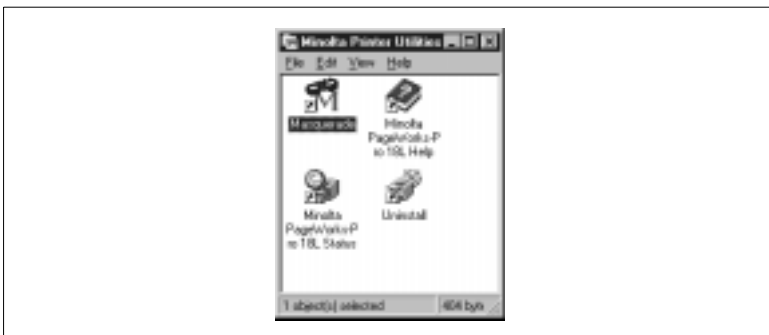

- 17** In the Non-PostScript Printers area, select Minolta PageWorks/Pro 18L on LPT1: and then click the [Install] button.



- 18** After a few moments, the Minolta PageWorks/Pro (PSCRIPT) Properties dialog appears.




- 19** Click [OK] to display the next dialog.

- 20** Confirm that Minolta PageWorks/Pro (PSCRIPT) is in the Installed ZScript Printers area of the Masquerade dialog.



- 21** Click the [Exit] button to complete installation of PostScript Driver (ZScript).
- 22** On the taskbar, click Start, point to Settings, and then click Printers.
- 23** Confirm that two icons named Minolta PageWorks/Pro 18L and Minolta PageWorks/Pro (PSCRIPT) are shown in the Printers dialog.

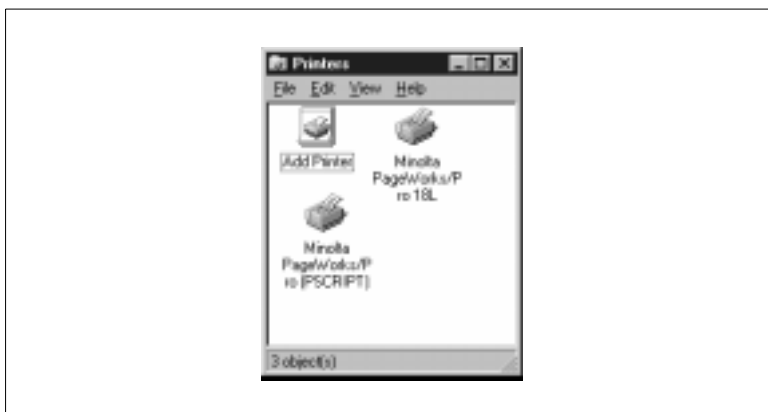


**NOTE**

- The Minolta PageWorks/Pro (PSCRIPT) icon does not appear in the Printers dialog if you do not perform Steps 15 through 20 to install PostScript Driver (ZScript).

Print Test Page: Example

An example of the test page is shown below. Make sure that “Minolta PageWorks/Pro 18L” is indicated as the printer model on the test page. This confirms that the printer driver has been correctly installed.

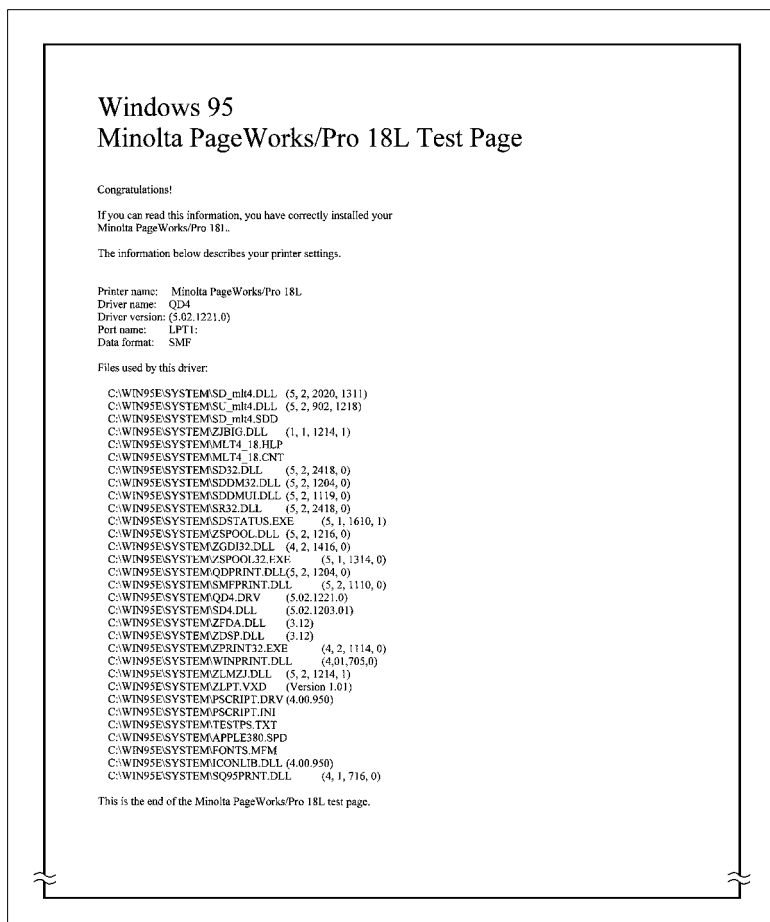


To Uninstall the Printer Driver



NOTE

- Skip steps 1 through 6 of the following procedure if you do not have PostScript Driver (ZScript) installed on your computer.

- 1 Turn on your computer and start up Windows 95 or Windows 98.
- 2 To start uninstallation of PostScript Driver (ZScript), click Start on the taskbar, point to Programs, point to Minolta Printer Utilities, and then click Masquerade.

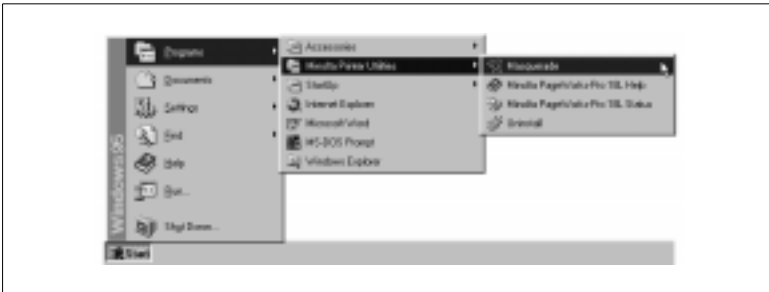


- 3 In the Installed ZScript Printers area, click Minolta PageWorks/Pro (PSCRIPT) and then click Remove.




- 4 Click [Exit].



- 5 On the taskbar, click Start, point to Settings, and then click Printers.
- 6 Confirm that the Minolta PageWorks/Pro (PSCRIPT) icon is no longer displayed in the Printers dialog.

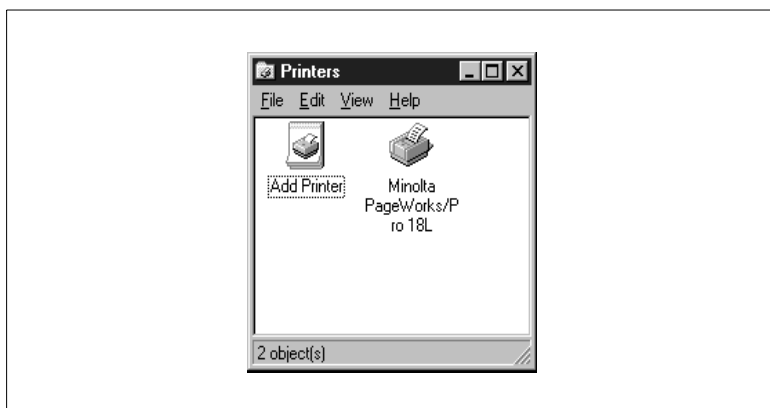

- 7 To start uninstallation of the GDI Printer Driver, click Start on the taskbar, point to Programs, point to Minolta Printer Utilities, and then click Uninstall.

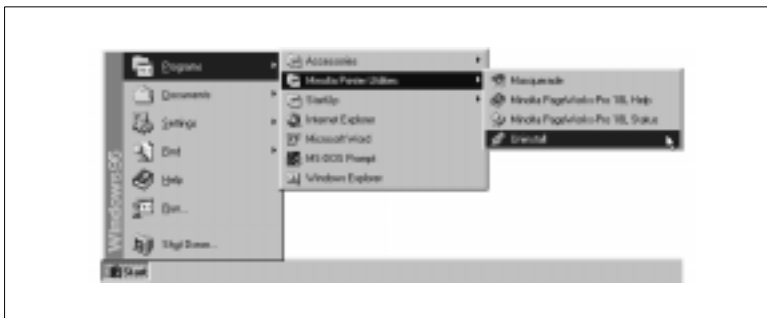


- 8 Select [Minolta PageWorks/Pro 18L]




- 9 Click [Uninstall] to proceed with the uninstall operation or [Cancel] to abort.

10 In the next dialog that appears, click [Yes] to restart the computer.

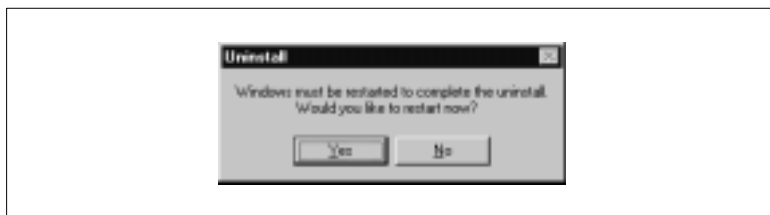

11 On the taskbar, click Start, point to Settings, and then click Printers.

12 Confirm that the Minolta PageWorks/Pro 18L icon is no longer shown in the Printers dialog.

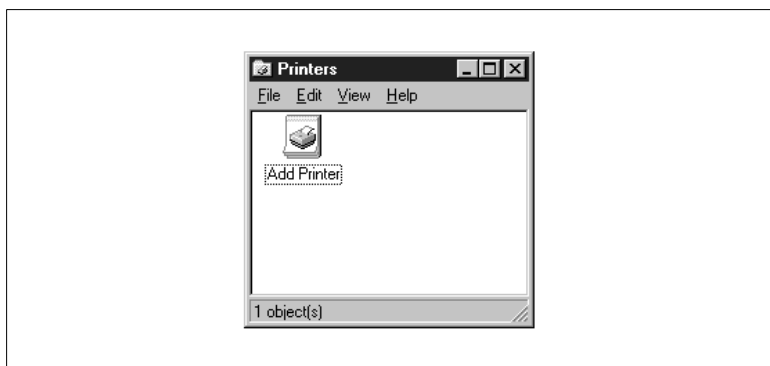

5.3 Installing the Printer Driver Under Windows NT 4.0

This section provides information on installing the printer driver on a computer running Windows NT 4.0. It also tells you how to uninstall the printer driver when necessary.

To Install the Printer Driver from the CD-ROM


- 1 Turn on your computer and start up Windows NT 4.0.
- 2 Insert the Printer Driver CD-ROM into your computer's CD-ROM drive. In this example we will assume that D: is the name of the CD-ROM drive.
- 3 Open the Windows Explorer, Browse to the CD-ROM drive and navigate to: D:\DRIVER\Win95NT\GB
- 4 Double-click setup.exe to start up the installer.




NOTE

- The printer driver must be installed using the CD-ROM's setup.exe. Do not use the Add Printer wizard from the Printers folder. Installation through the Add Printer wizard will prevent the printer from performing properly.
-

- 5 Follow the instructions that appear on your computer screen to complete the installation.

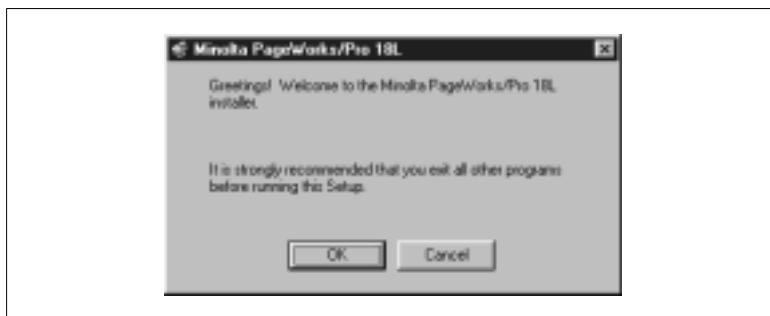


- 6 Select Local Printer.

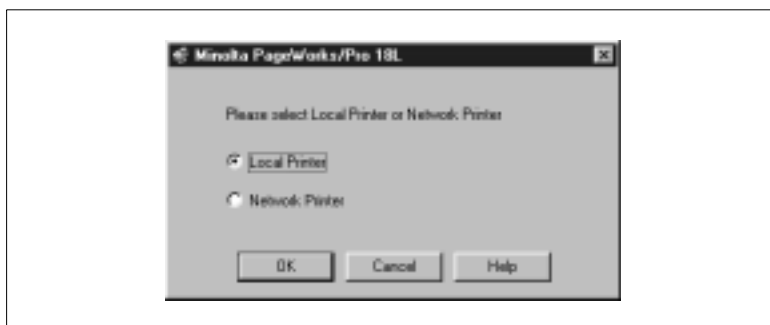

- 7 Click the [OK] button to display the next dialog.

- 8 Select installation options.

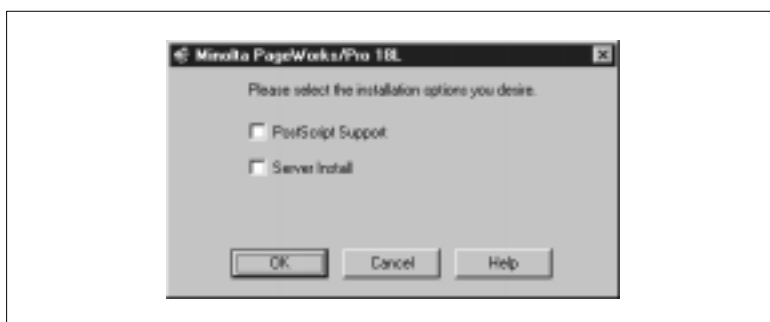

**NOTE**

- ➔ We strongly recommend that you select PostScript Support. This option allows the printer driver to switch automatically to a PostScript Driver (ZScript) when the GDI Printer Driver is unable to produce a satisfactory printout of an image. Though this happens very rarely, it is a good idea to select this option to ensure optimum printing results.
- ➔ Instructions for installing the PostScript Driver (ZScript) are provided after the installation instructions for the GDI Printer Driver (Steps 19 through 24 on see page 5-16 ff). If PostScript Support has been selected, be sure to install the PostScript Driver (ZScript) using Masquerade.
- ➔ For a detailed description of ZScript, see the Zenographic's ZScript User's Guide (file name: ZScript.pdf) from the Manual folder in the CD-ROM.

Displaying Zenographic's ZScript User's Guide File

1. After you complete installation of the GDI Printer Driver, insert the Printer Driver CD-ROM into your computer's CD-ROM drive. If you have just installed the printer driver, the CD-ROM should already be in the drive.
2. Open the Windows Explorer, browse to the CD-ROM drive and navigate to: D:\Acrobat\WIN95NT\GB. Double-click ar32x301.exe. This starts installation of Adobe Acrobat Reader. Follow the instructions that appear on the screen. If your system already has Adobe Acrobat Reader installed, skip this step (Step 2) and jump directly to Step 3.
3. Double-click ZScript.pdf from the Manual folder in the CD-ROM. This displays Zenographic's ZScript User's Guide.


- 9 If the computer onto which you are installing the driver is a print server, check the Server Install checkbox.



NOTE

- If your printer is connected to a network, we recommend consulting your network administrator and referring to the Network Interface Card Manuals.
-

- 10 If you plan to use the printer as a network printer, type in a name for Share Name.
Example: PWP_18L

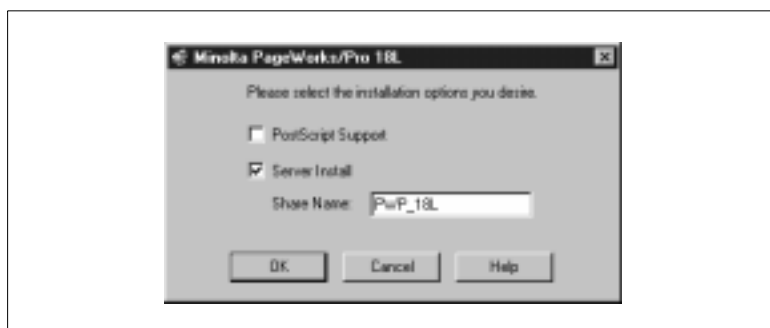


NOTE

- Skip Step 7 if you do not check the Server Install option in Step 8.
-

- 11 Click [OK] to display the next dialog.

- 12 Select the appropriate port.

- 13** Check Set as default printer if you want to use the printer as this default printer or leave this option unchecked if you do not want it as the default.

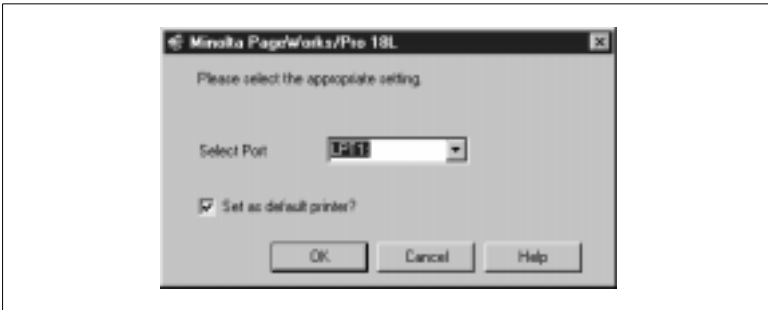


- 14** Click the [OK] button to display the next dialog.


- 15** Rename the printer if you want and then click [OK]. To proceed without renaming the printer, just click [OK].



- 16** Change the directory name if you want or leave the default directory name. Next, click [Install] to start actual GDI Printer Driver installation.

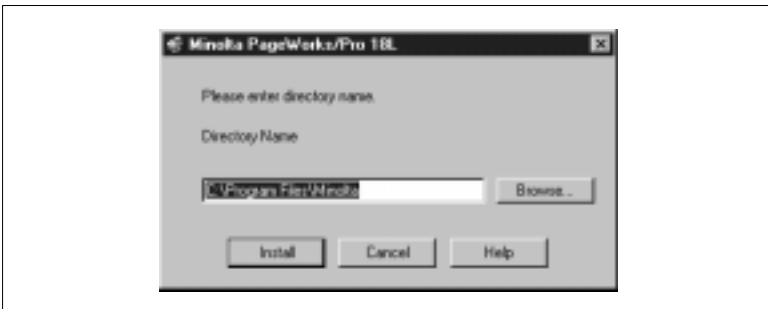

- 17** Click [Yes] (recommended) to print a test page or [No] if you want to proceed without printing a test page.

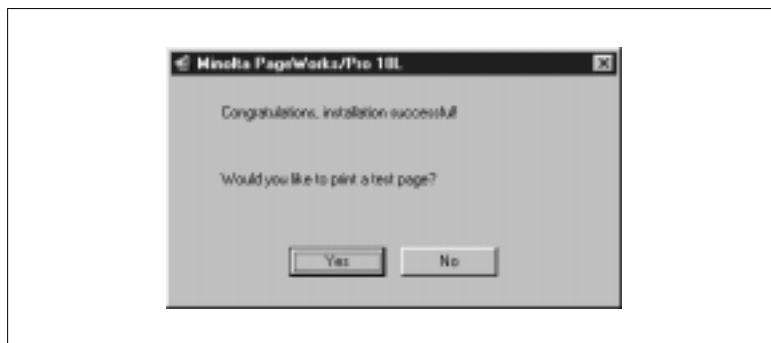


- 18** The Minolta Printer Utilities dialog on your computer screen contains icons for Minolta PageWorks-Pro 18L Help, Minolta PageWorks-Pro 18L Status, and Uninstall. If you selected the PostScript Support option in Step 7 of this procedure, it also has a Masquerade icon.



NOTE

- The Masquerade icon is not displayed if you did not select the PostScript Support option in Step 7.
- If you selected the PostScript Support option in Step 7, make sure to continue from Step 19 to install PostScript Driver (ZScript).
- If you did not select the PostScript Support option, Step 18 completes your installation of the GDI Printer Driver.

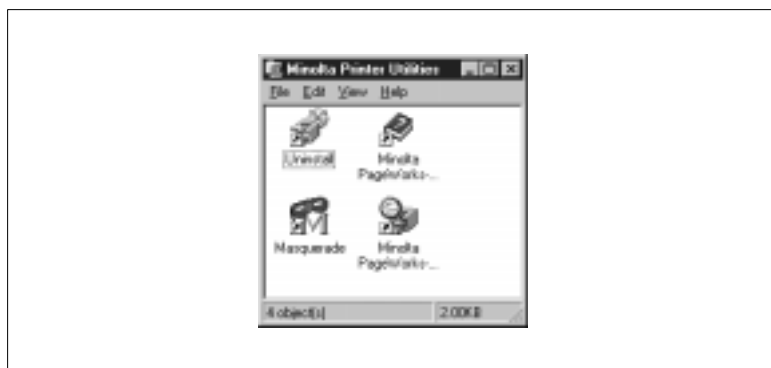

19 On the Installer screen, click the [Quit] button.

20 To start installation of PostScript Driver (ZScript), double-click the Masquerade icon in the Minolta Printer Utilities dialog.



21 In the Non-PostScript Printers area, select Minolta PageWorks/Pro 18L on LPT1: and then click the [Install] button.



- 22** After a few moments, the Minolta PageWorks/Pro (PSCRIPT) Properties dialog appears.




- 23** Click [OK] to display the next dialog.

- 24** Confirm that Minolta PageWorks/Pro (PSCRIPT) is in the Installed ZScript Printers area of the Masquerade dialog.



- 25** Click the [Exit] button to complete installation of PostScript Driver (ZScript).
- 26** On the taskbar, click Start, point to Settings, and then click Printers.
- 27** Confirm that two icons named Minolta PageWorks/Pro 18L and Minolta PageWorks/Pro (PSCRIPT) are shown in the Printers dialog.

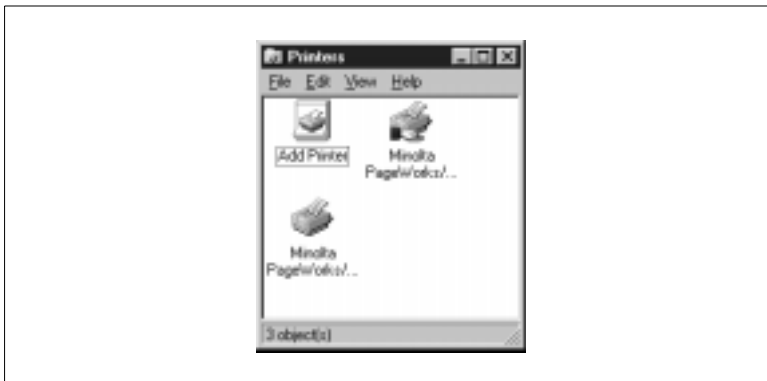


NOTE

- ➔ The Minolta PageWorks/Pro (PSCRIPT) icon does not appear in the Printers dialog if you do not perform Steps 19 through 24 to install PostScript Driver (ZScript).
 - ➔ The printer driver must be installed using the CD-ROM's installer. Do not use the Add Printer wizard from the Printers folder.
-

Print Test Page: Example

An example of the test page is shown below. Make sure that “Minolta PageWorks/Pro 18L” is indicated as the printer model on the test page. This confirms that the printer driver has been correctly installed.

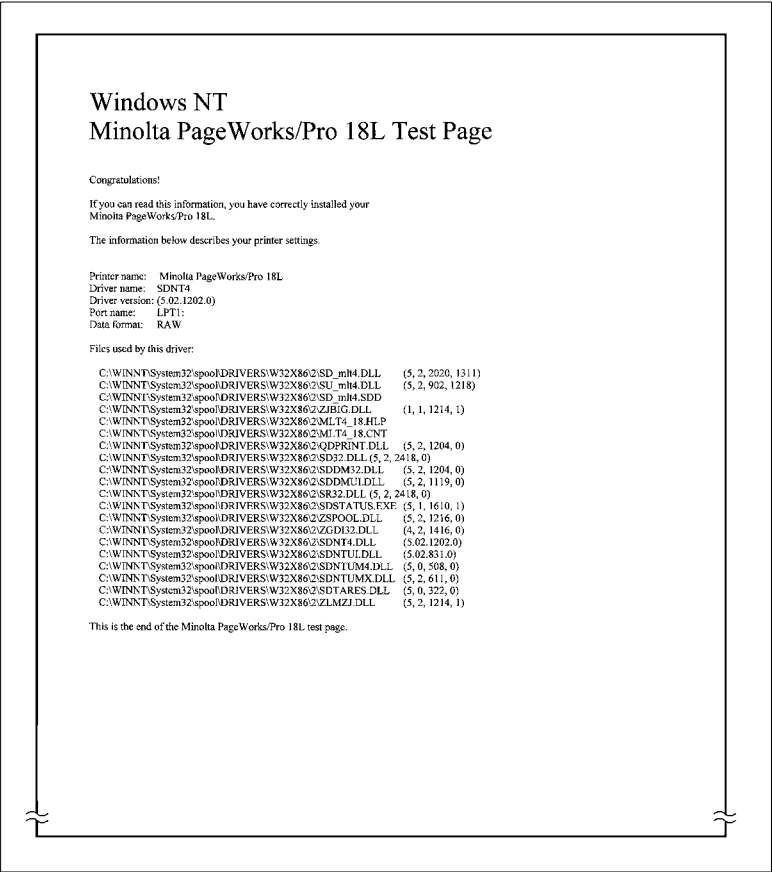


To Uninstall the Printer Driver



NOTE

- Skip steps 1 through 6 of the following procedure if you do not have PostScript Driver (ZScript) installed on your computer.

- 1 Turn on your computer and start up Windows NT 4.0.
- 2 To start uninstallation of PostScript Driver (ZScript), click Start on the taskbar, point to Programs, point to Minolta Printer Utilities, and then click Masquerade.

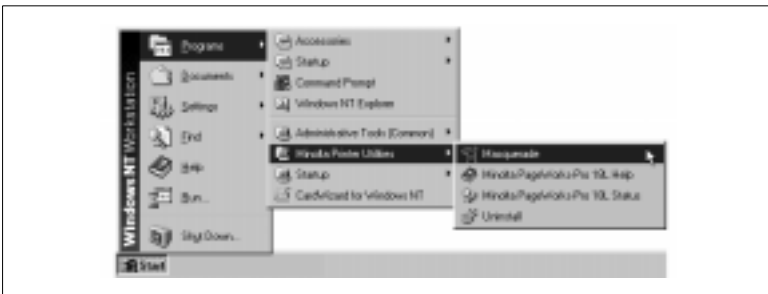


- 3 In the Installed Zscript Printers area, click Minolta PageWorks/Pro (PSCRIPT) and then click [Remove].




- 4 Click [Exit].



- 5 On the taskbar, click [Start], point to Settings, and then click [Printers].
- 6 Confirm that the Minolta PageWorks/Pro (PSCRIPT) icon is no longer displayed in the Printers dialog.

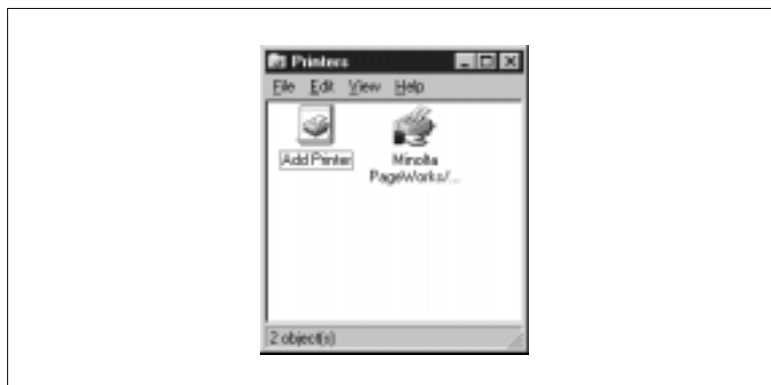

- 7 To start uninstallation of the GDI Printer Driver, click Start on the taskbar, point to Programs, point to Minolta Printer Utilities, and then click Uninstall

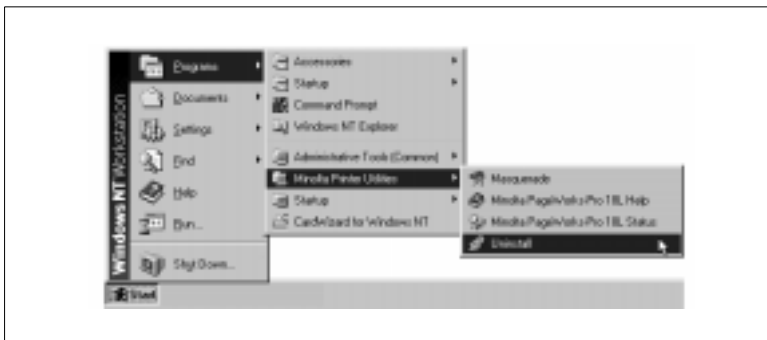


- 8 Select [Minolta PageWorks/Pro 18L]



- 9 Click [Uninstall] to proceed with the uninstall operation or [Cancel] to abort.

10 In the next dialog that appears, click [Yes] to restart the computer.

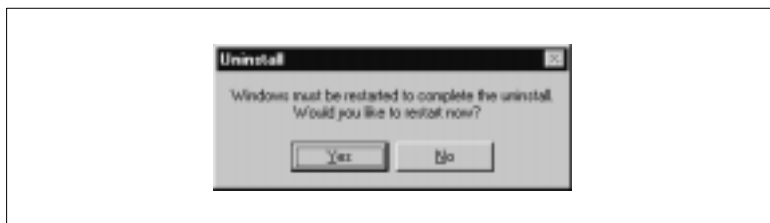

11 On the taskbar, click Start, point to Settings, and then click Printers.

12 Confirm that the Minolta PageWorks/Pro 18L icon is no longer shown in the Printers dialog.



5.4 Registering the Status Display

The Status Display provides you with a variety of useful information about the current status of your printer.

It is installed automatically when you install the printer driver.

Optional registration in the StartUp directory of Windows 95, Windows 98 or Windows NT 4.0 allows the Status Display to automatically reside on your desktop.

Follow the instructions provided for registering the Status Display according to your operating environment. For further details, please refer to the documentation that came with your version of Windows.



NOTE


- The Status Display allows you to monitor the operating status of the printer only when the printer is locally (directly) connected to the host computer via a parallel interface cable.

Registering the Status Display Under Windows 95/98

The screen images that appear in this section are examples of Status Display registration under Windows 95. Actual screen images may appear differently under Windows 98, however, the registration procedure is the same.

This procedure must be followed only after the successful installation of the printer driver.


- 1 Click on the Start button, go to the Settings menu and click on the Taskbar... item.

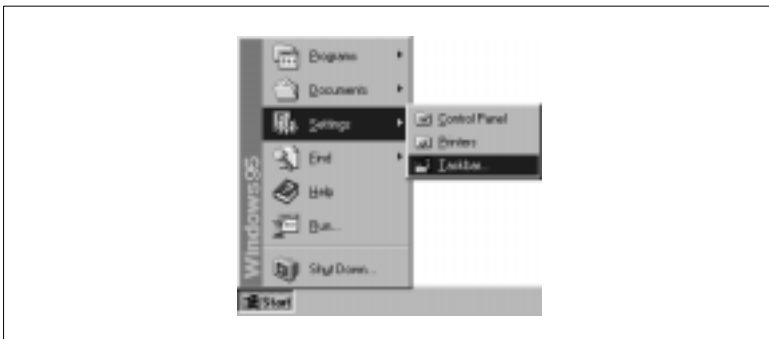

- 2 Click on the Start Menu Programs tab in the Taskbar Properties dialog that appears.




- 3 Click the [Add] button that is located in the Customize Start Menu box to open the Create Shortcut dialog.
- 4 Use the Browse button to search for the Zjst402w file (for this example it is assumed that the file is installed under C:\Windows\Zjst402w.exe).

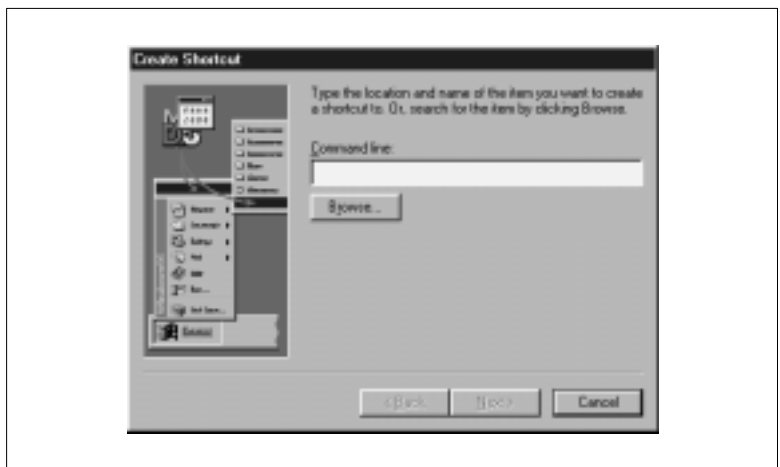


- 5 Click the Windows file and then click the [Open] button.

- 6 Click the Zjst402w file and then click [Open] to return to the Create Shortcut dialog.
- 7 Click the [Next>] button in the Create Shortcut dialog to open the Select Program Folder dialog.
- 8 Select the StartUp folder from the “Select folder to place shortcut in” box and then click [Next>].

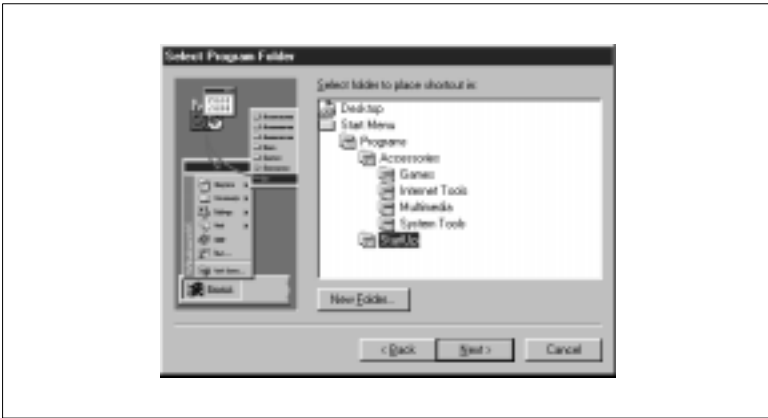


- 9 Enter a name for the shortcut to the Status Display into the Select a Title for the Program dialog and click [Finish].

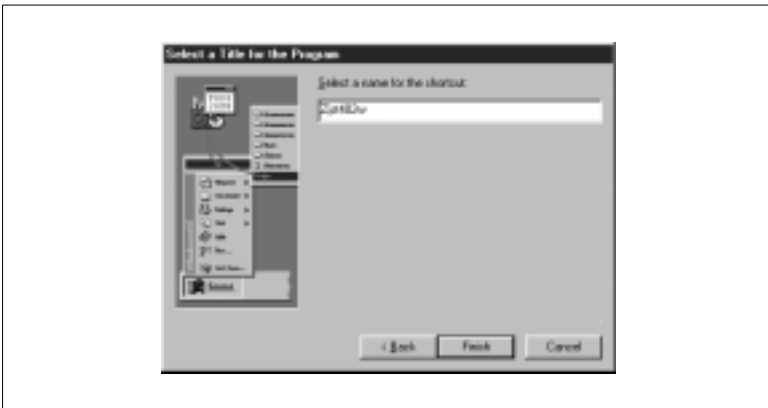

- 10 Click the [OK] button in the Taskbar Properties.
- 11 Restart the computer.


- 12** Make sure that the Minolta PageWorks/Pro 18L Status Display appears on your desktop and that the Status Display icon appears on the Windows taskbar.

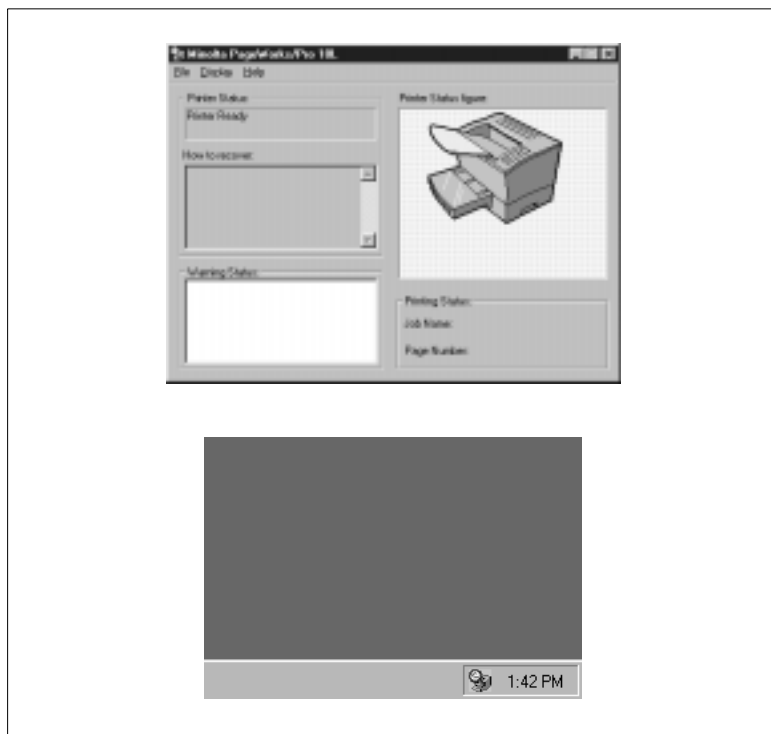

Registering the Status Display Under Windows NT 4.0

This procedure must be followed only after the successful installation of the printer driver.

- 1 Click on the Start button, go to the Settings menu and click on the Taskbar... item.

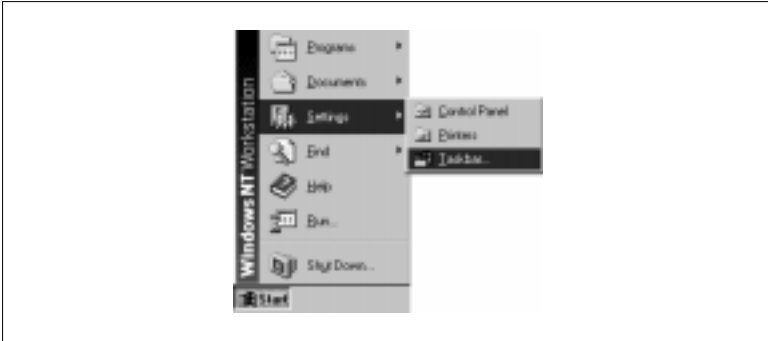

- 2 Click on the Start Menu Programs tab in the Taskbar Properties dialog that appears.



- 3 Click the [Add] button that is located in the Customize Start Menu box to open the Create Shortcut dialog.


- 4 Use the [Browse] button to search for the Zjst402w file (for this example it is assumed that the file is installed under C:\Winnt\Zjst402w.exe)




- 5 Click the Winnt file and then click the [Open] button.
- 6 Click the Zjst402w file and then click [Open] to return to the Create Shortcut dialog.
- 7 Click the [Next>] button in the Create Shortcut dialog to open the Select Program Folder dialog.
- 8 Select the Startup folder from the "Select folder to place shortcut in" box and then click [Next>].



- 9 Enter a name for the shortcut to the Status Display into the Select a Title for the Program dialog and click [Finish].

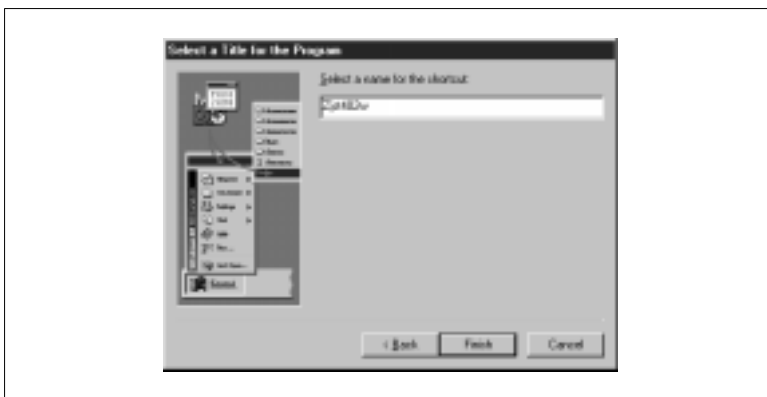

- 10 Click the [OK] button in the Taskbar Properties.
- 11 Restart the computer.
- 12 Make sure that the Minolta PageWorks/Pro 18L Status Display appears on your desktop and that the Status Display icon appears on the Windows taskbar.

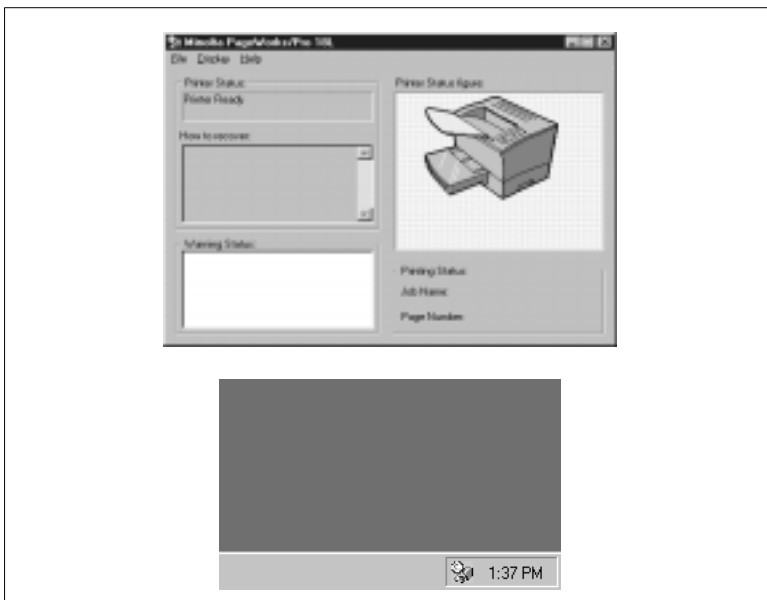

5.5 Displaying the Driver Setup Dialog (Windows 95/98/NT 4.0)

Use the following procedure to display the driver setup dialog under Windows 95, Windows 98 or Windows NT 4.0.

To Display the Driver Setup Dialog Under Windows 95/98

- 1 Click Start, point to Settings, and then click Printers to display the Printers dialog.
- 2 In the Printers dialog, click the Minolta PageWorks/Pro 18L icon.




- 3 In the Printers dialog, select Properties from the File menu.
- 4 On the 32-bit SuperDriver Setup tab of the Properties dialog, the following dialog appears.






To Display the Driver Setup Dialog Under Windows NT 4.0

- 1 Click Start, point to Settings, and then click Printers to display the Printers dialog.
- 2 In the Printers dialog, click the Minolta PageWorks/Pro 18L icon.

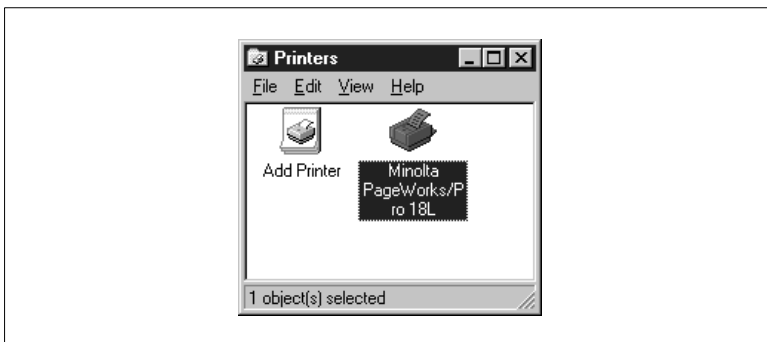

- 3 In the Printers dialog, select Document Defaults... from the File menu.

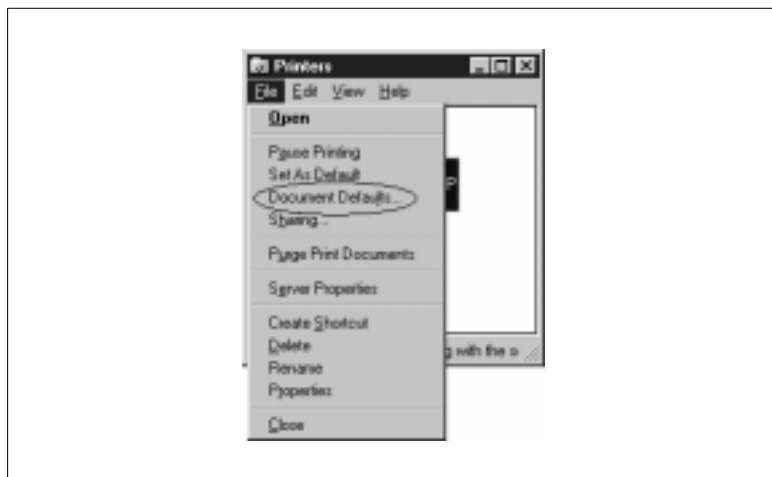

- 4 The following dialog appears.



5.6 Using the Printer Driver Under Windows 95/98/NT4.0

The features of the printer driver allow you to control a wide variety of printer parameters from your computer. The following sections provide an overview of the printer driver's properties.

The settings that are specified in the Properties dialog will become the default settings for the printer driver. The dialog is opened from the Windows 95/98/NT 4.0 Printers folder.



NOTE

→ The screen images that appear in this section show the printer driver operating in a Windows 95-based environment.

Common Buttons

The following buttons appear at the bottom of each tab.

- [OK]
Click to exit the properties dialog, saving any changes made.
- [Cancel]
Click to exit the properties dialog without saving any changes made.
- [Apply]
Click to save all changes without exiting the properties dialog.
- [Help]
Click to view online help.

Paper

The Paper tab contains functions that effect the format and output of your printed documents.



Paper Size

The various sizes of paper that are supported by your printer are displayed in the drop-down list. Select the appropriate size.

- Paper

Letter	8 1/2 × 11 inches
Legal	8 1/2 × 14 inches
Invoice	5 1/2 × 8 1/2 inches
Executive	7 1/4 × 10 1/2 inches
A4	210 × 297 mm
A5	148 × 210 mm
JIS B5	182 × 257 mm
J-Post	100 × 148 mm

- Envelopes

COM10	4 1/8 × 9 1/2 inches
DL	110 × 220 mm
C5	162 × 229 mm
Monarch	3 7/8 × 7 1/2 inches

- Copies
This item specifies the number of copies to be printed. You can specify any value from 1 to 999.
- Orientation
This setting allows you to determine how your document is positioned on the printed page (see Portrait and Landscape).
 - Portrait
Portrait documents are printed lengthwise (vertically), relative to the page.
 - Landscape
Landscape documents are printed widthwise (horizontally), relative to the page.
- Paper Source
The Paper Source item specifies the tray from which paper is fed from the printer. To change this setting, just select the desired paper source from the drop-down list. If the desired tray is an option and does not appear as a paper source, make sure that it has been added in the Device Option tab.
- Default
Click the [Default] button to reset the functions of the tab to their original values.



NOTE

- The Paper Size and Paper Source settings of other applications may override the settings made in the printer driver.
-

Page Layout

The Page Layout tab contains a realtime graphic mirror of most driver settings as well as the following features.



- **N-up**

The N-up settings allow you to print multiple documents on a single page. Click on the drop-down list to view the possible selections.

Off

This default setting specifies one document per sheet of paper.

2 up

This setting will print two documents onto one sheet of paper.

4 up

This setting will print four documents onto one sheet of paper.

6 up

This setting will print six documents onto one sheet of paper.

9 up

This setting will print nine documents onto one sheet of paper.

16 up

This setting will print sixteen documents onto one sheet of paper.

You can place a border between N-up documents by checking the Border Line box.

- N-up Window

Click on the [Detail of N-up...] button to open a dialog that will allow you to specify the order in which N-up documents are placed on the page. There are four patterns to choose from: horizontal ascending, horizontal descending, vertical ascending and vertical descending.



NOTE

- ➔ The Scaling feature of the printer driver cannot be used when printing N-up documents.

- Watermark

Watermarks are placed on a document to quickly alert the reader to the nature of its content. For example: confidential, draft, etc.


Through the driver, you can specify several guidelines that effect the style, content and placement of watermarks.

The Watermark drop-down list catalogs the menu of watermarks that have been entered into the printer's memory. You can add and delete watermarks from this list through the Watermark pop-up dialog.

Watermarks can be specified to appear on the first page only of a multi-page document by clicking the First Page Only box. Otherwise, a watermark that is specified to appear will be placed on every page of the multi-page document.

When the In Background box is checked, watermarks will appear as shadow-text behind the actual content of the document. When the In Background box is not checked, watermarks are superimposed over the actual content of the document.

- Watermark (pop-up dialog)
To open the dialog, click the [Edit Watermark...] button.

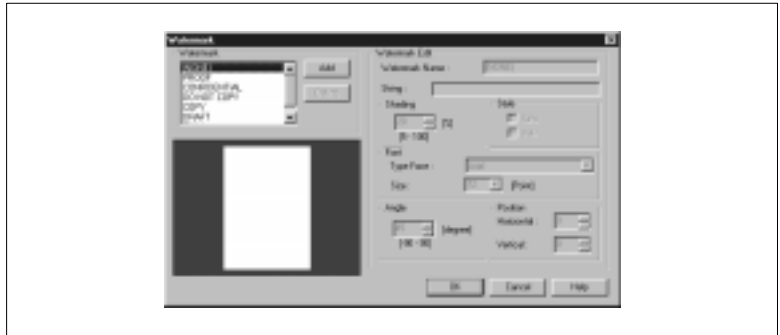

The dialog contains the watermark drop-down list that appeared in the Page Layout tab. Through the Watermark pop-up dialog, you can add and remove watermarks from the list.

- To Add a Watermark
Click the [Add] button to open the Watermark Edit dialog.

Watermark Name

The name that you wish to use to identify the watermark in the Watermark list is entered here.

String

The contents of the watermark that you wish to create are entered here.

Shading

The density of the watermark that will appear on the document is specified here.

Style

These settings can be used to specify the style of the watermark's font.

Font

The typeface and size of the watermark is specified here.

Angle

Rotate the angle of the watermark's placement through the value specified in this box.

Position

Adjust the vertical and horizontal values to position the watermark on the document.

- To Remove a Watermark from the List
Select the watermark that you wish to remove from the list, click the [Delete] button and click [OK].
- To Edit a Watermark
To edit a watermark that appears on the list, select it and change the settings, then click [OK].



- Scaling
You can adjust the area of a document through the Scaling feature. The maximum percentage of enlargement is 200. The maximum percentage of reduction is 50.



NOTE

- The Scaling feature of the printer driver cannot be used when printing N-up documents.

- Duplex
The Duplex feature enables your printer to support double-sided printing. From the drop-down list, select Short Edge Binding to print documents in a calendar-style format, Long Edge Binding to print documents in a book-style format, or Off for one-sided printing. The Duplex setting can only be specified when the optional Duplex unit is added to the Installed Options list in the Device Option tab.
- Default
Click the [Default] button to reset the functions of the tab to their original values.

Image



The Image tab provides the controls for specifying the format of data transfer from the host computer as well as the print resolution.

- **Colors to Patterns**
This setting is optimal for printing documents that will be sent via facsimile.
- **Enhance Contrast**
This setting enhances the definition between dark and light.
- **Resolution**
The resolution setting determines the dots per inch (dpi) used when a document is printed. Document printing quality will increase as the value of dpi increases. Please note however, that printing time may also increase when high-resolution settings are selected. Resolution settings include:
 - 600 dpi
 - 1200 dpi

- [Detail...]
Click this button to open the Graphics pop-up dialog.
Graphics (pop-up dialog)



Adjustment

The sliders can be used to control the definition, tones and lighting of an image in terms of Contrast, Brightness and Sharpness. Usually, the median values toward the center of the bars will provide the best display. To fine tune these settings, click, hold and move the sliders in order to make left and right adjustments. Value changes are reflected in the view window as you make them.

The factory defaults for these settings are 50 for Contrast, 50 for Brightness and 20 for Sharpness.

- Default
Click the [Default] button to reset the functions of the tab to their original values.

Device Option

The auxiliary accessories that are available for installation appear in this tab.



To add an available option from the Installable Options list to the Installed Options list, select the option and click the [Add] button.

The Installed Options list catalogs the optional accessories that have been added to your printer.

To remove an option from the Installed Options list, select the option and click the [Remove] button.

Removed options can be reinstalled using the add procedure.

About

This tab displays version and copyright information about this printer driver.

5.7 Using the Printer Status Display

The Printer Status Display provides you with a variety of useful information about the current status of your printer.




NOTE

- Optional registration in the StartUp directory of Windows 95, Windows 98 or Windows NT 4.0 allows the Status Display to automatically reside on your desktop. For a detailed explanation for registering the Status Display, see page 5-30.

Opening the Printer Status Display

Before opening the Printer Status Display, make sure that the printer is connected to your computer with the parallel interface cable. Use the procedure below to open the Printer Status Display.


- To Open the Printer Status Display
Click Start, point to Programs, point to Minolta Printer Utilities, and then click Minolta PageWorks-Pro 18L Status.

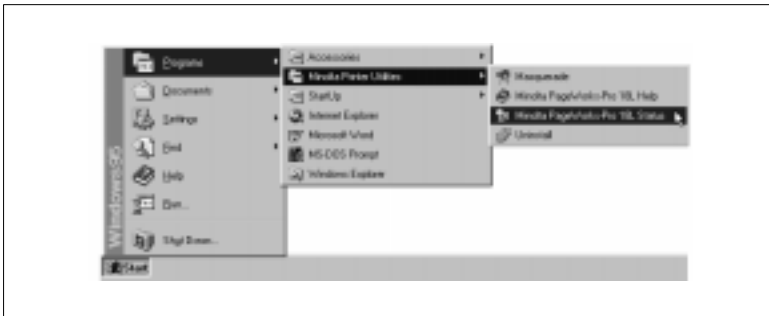

This operation will open the screen. For details, see page 5-50.

- To Close the Printer Status Display
Click [Exit] from the Printer Status Display File menu.


Using the Printer Status Display

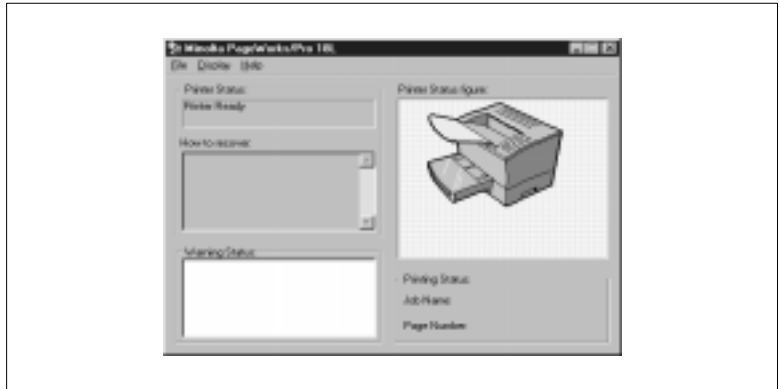

- **Printer Status**
This area displays text messages that describe the current operational status of the printer.
- **How to recover**
This area provides you with explanations of what you need to do in order to correct problems and recover from error conditions.
- **Warning Status**
This area displays text messages that warn you of such conditions as low toner.
- **Printer Status figure**
This area shows a graphic representation of the printer and indicates where there is a problem.
- **Printing Status**
These items indicate the status of an ongoing print job. Job Name shows the name of the job, while Page Number shows the number of the page that is currently printing.

Controlling Pop Up Messages

On the Display menu, click [Select Pop up Message...].

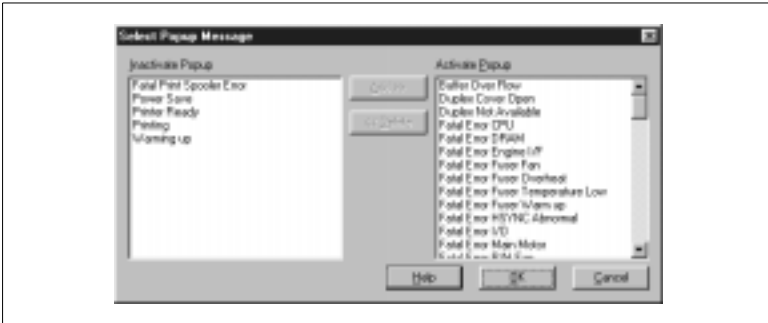


- The Activate Popup list shows error conditions that cause popup error messages to appear.
- The Inactivate Popup list shows error conditions that do not cause popup error messages to appear.
- To move an error condition from the Inactivate Popup list to the Activate Popup list, click on the error condition to highlight it and then click [Add].
- To move an error condition from the Activate Popup list to the Inactivate Popup list, click on the error condition to highlight it and then click [Delete].
- After you are finished, click [OK] to register your settings or [Cancel] to close the dialog without entering any changes.

Switching Between the Expanded and Reduced Views

You can use the following procedure to switch between the expanded and reduced views of the Printer Status Display.

On the Display menu, click Reduce to reduce the size of the display, or Expand to expand it.

The expanded view is the normal size. For details, see page 5-51. The reduced view is shown below.

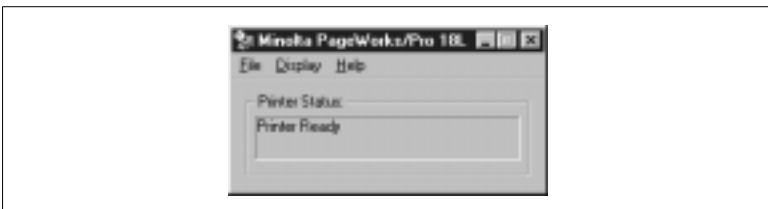


On-line Help

Use the Help menu to display online help about the Status Display.

Displaying Printer Information...

On the Display menu, click Printer Information...

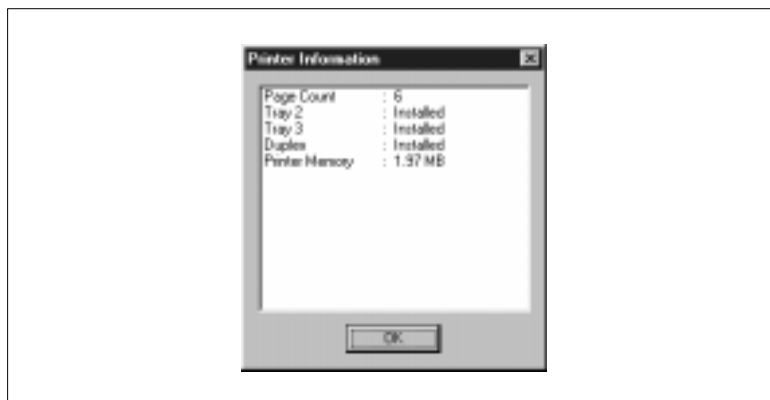

- **Page Count**
This counter keeps track of the total number of pages that have been output by the printer.
- **Tray 2**
"Tray 2: Installed" will be displayed here to indicate when a second cassette unit has been installed onto the printer.
- **Tray 3**
"Tray 3: Installed" will be displayed here to indicate when a third cassette unit has been installed onto the printer.
- **Printer Memory**
This counter displays the amount of memory that is currently available to the printer.



NOTE


- Installation of an optional SIMM will increase the memory capacity of your printer. However, the memory of the optional SIMM will not be combined with the initial 2 MB that came with the printer.

6 Maintenance


6.1 Replacing the Imaging Cartridge

The imaging cartridge contains the print drum and a supply of toner. If you print typical business A4 size pages with 5% coverage of toner, the imaging cartridge lasts for approximately 9,000 pages. However, the life of the imaging cartridge varies with the actual density of toner that is used.

- When the imaging cartridge begins to run short of toner, “Imaging Cartridge Low” message is displayed in the Status Display. Remove the imaging cartridge, shake it several times, and reload it into the printer (this will evenly distribute the toner remaining in the cartridge). Prepare a new imaging cartridge as a replacement.

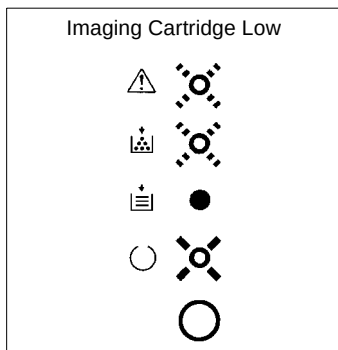

- When the imaging cartridge runs out of toner, “Imaging Cartridge Empty” message is displayed in the Status Display. It is recommended that you change the imaging cartridge as soon as possible.

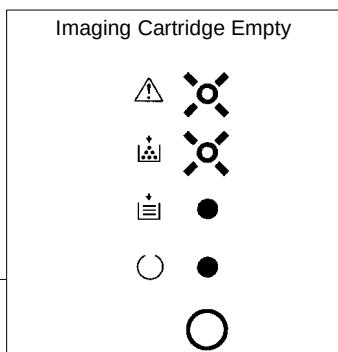

NOTE

- The Imaging Cartridge Low message appears in the Warning Status window of the Status Display as a reminder that the imaging cartridge will run out of toner soon. Since print quality will decline after the Imaging Cartridge Low message appears, replacement with a new imaging cartridge is recommended when the Imaging Cartridge Low message is displayed.
- The imaging cartridge that comes with the printer is capable of producing approximately 5,000 A4-size prints.


To Replace the Imaging Cartridge




CAUTION

- The fusing unit inside the printer can become very hot during operation. Do not touch the area to avoid injury

- 1 Turn the printer off and then disconnect the power cord and interface cable from the printer.

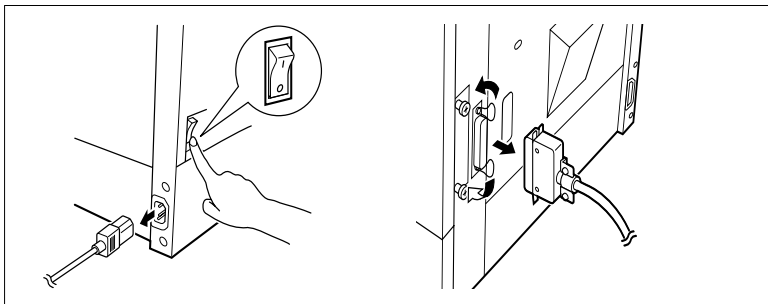


- 2 Close the face-down tray and press the top cover release button to open the top cover.

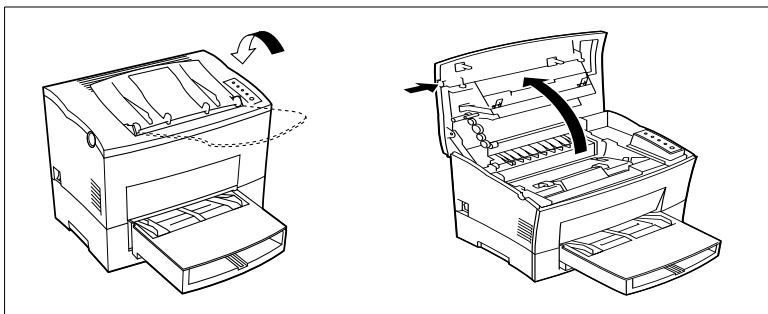

NOTE

- Be sure to close the face-down tray before opening the top cover to prevent injuries


3 Remove the old imaging cartridge.

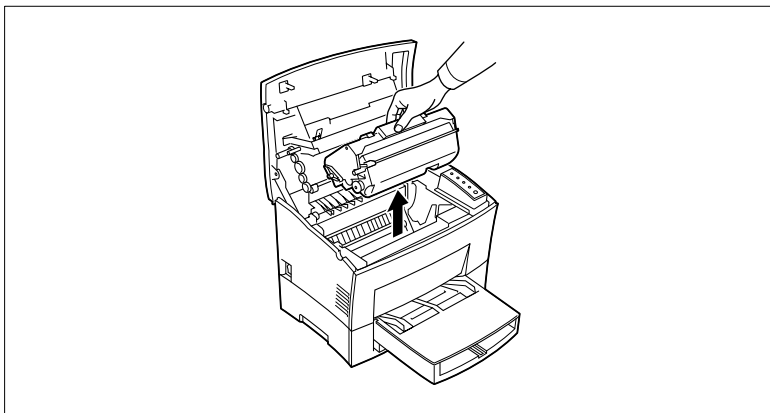



NOTE

- Do not touch the shutter of the imaging cartridge to avoid causing damage to the drum unit. When handling the imaging cartridge, always use the handle.


4 Take a new imaging cartridge out of the box. Holding it with both hands, shake it 4 or 5 times in the direction of the arrows to distribute the toner evenly.

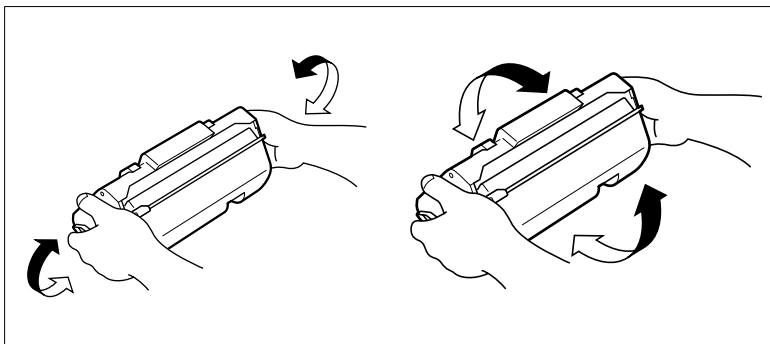

- 5 Install the imaging cartridge securely into the printer by sliding the pins on each side of the cartridge along the grooves of the cartridge guide.

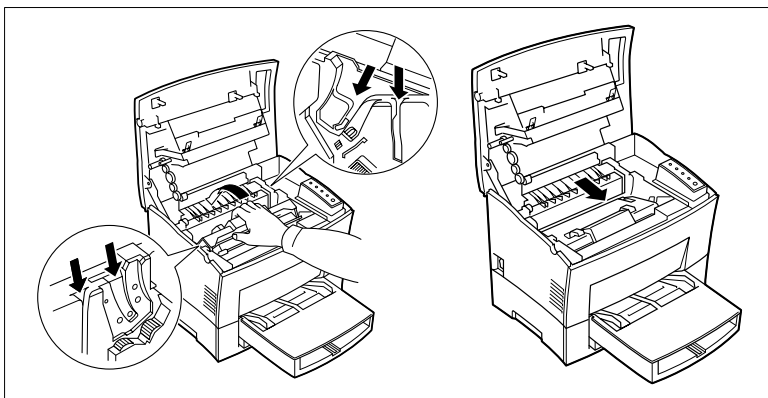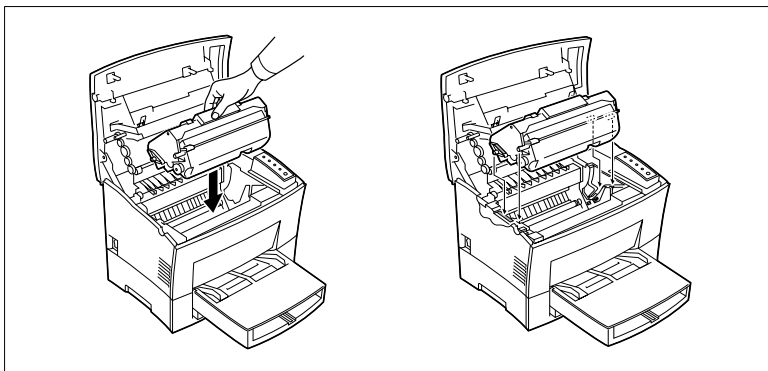

- 6 Close the top cover and press it down gently but firmly until it locks into place.

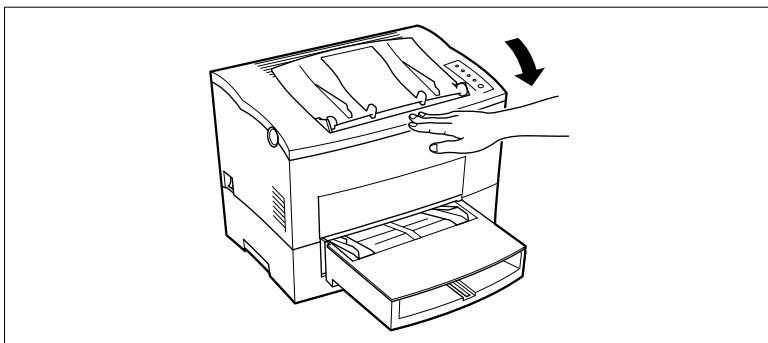

6.2 Cleaning the Printer

Dust, dirt, and paper debris on the outer surfaces and inside the printer can interfere with printer performance. Clean the printer regularly.



CAUTION


- Use a soft cloth to clean the printer. Never use abrasives or corrosive detergents.
- The fusing unit can become very hot during operation. Do not touch the area to avoid injury. Wait for at least 10 minutes after the printer has been turned off and make sure that the fusing unit has cooled before cleaning the interior of the printer.

Cleaning the Outside of the Printer

Wipe the outside of the printer with a soft cloth moistened with a neutral, household detergent.

Cleaning the Paper Transport Roller


- 1 Turn off the printer and unplug the power cord.
- 2 Close the face-down tray and press the top cover release button to open the top cover.

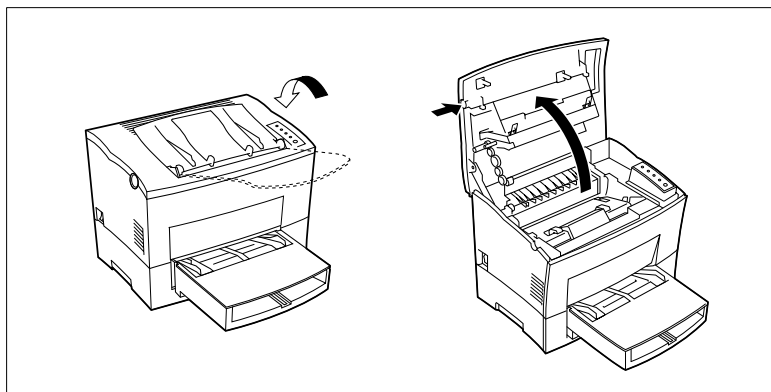

**NOTE**


- Be sure to close the face-down tray before opening the top cover to prevent injuries.

- 3** Remove the imaging cartridge.

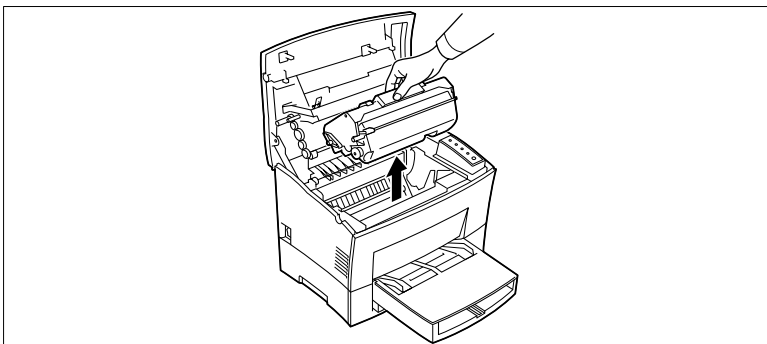
**NOTE**

- Immediately wrap the imaging cartridge with a cloth to protect it from overexposure to light.


- 4** Pull back on the cover that protects the paper transport roller located at the bottom of the printer chamber.

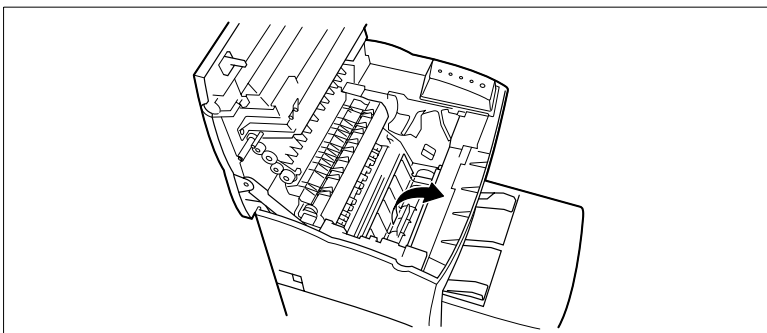


- 5 Use a soft cloth to wipe the paper transport roller.

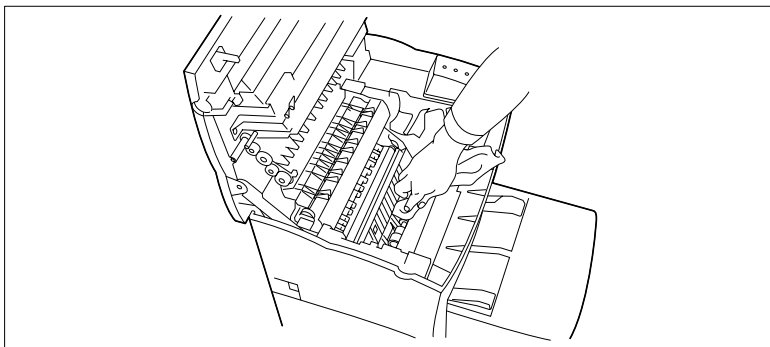

- 6 Reinstall the imaging cartridge (see page 6-2).

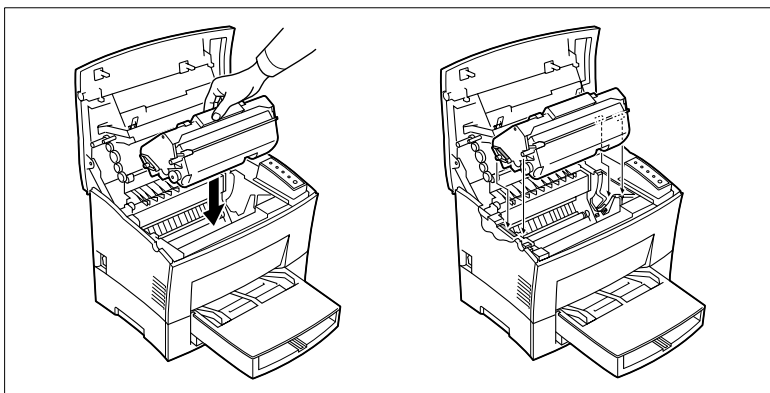

- 7 Close the top cover and press it down gently but firmly until it locks into place.

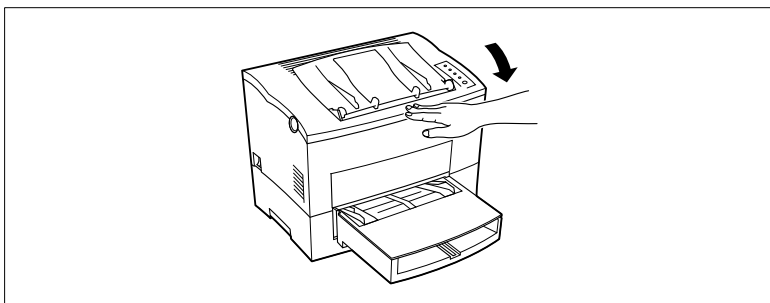

7 Troubleshooting

7.1 Clearing a Paper Misfeed

Inside the Printer


Use the following procedure to remove a misfed paper from inside the printer.



CAUTION

- The fusing unit inside the printer can become very hot during operation. Do not touch the area to avoid injury.


- 1 Close the face-down tray and press the top cover release button to open the top cover.

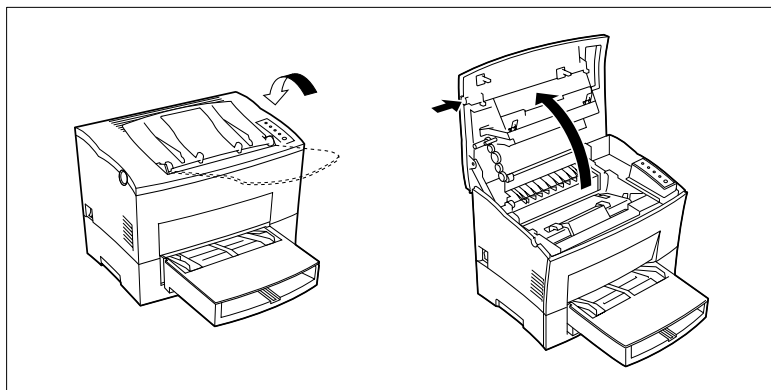

NOTE

- Be sure to close the face-down tray before opening the top cover to prevent injuries.


2 Remove the imaging cartridge.

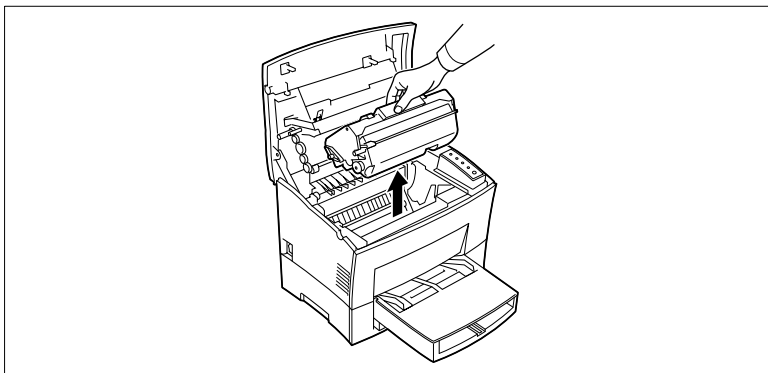

NOTE

- Immediately wrap the imaging cartridge with a cloth to protect it from overexposure to light.


3 Pull the end of the paper that is visible straight out of the printer.

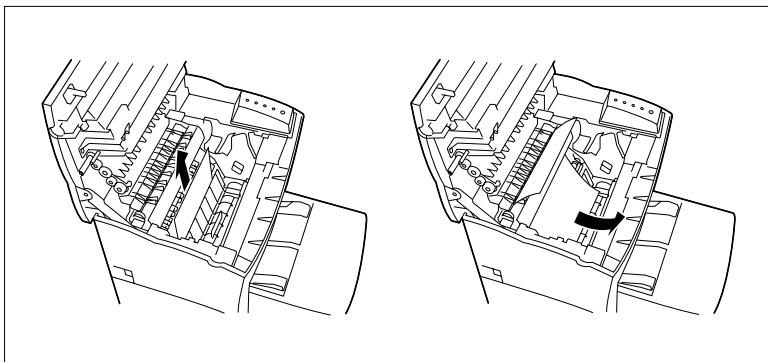


CAUTION

- Do not touch the image transfer roller.

- 4 Reinstall the imaging cartridge (see page 6-2).

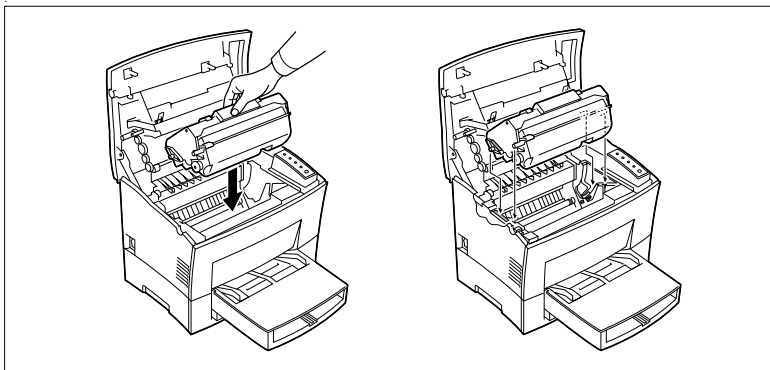


- 5 Close the top cover and press it down gently but firmly until it locks into place.

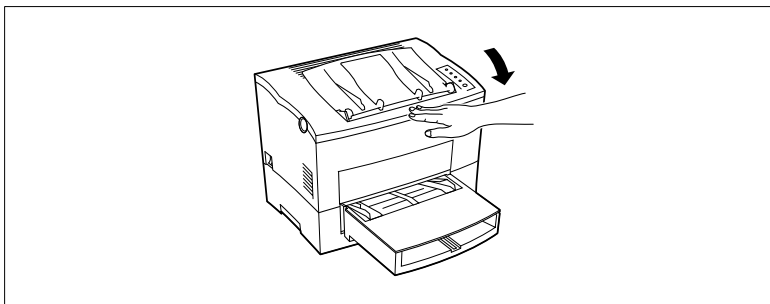


Paper Output Misfeed


Pull the misfed paper straight out of the printer.

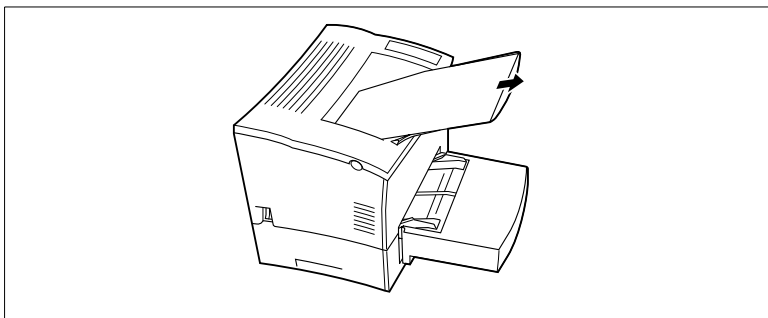**Paper Input Misfeed (from Tray 1)**

Remove the tray cover and pull the misfed paper straight out of the printer.

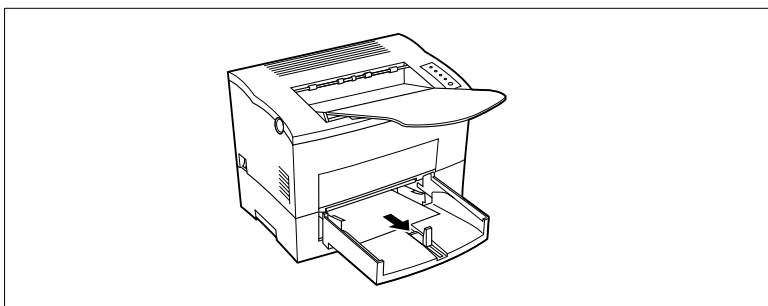
**Paper Input Misfeed (from Manual Feed Tray)**

Pull the misfed paper straight out of the printer.

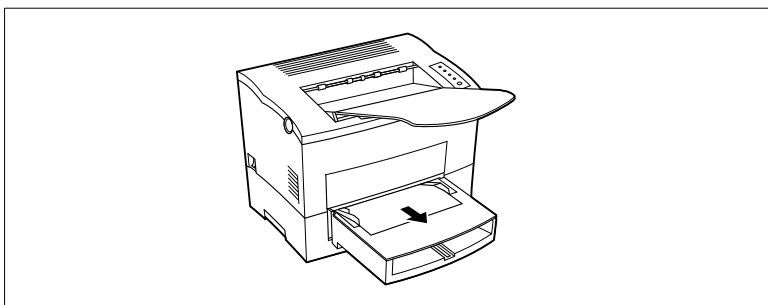


Paper Input Misfeed (from Second/Third Paper Cassette Unit)

Remove the cassette cover and pull out Tray 2/Tray 3 from the second/third paper cassette unit. Press down on the stack of paper until the paper lifting plate locks.

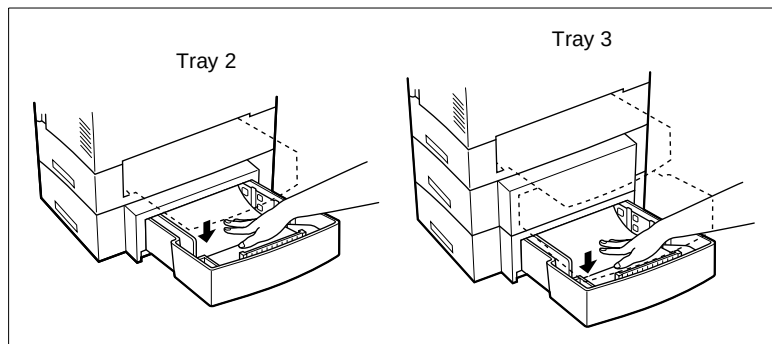


Remove the stack of paper from the tray and pull the misfed paper straight out of the printer.

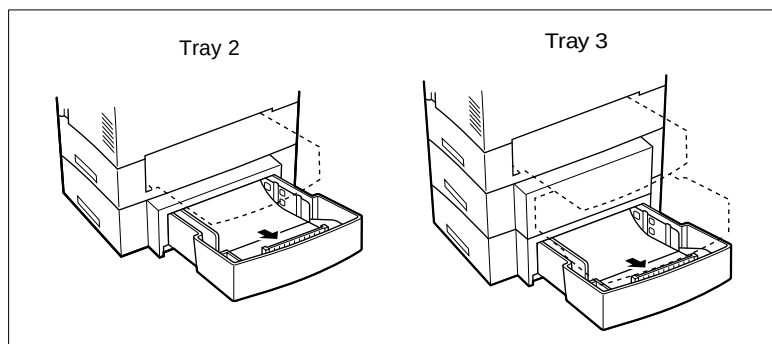

7.2 Paper Misfeed in the Duplex Unit


Upper Misfeed

Open the duplex upper cover and pull out the misfed paper.

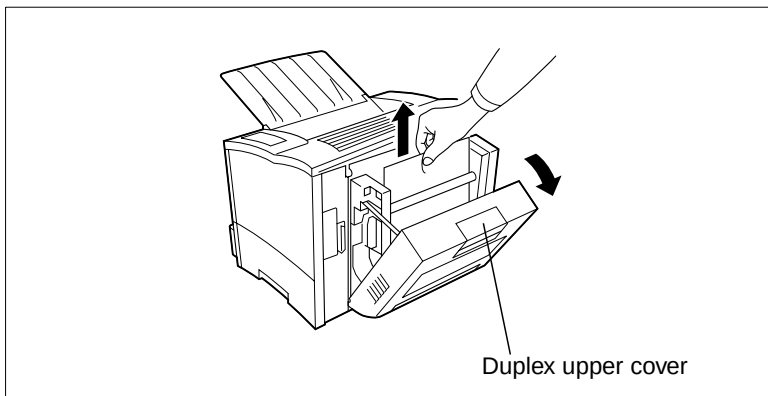

Lower Misfeed

Open the duplex lower cover and remove the misfed paper.

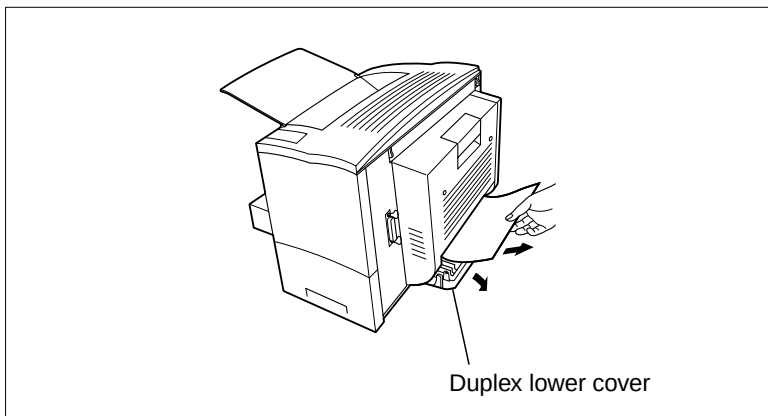

7.3 Print Quality Problems

The following provides information on most print quality problems you might encounter. If the advice provided here does not solve your problem, contact your dealer.

Blank pages


- The imaging cartridge may be running out of toner.

Remove the imaging cartridge and rock it left and right a few times to distribute remaining toner.

If the problem persists, replace the imaging cartridge (see page 6-2).

- The imaging cartridge may be defective.

Remove the imaging cartridge and check it for damage. Replace the imaging cartridge if necessary (see page 6-2).

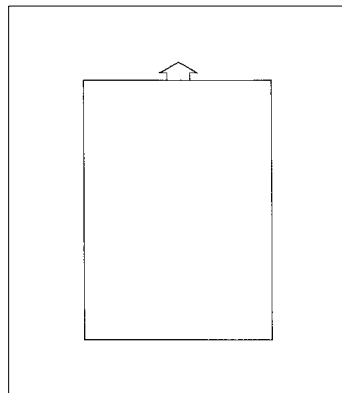


Black pages

- The imaging cartridge may be defective.


Remove the imaging cartridge and check it for damage. Replace the imaging cartridge if necessary (see page 6-2).

- Your printer may require servicing. Contact your dealer.

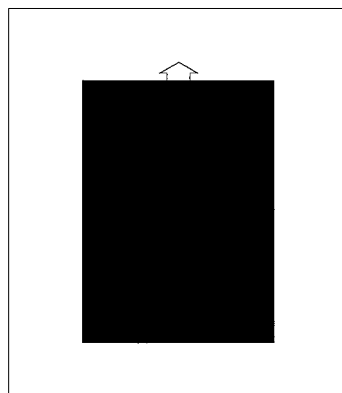


Printout too light


- The imaging cartridge may be running out of toner.
Remove the imaging cartridge and rock it left and right a few times to distribute remaining toner.
If the problem persists, replace the imaging cartridge (see page 6-2).
- The imaging cartridge may be defective.
Remove the imaging cartridge and check it for damage. Replace the imaging cartridge if necessary (see page 6-2).

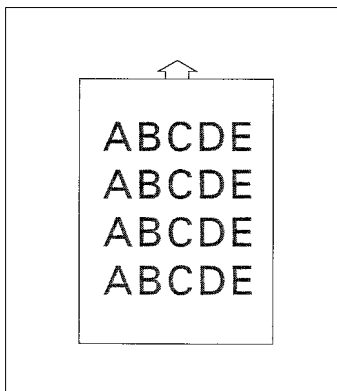**Printout too dark**

- The imaging cartridge may be defective.
Remove the imaging cartridge and check it for damage. Replace the imaging cartridge if necessary (see page 6-2).

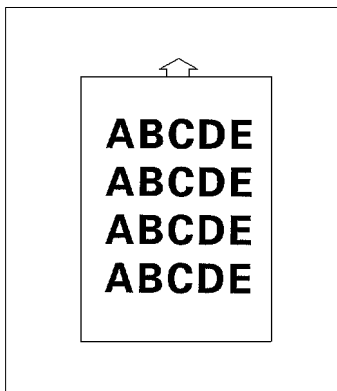
**Blurred background**

- The imaging cartridge may be defective.
Remove the imaging cartridge and check it for damage. Replace the imaging cartridge if necessary (see page 6-2).

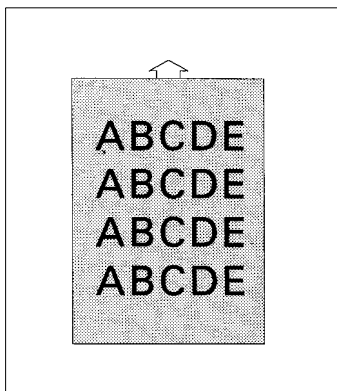


Uneven print density

- The toner may be unevenly distributed inside the imaging cartridge.
Remove the imaging cartridge and rock it left and right a few times to distribute remaining toner.
- The imaging cartridge may be defective.
Remove the imaging cartridge and check it for damage. Replace the imaging cartridge if necessary (see page 6-2).

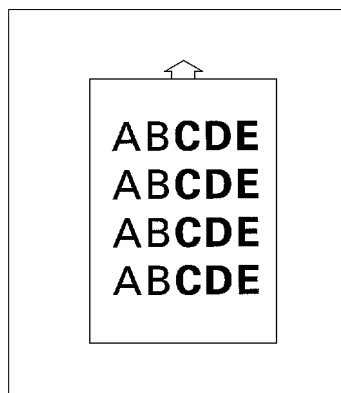


Irregularities

- The paper may have absorbed some moisture due to high humidity or because of direct contact with water.
Since toner will not adhere well to damp paper, replace the paper you are using with dry paper and try printing again.

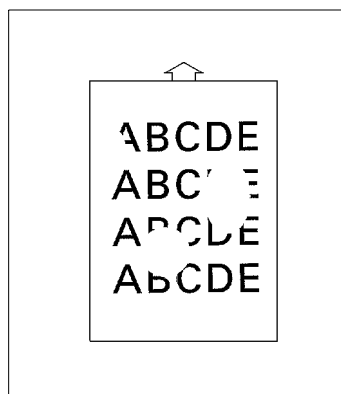


White or black line

- The imaging cartridge may be defective.
Remove the cartridge and check it for damage. Replace the cartridge if necessary (see page 6-2).

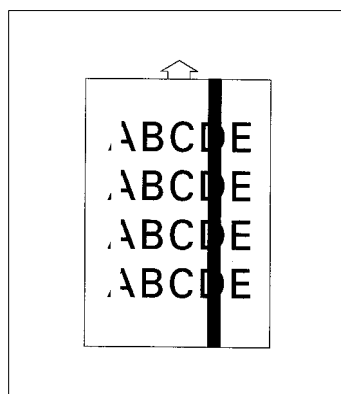

Toner smudges

- The toner may be unevenly distributed inside the imaging cartridge.
Remove the imaging cartridge and rock it left and right a few times to distribute remaining toner.
- The imaging cartridge may be defective.
Remove the cartridge and check it for damage. Replace the cartridge if necessary (see page 6-2).
- Smudges on the back of the paper indicate a dirty transport roller.
Contact your dealer.

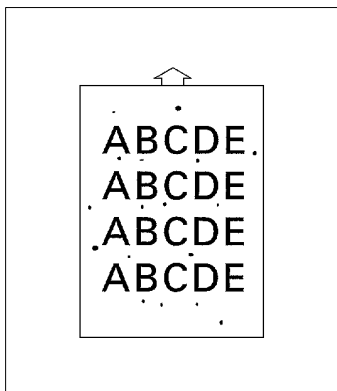

7.4 No output

Failure to produce output may indicate a communications problem between the printer and your computer. Check the following points to see if you can correct the problem. If problems persist, contact your dealer.

Are you using the correct type of printer cable?

Save the data you are trying to print and close all the applications currently open on your computer. Next, reset your computer to send a break signal to the printer. Now check your printer cable against the specifications in Chapter "Specifications" of this User's Manual.



NOTE

- ➔ When connecting your computer to the parallel connector on the printer, we recommend using an IEEE1284/ ECP/ EPP/ compatible parallel interface cable (1.5 m long).

Are your computer's communications port settings correct?

Refer to the documentation that comes with your computer and check if its current communications port settings are correct.

7.5 Messages

 — Error (amber)

 — Toner empty (amber)

 — Paper empty (amber)

 — Ready (green)

 — Action key

Indicator lights



On



Off



Blinking

LED	Status	For the explanation . . .
	On or blinking Ready LED	see page 7-12
	On or blinking Error LED	see page 7-12



 
 
NOTE

→ The LED display will change as you press the Action key.








→ The appearance of this icon throughout this manual indicates when you need to press the Action key

When the Ready LED is on





LED Display	Description	Response Required
Initializing 	Power on, initializing.	
Warming Up 	Printer is warming up.	
Ready 	Printer is ready and able to print.	





LED Display	Description	Response Required
Power Save    Slowly blinking	Printer has entered the Power Save Mode.	
Toner Low    	The imaging cartridge is low on toner but printing is still possible.	Prepare to replace the imaging cartridge with a new one (see page 6-1).
Wait Action    	Press the Action key in the event of a paper size error or when operating in the manual mode.	Press the Action key. Printing will begin.


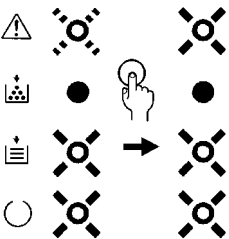
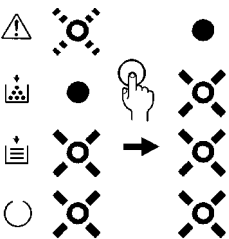
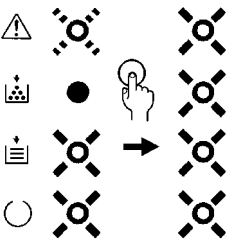
LED Display	Description	Response Required
Tray 1 Paper Empty 	The paper supply of Tray 1 is empty.	Add paper (see page 3-10 and see page 4-4).
Tray 2 Paper Empty 	The paper supply of Tray 2 is empty.	Add paper (see page 4-6).
Tray 3 Paper Empty 	The paper supply of Tray 3 is empty.	
Size Mismatch 	The wrong size of paper has been detected in Tray 1, Tray 2 or Tray 3.	Load the specified size of paper into the appropriate tray or press and hold the Action key for about 10 seconds until all of the LED's are on to cancel the print job (see page 4-1 and see page 5-41).



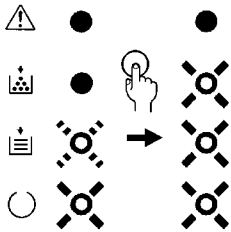
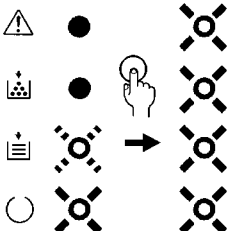
LED Display	Description	Response Required
Tray 2 No Cassette/ No Tray 2 	The cassette for Tray 2 is not in place. A print job was sent using the Tray 2 setting in the printer driver, even though Tray 2 is not installed on the printer.	Check the trays to make sure that all cassettes are securely in place (see page 3-23). Change the Paper Source setting in the printer driver and resend the print job (see page 5-41).
Tray 3 No Cassette/ No Tray 3 	The cassette for Tray 3 is not in place. A print job was sent using the Tray 3 setting in the printer driver, even though Tray 3 is not installed on the printer.	Check the trays to make sure that all cassettes are securely in place (see page 3-23). Change the Paper Source setting in the printer driver and resend the print job (see page 5-41).
Duplex Unit Not Available 	A duplex print job has been sent to a printer that is not equipped with a duplex unit	Disable the duplex setting and resend the print job. For details, see chapter "Printer Driver and Status Display" (see page 5-49).

When the Error LED is on

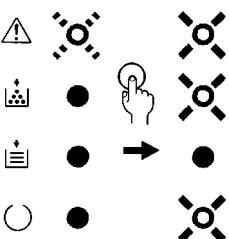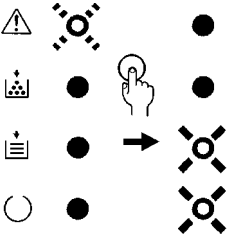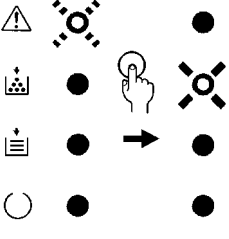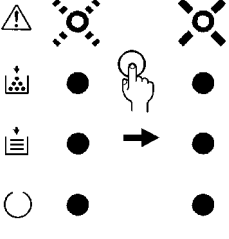LED Display	Description	Response Required
Buffer Overflow 	The buffer cannot handle the volume of data being sent	Cancel the print job through the printer driver. Turn the printer off then on again and resend the print job. Lower the resolution setting or increase the amount of memory installed in the printer and resend the print job.
Cover Open 	The cover is open.	
Paper Size Error 	The paper-size setting of the printer driver does not match the size of paper that has been detected in the tray.	Load the correct size of paper or cancel the print job (by pressing the Action key) and change the paper-size setting in the driver (see page 4-1 and see page 5-41).
Paper Misfeed 1 	A paper misfeed occurred near the multipurpose tray.	Remove the misfed sheet of paper. For details, see "Clearing a Paper Misfeed" (see page 7-1).

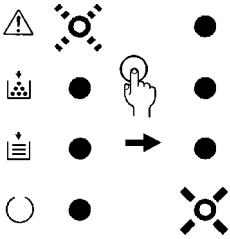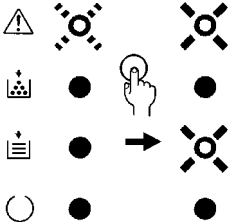
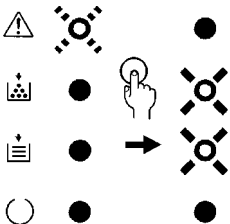
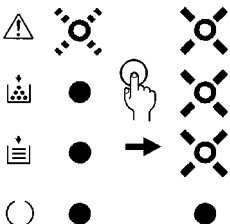
LED Display	Description	Response Required
Paper Misfeed 2 	A paper misfeed occurred near Tray 2	Remove the misfed sheet of paper. For details, see "Clearing a Paper Misfeed" (see page 7-1).
Paper Misfeed 3 	A paper misfeed occurred near Tray 3.	
Paper Misfeed 4 	A paper misfeed occurred near the manual feeding tray.	
Paper Misfeed 5 	A paper misfeed occurred near the lower-duplex unit.	

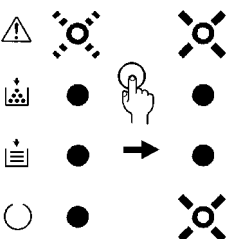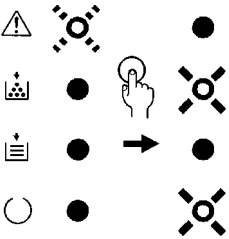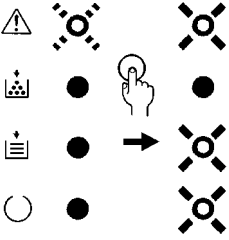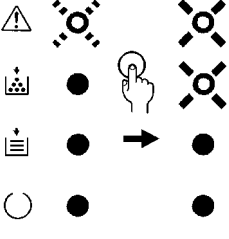LED Display	Description	Response Required
Paper Misfeed 6 	A paper misfeed occurred near the imaging cartridge.	Remove the misfed sheet of paper. For details, see "Clearing a Paper Misfeed" (see page 7-1).
Paper Misfeed 7 	A paper misfeed occurred near the fuser.	
Paper Misfeed 8 	A paper misfeed occurred near the upper-duplex unit.	
Cover Open (Duplex Unit) 	The cover of the duplex unit is open.	

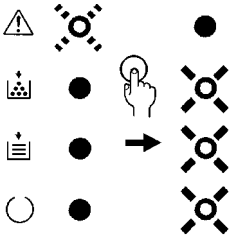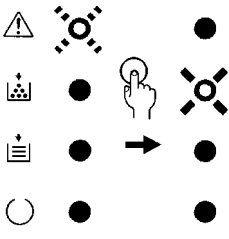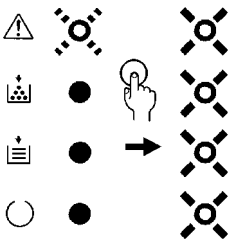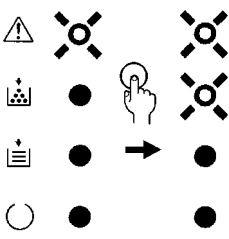LED Display	Description	Response Required
Wrong Media (Duplex Unit) 	The wrong media has been loaded into the duplex unit.	Place the specified type of paper into the correct tray (see page 4-14.)
Wrong Size (Duplex Unit) 	The wrong size of paper has been loaded into the duplex unit.	Place the specified size of paper into the correct tray (see page 4-14).
Video Under Run 	The buffer cannot handle the volume of data being sent.	Cancel the print job through the printer driver. Turn the printer off then on again and resend the print job. Lower the resolution setting and resend the print job.
I/O Error (Parallel) 	A controller error occurred at the parallel port.	Turn the printer off then on again. If the problem persists, contact your dealer.

PagePro 18L

LED Display	Description	Response Required
Fatal Error: Main Motor	An engine error has occurred.	Turn the printer off then on again. If the problem persists, contact your dealer.
Fatal Error: Fuser Low Temperature		
Fatal Error: Fuser Overheat		
Fatal Error: SRAM, DRAM, ROM, Engine I/F, CPU	A controller error has occurred.	

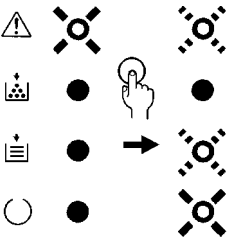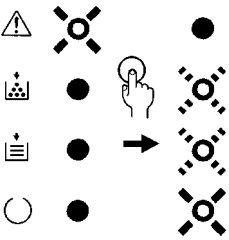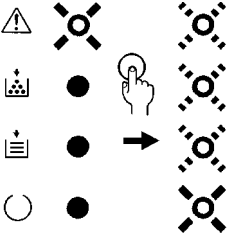LED Display	Description	Response Required
Fatal Error: Fuser Warm Up 	An error occurred at the fusing unit.	Turn the printer off then on again. If the problem persists, contact your dealer.
Fatal Error: Fuser Fan 	An error occurred at the fan for the fusing unit.	
Fatal Error: P/H Fan 	An error occurred at the fan.	

8 Specifications

8.1 PagePro 18L Printer

Specifications	
Type	Desktop laser beam printer
Print system	Electrostatic dry powder imaging system
Exposure system	Laser diode + polygon mirror scanning
Resolution	600 dpi × 600 dpi 1200 dpi × 600dpi
Print speed	One sided: 18 pages per minute (A4-size paper) Double sided: 9 pages per minute (A4-size paper)
First print	One sided: Within 18 seconds (A4 or Letter) Double sided: Within 28.5 seconds (A4 or Letter)
Paper sizes	A4, A5, JIS B5, DL Envelope, C5 Envelope, Letter, Legal, Executive, Invoice, Com 10 Envelope, Monarch Envelope, J-Post
Media	Plain paper (60 to 90 g/m ² ; 16 to 24 lbs.); recycled paper (60 to 90 g/m ² ; 16 to 24 lbs.); transparencies; letterhead; labels; envelopes; postcards; thick paper (90 to 163 g/m ² ; 24 to 43 lbs.)
Paper feeding	Tray 1 (Multipurpose tray); manual feed; Tray 2 (500-sheet second cassette) (option); Tray 3 (500-sheet third cassette) (option)
Input capacity	Tray 1 (Multipurpose tray): 250 sheets; Tray 2 (Second cassette) (option): 500 sheets; Tray 3 (Third cassette) (option): 500 sheets; Manual Feed Tray: one sheet at a time
Output capacity	250 sheets (face down)
Warm-up time	23 seconds or less
Operating temperature	10° to 35°C
Operating humidity	15% to 85%
Power consumption	820 W or less Standby (average): 60W or less Power save (average): 30W or less
Amperage	3.8 A or less (220 - 240 V)
Imaging cartridge life	9,000 prints min. (black-to-white ratio of 5% or less) The imaging cartridge that comes with the printer is capable of producing approximately 5,000 A4-size prints.
Power supply	220 - 240 V, 50 - 60 Hz
Acoustic noise	67 dB(A) max. (operating); 33 dB(A) max. (power saving mode)

Specifications	
External dimensions	
Height	13" (332 mm)
Width	17-5/32" (436 mm)
Depth	20" (511 mm)
Weight	Printer: Approx. 28-3/4 lbs. (13 kg) Imaging cartridge: Approx. 3-1/4 lbs. (1.5 kg)
Interface	Centronics (IEEE 1284/ ECP/ EPP/ compatible)
CPU	HD6437034
Standard memory	2 MB (expandable up to 16 MB)
Accessories	Power cord, User's Manual, Quick Guide, CD-ROM
Options	Second paper cassette unit; Third paper cassette unit; Duplex unit; DRAM SIMM; NIC (Network Interface Card) (options available from your dealer)

8.2 Second Paper Cassette Unit (Option)

Specifications	
Paper feeding system	One-way system
Paper types	Ordinary plain paper (60 to 90 g/m ² ; 16 to 24 lbs.); recycled paper (60 to 90 g/m ² ; 16 to 24 lbs.)
Paper cassettes	A4 (Option: JIS B5, Letter, Legal, Executive)
Tray capacity	Up to 500 sheets (plain and recycled paper)
Operating temperature	10° to 35°C
Operating humidity	15% to 85%
External dimensions	
Height	4-3/4" (120 mm)
Width	17-1/4" (436 mm)
Depth	13-3/4" (351 mm)
Weight	Approximately 10 lbs. (4.5 kg) not including the Legal Cassette (Tray)

8.3 Third Paper Cassette Unit (Option)

Specifications	
Paper feeding system	One-way system
Paper types	Ordinary plain paper (60 to 90 g/m ² ; 16 to 24 lbs.); recycled paper (60 to 90 g/m ² ; 16 to 24 lbs.)
Paper cassettes	A4 (Option: JIS B5, Letter, Legal, Executive)
Tray capacity	Up to 500 sheets (plain and recycled paper)
Operating temperature	10° to 35°C
Operating humidity	15% to 85%
External dimensions	
Height	4-3/4" (120 mm)
Width	17-1/4" (436 mm)
Depth	13-3/4" (351 mm)
Weight	Approximately 10 lbs. (4.5 kg) not including the Legal Cassette (Tray)

8.4 Duplex Unit (Option)

Specifications	
Paper feeding system	One-way system
Paper types	Ordinary plain paper (64 to 90 g/m ² ; 17 to 24 lbs.); recycled paper (64 to 90 g/m ² ; 17 to 24 lbs.)
Paper size	A4, A5, JIS B5, Letter, Legal, Executive, Invoice
Operating temperature	10° to 35°C
Operating humidity	15% to 85%
External dimensions	
Height	10-3/4" (274 mm)
Width	12-3/4" (322 mm)
Depth	6" (151 mm)
Weight	Approximately 5 lbs. (2.3 kg)

8.5 Interface Connector and Cable

Be sure to use only a parallel interface cable that meets the specifications described below.

Specifications		
Length	Less than 10 feet (3 meters)	
Connectors	Printer:	Parallel 36-pin connector
	PC:	EIA 25-pin connector
Cable type	Shielded. Each signal and ground pair should be twisted.	
Pin assignments	IEEE 1284 type-B	



NOTE

- When connecting your computer to the parallel connector on the printer, we recommend using an IEEE1284/ ECP/ EPP/ compatible parallel interface cable (1.5 m long).

8.6 SIMM (Option)

You can expand printer memory by adding a single in-line memory module (SIMM). SIMMs are available from your dealer.


Specifications	
Capacity	8,16 MB
Parity	Non-parity
Type	EDO (Extended Data Out)
Access speed	60 ns or less
Number of Pins	72

9 Quick Reference

9.1 The LED Display

The LED display of the control panel is an important tool for identifying the operating status of your printer. Use the LED display in combination with the Troubleshooting chapter of this manual to maintain the high level of performance that your printer was engineered to provide.

Indicator Lights

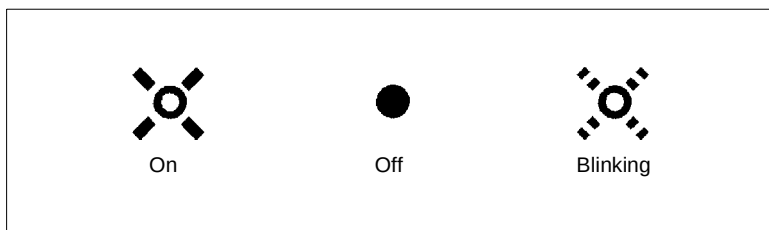





Action Key





The LED display will change as you press the Action key.

The appearance of this icon throughout this manual indicates when you need to press the Action key.






 



When the Ready LED is on

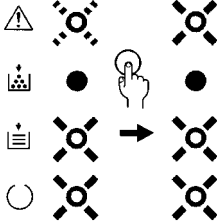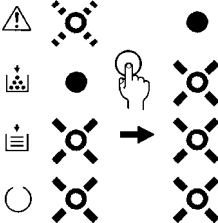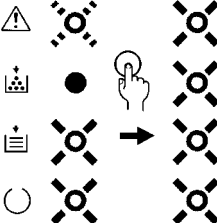Initializing (see page 7-12) 	Warming Up (see page 7-12) 	Ready (see page 7-12) 
Power Save (see page 7-12) 	Toner Low (see page 7-12 and see page 6-1) 	Wait Action (see page 7-12) 
Tray 1 Paper Empty (see page 3-10 and see page 4-4) 	Tray 2 Paper Empty (see page 4-6 and see page 7-12) 	Tray 3 Paper Empty (see page 4-6 and see page 7-12) 








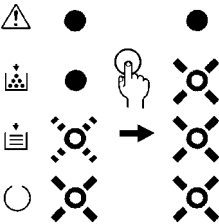
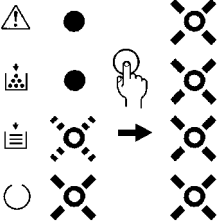
Size Mismatch (see page 4-1 and see page 5-41)	Tray 2 No Cassette/ No Tray 2 (see page 3-23 and see page 5-41)	Tray 3 No Cassette/ No Tray3 (see page 3-23 and see page 5-41)
		
Duplex Unit Not Available (see page 5-43 and see page 5-49)		
		

When the Error LED is on

Buffer Overflow (see page 7-12)	Cover Open (see page 7-12 and see page 2-2)	Paper Size Error (see page 4-1 and see page 5-41)
Paper Misfeed 1 (see page 7-16 and see page 7-4)	Paper Misfeed 2 (see page 7-16 and see page 7-5)	Paper Misfeed 3 (see page 7-16 and see page 7-5)
Paper Misfeed 4 (see page 7-16 and see page 7-4)	Paper Misfeed 5 (see page 7-16 and see page 7-6)	Paper Misfeed 6 (see page 7-16 and see page 7-1)

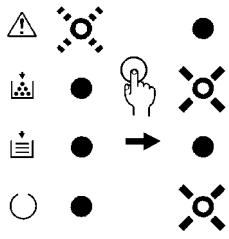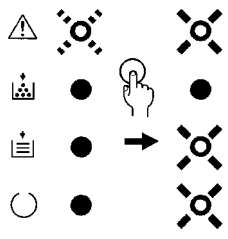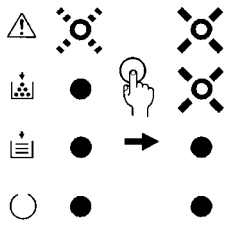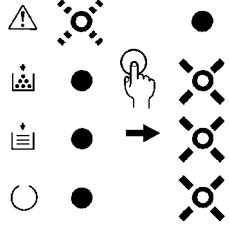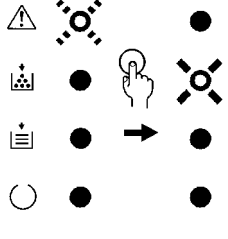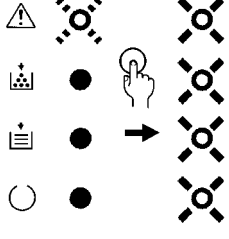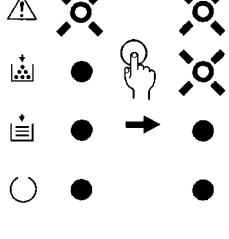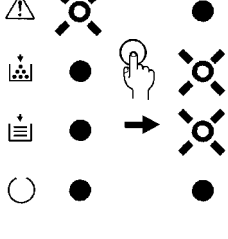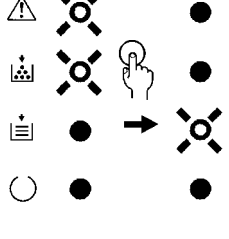Paper Misfeed 7 (see page 7-16 and see page 7-1)	Paper Misfeed 8 (see page 7-16 and see page 7-6)	Cover Open (Duplex Unit) (see page 7-16 and see page 7-6)
		
Wrong Media (Duplex Unit) (see page 7-16 and see page 4-14)	Wrong Size (Duplex Unit) (see page 7-16 and see page 4-14)	Video Under Run (see page 7-16)
		
I/O Error (Parallel) (see page 7-16 and see page 3-12)	I/O Error (Network) (see page 7-16 and see page 3-12)	Replace Imaging Cartridge (see page 7-16 and see page 6-1)
		

When the Error LED is on (Fatal Error)

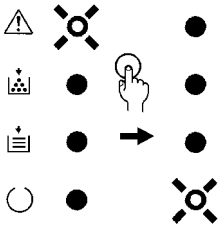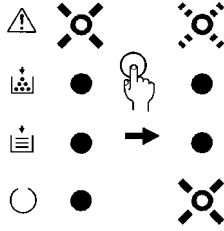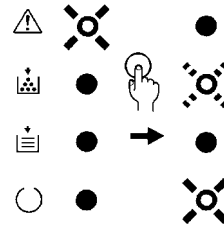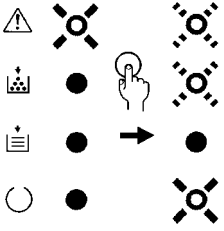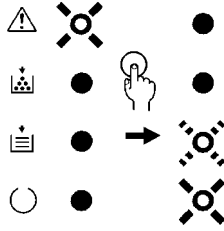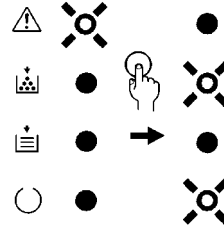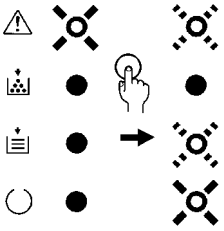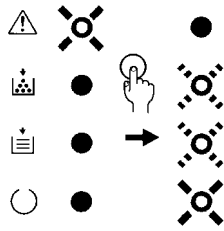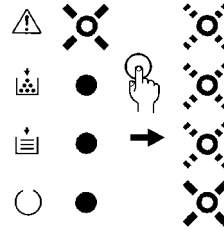HSYNC Abnormal (see page 7-16)	Polygonal Mirror Motor (see page 7-16)	Main Motor (see page 7-16)
		
Fuser Low Temperature (see page 7-16)	Fuser Overheat (see page 7-16)	SRAM, DRAM, ROM, Engine I/F, CPU (see page 7-16)
		
Fuser Warm UP (see page 7-16)	Fuser Fan (see page 7-16)	P/H Fan (see page 7-16)
		

10 General Information

10.1 END USER LICENSE AGREEMENT

PLEASE READ CAREFULLY THE LICENSE AGREEMENT BELOW BEFORE OPENING THIS PACKAGED SOFTWARE. OPENING THIS PACKAGE INDICATES YOUR ACCEPTANCE OF THE TERMS AND CONDITIONS BELOW. IF YOU DO NOT AGREE WITH THEM, YOU SHOULD PROMPTLY RETURN THE PACKAGE UNUSED.

1. SOFTWARE

"Software" means the computer program contained in this package (which may include digitally encoded, machine readable, scaleable outline font data as encoded in a special format), together with all codes, techniques, software tools, format, design, concepts, methods and ideas associated with the computer program and all documentation related thereto.

2. LICENSE AGREEMENT

This is a license agreement and not an agreement for sale. Minolta owns, or has been licensed from other owners, copyrights in the Software. Except as stated in this Agreement, you are not granted any rights to patents, copyrights, trade names, trademarks (whether registered or unregistered), or any other rights, franchises or licenses in respect of the Software. Title to the Software and any copy made from it is retained by Minolta or such other owners.

3. LICENSE

Minolta, hereby grant to you, and you agree to accept a non-exclusive, non-transferable and limited license and you may:

- (1) install and use the Software on a single computer and one associated printer.
- (2) use the Software only for your own customary business or personal purposes.
- (3) make a copy of the Software for backup or installation purposes only in support of the normal and intended use of the Software.
- (4) transfer possession of copies of the Software to another party by transferring a copy of this Agreement and all other documentation along with at least one complete unaltered copy of the Software, provided that

- (i) you must, at the same time, either transfer to such other party or destroy all your other copies of the Software.
- (ii) such transfer of possession terminates your license from Minolta, and (
- iii) such other party shall accept and be bound by these license terms by its initial use of the Software.

4. RESTRICTIONS

- (1) You shall not without the written consent of Minolta:
 - (i) use, copy, modify, merge or transfer copies of the Software except as provided herein.
 - (ii) reverse assemble or reverse compile the Software except as permitted by law; or
 - (iii) Sublicense, rent, lease or distribute the Software or any copy thereof.
- (2) You shall not export or re-export the Software in any form under violation of export restrictions by the government of your country.

5. LIMITED WARRANTY

Minolta warrants the media on which the Software is recorded to be free from defects in materials and workmanship under normal use. Warranty details and limitations for the Software are described in the Statement of Limited Warranty which was supplied with the hardware. With the exception of the foregoing express warranties applicable to hardware and media only, the Software is not warranted and is provided. SUCH WARRANTIES ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

6. LIMITATION OF REMEDIES

IN NO EVENT WILL MINOLTA BE LIABLE FOR ANY LOST PROFITS, LOST DATA, OR ANY OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES THAT RESULT FROM USE OR INABILITY TO USE THE SOFTWARE, EVEN IF MINOLTA OR ITS AUTHORISED REMARKETERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR FOR ANY CLAIM BY YOU BASED ON A THIRD PARTY CLAIM.

7. TERMINATION

You may terminate your license at any time by destroying the Software and all your copies of it or as otherwise described in these terms. Minolta may terminate your license if you fail to comply with these terms. Upon such termination, you agree to destroy all your copies of the Software.

8. GOVERNING LAW

This Agreement shall be governed by the laws of the country where the delivery is made to the original customer.

9. GOVERNMENT END USERS

If you are acquiring the Software on behalf of any unit or agency of the United States Government, the following provisions apply. Use, duplication or disclosure by the Government is subject to restrictions as set forth in the Rights in Technical Data and Computer Software clause at FAR 252.227-7013, subdivision (b)(3)(ii) or subparagraph (c)(1)(ii), as appropriate. Further use, duplication or disclosure is subject to restrictions applicable to restricted rights software as set forth in FAR 52.227-19(c)(2).

YOU ACKNOWLEDGE THAT YOU HAVE READ THIS AGREEMENT, UNDERSTAND IT, AND AGREE TO BE BOUND BY ITS TERMS AND CONDITIONS. NEITHER PARTY SHALL BE BOUND BY ANY STATEMENT OR REPRESENTATION NOT CONTAINED IN THIS AGREEMENT. NO CHANGE IN THIS AGREEMENT IS EFFECTIVE UNLESS WRITTEN AND SIGNED BY PROPERLY AUTHORISED REPRESENTATIVES OF EACH PARTY. BY OPENING THE PACKAGE, YOU AGREE TO ACCEPT THE TERMS OF THIS AGREEMENT.

10.2 Contrat utilisateur de la licence

LISEZ ATTENTIVEMENT LE CONTRAT DE LA LICENCE CI-DESSOUS AVANT D'OUVRIR L'EMBALLAGE CONTENANT LE LOGICIEL. L'OUVERTURE DE CET EMBALLAGE SIGNIFIE QUE VOUS ACCEPTEZ LES CONDITIONS QUI SE TROUVENT CI-DESSOUS. SI VOUS LES RÉFUTEZ, MERCI DE NOUS RETOURNER L'EMBALLAGE NON DÉBALLÉ DANS LES PLUS BREFS DÉLAIS.

1. Le logiciel

'Logiciel' veut dire le programme de l'ordinateur contenu dans cet emballage (ce qui peut comprendre les décodeurs numériques, lecteurs électroniques...) ainsi que tous les codes, les techniques, les périphériques, les formats, les designs, les concepts, les méthodes et les idées associés au programme de l'ordinateur et toute la documentation qui s'y rattache.

2. Le contrat de licence

Ceci est un contrat de licence et non un contrat de vente. Minolta possède ou a obtenu une licence d'autres propriétaires, des droits de reproduction dans le domaine des logiciels. A l'exception de ce qui est indiqué dans cet accord, vous n'avez aucun droit sur les brevets, les droits de reproduction, les noms de marque (enregistrés ou pas), ni aucun autre droit, franchise ou licence vis à vis de ce logiciel. Le titre de ce logiciel et tout autre copie faite à partir de celui-ci sera gardé par Minolta, ou d'autres propriétaires.

3. La licence

Par la présente Minolta vous accorde (et vous acceptez) une licence limitée, non exclusive et non transférable, ce qui vous autorise à :

- (1) Installer et utiliser le logiciel sur un ordinateur relié à une imprimante unique.
- (2) Utiliser le logiciel pour vos propres besoins professionnels et personnels.
- (3) Faire une copie du logiciel par mesure de sécurité, ou pour des besoins d'installation, seulement dans la cadre de l'utilisation normale et prévue du logiciel.
- (4) Transférer la propriété des copies du logiciel à une tierce personne, et en transférant une copie de cet accord et toute autre documentation, en même temps qu'une copie au moins de ce logiciel (sans modification), étant entendu que (i) vous avez par la même occasion, soit tout transmis à cette tierce personne, soit détruit toutes vos autres copies du logiciel. (ii) Un tel transfert met fin à votre propre licence auprès de Minolta et, (iii) donc lie le nouveau propriétaire aux conditions de la licence dès le début de l'utilisation du logiciel.

4. Les restrictions.

(1) Sans l'accord écrit de Minolta vous ne devez pas:

(i) Utiliser, copier, fusionner, ou transférer des copies du logiciel, sauf s'il s'agit de cas prévus dans ce contrat. (ii) Déprogrammer et re-programmer le logiciel en dehors des limites prévues par la loi, ou (iii) Distribuer, louer ou sous louer le logiciel ou sa copie.

(2) Vous ne devez pas exporter ou réexporter le logiciel sous aucune forme, sous peine de violation des restrictions exports imposées par le gouvernement de votre pays.

5. Une garantie limitée.

Minolta garantie le support sur lequel le logiciel est enregistré contre tout défaut matériel ou de fabrication, dans les conditions normales d'utilisation.

Les détails de garantie et les limites du logiciel sont décrits sur la déclaration de la garantie limitée, fournie avec le matériel informatique. A l'exception des garanties expresses en vigueur, applicables au matériel informatique et audiovisuel uniquement, le logiciel n'est pas garanti et est fourni «tel-quel».

De telles garanties existent à la place de toutes autres garanties, expresses ou tacites, y compris mais non pas limitées aux garanties tacites de ventes et bon fonctionnement dans un but bien précis.

6. Etendue des responsabilités

EN AUCUN CAS, MINOLTA NE POURRA ÊTRE DÉSIGNÉ RESPONSABLE POUR PERTE DE PROFITS, PERTE DE DONNÉES, OU AUTRES DOMMAGES ACCIDENTELS OU CONSÉCUTIFS, DOMMAGES QUI RÉSULTENT DE L'UTILISATION OU DE LA MAUVAISE UTILISATION DU LOGICIEL, MÊME SI MINOLTA OU SES REVENDEURS LÉGAUX ONT ÉTÉ AVERTIS DE LA POSSIBILITÉ DE TELS DOMMAGES, OU POUR UNE RÉCLAMATION FAITE PAR VOUS AU NOM D'UNE TIERCE PERSONNE.

7. Résiliation du contrat.

Vous pouvez mettre un terme à votre licence à tout moment en détruisant le logiciel et toutes ses copies comme prévue dans le contrat, Minolta peut mettre fin à votre licence en cas de non respect du contrat.

Dans ce cas, vous acceptez de détruire toutes vos copies du logiciel.

8. La loi

Cet accord doit être soumis aux lois du pays où la livraison s'effectue, chez le client d'origine.

9. Contrat utilisation pour le gouvernement.

Si vous faites l'acquisition du logiciel au nom d'un service ou organisme du Gouvernement des Etats-Unis, les dispositions suivantes s'appliquent. Utilisation, duplication, ou divulgation sont sujettes aux restrictions mentionnées dans «Rights in Technical Data and Computer Software» FAR 252.227-7013, section (b)(3)(ii) ou chapitre (c)(1)(ii), as approprié. Toute utilisation supplémentaire, duplication ou divulgation est sujette aux restriction applicables aux droits restreints sur les logiciels définis dans FAR 52.227-19(c)(2).

VOUS RECONNAISSEZ AVOIR LU, COMPRIS LE PRÉSENT CONTRAT ET ACCEPTEZ D'ÊTRE LIÉ PAR SES CONDITIONS. AUCUNES DES PARTIES NE DOIT ÊTRE LIÉES PAR UNE MESURE OU PAR UNE DISPOSITION NE FIGURANT PAS DANS CE CONTRAT. TOUTE MODIFICATION DE CE CONTRAT NE SERA VALABLE QUE S'IL EST ÉCRIT ET SIGNÉ PAR LES REPRÉSENTANTS DÉSIGNÉS PAR CHAQUE PARTIE.

EN OUVRANT CET EMBALLAGE, VOUS ADHÉREZ AUX TERMES DE CE CONTRAT.

10.3 ENDVERBRAUCHER-LIZENZVERTRAG

Vor der Benutzung des beigelegten Produktes sind die nachstehenden Bedingungen sorgfältig zu lesen. Mit der Benutzung des Produktes erkennen Sie als Lizenznehmer die Bedingungen dieses Vertrages an. Wenn Sie mit den Bedingungen nicht einverstanden sind, senden Sie die ungeöffnete Packung umgehend zurück. Bei diesem Vertrag handelt es sich um einen Lizenzvertrag und nicht um einen Kaufvertrag. MINOLTA ist Inhaberin der Urheberrechte an dem Microcode, den Computerprogrammen und codierten Schriften einschließlich der Bitmap-Schriften und Konturschriften (nachfolgend insgesamt als „Software“ bezeichnet), die sich in diesem Drucker, den Druckerzubehörteilen oder Fontprodukten befinden, oder MINOLTA besitzt die Lizenzen an den entsprechenden Urheberrechten anderer Inhaber. Der Lizenznehmer erwirbt keine Rechte an der Software. MINOLTA oder die genannten anderen Inhaber bleiben Inhaber der Rechte an der in der Packung enthaltenen Kopie der Software und jedweder von ihr angefertigten Kopie. Die Verantwortung für die Wahl zur Erzielung der gewünschten Ergebnisse, Installation, Benutzung und die mit der Software erzielten Ergebnisse liegt allein bei Ihnen als Lizenznehmer.

LIZENZ

Ihnen als Lizenznehmer ist es gestattet:

1. die Software auf einem Computer und einem angeschlossenen Drucker zu installieren und zu benutzen;
2. ausschließlich zu Sicherungs- oder Installationszwecken eine Kopie der Software für die normale und beabsichtigte Erstellung zu benutzen. In diesem Fall ist der Lizenznehmer verpflichtet, auf der Kopie die sich auf der Software befindenden Vermerke über Urheberrecht und Warenzeichen entsprechend anzubringen;
3. das Eigentum an Kopien der Software an Dritte zu übertragen durch Überlassung dieser Vertragsausfertigung und des sonstigen dazugehörigen schriftlichen Materials sowie mindestens einer vollständigen, unveränderten Kopie der Software, wenn folgende Bedingungen erfüllt sind:
 - (i) Wenn gleichzeitig alle anderen Kopien der Software des Erstlizenznehmers dem Dritten überlassen oder diese Kopien vernichtet werden,
 - (ii) wenn mit der Übertragung des Eigentums der Lizenzvertrag des Erstlizenznehmers mit MINOLTA gekündigt wird und
 - (iii) wenn der Dritte diese Lizenzbedingungen mit der erstmaligen Benutzung der Software annimmt und die entsprechenden vertraglichen Verpflichtungen eingeht;

4. die auf der Software vorhandenen Warenzeichen und den entsprechenden Vermerk über den Namen des Warenzeicheninhabers ausschließlich im Rahmen der anerkannten Praxis im Umgang mit Warenzeichen zu verwenden.

Dem Lizenznehmer ist nur mit schriftlicher Zustimmung von MINOLTA erlaubt:

1. Kopien der Software zu anderen als den hier ausdrücklich genannten Zwecken zu verwenden, anzufertigen, zu verändern, mit anderer Software zu mischen oder zu übertragen,
2. die Software zu entassemblieren oder entkompilieren, vorbehaltlich anderslautender gesetzlicher Bestimmungen oder
3. die Software oder eine Kopie davon zu vermieten, zu verleasen, zu übertragen oder eine Unterlizenz zu erteilen.

HAFTUNGSBESCHRÄNKUNGEN

MINOLTA gewährt bei sachgerechter Benutzung eine Garantie auf Material und Verarbeitung der Hardware, die die Software beinhaltet. Die Haftungsbedingungen und -beschränkungen bezüglich der Hardware, die die Software beinhaltet, sind in den Gewährleistungsbedingungen aufgeführt, die mit der Hardware ausgeliefert wurden. Neben dieser Gewährleistung auf Hardware und Medien wird keine weitere Haftung für die Software übernommen. Die Software wird in dem Zustand geliefert, in dem sie sich bei der Übergabe befindet. Diese Gewährleistungen gelten anstelle etwaiger anderer ausdrücklicher oder stillschweigender Gewährleistungen einschließlich - jedoch nicht beschränkt hierauf - der gesetzlich vermuteten Gewährleistung bezüglich der Nutzung und Eignung der Software für einen bestimmten Zweck.

BESCHRÄNKUNG VON GEWÄHRLEISTUNGSANSPRÜCHEN

IN KEINEM FALL HAFTET MINOLTA FÜR ENTGANGENEN GEWINN ODER VERLORENE EINSPARUNGSMÖGLICHKEIT ODER GELEGENTLICH WEGEN DES GEBRAUCHS ENTSTANDENE ODER ANDERER FOLGESCHÄDEN, SELBST WENN MINOLTA ODER DIE AUTORISIERTEN HÄNDLER ÜBER MÖGLICHE SCHÄDEN DIESER ART UNTERRICHTET WURDEN. MINOLTA HAFTET AUCH NICHT FÜR ANSPRÜCHE DES LIZENZNEHMERS AUFGRUND EINES ANSPRUCHS EINES DRITTEN.

ALLGEMEINE BESTIMMUNGEN

Der Lizenznehmer kann den Lizenzvertrag jederzeit beenden, indem er sämtliche Kopien der Software vernichtet oder entsprechend anderweitiger Bestimmungen dieses Vertrages handelt. MINOLTA kann den Lizenzvertrag mit dem Lizenznehmer beenden, wenn dieser diese Bedingungen nicht einhält. In diesem Fall erklärt sich der Lizenznehmer damit einverstanden, alle Kopien der Software zu vernichten. Jedweder Versuch, eine Kopie der Software zu anderen als den hier ausdrücklich genannten Zwecken zu vermieten, zu verleasen, zu übertragen oder eine Unterlizenz hiervon zu erteilen, ist nichtig. Der Lizenznehmer erkennt hiermit an, daß er für die sich aus diesem Vertrag etwa ergebenden persönlichen Steuern haftet. Rechte aus diesem Vertrag können von den Parteien unabhängig von der Art der Ansprüche nur innerhalb von zwei Jahren nach Entstehen des Anspruchs geltend gemacht werden. Bei Verstößen gegen die Bestimmungen im Abschnitt unter der Überschrift „Lizenz“ gilt eine Frist von 4 Jahren. Für diesen Vertrag gilt im übrigen das Recht des Landes, indem dieses Produkt erworben worden ist.

LIZENZNEHMER REGIERUNG

Handelt der Lizenznehmer für eine oder im Auftrage einer Einrichtung der Amerikanischen Regierung, gelten die folgenden Bestimmungen: Nutzung, Vervielfältigung oder Offenlegung durch die Regierung unterliegt den Rights in Technical Data and Computer Software clause at FAR 252.227-7013, subdivision (b)(3)(ii) oder subparagraph (c)(1)(ii).

Eine Nutzung, Vervielfältigung oder Offenlegung darüberhinaus unterliegt den Bestimmungen der Restricted Rights Software in FAR 52.227-19(c)(2).

SIE ALS LIZENZNEHMER ERKLÄREN, DIESEN LIZENZVERTRAG GELESEN UND VERSTANDEN ZU HABEN. SIE ERKENNEN DIE LIZENZBEDINGUNGEN AN.

WEDER SIE NOCH MINOLTA FÜHLEN SICH AN BEDINGUNGEN GEBUNDEN, DIE NICHT IN DIESEM VERTRAG ENTHALTEN SIND. ETWAIGE ERGÄNZUNGEN ODER ÄNDERUNGEN ZU DIESEM VERTRAG SIND NUR RECHTSGÜLTIG, WENN SIE SCHRIFTLICH NIEDERGELEGT UND UNTERSCHRIEBEN SIND VON AUTORISIERTEN VERTRETERN BEIDER PARTEIEN.

MIT DEM ÖFFNEN DER VERPACKUNG ERKENNEN SIE SÄMTLICHE PUNKTE DIESES VERTRAGES AN.

10.4 CONTRATTO DI LICENZA D'USO

LEGGETE ATTENTAMENTE IL CONTRATTO DI LICENZA SOTTO RIPIPORTATO PRIMA DI APRIRE IL PACCHETTO SOFTWARE. L'APERTURA DEL PACCHETTO DA PARTE VOSTRA INDICA LA VOSTRA ACCETTAZIONE DEI TERMINI E DELLE CONDIZIONI SOTTO RIPIPORTATE. IN CASO DI DISACCORDO, VI PREGHIAMO DI VOLER RESTITUIRE IMMEDIATAMENTE IL PACCHETTO ANCORA SIGILLATO.

1. SOFTWARE

"Software" significa il programma per computer contenuto in questo pacchetto (che potrebbe includere dati di font outline scalabili codificati digitalmente, leggibili dalla macchina come codificati in uno speciale formato), unitamente a tutti i codici, tecniche, strumenti di software, formato, design, concetti, metodi ed idee associate con il programma per computer e tutta la documentazione relativa.

2. CONTRATTO DI LICENZA

Il presente è un contratto di licenza e non un contratto di vendita. MINOLTA possiede, ovvero ha avuto la licenza da parte degli altri proprietari, i diritti di autore per il Software. Ad eccezione di quanto dichiarato nel presente Contratto, non avrete alcun diritto di brevetto, copyright, nomi di marchi, marchi di fabbrica (sia registrati o non registrati), o qualsiasi altro diritto, mandato di rappresentanza o licenza rispetto a questo Software.

3. LICENZA

Con il presente contratto MINOLTA conferisce licenza d'uso, non trasferibile né sub-licenziabile, del software descritto al punto uno (1), del presente contratto in base alla quale il licenziatario:

(1) avrà facoltà d'installare ed usare il Software su un solo computer e su una stampante associata.

(2) avrà facoltà di usare il Software solo per la sua attività o per scopo personale.

(3) avrà facoltà di fare una copia del Software a scopo di backup o di installazione solo come supporto del normale e stabilito uso del Software.

(4) avrà facoltà di trasferire il possesso di copie del Software a terzi trasferendo contestualmente il presente contratto e tutta la documentazione relativa con almeno una copia completa e inalterata del Software, a patto che: (i) trasferisca a detti terzi e, al tempo stesso, distrugga tutte le altre copie del Software. (ii) Tale trasferimento di possesso fa terminare la licenza da parte di Minolta con il licenziatario,

mentre (iii) detti terzi dovranno accettare e saranno legati da questi termini di licenza per quanto riguarda l'uso iniziale del Software.

4. OBBLIGHI DEL LICENZIATARIO

(1) Il licenziatario, salvo consenso scritto di MINOLTA:

(i) non potrà usare, riprodurre, copiare, modificare in alcun modo, manipolare e trasferire le copie del Software al di fuori di quanto qui previsto.

(ii) non potrà eseguire "reverse assembling" o "reverse compiling" sul Software tranne quanto consentito dalla legge; oppure

(iii) non potrà sub-licenziare, cedere a terzi, noleggiare o distribuire il Software o copia dello stesso, salvo quanto previsto al punto tre (3) del presente accordo.

(2) Il licenziatario non potrà esportare o riesportare il Software in nessuna forma pena la violazione delle restrizioni di esportazione dettate dal Governo locale.

5. GARANZIA LIMITATA

MINOLTA garantisce che i mezzi su cui il Software è registrato sono privi di difetti nei materiali e nella fabbricazione secondo un normale uso. I dettagli della garanzia e le limitazioni per il Software sono descritti nella Dichiarazione di Garanzia Limitata che viene fornita insieme all'hardware. Con l'eccezione delle summenzionate garanzie espresse applicabili solamente all'hardware e ai mezzi, il Software non è garantito ma fornito "nello stato in cui trovasi".

TALI GARANZIE SONO IN LUOGO DI TUTTE LE ALTRE GARANZIE, ESPRESSE O IMPLICITE, INCLUSE, MA NON LIMITATE ALLE GARANZIE IMPLICITE DI COMMERCIALIZZABILITA' E DI IDONEITA' AD UNO SCOPO PARTICOLARE.

6. RESPONSABILITA' DELLA CONCEDENTE

IN NESSUN CASO MINOLTA SARA' RESPONSABILE PER QUALSIASI PERDITA DI PROFITTO, PERDITA DI RISPARMIO, O QUALSIASI DANNO ACCIDENTALE CHE RISULTI DALL'USO O DALL'INCAPACITA' D'USO DEL SOFTWARE, ANCHE SE MINOLTA O I SUOI CONCESSIONARI AUTORIZZATI SONO STATI AVVISATI DELLA POSSIBILITA' DI TALI DANNI O DI QUALSIASI RECLAMO DA PARTE DEL LICENZIATARIO BASATO SU UN RECLAMO DI TERZI.

7. RISOLUZIONE DEL CONTRATTO

Potete porre termine alla vostra licenza in qualsiasi momento distruggendo il Software e tutte le vostre copie, oppure come altrimenti descritto in questi termini.

Minolta può porre termine alla vostra licenza in caso mancate di rispettare questi termini.

Resta inteso che all'atto di tale termine, voi distruggerete tutte le vostre copie del Software.

8. FORO COMPETENTE

Il presente contratto verrà regolato dalle leggi del Paese in cui è stata effettuata la consegna al cliente originale.

9. UTENTI FINALI GOVERNATIVI

Se state acquistando il Software per conto di qualsiasi ente od agenzia del Governo degli Stati Uniti, si applicano i seguenti provvedimenti. L'uso, la duplicazione o la divulgazione da parte del Governo sono soggetti alle restrizioni stabilite nella clausola "Rights in Technical Data" e in "Computer Software" in FAR 252.227-7013, sottodivisione (b)(3)(ii) o sottoparagrafo (c)(1)(ii) rispettivamente. Ulteriore uso, duplicazione o divulgazione sono soggetti alle restrizioni applicabili ai limitati diritti di software stabiliti nel FAR 52.227-19(c)(2).

PRENDETE ATTO CHE AVETE LETTO IL PRESENTE ACCORDO, CHE LO AVETE COMPRESO, E CHE CONCORDATE DI ESSERE LEGATI DA QUESTI TERMINI E CONDIZIONI. NESSUNA DELLE PARTI SARA' LEGATA DA ALCUNA DICHIARAZIONE O RAPPRESENTAZIONE NON CONTENUTA NEL PRESENTE CONTRATTO. NESSUN CAMBIAMENTO NEL PRESENTE CONTRATTO SARA' EFFETTIVO A MENO CHE NON VENGA SOTTOSCRITTO DAI RAPPRESENTANTI PROPRIAMENTE AUTORIZZATI DA CIASCUNA PARTE. APRENDO IL PRESENTE PACCHETTO, CONCORDATE DI ACCETTARE I TERMINI DEL PRESENTE CONTRATTO.

10.5 Addresses MINOLTA-Partners in Europe

Austria

Minolta Austria GmbH, Amalienstrasse 59-61, 1131 Wien
01-878-82-0, Fax 01-878-82-271

Baltia

Minolta Baltia, Didzioji 11, 2001 Vilnius/Lithuania
02-222-029, Fax 02-223-060

Belgium

Minolta Business Equipment (Belgium) N.V./S.A.,
Zoning Keiberg, Excelsiorlaan 10/12, 1930 Zaventem
02/720.96.70 ext. 341, Fax 02/720.97.57

Bulgaria

Minolta Bulgaria o.o.d., Ulica Christo Georgiev 4, 1504 Sofia
02-943-35-22, Fax 02-943-32-07

Croatia

Minolta Zagreb d.o.o., Supilova 7, 10 000 Zagreb
01-611-6655, Fax 01-611-6656

Czechia

Minolta spol, s.r.o., Veverí 102, 659 10 Brno
05-41 558 511, Fax 05-41 212 681

Denmark

Minolta Danmark a/s, Valhøjs Allé 160, 2610 Rødovre
36 37 04 50 eller 36 37 04 52, e-mail: printer@minolta.dk

Finland

Renatus Oy, P.O. Box 93, 02201 Espoo
09-42061, Fax 09-4206 200

France

Minolta France Sa., Div. Equipement de Bureau, 365-367 Route de Saint Germain, 78424 Carrieres Sur Seine Cedex
1-3086-6274, Fax 1-3086-6287

Germany

Minolta Germany, Minoltaring 11, 30855 Langenhagen
0 18 03 - 22 74 04 (Ortstarif), Fax 0 18 03 - 23 74 04 (Ortstarif)

Hungary

Minolta Magyarország KFT, Galvani u. 4, 1117 Budapest
01-206-22-44, Fax 01-206-1849

Iceland

Magnús Kjaran H.F., Sidumúli 14, 108 Island
00354/5/10 55 00, Fax 00354/5/10 55 09

Italy

Minolta Italia, Via Stephenson 37, 20157 Milano
02-39011-1, Fax 02-39011-219

Netherlands

Kopieersystemen Netherlands B.V., Schipholweg 343, 1171 PL
Badhoevedorp
020-6584222, Fax 020-6597436

Norway

Minolta Norway A.S, Nedre Rommen 3, 0988 Oslo,
22 78 98 00, Fax 22 78 98 50

Poland

Minolta Polska sp.zo.o., Ul. Nowolipie 7A, 00-146 Warszawa
02-311-488, Fax 02-635-37-56

Portugal

Minolta Portugal Lda., Av. do Brasil 33a, 1700 Lisboa
01-79300-16, Fax 01- 7969547

Romania

Minolta Romania SRL, Soseaua Oltenitei 35-37, etaj 8, Sector 4, 712 12
Bucuresti
0330-68-35, Fax 0330-70-02

Slovakia

Minolta Slovakia s r.o.,Prievozska 18, 821 09 Bratislava
07-586-2555, Fax 07-586-2313

Slovenia

Minolta Slovenia d.o.o., Ptujška 19, 1000 Ljubljana
061-168-11-05, Fax 061-168-10-28

Spain

Minolta Business Equipment Spain S.A., Paseo de la Castellana 254,
28046 Madrid
91- 7337811, Fax 91-7332262

Sweden

Minolta Business Equipment Ab, Albygatan 114, 17109 Solna
08-627 75 00, Fax 08-627 76 07

Switzerland

Messerli Informationstechnik Océ (Schweiz) AG, Sägereistrasse 29, 8152
Glattbrugg
01/829 14 14, Fax 01/829 14 11

United Kingdom

Minolta U.K. BEO, Rooksley Park, Precedent Drive /Rooksley, Milton
Keynes MK 13 8Hf
0345-211-211, Fax 01908-200-379

Ukraina

Minolta Ukraina, Bulvar Lesi Ukrainki 26, 252 133 Kiev 133/Ukraine
044-296-65-66, Fax 044-295-00-70

Yugoslavia

Minolta d.o.o. Beograd, Blagoja Parovica 21, 11 000 Beograd
011-550-997, Fax 011-544-982

Zagreb

Minolta Zagreb d.o.o., Supilova 7, 41000 Zagreb
01-611-6655, Fax 01-611-6656

10.6 MINOLTA GUARANTEE CERTIFICATE

1. DEFINITIONS

„MINOLTA“:

MINOLTA GmbH Registered Office

„the Unit“:

the MINOLTA product for which this Users's Manual is valid

„the Software“:

MINOLTA unit driver Software. In the case that software supplied by other manufacturers is added to or purchased with the MINOLTA unit, only the terms of guarantee by those original manufacturers are valid

„the Unit Guarantee Period“:

One year commencing the date of purchase of the Unit

„the Software Guarantee Period“:

Ninety (90) days commencing the date of purchase of the Software

„the Operating Instructions“:

Those instructions contained in the manuals supplied with both the Unit and the Software

„Valid Receipt“:

a receipt indicating the date of purchase, the location of purchase, the purchase price, the MINOLTA dealers' address, the Unit and/or Software type and serial number

2. SCOPE OF GUARANTEE

2.1. UNIT

Subject to Clause 2.3 this Guarantee covers all material and production faults in the Unit which are notified by the purchaser to MINOLTA within the Unit Guarantee Period

2.2. SOFTWARE

Subject to Clause 2.3 this Guarantee covers all faults with the Software which are notified by the purchaser to MINOLTA within the Software Guarantee Period

2.3. EXCLUSIONS

This Guarantee does not cover damage to Units and Software resulting from, but not limited, to the following:

- a) dropping, impact, sand, moisture, misuse, unauthorized interference of third parties, chemical corrosion, non-observance of the Operating Instructions, damage in transit or force majeure;
- b) the use of accessories, units or material not produced, distributed licenced or authorised by MINOLTA; and
- c) repairs or alterations carried out by any workshop not authorised by MINOLTA

This Guarantee does not cover damage to Software resulting from the purchaser's failure to install the Software in accordance with the Installation Instructions on a computer suitable for the intended purpose

3. REPAIR AND REPLACEMENT

3.1. UNIT

During the Unit Guarantee Period MINOLTA will either repair or replace faulty Units falling within Clause 2.1. MINOLTA will inform the purchaser as to the choice of remedy within a reasonable time of inspecting the faulty Unit

3.2. SOFTWARE

During the Software Guarantee Period MINOLTA will replace faulty Software falling within Clause 2.2 within a reasonable time of inspecting the faulty Software

3.3 FAILURE

Should MINOLTA fail to repair or replace the faulty Unit or faulty Software within the time limit specified in Clauses 3.1 and 3.2 the purchaser shall be entitled to claim a refund of the purchase price once the purchaser returns the faulty Unit or Software to MINOLTA

4. VALIDITY OF GUARANTEE

This Guarantee is only valid for all new Units and new Software purchased from an authorised MINOLTA dealer

5. CLAIMS UNDER GUARANTEE

If a purchaser wishes to make a claim under this Guarantee he/she must present a Valid Receipt relating to the faulty Unit or faulty Software

MINOLTA reserves the right to verify the validity of the receipt

6. REIMBURSEMENT OF COSTS

If Units or Software presented to MINOLTA for repair or replacement show either no fault symptoms or fault symptoms resulting from any matter referred to in Clause 2.3 any costs incurred by MINOLTA are to be borne by the purchaser

7. CONSEQUENTIAL LOSS

MINOLTA shall not be liable for any consequential or indirect loss suffered by the purchaser whether this loss arises from breach of duty in contract or tort in any otherway (including loss arising from MINOLTA's negligence). Non-exhaustive illustrations of consequential or indirect loss would be:

- a) loss of profit;
- b) loss of contracts;
- c) damage to property of the purchaser or anyone else;
- d) data loss; and
- e) personal injury to the purchaser or anyone else (but only so far as such injury is not caused by MINOLTA's negligence).

8. STATUTORY RIGHTS

This Guarantee does not affect the purchaser's statutory rights.

11 Glossary

The following definitions apply specifically to your Minolta printer.

application

A software program that performs a particular function, such as generating graphics or spreadsheets.

ASCII

Acronym for American Standard Code for Information Interchange.

base weight

SEE paper basis weight.

bitmap

A text character or graphic image that is defined by a pattern of dots.

click

To press and release a mouse button quickly. Often used to select an object. SEE double-click.

control panel

A bank of indicators that show the current status of the printer. Panel buttons that are located on the control panel make it possible to perform a variety of different operations.

default

Settings that are preset in the absence of user-specified settings.

dialog box

A box that appears in order for the user to input information or settings required for the printer to operate.

display

What appears upon the screen of the computer.

dpi

Acronym for dots per inch. Refers to the resolution that the printer can produce through the measure of dots printed per inch.

double-click

Pressing a mouse button twice in quick succession while keeping the mouse in place. Often used to open a dialog or enable a function. SEE click.

duplex unit (option)

An option that can be installed onto your printer in order to generate double-sided, or duplex documents.

Ethernet interface connector (10/100BaseT) (option)

This port is used to connect the printer to an Ethernet.

face down tray

This tray receives the printed documents, face down, as they are output from the printer. The tray can hold up to 250 sheets of paper.

500-sheet second cassette (option)

SEE Tray 2.

500-sheet third cassette (option)

SEE Tray 3.

fusing unit

A part of the printer that fixes the toner image onto the paper.

gray scale

A series of shades ranging from black to white used to add detail to photo or scanned images, etc.

halftone

A printing technique using a pattern of dots to compose an image. Also known as dithering.

icon

A graphic image on the screen that represents an element.

image transfer roller

The part inside a page printer that transfers the image from the photoconductive drum to the paper.

imaging cartridge

Contains the toner that is used to print the document.

laser printer

A high-resolution peripheral used to print text and graphics onto paper or other media. A rotating disk is used to reflect laser beams onto a photosensitive drum; the image of the page is then transferred via electrostatic charged toner. The final image is fused onto a piece of charged paper using heat as it is rolled against the drum, setting the toner onto the paper (or other media).

manual feed tray

Used to feed paper and envelopes into the printer manually.

N-up printing

A series of printer settings that produces multiple, reduced documents on one sheet of paper.

Network Interface Card (NIC) (option)

Facilitates the network connection of the printer.

off line

A state in which the printer cannot receive data or perform any other operation.

on line

A state in which the printer can receive data and operate.

operating system

A program or group of programs that control the functions of the computer and its peripheral devices such as the printer.

output tray

SEE face down tray.

paper basis weight

The standard for specifying paper weight. The metric standard, applicable to all grades of paper is gm/m².

paper size guide(s)

Three adjustable holders that secure paper in the paper tray from the left, right and front.

paper transport roller

A rolling mechanism that carries the paper through the various functions of the printer during the printing process.

parallel interface

An output/input port utilizing multiple data circuitry.

parallel interface connector

A connector that enables the transfer of data between the printer and the computer.

peripheral device

Any device that can be attached to the computer, such as a printer.

PostScript

Developed by Adobe Systems, PostScript is one of the most well known page description languages.

PostScript fonts

Precise, high-quality fonts that are engineered to be printed using a PostScript-compatible computer.

power cord socket

Connects the power cord and the printer.

power switch

Turns power to the printer on and off.

printer

A peripheral device that outputs data from a computer onto paper or other media.

printer driver

A software file that manages commands to the printer.

Print Manager

An application that manages the print queue and the print file.

RAM

Acronym for random-access memory.

resolution

SEE dpi.

ROM

Acronym for read only memory.

screen font

A typeface that can be displayed on the computer's monitor.

second paper cassette unit (option)

An available option for your printer that expands printing capacity. A tray unit that feeds an additional 500 sheets of paper to the printer.

SIMM

Acronym for single in-line memory module.

third paper cassette unit (option)

An available option for your printer that expands printing capacity. A tray unit that feeds an additional 500 sheets of paper to the printer.

toner

Ink in the form of a plastic powder that is contained in a cartridge.

top cover

A cover attached to the printer that swings open by pressing a release button. Opening the cover provides easy access to the interior of the printer to perform basic maintenance procedures including the installation and replacement of the imaging cartridge as well as clearing paper misfeeds.

top cover release button

This button releases the hinge that locks the cover of the printer. SEE top cover.

Tray 1

A tray that can hold up to 250 sheets of paper for feeding into the printer.

Tray 2 (option)

Five types of optional Tray 2 cassettes can be installed into the second paper cassette unit (SEE second paper cassette unit). Each cassette can hold up 500 sheets of one of the following paper sizes: A4, JIS B5, Legal, Letter and Executive.

Tray 3 (option)

Five types of optional Tray 3 cassettes can be installed into the third paper cassette unit (SEE third paper cassette unit). Each cassette can hold up 500 sheets of one of the following paper sizes: A4, JIS B5, Legal, Letter and Executive.

typeface

Refers to the design of a font.

watermark

A superimposed line of text or graphic upon a printed document.

12 Index

A

About	5-49
Action Key	2-5, 9-1

C

Cassette cover	2-2
Cleaning the Outside of the Printer	6-5
Cleaning the Paper Transport Roller	6-5
Cleaning the Printer	6-5
Clearing a Paper Misfeed	7-1
Inside the Printer	7-1
Paper Input Misfeed (from Manual Feed Tray)	7-4
Paper Input Misfeed (from Second/Third Paper Cassette Unit)	7-5
Paper Input Misfeed (from Tray 1)	7-4
Paper Output Misfeed	7-4
Common Buttons	5-40
Connecting the Power Cord	3-9
Connecting to a Computer	3-13
Control Panel	2-2, 2-4
Controlling Pop Up Messages	5-52

D

Device Option	5-49
Displaying Printer Information... ..	5-53
Displaying the Driver Setup Dialog (Windows 95/98/NT 4.0)	5-37
Duplex Printing	4-14
Duplex Unit	3-20, 8-3

E

Ethernet interface connector (10/100BaseT)	2-2
--	-----

F

Face-Down Tray	2-2, 3-7
Features	2-1
Fusing unit	2-3

G

Grounding	3-2
-----------------	-----

I	
Image	5-47
Image transfer roller	2-3
Imaging cartridge	2-3
Indicator Lights	2-5, 9-1
Installation Precautions	3-1
Installing the Face-Down Tray	3-7
Installing the Printer Driver Under Windows 95/98	5-3
Installing the Printer Driver Under Windows NT 4.0	5-16
Installing Tray 1	3-8
Interface Connector and Cable	8-4
L	
Loading Paper	3-10, 4-4
Loading Paper onto Manual Feed Tray	4-10
Loading Paper onto Tray 1	4-4
Loading Paper onto Tray 2/Tray 3	4-6
M	
Manual feed tray	2-2
Messages	7-11
N	
Network Interface Card (NIC)	2-2, 3-26
No output	7-10
O	
On-line Help	5-53
Opening the Printer Status Display	5-50
Operating Environment	3-4
Operational Precautions	3-4
Options	3-14
P	
Page Layout	5-43
Paper	4-1, 5-41
Size	4-2
Type	4-1
Paper Misfeed in the Duplex Unit	7-6
Paper size guide	2-2
Parrallel interface connector	2-2
Power cord socket	2-2
Power Source	3-2
Power switch	2-2

Print Quality Problems	7-7
Printer	3-4
Printer Parts and Accessories	2-2
Printer Supplies	3-6
Printing on Envelopes	4-12

Q

Quick Reference	9-1
-----------------------	-----

R

Registering the Status Display	5-30
Registering the Status Display Under Windows 95/Windows 98	5-30
Registering the Status Display Under Windows NT 4.0	5-34
Replacing the Imaging Cartridge	6-1

S

Second Paper Cassette Unit	8-2
Second/Third Paper Cassette Unit	2-2, 3-23
Selecting a Location for the Printer	3-1
Setting-up	3-7
SIMM (Single In-line Memory Module)	3-14, 8-4
Space Requirements	3-3
Specifications	
Duplex Unit (Option)	8-3
Interface Connector and Cable	8-4
PagePro 18L Printer	8-1
Second Paper Cassette Unit (Option)	8-2
SIMM (Option)	8-4
Third Paper Cassette Unit (Option)	8-3
Switching Between the Expanded and Reduced Views	5-52
System Requirements	5-1

T

The LED Display	9-1
Third Paper Cassette Unit	8-3
To Display the Driver Setup Dialog Under Windows 95/98	5-37
To Display the Driver Setup Dialog Under Windows NT 4.0	5-38
To Install the Printer Driver Using the Installer (Auto Run)	5-3, 5-16
To Replace the Imaging Cartridge	6-2
To Uninstall the Printer Driver	5-12, 5-26
Top cover	2-3
Top cover release button	2-2
Tray 1 (multipurpose tray)	2-2
Tray 2 (500-sheet second cassette)	2-2
Tray 3 (500-sheet third cassette)	2-2

Tray cover	2-2
Turning On the Printer	3-12

U

Using the Printer Driver Under Windows 95/98/NT4.0	5-40
Using the Printer Status Display	5-50, 5-51

W

When the Error LED is on	2-9, 7-16, 9-4
When the Ready LED is on	2-6, 7-12, 9-2



We do good service...



Often you can find the quickest solution to a problem or malfunction in the User Kit. Please refer to the chapters Troubleshooting.



From our internet website (<http://www.service.minolta.de>) you can get the latest printer driver updates and answers to various questions.



Minolta's hotline (see chapter General Information) supports you with the solution to many problems.



Your technical representative will help you as well.

Please note the date of purchase, the telephone hotline and the serial number on the sticker. In order to benefit from a quick and efficient support, you should always keep the sticker at hand, e.g. at the printerframe.

