

Traveler

Traveler DC-55

 
 
5 Mega Pixel Digital Camera and Kit

QUICK SET-UP GUIDE

Easy steps to getting started

Installing the Batteries/SD Memory Card

1. Make sure the camera is turned off.
2. Open the battery/SD card cover.
3. Insert the batteries/SD card in the correct orientation as shown in the illustrations.
4. Close the battery/SD card cover.

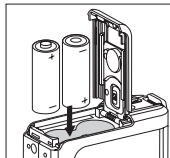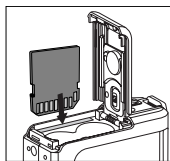

Shooting Images

1. Slide the lens cover open until it clicks to turn on the camera.
2. Compose the image on the monitor screen so that the main subject is within the focus frame.
3. Press the shutter button to capture the image.

 


Using the macro function

Your camera includes a macro function for close up photography.

To activate it slide the focus switch to the [M] symbol.

To return to normal photography mode slide the focus switch to [M].

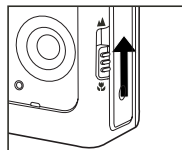


Scene Mode Selection

	Mode	Description
1.	A Auto	Select this mode to adjust point-and-shoot action.

	Mode	Description
2.	 Sport	Select this mode when you want to photograph fast-moving subjects.
3.	 Night	Select this mode when you want to capture people with an evening or night scene background.
4.	 Portrait	Select this mode when you want to capture an image that makes the person stand out against a defocused (blurred) background.
5.	 Landscape	Select this mode to capture sharp, vivid images with infinite focus
6.	 Backlight	Select this mode when you want to capture images with the light coming from behind the object.

Using the Flash

 1. Slide the lens cover open until it clicks to turn on the camera.
2. Hold down  until your desired flash mode
3. Compose your scene and press the shutter button.

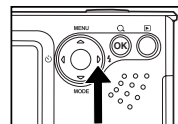

Viewing Images

1. Slide the lens cover open until it clicks to turn on the camera.
2. Press the  button.
The last recorded image appears on the LCD monitor.
3. Use  or  to select the desired images.
To view the previous image, press the  button.
To view the next image, press the  button.
4. To exit from playback mode, press the  or  (MODE) button.

Deleting Images/Movie Clips

1. Press the  button.
2. Select the image you want to erase with the  /  buttons.
3. Press the  / **MENU** button.
4. Select [Delete] with the  /  buttons, then press the **OK** button.
The deletion menu is displayed.
5. Select [Single] or [All] with the  /  buttons, then press the **OK** button.
Single: Erases the selected image or the last image.
All: Erases all of the images on the SD memory card except for the protected images.
Select: Erases a number of selected images.
6. Select [Execute] with the  /  buttons, then press the **OK** button.

