

User Manual

Smart
PRO
P

Congratulations on the purchase of your new Windows Mobile® Smartphone!

Please Read Before Proceeding.

THIS PHONE IS NOT FULLY CHARGED WHEN YOU TAKE IT OUT OF THE BOX.

DO NOT REMOVE THE BATTERY PACK WHEN THE PHONE IS CHARGING.




YOUR WARRANTY IS INVALIDATED IF YOU OPEN OR TAMPER WITH THE PHONE'S OUTER CASING.

PRIVACY RESTRICTIONS

Some countries require full disclosure of recorded telephone conversations, and stipulate that you must inform the person with whom you are speaking that the conversation is being recorded. Always obey the relevant laws and regulations of your country when using the recording feature of your phone.

COPYRIGHT INFORMATION

Copyright © 2007 High Tech Computer Corp. All Rights Reserved.

 ,  htc ,  htc , smart mobility , ExtUSB, and HTC Care are trademarks and/or service marks of High Tech Computer Corp.

Microsoft, MS-DOS, Windows, Windows Vista, Windows NT, Windows Server, Windows Mobile, ActiveSync, Windows Media, Excel, Internet Explorer, MSN, Outlook, PowerPoint, and Word are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Bluetooth and the Bluetooth logo are trademarks owned by Bluetooth SIG, Inc.

Wi-Fi is a registered trademark of the Wireless Fidelity Alliance, Inc.

microSD is a trademark of SD Card Association.

Java, J2ME and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.

Copyright © 2007, Adobe Systems Incorporated.

Copyright © 2007, Macromedia Netherlands, B.V.

Macromedia, Flash, Macromedia Flash, Macromedia Flash Lite and Reader are trademarks and/or registered trademarks of Macromedia Netherlands, B.V. or Adobe Systems Incorporated.

Copyright © 2007, JATAAYU SOFTWARE (P) LTD. All Rights Reserved.

Copyright © 2007, Dilithium Networks, Inc. All Rights Reserved.

ArcSoft MMS Composer™ Copyright © 2003-2007, ArcSoft, Inc. and its licensors. All Rights Reserved. ArcSoft and the ArcSoft logo are registered trademarks of ArcSoft, Inc. in the United States and/or other countries.

Licensed by QUALCOMM Incorporated under one or more of the following patents:

4,901,307 ; 5,490,165 ; 5,056,109 ; 5,504,773 ; 5,101,501 ; 5,778,338 ; 5,506,865
5,109,390 ; 5,511,073 ; 5,228,054 ; 5,535,239 ; 5,710,784 ; 5,267,261 ; 5,544,196
5,267,262 ; 5,568,483 ; 5,337,338 ; 5,659,569 ; 5,600,754 ; 5,414,796 ; 5,657,420
5,416,797

All other company, product and service names mentioned herein are trademarks, registered trademarks or service marks of their respective owners.

HTC shall not be liable for technical or editorial errors or omissions contained herein, nor for incidental or consequential damages resulting from furnishing this material. The information is provided "as is" without warranty of any kind and is subject to change without notice. HTC also reserves the right to revise the content of this document at any time without prior notice.

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording or storing in a retrieval system, or translated into any language in any form without prior written permission of HTC.

Important Health Information and Safety Precautions

When using this product, the safety precautions below must be taken to avoid possible legal liabilities and damages. Retain and follow all product safety and operating instructions. Observe all warnings in the operating instructions on the product.

To reduce the risk of bodily injury, electric shock, fire, and damage to the equipment, observe the following precautions.

ELECTRICAL SAFETY

This product is intended for use when supplied with power from the designated battery or power supply unit. Other usage may be dangerous and will invalidate any approval given to this product.

SAFETY PRECAUTIONS FOR PROPER GROUNDING INSTALLATION

CAUTION: Connecting to an improperly grounded equipment can result in an electric shock to your device.

This product is equipped with a USB Cable for connecting with desk-top or notebook computer. Be sure your computer is properly grounded (earthed) before connecting this product to the computer. The power supply cord of a desktop or notebook computer has an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet which is properly installed and grounded in accordance with all local codes and ordinances.

SAFETY PRECAUTIONS FOR POWER SUPPLY UNIT

- **Use the correct external power source**

A product should be operated only from the type of power source indicated on the electrical ratings label. If you are not sure of the type of power source required, consult your authorised service provider or local power company. For a product that operates from battery power or other sources, refer to the operating instructions that are included with the product.

- **Handle battery packs carefully**

This product contains a Li-ion Polymer battery. There is a risk of fire and burns if the battery pack is handled improperly. Do not attempt to open or service the battery pack. Do not disassemble, crush, puncture, short external contacts or circuits, dispose of in fire or water, or expose a battery pack to temperatures higher than **60°C (140°F)**.



WARNING: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. TO REDUCE RISK OF FIRE OR BURNS, DO NOT DISASSEMBLE, CRUSH, PUNCTURE, SHORT EXTERNAL CONTACTS, EXPOSE TO TEMPERATURE ABOVE **60°C (140°F)**, OR DISPOSE OF IN FIRE OR WATER. REPLACE ONLY WITH SPECIFIED BATTERIES. RECYCLE OR DISPOSE OF USED BATTERIES ACCORDING TO THE LOCAL REGULATIONS OR REFERENCE GUIDE SUPPLIED WITH YOUR PRODUCT.



Note This product should be operated only with the following designated Battery Pack(s).

- Simple, model LIBR160
- Sanyo, model LIBR160
- SAMSUNG, model WING160

- **Take extra precautions**

- Keep the battery or device dry and away from water or any liquid as it may cause a short circuit.
- Keep metal objects away so they don't come in contact with the battery or its connectors as it may lead to short circuit during operation.
- Do not use a battery that appears damaged, deformed, or discolored, or the one that has any rust on its casing, overheats, or emits a foul odor.
- Always keep the battery out of the reach of babies and small children, to avoid swallowing of the battery. Consult the doctor immediately if the battery is swallowed.

- If the battery leaks:
 - Do not allow the leaking fluid to come in contact with skin or clothing. If already in contact, flush the affected area immediately with clean water and seek medical advice.
 - Do not allow the leaking fluid to come in contact with eyes. If already in contact, DO NOT rub; rinse with clean water immediately and seek medical advice.
 - Take extra precautions to keep a leaking battery away from fire as there is a danger of ignition or explosion.
- Communicate the appropriate steps immediately in case a hazard occurs.

SAFETY PRECAUTIONS FOR DIRECT SUNLIGHT

Keep this product away from excessive moisture and extreme temperatures. Do not leave the product or its battery inside a vehicle or in places where the temperature may exceed **60°C (140°F)**, such as on a car dashboard, window sill, or behind a glass that is exposed to direct sunlight or strong ultraviolet light for extended periods of time. This may damage the product, overheat the battery, or pose a risk to the vehicle.

PREVENTION OF HEARING LOSS



CAUTION: Permanent hearing loss may occur if earphones or headphones are used at high volume for prolonged periods of time.

Note For France, mobile headphones, earphones, and wired remote controllers (listed below) for this device have been tested to comply with the Sound Pressure Level requirement laid down in NF EN 50332-1:2000 and/or NF EN 50332-2:2003 standards as required by French Article L. 5232-1.

1. Earphone, manufactured by HTC, Model name: HS S168 and S200.
2. Wired Remote Controller, manufactured by HTC, Model RC W100.

SAFETY IN AIRCRAFT

Due to the possible interference caused by this product to an aircraft's navigation system and its communications network, using this device's phone function on board an airplane is against the law in most countries. If you want to use this device when on board an aircraft, remember to turn off the phone by switching to Flight Mode.

ENVIRONMENT RESTRICTIONS

Do not use this product in gas stations, fuel depots, chemical plants or where blasting operations are in progress, or in potentially explosive atmospheres such as fuelling areas, fuel storehouses, below deck on boats, chemical plants, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Please be aware that sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

EXPLOSIVE ATMOSPHERES

When in any area with a potentially explosive atmosphere or where flammable materials exist, the product should be turned off and the user should obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Users are advised not to use the equipment at refueling points such as service or gas stations, and are reminded of the need to observe restrictions on the use of radio equipment in fuel depots, chemical plants, or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked. These include fueling areas, below deck on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

ROAD SAFETY

Vehicle drivers in motion are not permitted to use telephony services with handheld devices, except in the case of emergency. In some countries, using hands-free devices as an alternative is allowed.

SAFETY PRECAUTIONS FOR RF EXPOSURE

- Avoid using your device near metal structures (for example, the steel frame of a building).
- Avoid using your device near strong electromagnetic sources, such as microwave ovens, sound speakers, TV and radio.
- Use only original manufacturer-approved accessories, or accessories that do not contain any metal.
- Use of non-original manufacturer-approved accessories may violate your local RF exposure guidelines and should be avoided.

INTERFERENCE WITH MEDICAL EQUIPMENT FUNCTIONS

This product may cause medical equipment to malfunction. The use of this device is forbidden in most hospitals and medical clinics.

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn the phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

HEARING AIDS

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider, or call the customer service line to discuss alternatives.

NONIONISING RADIATION

This product should be operated in the suggested normal condition only to ensure the radiative performance and safety of the interference. As with other mobile radio transmitting equipment, users are advised that for satisfactory operation of the equipment and for the safety of personnel, it is recommended that no part of the human body be allowed to come too close to the antenna during operation of the equipment.

Use only the supplied integral antenna. Use of unauthorised or modified antennas may impair call quality and damage the phone, causing loss of performance and SAR levels exceeding the recommended limits as well as result in non-compliance with local regulatory requirements in your country.

To assure optimal phone performance and ensure human exposure to RF energy is within the guidelines set forth in the relevant standards, always use your device only in its normal-use position. Do not touch or hold the antenna area unnecessarily when placing or receiving a phone call. Contact with the antenna area may impair call quality and cause your device to operate at a higher power level than needed. Avoiding contact with the antenna area when the phone is IN USE optimises the antenna performance and the battery life.



General Precautions

- **Heed service markings**

Except as explained elsewhere in the Operating or Service documentation, do not service any product yourself. Service needed on components inside these compartments should be done by an authorised service technician or provider.

- **Damage requiring service**

Unplug the product from the electrical outlet and refer servicing to an authorised service technician or provider under the following conditions:

- Liquid has been spilled or an object has fallen into the product.
- The product has been exposed to rain or water.
- The product has been dropped or damaged.
- There are noticeable signs of overheating.
- The product does not operate normally when you follow the operating instructions.

- **Avoid hot areas**

The product should be placed away from heat sources such as radiators, heat registers, stoves, or other products (including, but not limited to, amplifiers) that produce heat.

- **Avoid wet areas**

Never use the product in a wet location.

- **Avoid using your device after a dramatic change in temperature**

When you move your device between environments with very different temperature and/or humidity ranges, condensation may form on or within the device. To avoid damaging the device, allow sufficient time for the moisture to evaporate before using the device.

NOTE: When taking the device from low-temperature conditions into a warmer environment or from high-temperature conditions into a cooler environment, allow the device to acclimate to room temperature before turning on the power.

- **Avoid pushing objects into product**

Never push objects of any kind into cabinet slots or other openings in the product. Slots and openings are provided for ventilation. These openings must not be blocked or covered.

- **Mounting Accessories**

Do not use the product on an unstable table, cart, stand, tripod, or bracket. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

- **Avoid unstable mounting**

Do not place the product with an unstable base.

- **Use product with approved equipment**

This product should be used only with personal computers and options identified as suitable for use with your equipment.

- **Adjust the volume**

Turn down the volume before using headphones or other audio devices.

- **Cleaning**

Unplug the product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning, but NEVER use water to clean the LCD screen.

Chapter 3 Synchronising Information with Your Computer 49

3.1 About Synchronisation	50
3.2 Using Microsoft Windows Mobile® Device Center.....	51
3.3 Installing and Using Microsoft ActiveSync®	52
3.4 Synchronising with Your Computer	53
3.5 Synchronising via Bluetooth	55
3.6 Synchronising Music and Video	56

Chapter 4 Managing your Phone 57

4.1 Personalising Your Phone	58
4.2 Adding and Removing Programmes	62
4.3 Using Task Manager and Managing Memory	63
4.4 Managing and Backing Up Files	64
4.5 Protecting Your Phone	66
4.6 Restarting Your Phone.....	67
4.7 Resetting Your Phone	68

Chapter 5 Organising Phone Information 69

5.1 Contacts	70
5.2 SIM Manager	73
5.3 Calendar	74
5.4 Tasks	77
5.5 Quick Notes	78
5.6 Voice Notes.....	78

Chapter 6 Exchanging Messages 81

6.1 Messaging	82
6.2 Text Message	83
6.3 MMS Messages	84
6.4 Setting Up Email Accounts	87
6.5 Email	90

Chapter 7 Working with Company Emails and Meeting Appointments 95

7.1 Synchronising with Your Company Email Server	96
7.2 Working with Company Emails	97
7.3 Managing Meeting Requests	101
7.4 Finding Contacts in the Company Directory	103
7.5 Email Security	104

Chapter 8 Getting Connected 107

8.1 Comm Manager	108
8.2 Connecting to the Internet	109
8.3 Internet Explorer Mobile	113
8.4 Internet Sharing	114
8.5 Bluetooth	115
8.6 Windows Live™	124
8.7 Windows Live Messenger	126

Chapter 9 Experiencing Multimedia	131
9.1 Camera.....	132
9.2 Pictures & Videos	140
9.3 Windows Media Player Mobile	142
9.4 Streaming Media	146
9.5 Audio Manager	148
9.6 Using Audio Booster	154
9.7 Flash Lite Player	156
9.8 Java	157
Chapter 10 Using Other Applications	161
10.1 Microsoft® Office Mobile	162
10.2 Microsoft® Office Word Mobile	162
10.3 Microsoft® Office Excel® Mobile	164
10.4 Microsoft® Office PowerPoint® Mobile	167
10.5 Adobe® Reader® LE.....	169
10.6 Speed Dial.....	170
10.7 Voice Speed Dial.....	171
Appendix	173
A.1 Regulatory Notices	174
A.2 Specifications	180
Index	183

Chapter 1

Getting Started

1.1 Getting to Know Your Phone and Its Accessories

1.2 Starting Up

1.3 Home Screen

 
1.4 Start Menu

1.5 Quick List

1.6 Entering Information


1.7 Battery Information

1.1 Getting to Know Your Phone and Its Accessories

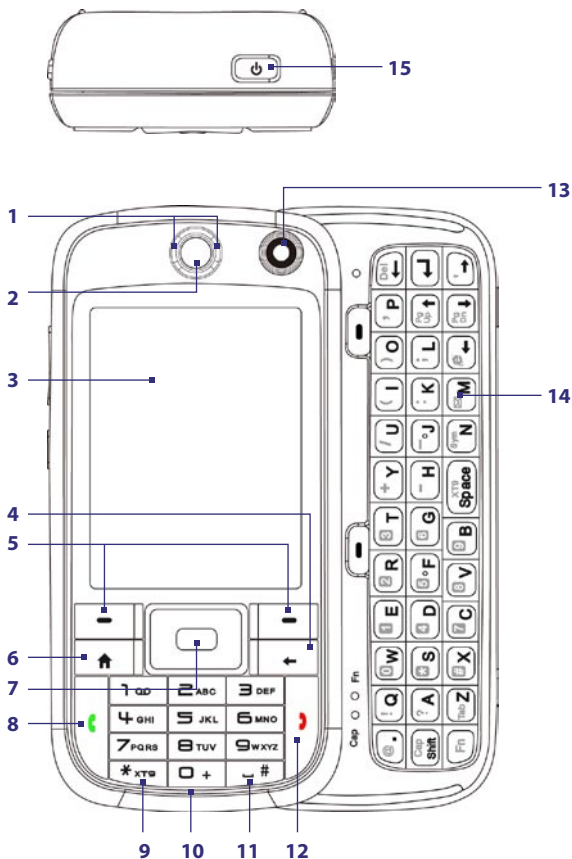

Item	Function
1. LED Indicators	Notifies you of connectivity, battery, and network status. For more information about LED Indicators, see the table at the end of this section.
2. Earpiece	Listen to a phone call through the earpiece.
3. Display Screen	The 2.4-inch LCD provides ample viewing room for watching video, looking at pictures, or browsing the Internet.
4. BACK	Press to go to the previous screen, or backspace over characters.
5. Left/Right SOFT KEYS	Press to perform the command shown in the label above the button.
6. HOME	Press to go to the Home Screen.
7. NAVIGATION CONTROL/CENTER OK	Use to scroll left, right, up, or down. Press the center to use as the CENTER OK button.
8. TALK	Press to dial a phone number, answer a call, switch to another call, or put a call on hold. Press and hold to activate/deactivate speakerphone mode.
9. * Key	Press to switch to different input modes or press and hold to choose an input mode from a list.
10. Light Sensor	A light sensor is hidden under the casing. Dark conditions sensed here will activate a backlight under the keypad.
11. # Key	Press to add a space or press and hold to display a list of symbols.
12. END	Press to end a call, or press and hold to lock the phone.
13. Second Camera	Use this camera for video call conversations or to take a self-portrait.
14. QWERTY Keyboard	Slide out to use the QWERTY keyboard. This is similar to a standard keyboard on a PC. For more information about the QWERTY keyboard, see "Using the QWERTY Keyboard" in this chapter.
15. POWER	Press and hold (about 3 seconds) to turn on and off the phone. Press and quickly release to display the Quick List. See "Quick List" later in this chapter for more details.

 18 Getting Started

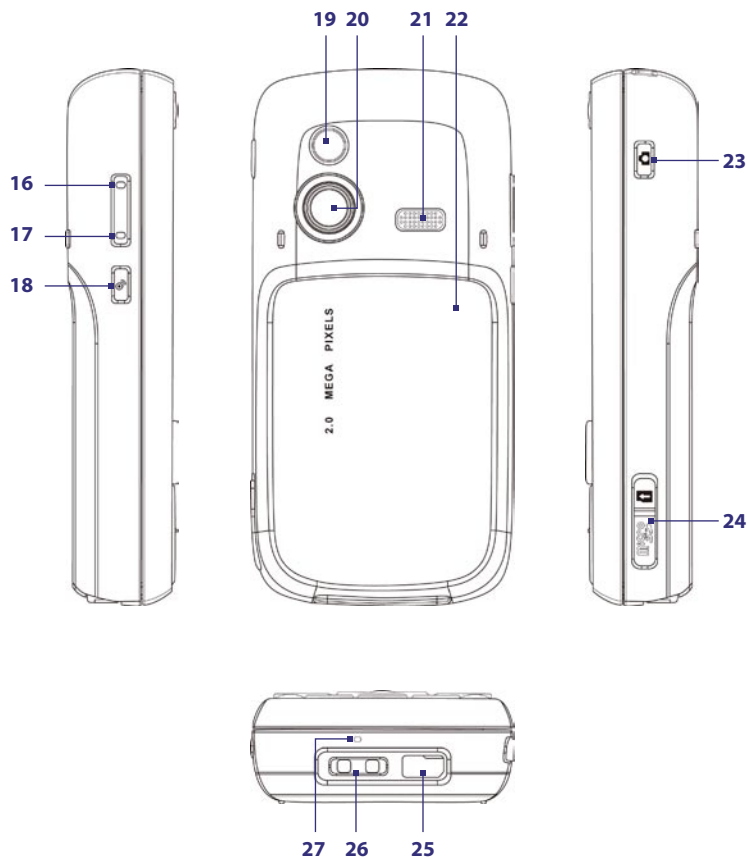


Item	Function
16. Volume Up/ Voice Tag	Press to increase the earpiece volume during a call. Press and hold to launch the Voice Tag feature.
17. Volume Down/ Voice Notes	Press to decrease the earpiece volume during a call. Press and hold to start the Voice Notes recorder.
18. COMM MANAGER	Press to open the Comm Manager, which lets you easily turn on/off your phone's connections (such as Bluetooth, Wi-Fi, and cellular data connection), ringer, phone, etc.
19. Self-portrait Mirror	Use it when taking self-portrait shots.
20. Main Camera Lens	The rear camera lens enables you to take snapshots and record video clips.
21. Speaker	Listen to audio media or a phone call when using speakerphone mode.
22. Battery Cover	Remove to insert battery and SIM/USIM card.
23. CAMERA	Press to open the Camera programme. If Camera is already opened, press to take the photo or to start shooting video.
24. microSD™ slot	Pry open the rubber cover to insert the microSD card.
25. HTC ExtUSB™ port	Connect the USB cable to synchronise data or recharge the battery. You can also connect the earphone to listen to audio media or use the phone's hands-free kit.
26. Strap Holder	Let you attach a strap to carry your phone. Loop the end of a strap through this opening.
27. Microphone	Speak into the microphone when in a call, recording voice, or using a voice command.

LED indicator lights




Various colors that might display in the two LED Indicators are summarised here.

Left LED	Status
Flashing blue	Bluetooth mode set to “On” or “Visible” mode.
Flashing green	Connected to Wi-Fi network.

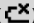Right LED	Status
Solid green	Battery is fully charged.
Blank	Battery case is empty, no SIM/USIM card inserted or phone is off.
Solid orange	Battery is charging or the phone is using ActiveSync to synchronise with a PC.
Solid red	Battery is not installed or battery is over-discharged.
Flashing green	Connected to the network.
Flashing red	Battery very low (less than 5%).
Flashing orange	Battery temperature is hotter or colder than the functional limits of 0 to 48 degrees Celsius (32 to 118 degrees Fahrenheit), and has stopped charging.
Orange/Green LED off	Battery fault. The “Battery Fault” indicator () is displayed. In this case, the flashing green LED can be recovered by unplugging the AC adapter.

Accessories

   The following accessories are provided with the phone:

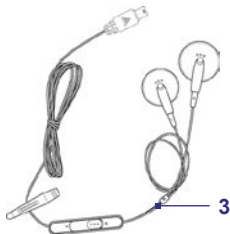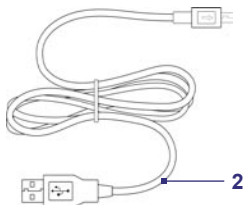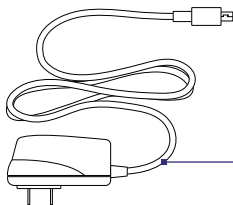

Accessory	Function
1. AC adapter	Recharge the phone battery.
2. USB cable	Connect your phone to a PC to synchronise data and/or to charge the phone.
3. Stereo headset	Provide a volume control slider and a Send/End button. You can press the button to pick up a call or put a call on hold or press and hold the button to end the call. Plug into Earphone Jack to listen to audio files.

1.2 Starting Up

Insert the SIM/USIM Card

 
Your SIM (Subscriber Identity Module) or USIM (Universal Subscriber Identity Module) card is given to you by your wireless service provider and contains your basic subscriber information, such as your phone number and your address book.

Before you begin, make sure the phone is turned off.

1. Hold the phone in one hand with the front panel facing down in the palm of your hand, and then press the battery cover downward to slide it open.
2. Insert the SIM/USIM card into the slot with the gold contacts facing down. Push the SIM/USIM card all the way in until the card locks into place.


To take the SIM/USIM card out, press and hold the slot latch then push the SIM/USIM card out from the bottom of the card.

3. Replace the battery cover.

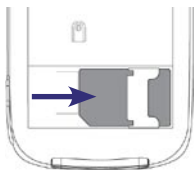


Insert the Battery

 1. Slide the battery cover downward to remove it.
2. Align the exposed metal contacts on the edge of the battery with the prongs in the body of the phone.
3. Push the bottom of the battery into place and then replace the battery cover.

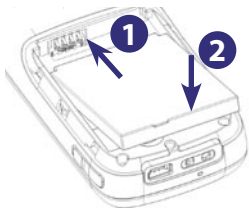

Install a microSD™ Card

 1. Pry open the rubber cover of the microSD card slot on the right side of the phone.
2. Insert the microSD card into the slot with the gold contacts facing down, and then close the cover.

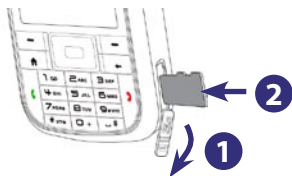


To remove the microSD card, press it to pop it out of the slot.

Note microSD card is not included in the box.

Turn On and Off the Phone

 
Press and hold the POWER button for about 3 seconds to turn on or off the phone.

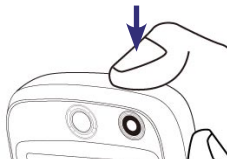

1.3 Home Screen

The Home screen displays important information, such as upcoming appointments, status indicators, the current date, time, and profile, and icons of programmes that you have recently used.

 - To access the Home screen from anywhere, press HOME.

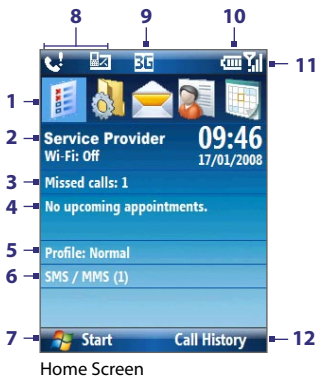























- 1 Select a recently-used programme, and open it directly from the Home screen.
- 2 Displays the name of your wireless service provider, date, and the time. Click to open **Comm Manager**.
- 3 Click to view the details of a missed call.
- 4 Displays the time of your next appointment. Click to open **Calendar**.
- 5 Displays the current profile. Click to change the profile.
- 6 Click to open the Messages folder.
- 7 Click to display the available programmes in your phone.
- 8 Displays notifications, such as missed calls or new messages.
- 9 Displays the network or connectivity status.
- 10 Displays the power status.
- 11 Displays the network signal strength.
- 12 Click to open **Contacts**, **Call History**, or **Messages**.

Use the NAVIGATION CONTROL to scroll down the Home screen to see more information.















To learn about the different icons/notifications that you may see on the Title bar of the Home screen, please see "Status Indicators."

Status Indicators

The following table lists common status indicators.

Icon	Description
	New text message
	New email message
	New Live Messenger message
	Roaming
	Voice call in progress
	Data call in progress
	Calls forwarded
	Call on hold
	Missed call
	Battery level
	Low battery
	Very low battery
	Battery charging
	No battery or battery fault
	Signal strength
	Radio connected or no signal
	Radio off
	No SIM/USIM card installed
	SIM/USIM card with fault
	Microphone muted
	Speakerphone on
	Wi-Fi enabled, but phone not connected to a wireless network

26 Getting Started


Icon	Description
	Wi-Fi connected
	Connecting to wireless network
	HSDPA network available
	HSDPA in use
	UMTS network available
	UMTS in use
	GPRS available
	GPRS in use
	EDGE available
	EDGE in use
abc	Lowercase text input
<u>ABC</u>	Uppercase text input, caps lock
ABC	Uppercase text input
<u>12#</u>	Numeric or symbol (labeled in blue color on keyboard) input, locked
12#	Numeric or symbol input (labeled in blue color on keyboard)
xT9	XT9 text input mode, lowercase
XT9	XT9 text input mode, uppercase
<u>XT9</u>	XT9 text input mode, caps lock
	Ringer off
	Vibrate call alert
	Bluetooth on or visible mode
	Bluetooth headset connected

1.4 Start Menu

 Your phone comes with several bundled programmes that you can start using immediately. You can also install additional programmes from the included Windows Mobile® Getting Started Disc or from other sources and install them on your phone.





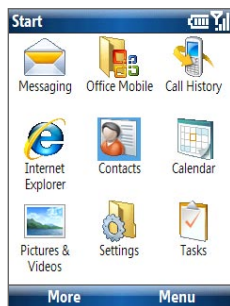



To see the available programmes on your phone, click **Start** on the Home screen,













To see more programmes, click **More**.






Programmes on your phone

The following table lists icons of the programmes that are already installed on your phone or are available on the discs that came with your phone.

Icon	Programme	Description
	Expert	 Clear Storage Clears the memory and restores the phone back to its factory default settings.  SIM Manager Manages the contacts that are stored on your SIM/USIM card.
	ActiveSync	Synchronises information between your phone and PC.
	Adobe Reader LE	Allows you to view PDF files.
	Audio Booster	Enhances your music experience by providing you with controls for adjusting equaliser, 3D sound, treble, and bass settings.
	Audio Manager	Allows you to browse for music files by organising music files into categories.
	Bluetooth Explorer	Allows you to search for other Bluetooth devices that have file sharing enabled and lets you access their Bluetooth shared folder.

Icon	Programme	Description
	Calculator	Does basic arithmetic and calculations.
	Calendar	Keeps track of your appointments, and creates meeting requests.
	Call History	Keeps track of all phone calls made, received, and missed.
	Camera	Captures photos in various modes.
	Comm Manager	Acts as a central switch where you can manage phone and connection settings.
	Contacts	Keeps track of contact information.
	File Explorer	Organises and manages files and folders.
	Flash Lite Player	Allows you to play back Flash Lite™ contents (*.swf files) on your phone.
	Games	Plays two games: Bubble Breaker and Solitaire come with your phone.
	Internet Explorer	Browses Web and WAP sites, and to download new programmes and files from the Internet.
	Internet Sharing	Lets your phone act as an external modem for your computer.
	Java	Allows you to download and install Java-based applications, such as games and tools, on your phone.
	Message Options	Allows you to set MMS message preferences and settings.
	Messaging	Allows you to send and receive emails, MMS and text messages.
	Messenger	Connects to the Windows Live Messenger service.
	Office Mobile	 Excel Mobile Views Excel worksheets.
		 PowerPoint Mobile Views PowerPoint files.
		 Word Mobile Views Word documents.


Icon	Programme	Description
	Pictures & Videos	Collects, organises, and sorts media files.
	Quick Notes	Types and saves often used text messages.
	RSS Hub	Download various RSS feeds such as news, podcasts, and blogs onto your phone and read, listen or watch them at your convenience.
	SAP Settings	Enables Bluetooth Remote SIM access on your phone. See chapter 2 for more details.
	Settings	Personalises your phone to suit the way you use it.
	STK (SIM Tool Kit) Service	Allows you to access information and other services offered by your wireless service provider.
	Speed Dial	Creates speed dial entries for dialling frequently-called phone numbers or for opening frequently-accessed programmes.
	Streaming Media	Allows you to stream live or on-demand video.
	Task Manager	Keeps track of all running programmes on your phone.
	Tasks	Keeps track of your tasks.
	Video Recorder	Captures video clips in various modes and duration.
	Voice Notes	Creates short voice recordings.
	Windows Live	Use this mobile version of Windows Live™ to find information on the Web. It also lets you sign into your Windows Live account so that you can access your Live Mail messages and send/receive instant messages in Live Messenger.
	Windows Media Player	Allows you to play back video and audio files.

1.5 Quick List

The Quick List offers convenient access to a list of functions, such as locking your phone and keypad, opening Comm Manager, and choosing a different profile.

To access the Quick List

 1. Briefly press (press and quickly release) the POWER button.
2. Select the desired option and click **Select**.
3. To exit the Quick List at any time, click **Cancel**.

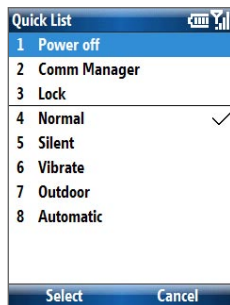

1.6 Entering Information

You can enter text, numbers, and symbols using the keypad or QWERTY keyboard. The status indicator on the top-right side of the display screen displays the input mode that you are currently using.

abc Lowercase text input

ABC Uppercase text input, caps lock

ABC Uppercase text input

12# Numeric or symbol (labeled in blue color) input, locked (**Keyboard only**)

12# Numeric or symbol (labeled in blue color) input

xt9 XT9 text input mode, lowercase

Xt9 XT9 text input mode, uppercase

Xt9 XT9 text input mode, caps lock

Use the Keypad

Use the keypad to dial phone numbers or type short text messages.

To change the input mode

1. Press and hold the ***XT9** key.
2. On the menu, click the input mode you want.

Use Multipress mode

In Multipress mode, you enter a character by pressing the numeric key on which the character appears.

To enter text in Multipress mode

- To enter the first character on the numeric key, press once. To enter the second character on the numeric key, press twice, and so on.
- To enter character that are on the same numeric key, pause after you enter the first character.
- To enter punctuation, press **1** repeatedly until you see the punctuation you want.

To change the Multipress time out

You can change the length of time to pause between keypresses on the same numeric key.

1. On the Home screen, click **Start > Settings > Accessibility**.
2. In **Multipress time out**, select the length of the pause between keypresses.

Use XT9 mode

To enter a word in XT9 mode, press the numeric keys that contain the letters you want. As you enter letters, XT9 analyzes your keypresses and attempts to complete the word. For example, to enter the word “shoe,” press **7, 4, 6, 3**.

To enter text in XT9 mode

1. Press and hold the ***XT9** key.
2. On the menu, click **XT9 English**.

3. Do any of the following to start entering text in XT9 mode:
 - Enter letters by pressing the keys on which the letters appear. Press a key only once for each letter. If there is more than one choice in the XT9 dictionary for your entry, a list of available words is displayed at the bottom of the screen.
 - Press the **_#** key to enter a space after the word.
 - To enter punctuation, press **1**, and then select from the list at the bottom of the screen.

Use Numeric mode

If a text box permits a numeric entry only, such as a phone number, the input mode automatically defaults to Numeric mode. However, if you need to enter numbers within a line of text, change to Numeric mode, and then change back to Multipress or XT9 mode to finish entering the text.

To enter numbers in text boxes

1. Press and hold the ***XT9** key to change to Numeric mode (**12#**).
2. On the keypad, enter the number or numbers you want.
3. Change back to Multipress or XT9 input mode by pressing and holding the ***XT9** key, and then finish entering your text.

More text entry tasks

In both Multipress and XT9 modes, the first letter of a sentence is by default capitalised.

To change between uppercase, lowercase, and caps lock

- Press the ***XT9** key to change between uppercase, lowercase, and caps lock within a text input mode.

To delete characters

- To backspace and delete a single character in any input mode, press the BACK key (←).
- To backspace and delete an entire text or numeric field in any input mode, press and hold the BACK key (⌫).

To enter a space

- In Multipress or XT9 mode, press the **_#** key.

To enter a symbol

1. Press and hold the ***XT9** key.
2. On the menu, click **Symbols** to display the Symbol page.
3. Select the symbol you want and press CENTER OK.

To start a new line

In a multi-line text box such as the notes area of a contact or a calendar appointment, do the following:

 
- In any input mode, press CENTER OK.

Use the QWERTY Keyboard

Slide the upper half of the phone (with the screen) to the left to reveal the QWERTY keyboard. Use the QWERTY keyboard to type emails and long messages.

When you slide open the QWERTY keyboard, the display orientation of the screen automatically changes to landscape mode; when you close it, the screen orientation switches back to portrait mode.

Note To enable/disable the QWERTY keyboard sliding open or closing sound, click **Start > Settings > Sounds**. In **Keyboard sliding**, select **None** to disable the sound or select a sound to enable the sound.

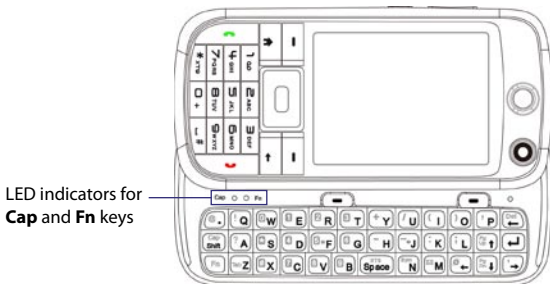

The LED indicators corresponding to the **Cap** and **Fn** keys on the keyboard display solid orange color when the **Fn** and **Cap Shift** keys are pressed to turn on their functionality. Press a desired corresponding key and turn them off after use.

You can do the following with the QWERTY keyboard:

- To type lowercase letters, press the keys using your thumbs or fingers.
- To type all uppercase letters, press **Fn** first, and then press **Cap Shift**. To turn off this function, press **Fn** first, and then press **Cap Shift** again.
- To type a single uppercase letter, press **Cap Shift** and then press the corresponding key.
- To enter a number or symbol (labeled in blue color) or to carry out a command like scrolling a page, press **Fn** and then press the corresponding key.
- To remain in the scrolling mode or to continue entering numbers or symbols (labeled in blue color), press **Fn** twice and then press the corresponding keys.
- Press the left or right SOFT KEY to perform the command shown in the label above the key.

1.7 Battery Information

Battery performance depends on many factors, including but not limited to your wireless service provider's network configuration, signal strength, and the temperature of the environment.

Battery life estimates (approximations):

- Talk time: Up to **3 - 5.3** hours (GSM); up to **1.1 - 1.9** hours (UMTS)
- Standby time: Up to **172 - 250** hours (GSM); up to **161 - 270** hours (UMTS)
- Playing WMV: Up to **8** hours
- Playing WMA: Up to **12** hours

WARNING!

To reduce risk of fire or burns:

- Do not attempt to open, disassemble, or service the battery pack.
- Do not crush, puncture, shorten external contacts, or dispose of in fire or water.
- Do not expose to temperatures above **60°C (140°F)**.
- Replace only with the battery pack designated for this product.
- Recycle or dispose of used battery as stipulated by local regulation.

Chapter 2

Using Phone Features


- 2.1 Using the Phone
- 2.2 Making a Call
- 2.3 Making a Video Call
- 2.4 Receiving a Call
- 2.5 In-Call Options
- 2.6 Additional Dialling Information
- 2.7 SIM Tool Kit (STK)
- 2.8 Setting Up Bluetooth SIM Access
for Car Kit Phones

2.1 Using the Phone

You can use your phone to make, receive, and keep track of voice calls, and send text messages (SMS, Short Message Service) and MMS (Multimedia Messaging Service) messages.

The Phone screen

From the Phone screen, you can open, call, or find a contact, and even save a new number in Contacts. To access the Phone screen, do any of the following:

- Press TALK ().
- Enter the phone number by pressing the keys on the keypad.

Enter your PIN

Most SIM/USIM cards are preset with a personal identification number (PIN) that is provided by your wireless service provider. You need to enter the PIN whenever you use your phone.

- Enter your PIN when prompted and click **Done**.

Note If your PIN is entered incorrectly three times, the SIM/USIM card will be blocked. If this happens, you can unblock it with the PIN Unblocking Key (PUK) obtained from your wireless service provider.


You can change the SIM PIN by clicking **Start > Settings > Security > Change SIM PIN**.

Set ring tones

You can choose how to be notified for incoming calls, reminders, new messages, alarms, and more.

To set a ring tone for incoming calls



1. On the Home screen, click **Start > Settings > Sounds**.
2. In the **Ring tone** list, select a ring tone and click **Done**.

If you select **Vibrate**, the sound is muted and the phone will vibrate when you receive a call. The Vibrate icon () appears in the title bar. Selecting **None** in the **Ring tone** list mutes the phone. For more information about sounds, see “Choose how to be notified about events or actions” in Chapter 4.

2.2 Making a Call

With your phone, you can make calls from the Home screen, the Phone screen, from Contacts, Speed Dial, Call History, or SIM Contacts (contacts stored on your SIM/USIM card).


Make a call from the Home screen

Enter the phone number by pressing keys on the keypad, and press TALK (). Press the BACK key () if you need to backspace.




Phone Screen

Note You can also use the QWERTY keyboard to dial numbers on your phone.


Tip You will notice that when you press a key on the keypad, a list of names and numbers is displayed as your phone searches Contacts, Call History, Speed Dial, and your SIM/USIM card to find a matching name or number. For example, when you press a key such as 5, first and last names that begin with J, K, and L will be displayed as well as phone numbers that start with 5. The next key you press continues to narrow the search. When you see the name of the person you want to call, select it, and press TALK ().

Make a call from Contacts

1. On the Home screen, click **Contacts** (if displayed) or click **Start > Contacts**.
2. Select the desired contact, and press TALK ().


To specify the number to dial

By default, the mobile telephone number (m) of a contact is dialed when you make a call from Contacts; however, you can choose to dial a different phone number.

1. On the Home screen, click **Contacts** (if displayed) or click **Start > Contacts**.
2. Select the contact.
3. Press NAVIGATION left or right. The letter representing the number changes to **m** (mobile), **w** (work), or **h** (home).
4. Press TALK () to dial the number.
 - To view or edit information associated with the selected contact, click **Menu > Edit**.
 - To save a contact on your SIM/USIM card, click **Menu > Save to SIM**.

To learn more about Contacts, see Chapter 5.

Make a call from Call History

1. On the Home screen, click **Start > Call History** or click **Call History** (if displayed).
2. Select a name or number, and press TALK ().

In the Call History screen, press CENTER OK to view details, such as the dialed, missed, or received call, call duration, date, and time. Pressing CENTER OK again dials the associated number.

To customise calls

On the Call History screen, click **Menu** to select various options to customise and filter the calls made, received, or missed.

Note You can also save a number in Contacts by clicking **Save** on the Call History screen.

Make a call from Speed Dial

You can make calls using Speed Dial. To learn how to use Speed Dial, see “Speed Dial” in Chapter 10.

Make a call from SIM Manager

1. Click **Start > Expert > SIM Manager**. Wait for the contents of your SIM/USIM card to load.
2. Choose the contact you want to call and click **Menu > Call**.

For more information about SIM Manager, see Chapter 5.

2.3 Making a Video Call

This phone allows you to make video calls when you are within a 3G network coverage area. You need to install a 3G-enabled USIM card to make video calls.

To make a video call

- Enter the phone number, and then click **Menu > Video Call**.
- In Contacts, select the contact, and then click **Menu > Video Call**.

Note The caller's image will appear on the screen after about 3 to 5 seconds after connection, depending on the signal strength. The streaming video quality may also be influenced by the signal strength.

If the video call is unsuccessful, a message pops up asking you if you want to try again. You can make a voice call or send an SMS/MMS message instead.

Change Video Call settings

While on a video call, you can change certain settings such as the size of the image, brightness of the image, the camera to use, and more.

The following image shows the Video Call screen and control buttons during an ongoing call.



1. **Camera On/Off.** Click to toggle between turning on/off the camera. When the camera is turned off, the image displayed depends on the Video Call options you have set. See "Set up Video Call Options."
2. **Audio Mute/Unmute.** Click to toggle between muting/unmuting the audio.
3. **Main/Second Camera.** Click to toggle between using the Main (back) or Second (front) camera.
4. **Swap Image.** Click continuously to cycle through the available image display options.
5. **Image Display Area.** Displays your image and the other party's image depending on the selected Swap Image setting.

Use NAVIGATION left or right to choose the setting you want to change. Press CENTER OK to change the setting.

Swap image settings

The following table describes swap image settings and icons.

Icon	Description
	Both parties (My video small). The caller's image is large while your image is small. This is the default setting.
	Both parties (My video large). The caller's image is small while your image is large.
	Both parties (Equal). Both the caller and your image are the same size.
	Other party only. Only the caller's image is displayed.

To adjust the brightness level of your image

Use NAVIGATION up or down to adjust the brightness level of the image. A brightness level scale will appear on the upper-right corner of the screen.



Note The position of the brightness scale level on the upper right corner will depend on the Swap Image option selected.

Set up Video Call Options

1. On the Home screen, click **Start > Settings > Video Call > General**.
2. In **Show still image**, select the image you want to display when you turn off the camera.
 - **Preset (female)**. Displays a female picture in place of your image.
 - **Preset (male)**. Displays a male picture in place of your image.
 - **Custom image**. Lets you use an image from file as your display picture. To choose a custom image, scroll down (**Select a picture** becomes available) then use NAVIGATION right to choose an image.
 - **Last video frame**. Uses the last video frame before you stopped the camera as your display image.
3. Select the **Flip the 2nd camera video** check box if you are going to show a text document to the other party using the second camera.
4. Select the **Switch camera off when answering video call** check box to not send a video feed of yourself to the other party. Instead, the option you selected in **Show still image** will be displayed.
5. Select the **Show call timer** check box to display the call duration.


2.4 Receiving a Call

When you receive a phone call or video call, you have the option to answer it or ignore it.

To answer or ignore an incoming call

- To answer the call, press TALK (); to ignore, press END ().

 
To end a call

- Press END ().

2.5 In-Call Options

Your phone lets you manage multiple calls at the same time.

During a call, click **Menu** to access in-call options.

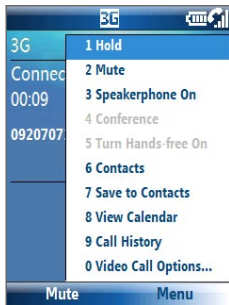

To enable Call Waiting

Call Waiting should be enabled and supported for you to be notified of an incoming call when you are using the phone.

1. On the Home screen, click **Start > Settings > Phone > Call Waiting**.
2. After the settings have downloaded from the service provider, select the **Provide call waiting notifications** check box and click **Done**.

To answer another call

1. Click **Answer** to take the second call and put the first call on hold.
2. Do one of the following while you are online with two calls.
 - To end the second call and return to the first call, press END ().
 - To switch between the two calls, click **Swap**.


To set up a conference call


Not all service providers support conference call. Contact your service provider for details.

1. Either put a call on hold (click **Menu > Hold**) and dial a second number, or, answer another incoming call during a call.
2. Click **Menu > Conference**.

- Notes**
- If the conference connection is successful, the word “Conference” appears at the top of the screen.
 - To add additional persons to your conference call, click **Menu > Hold**, enter the phone number, and then click **Resume** to return to the call.

To turn on and off the Speakerphone


- During a call, click **Menu > Speakerphone On**. The  icon appears at the top of the screen.
- To turn off the Speakerphone, click **Menu > Speakerphone Off**.

Alternatively, the speakerphone can be toggled on and off by pressing and holding TALK () during the call.

WARNING! To avoid damage to your hearing, do not hold your phone against your ear when the Speakerphone is turned on.


To mute a call

- During a call, click **Mute**.

When the microphone is turned off, the  icon appears on the screen. Click **Unmute** to turn on the microphone again.



2.6 Additional Dialling Information

Make an emergency call

- Enter the appropriate emergency number for your locale, and press TALK ().

Tip Additional emergency numbers may be included in your SIM/USIM card. Contact your service provider for details.

Make an international call


1. Press and hold the **0** (Zero) key on the keypad until  appears.
2. Enter the full phone number, and press TALK ().

For example: +1-909-2222222, which is in the following format:
+<country code>-<area code>-<phone number>.

Insert a pause or long pause in a dialling sequence

Some international calls or phone numbers require a pause or long pause in the dialling sequence in order for the call to process successfully.

1. On the Home screen, click **Start > Contacts**.
2. Select the contact and press CENTER OK to open the contact card.
3. Click **Menu > Edit**.
4. Position the cursor on the phone number where you want to insert a pause.
5. Click **Menu > Insert Pause** or **Insert Wait**. The letter “p” (Insert Pause) or “w” (Insert Wait) will appear in the number sequence to indicate where the pause or long pause will occur.
6. Click **Done**.

- Notes**
- Long pause is not available for contacts stored on the SIM/USIM card.
 - When you call a number that contains a long pause, you must press TALK () again to continue dialling.

2.7 SIM Tool Kit (STK)

A SIM/USIM card must be inserted in your phone in order to use this feature, which allows you to access a range of information services provided by your service provider.

1. On the Home screen, click **Start > SIM Tool Kit (STK)**.
2. To access a service, click the item in the list.

2.8 Setting Up Bluetooth SIM Access for Car Kit Phones

Car kits that support the SIM Access Profile (SAP) can connect to your phone and access its SIM/USIM card via Bluetooth.

- Notes**
- Make sure that all phone contacts are stored in the SIM/USIM card and not in the phone memory. Configure the car kit to download contacts only from SIM/USIM card.
 - Contact your wireless service provider to find out which car kit phone models are compatible with your phone.

1. In your phone, make sure that Bluetooth is turned on and set to Visible mode.
2. Click **Start > SAPSettings**.
3. On the BT Remote SIM Access screen, select the **Remote SIM Access** check box and click **Done**.
4. Connect the car kit phone to your phone via Bluetooth. To learn how to connect, consult your car kit phone's manual.
5. A pop-up message should appear on your phone saying that a connection has been established between your phone and car kit. Click **OK**.
6. On the BT Remote SIM Access screen, click **Done**.

Note You will not be able to make/receive calls, send/receive messages or perform related activities on your phone when the SIM Access Profile connection is active. You will be able to do all this from the car kit phone during this time.

Chapter 3

Synchronising Information with Your Computer

3.1 About Synchronisation

 
3.2 Using Microsoft Windows Mobile® Device Center

3.3 Installing and Using Microsoft ActiveSync®

3.4 Synchronising with Your Computer

3.5 Synchronising via Bluetooth

3.6 Synchronising Music and Video

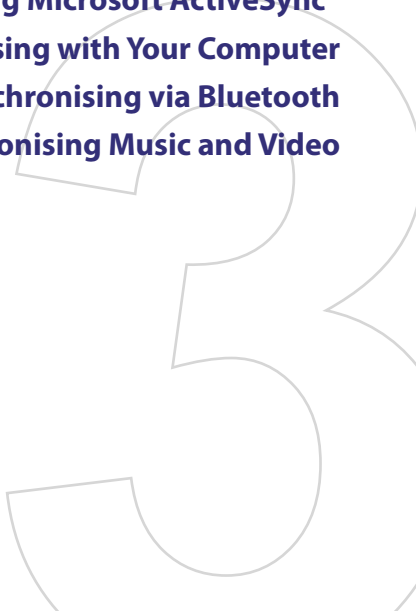

3.1 About Synchronisation

You can take information from your computer wherever you go by synchronising them to your phone. The following types of information can be synchronised:

- **Microsoft Outlook® information**, which include Outlook email, contacts, calendar, tasks, and notes
- **Media**, such as pictures, music and video
- **Favourites**, which are the bookmarked links to your favourite web sites
- **Files**, such as documents and other files

Before you can synchronise, you will first need to install and set up the synchronisation software on your computer. For information about installing and using the synchronisation software on your computer, see “Using Windows Mobile Device Center” and “Installing and Using ActiveSync” in this chapter.

Ways to synchronise

After you have installed the synchronisation software on your computer, synchronise your phone with your computer using one of the following methods:

- Connect and synchronise using the supplied USB sync cable. Upon connecting the sync cable to your phone and your computer, the synchronisation process starts automatically.
- Connect and synchronise using Bluetooth. You must first set up a Bluetooth partnership between your phone and your computer before you can synchronise information between them using Bluetooth. For more information about setting up a Bluetooth partnership, see Chapter 8. For information about synchronising through Bluetooth, see “Synchronising via Bluetooth” later in this chapter.

Note You can also synchronise Outlook email, contacts, calendar, and tasks on your phone with the Exchange Server at your work. For more information about setting up your phone to synchronise with the Exchange Server, see Chapter 7.

3.2 Using Microsoft Windows Mobile® Device Center

Microsoft Windows Mobile® Device Center is the replacement for Microsoft® ActiveSync® on Windows Vista®.

Note Some versions of Windows Vista come pre-installed with Windows Mobile Device Center. If Windows Mobile Device Center is not available on your Windows Vista, you can install it from the Getting Started Disc that came with your phone.

Set up synchronisation between your phone and PC

1. Connect your phone to your PC. Windows Mobile Device Center configures itself and then opens.
2. On the license agreement screen, click **Accept**.
3. On the Windows Mobile Device Home screen, click **Set up your device**.
4. Select the information types that you want to synchronise then click **Next**.
5. Enter a device name for your phone and click **Set Up**.

When you finish the wizard, Windows Mobile Device Center synchronises your phone automatically. Notice that Outlook emails and other information will appear on your phone after synchronisation.

Note In step 3, choose **Connect without setting up your device** if you only want to transfer media files, check for updates, and explore your phone but not sync Outlook information.

3.3 Installing and Using Microsoft ActiveSync®

Follow the steps below to install and set up ActiveSync 4.5 or later on Windows XP or other compatible Windows systems.

Note For a list of compatible Windows systems, please go to <http://www.microsoft.com/windowsmobile/activesync/activesync45.mspx>

Install and set up ActiveSync

1. Insert the Getting Started Disc into the disc drive on your PC.
2. Follow the on-screen instructions to install ActiveSync.
3. After installation is completed, connect your phone to your PC.
4. The Synchronisation Setup Wizard automatically starts and guides you to create a synchronisation relationship. Click **Next** to proceed.
5. To synchronise your phone with your computer, clear the **Synchronise directly with a server running Microsoft Exchange Server** check box then click **Next**.
6. Select the information types that you want to synchronise and then click **Next**.
7. Click **Finish**.

When you finish the wizard, ActiveSync synchronises your phone automatically. Notice that Outlook emails and other information will appear on your phone after synchronisation.

3.4 Synchronising with Your Computer

Connect your phone to your PC to synchronise the information between your phone and PC. While your phone is connected, ActiveSync (or Windows Mobile Device Center on your PC) synchronises every time you make a change on either the PC or your phone.

You can also manually start and stop synchronisation any time.

To start and stop synchronising

1. After connecting your phone to your PC, click **Start > ActiveSync** on your phone.
2. Click **Sync** to start synchronisation.

To end synchronisation before it completes, click **Stop**.

To change which information is synchronised

You can add or reduce the types of information to synchronise between your phone and PC.

1. Before changing synchronisation settings on your phone, disconnect your phone from your PC.
2. On your phone, click **Start > ActiveSync**.
3. Click **Menu > Options**.
4. Select or clear the items you want to synchronise or not synchronise. If you cannot select a check box, you might have to clear the check box for the same information type elsewhere in the list.
5. To customise settings for an item, select that item and click **Settings**. Settings are not available for all items.

Note The check boxes of the Favourites, Files, Media, and OneNote items are always grayed out in ActiveSync Options on your phone. You can only select or clear these items from Windows Mobile Device Center or ActiveSync on your computer.

To synchronise with more than one computer

You can set up your phone to synchronise with more than one PC or with a combination of one or more PCs and Exchange Server. When synchronising with multiple computers, the items that you synchronise will appear on all of the computers with which they are synchronised.

For example, if you have set up synchronisation with two PCs (PC1 and PC2), which have different items, and you synchronise Contacts and Calendar on your phone with both computers, the result is as follows:

Location	New state
PC1	All Outlook contacts and calendar appointments that were on PC2 are now also on PC1.
PC2	All Outlook contacts and calendar appointments that were on PC1 are now also on PC2.
Phone	All Outlook contacts and calendar appointments from both PC1 and PC2 are on your phone.

- Notes**
- Outlook email can be synchronised with only one computer.
 - To stop synchronising with one PC completely, click **Menu > Options**, click the computer name, then click **Menu > Delete**.

To resolve ActiveSync connection problem

When the PC is connected to the Internet or a local network, in some cases, the PC may disconnect the ActiveSync connection with your phone in favor of the Internet or network connection. If this happens, click **Start > Settings > Connections > USB to PC**, then clear the **Enable advanced network functionality** check box. This makes ActiveSync utilise a serial USB connection with your phone.

3.5 Synchronising via Bluetooth

You can connect and synchronise your phone with the PC using Bluetooth.

To synchronise with a computer via Bluetooth

1. Set up the synchronisation software (Windows Mobile Device Center or ActiveSync) on your computer to use a Bluetooth connection. For more information, see the software Help on your computer.
2. On your phone, click **Start > ActiveSync**.
3. Make sure that Bluetooth on both your phone and the computer are turned on and set to **Visible** mode. For more information, see “Bluetooth” in Chapter 8.
4. Click **Menu > Connect via Bluetooth**.
5. If this is the first time you have connected to this computer via Bluetooth, you must first complete the Bluetooth wizard on your phone and set up a Bluetooth partnership between your phone and the computer. For more information about creating a Bluetooth partnership, see “Bluetooth partnerships” in Chapter 8.

- Notes**
- To preserve battery power, turn off Bluetooth when not in use.
 - To connect and synchronise your phone with a computer via Bluetooth, your computer must have built-in Bluetooth or installed with a Bluetooth adapter or dongle.

3.6 Synchronising Music and Video

If you want to carry your music or other digital media along with you while you travel, set up Microsoft Windows Media Player on your computer to synchronise music and video with your phone.


Other than selecting the media information type in ActiveSync to be synchronised, all media synchronisation settings must be set in Windows Media Player. Before media can be synchronised, you must do the following:

- Install Windows Media Player Version 11 on the PC. (Windows Media Player 11 works only in Windows XP or later versions).
- Connect your phone to the PC with a USB cable.
- Set up a sync partnership between the phone and Windows Media Player.

For more information about Windows Media Player on your phone, see “Windows Media Player Mobile” in Chapter 9.

Chapter 4

Managing your Phone

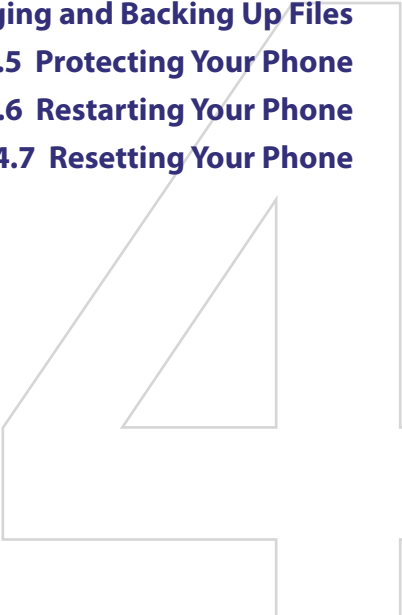- 4.1 Personalising Your Phone**
 - 4.2 Adding and Removing Programmes**
 - 4.3 Using Task Manager and Managing Memory**
 - 4.4 Managing and Backing Up Files**
 - 4.5 Protecting Your Phone**
 - 4.6 Restarting Your Phone**
 - 4.7 Resetting Your Phone**
- 

4.1 Personalising Your Phone

Set up the Home screen

The Home screen is the starting place for most of the tasks you perform on your phone. You can gain access to all features and programmes from the Home screen.

To customise the Home screen

1. On the Home screen, click **Start > Settings > Home Screen**.
2. In **Home screen layout**, **Color scheme**, **Background image**, and **Time out**, select the options you want, and click **Done**.

To set a picture as the background

1. On the Home screen, click **Start > Pictures & Videos**.
2. Select the picture you want to set as the background. Click **View** or press CENTER OK for a larger view of the image.
3. Click **Menu > Use as Home Screen**.
4. Use the NAVIGATION CONTROL to select the portion of the picture you want to use, and click **Next**.
5. In **Adjust the transparency**, select a higher percentage for a more transparent picture and then click **Finish**.

Note If the picture fits the screen, step 4 is skipped.

Set date, time, language, and other regional options

Your phone should already be set up with the regional settings that are appropriate for your locale.

To change regional settings

You can specify the language, locale, date and time style, as well as number and currency formatting options.

1. On the Home screen, click **Start > Settings > Regional Settings**.
2. In **Language**, select your preferred language.
3. In **Locale**, select the locale for the language you selected. The **Locale** option automatically changes the format of the remaining options (such as date, time, and currency) according to the locale you specify.
4. Click **Done**.

To set the date and time

1. On the Home screen, click **Start > Settings > Clock & Alarm > Date and Time**.
2. Set the **Time zone**, **Date**, and **Time**, and then click **Done**.

Choose how to be notified about events or actions

A profile is a group of settings that determine how your phone will alert you to phone events such as incoming calls and notifications.

To change the current profile

1. On the Home screen, click **Start > Settings > Profiles**.
2. Choose a new profile, and click **Done**.

Tip To quickly change the profile, briefly press **POWER** to display the Quick List, and choose a profile.

To edit a profile

1. On the Home screen, click **Start > Settings > Profiles**.
2. Select the profile to edit.
3. Click **Menu > Edit**.
4. Modify the settings, and click **Done**. To cancel without saving changes, click **Cancel**.

Tip To revert to the default profile settings, click **Menu > Reset to default**.

To specify the sound for an event

1. On the Home screen, click **Start > Settings > Sounds**.
2. For the desired event, select a sound. Select **None** if you do not want to hear a sound.
3. Click **Done**.

Note For ring tones, you can use sound files in either the ***.wav**, ***.mid**, ***.wma**, or ***.mp3** file format. For notifications or reminders, you can use ***.wav** or ***.mid** files.

Tip When you select a sound, the sound plays. To hear it again, select **Menu > Play**.

To set sound for the keypad and keyboard

1. On the Home screen, click **Start > Settings > Sounds**.
2. In **Keypad control**, select a sound. Select **None** if you do not want to hear any sound while pressing a key.
3. Click **Done**.

 
To copy a sound to your phone

After a sound file is located on your phone, you can use it for a ring tone, notification, or reminder. Sound files in either .wav, .mid, .wma, or .mp3 formats can be used.

1. Connect the phone to your PC using a USB connection.
2. On your PC, copy the sound file you want.
3. In Windows Mobile Device Center, click **File Management > Browse the contents of your device**.
Or
In ActiveSync on your PC, click **Explore** and double-click **My Windows Mobile-Based Device**.
4. Save the sound file on your phone by going to **Application Data > Sounds**, and pasting the file into that folder.

To set an alarm

1. On the Home screen, click **Start > Settings > Clock & Alarm > Alarm**.
2. In **Alarm time**, enter the time for the alarm to go off.
3. In **Alarm**, choose which whether to have the alarm go off every day or on weekdays only. To disable the alarm, select **Off**.
4. Click **Done**. The **Alarm** icon appears on the Time display area of the Home screen.

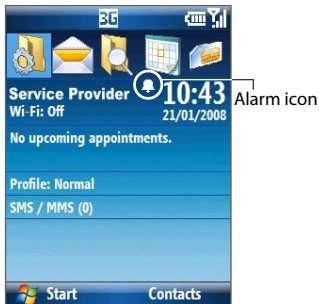

Set personal information

Entering and displaying owner information are best practices; they allow someone to return the phone to you in case it is lost.

To enter owner information

1. On the Home screen, click **Start > Settings > Owner Information**.
2. Enter the necessary information and click **Done**.

Set performance and maintenance options

To change accessibility settings

1. On the Home screen, click **Start > Settings > Accessibility**.
2. Select your preference for the following:
 - In **System font size**, set the size of the font that is displayed on the screen.
 - In **Multipress time out**, set the length of time between keypresses when entering text in Multipress mode.
 - In **Confirmation time out**, set the delay before an unconfirmed action times out.
 - In **In-call alert volume**, set the volume for incoming call or receiving new message alerts while you are in a call.
3. Click **Done**.

To change power management settings

You can use Power Management to check the battery, and configure settings that prolong battery life.

1. On the Home screen, click **Start > Settings > Power Management**.
2. Adjust the available settings:
 - In **Light Sensor Enable**, select whether to turn it on or off. If this is turned on, the light sensor senses the dark conditions and activates a backlight under the keypad and keyboard.
 - In **When device is turned on, do not charge the battery when connected to PC**, select **Off** if you want to charge the phone battery when the phone is connected to the computer through USB.
3. Click **Done**.

Tip **Main battery** indicates the amount of battery life remaining.

To find the operating system version number

- On the Home screen, click **Start > Settings > About**.

To find the phone specification

- On the Home screen, click **Start > Settings > Device Information**.

To turn on and off error reporting

1. On the Home screen, click **Start > Settings > Error Reporting**.
2. Select **Enable** or **Disable** and click **Done**.

4.2 Adding and Removing Programmes

Before you purchase additional programmes for your phone, make sure that they are compatible for Windows Mobile® 6 Standard operating system.

To add programmes

1. Download the programme to your PC (or insert the disc that contains the programme into your PC). You may see a single *.exe file, a *.zip file, a Setup.exe file, or several versions of files for different device types and processors. Be sure to select a programme designed for your phone and processor type.
2. Read the installation instructions that came with the programme.
3. Connect your phone to the PC and then double-click the *.exe file.

To remove a programme

Programmes that are preinstalled on the phone cannot be removed.

1. On the Home screen, click **Start > Settings > Remove Programmes**.
2. Scroll to the programme to remove, and then click **Menu > Remove**.

4.3 Using Task Manager and Managing Memory

Check Memory Status

To see how much memory is available

1. On the Home screen, click **Start > Settings > About**.
2. Scroll down to check the **Available Memory**.

To see how much storage space is available

 
1. On the Home screen, click **Start > Settings > About**.
2. Scroll down to check the **Available Storage**.

Use Task Manager

Task Manager allows you to view all the programmes currently running on your phone in the form of a list.

To start Task Manager

1. On the Home screen, click **Start > Task Manager**.
2. On the Task Manager screen, click **Menu** to open a list that lets you go to a specific programme, stop running programmes, and view system information.
3. To stop a running programme, select a programme on the list and click **Menu > Stop**.
4. To stop all running programmes, click **Menu > Stop All**.

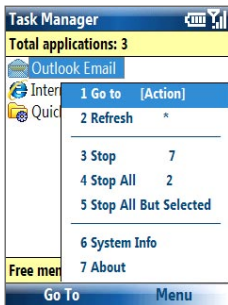

4.4 Managing and Backing Up Files

You can back up files to your PC using Windows Mobile Device Center or ActiveSync or copy files to a storage card that is installed on your phone. You can also efficiently manage your files and folders using File Explorer installed on your phone.

To copy files using Windows Mobile Device Center/ActiveSync to the PC

1. Connect your phone to your PC.
2. In Windows Mobile Device Center, click **File Management > Browse the contents of your device**.

Or

In ActiveSync on your PC, click **Explore**. This opens the Mobile Device folder for your phone.

3. Browse your phone for files that you want to copy to your PC.
4. Select and copy the files [**Ctrl + C**] and then paste them [**Ctrl+V**] to the destination folder in the PC.

Copying a file results in separate versions of a file on your phone and PC. Changes made to one file will not affect the other since the files are not synchronised.

Use File Explorer

File Explorer provides many easy-to-use features for file and folder management.

 
To start File Explorer

- On the Home screen, click **Start > File Explorer**.


File Explorer operates in the following two views:

- List View
- Icons View

File Explorer displays the entire file structure in your phone's memory. The functions focus primarily on folder management. When initially started, File Explorer is in List View by default. To switch between views, click **Menu > View > Icons** or **List**.

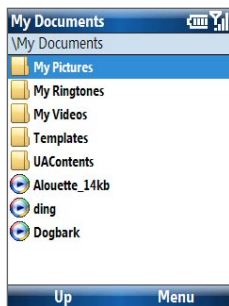


File Explorer - List View

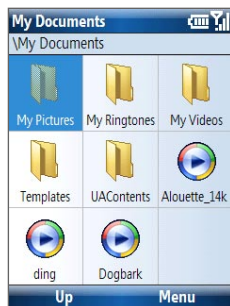 

File Explorer - Icons View

 In File Explorer, click **Menu** to open a list that lets you send or beam the file, view the file's properties, sort the files, and more.

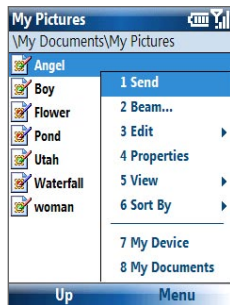

To send a file as an email attachment

1. In File Explorer, select a file and click **Menu > Send**.
2. On the Messaging screen, select an email account.
3. The file will automatically be attached to the new message. Specify the recipient and subject, and type your message.
4. Click **Send**.

Note You can also send the file via MMS.

4.5 Protecting Your Phone

You can protect your phone from unauthorised use by requiring a PIN (personal identification number) in order to make calls. Additionally, you can also lock the keypad/keyboard or the entire phone.

To enable the SIM PIN

1. On the Home screen, click **Start > Settings > Security > Enable SIM PIN**.
2. Enter your PIN, and click **Done**.

Note To cancel without enabling the SIM PIN, click **Cancel**.

To disable the SIM PIN

1. On the Home screen, click **Start > Settings > Security > Disable SIM PIN**.
2. Enter your PIN, and click **Done**.


To change the SIM PIN

Be sure to make a note of your PIN. When the SIM PIN is enabled, you must provide this PIN to unlock the phone.

1. Click **Start > Settings > Security > Change SIM PIN**.
2. In **Old PIN**, enter the current PIN.
3. Enter and confirm the new PIN, and click **Done**.

To lock the keypad and keyboard

Locking the keypad and keyboard turns off its functionality. This is a helpful feature if, for example, the phone is turned on and in your pocket, and you want to prevent accidental keypresses.

- On the Home screen, press and hold END (). Once the keypad and keyboard are locked, the left soft key label changes to **Unlock**.

Tip To quickly lock the keypad and keyboard, press **POWER** briefly to display the Quick List, and select **Lock**.

Note You can still receive calls and make emergency calls when the keypad and keyboard are locked.

To unlock the keypad and keyboard

- On the Home screen, click **Unlock** and press the ***XT9** key.

Tip By default, the keypad will become unlocked when you slide the QWERTY keyboard out. You can change the setting by clicking **Start > Settings > Button Lock** and then selecting or clearing the **Unlock device when keypad is opened** option.

To enable the phone lock

- On the Home screen, click **Start > Settings > Security > Device lock**.
- Select **Prompt if device unused for**, then select the amount of time for the phone to be inactive before automatically locking.
- Select the **Password type**, then enter and confirm your password.
- Click **Done**.

Note Once you configure the phone lock settings, you can enable the phone lock from the Quick List directly without configuring the settings again.

To disable the phone lock

- Click **Unlock** and then enter the password you have set to unlock your phone.

To encrypt files on the microSD card

- Click **Start > Settings > Security > Encryption** and select **Encrypt files placed on storage cards**.

4.6 Restarting Your Phone

Restart your phone when a programme is not performing properly or the phone is not responding to any keypresses.

To restart the phone

- Remove the battery.
- Wait for three seconds, then reinsert the battery and turn on your phone.

WARNING! If the phone is restarted while a programme is running, any unsaved work will be lost.

4.7 Resetting Your Phone

Resetting your phone will remove all the data from its memory and restore the phone back to the factory default settings.

Note If **Encrypt files placed on storage cards** is or was enabled before, then backup all files from the storage card BEFORE using Clear Storage or updating the ROM system software. Otherwise you will no longer be able to access the encrypted files on the storage card. Use ActiveSync or Windows Mobile Device Center to transfer files between your storage card and computer. After the procedure, copy your files back to the storage card.

WARNING! Because all your data will be deleted, it is recommended that you back up your data first before resetting your phone.

To reset your phone

1. Click **Start > Expert > Clear Storage**.
2. Follow the on-screen instructions to reset the phone. The phone will restart after it has been reset.

Chapter 5

Organising Phone Information

5.1 Contacts

 
5.2 SIM Manager

5.3 Calendar

5.4 Tasks

5.5 Quick Notes

5.6 Voice Notes

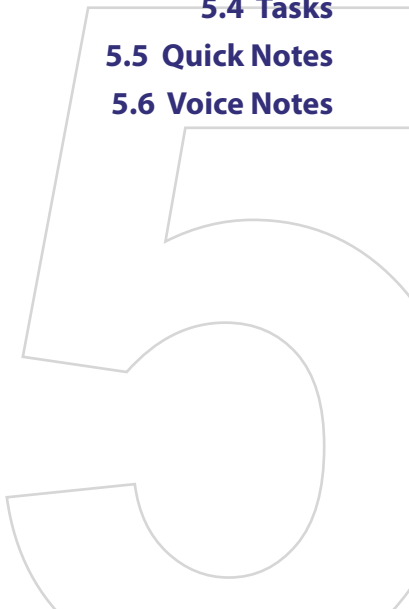

5.1 Contacts

Contacts is your address book and information storage for the people and businesses you communicate with.

If you use Outlook on your PC, you can synchronise contacts between your phone and PC.

Create a contact on your phone

To create a new contact on your phone

1. On the Home screen, click **Start > Contacts > New > Outlook Contact**.

To create a new contact on your SIM/USIM card, select **SIM Contact**. You can also use SIM Manager to add contacts to your SIM/USIM card. For more information about SIM Manager, see “SIM Manager” in this chapter.

2. Enter information for the new contact.
 - To easily identify the caller, you can assign a custom ring tone to each Outlook contact. To assign a custom ring tone, scroll down to **Custom ring tone**, and select the desired ring tone.
 - To assign a picture to a contact, scroll down to **Pictures** and click **Select a picture** and select the picture you want. To remove the picture, click **Menu > Remove Picture**.
3. Click **Done**.


Tip If someone who is not in your list of contacts calls you or sends you a message, you can quickly create a contact from Call History or from the message by clicking **Menu > Save to Contacts**.


Edit and call a contact

To view and edit a contact information

1. On the Home screen, click **Start > Contacts**.
2. Select the contact whose information you want to view or edit and click **Menu > Edit**.
3. When finished making changes, click **Done**.

To call a contact from the contact list

1. On the Home screen, click **Start > Contacts**.
2. Select the contact to call and press TALK (). The contact's default phone number is dialled.

Tip To call a phone number other than the default, click the contact, scroll to the number you want to dial, and press TALK ().

Find a contact

To find a contact

1. On the Home screen, click **Start > Contacts**.
2. Do one of the following:
 - Begin entering a name or phone number of the contact until the contact is displayed. When you press a key, such as **5**, you find first and last names that begin with **J**, **K**, and **L**, as well as phone numbers that start with **5**. The next key you press continues to narrow the search.
 - If you have assigned categories (e.g. Business) to your Outlook contacts, you can filter the contact list by categories. In the contact list, click **Menu > Filter** and then click a category. To show all contacts again, select **All Contacts**.
 - If you have entered information under **Company** for your Outlook contacts on your phone, you can quickly locate the contacts that work for a specific company. In the contact list, click **Menu > View By > Company**. Click the company to see the contacts who work there.

Note If you are not in Name view, click **Menu > View By > Name**.

Share contact information

To beam contact information to another device via Bluetooth

1. On the Home screen, click **Start > Contacts** and then select the contact whose information you want to beam.
2. Click **Menu > Send Contact > Beam**.
3. Select the device where you want to beam the contact details to and click **Beam**.

Note Before you can beam, make sure Bluetooth is turned on and set to Visible mode on your phone and the target mobile device. For more information, see "Bluetooth" in Chapter 8.

To send contact information via a text message

1. On the Home screen, click **Start > Contacts** and then select the contact whose information you want to send.
2. Click **Menu > Send Contact > SMS \ MMS**. Select the contact information that you want to send and click **Done**.
3. In the new text message, enter the mobile phone number of the person to whom you are sending the contact information to and click **Send**.

To send contact information via MMS

1. On the Home screen, click **Start > Contacts**.
2. Select a contact, then click **Menu > Send as vCard**.
3. Enter the recipient in **To** of the MMS message, then click **Send**.

If the recipient accepts the beam, text message, or MMS message, the contact information you sent are automatically saved in that person's Contacts list.

5.2 SIM Manager

SIM Manager allows you to view the contents of your SIM/USIM card and transfer contacts from your SIM/USIM card to your phone and vice versa.

To create a contact on your SIM/USIM card

1. Click **Start > Expert > SIM Manager**.
2. Click **New** and enter the contact name and phone number.
3. Click **Save**.

Tip To change contact information on your SIM/USIM card, click a contact and edit it. After modifying, click **Save**.

To copy SIM contacts to your phone

1. Click **Start > Expert > SIM Manager**.
2. Select a SIM contact or select all SIM contacts by clicking **Menu > Select All**.
3. Click **Menu > Save to Contacts**.

To copy phone contacts to the SIM/USIM card

Only one phone number per contact name can be stored on a SIM/USIM card. When you copy a contact that has several phone numbers to your SIM/USIM card, SIM Manager saves each number under a separate name.

To save each number under a different contact name on the SIM/USIM card, SIM Manager appends an indicator at the end of each name. You can edit this indicator first before you start copying contacts to your SIM/USIM card.

 
1. Click **Start > Expert > SIM Manager > Menu > Tools > Options**.
2. On the Options screen, select the check boxes of the types of phone numbers that you want to be added to the SIM/USIM card.
3. Under the **Mark** column, you can change the indicator that will be appended to the SIM contact names for each phone number type. To do so, select a phone type, click **Edit**, enter your desired indicator, then click **Save**.
4. After modifying, click **OK**.

5. Click **Menu > Contacts to SIM**.
6. Select the check boxes of the contact's phone numbers that you want to copy to your SIM/USIM card, then click **Save**.

To display your phone number in SIM Manager

1. On the SIM Manager screen, click **Menu > Tools > List of Own Numbers**.
2. Click **Edit**.
3. Change the name, if desired, then enter your mobile phone number.
4. Click **Save**.

When your phone number is stored on the SIM/USIM card, it will appear on the SIM Manager screen.

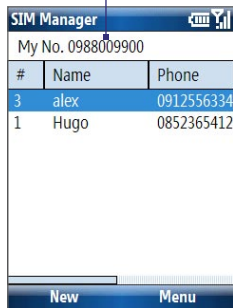

5.3 Calendar

Use Calendar to schedule appointments, including meetings and other events. If you use Outlook on your PC, you can synchronise appointments between your phone and PC.

Create a personal appointment

To set Calendar options

1. On the Home screen, click **Start > Calendar**.
2. Click **Menu > Tools > Options**.
3. Scroll through the available settings and set your desired default options.
4. Click **Done**.

To schedule an appointment

1. On the Home screen, click **Start > Calendar**.
2. Click **Menu > New Appointment**.
3. Enter information about the appointment.
 - To schedule an all-day event, in **End time**, select **All day event**.
 - To make the appointment recurring, click **Occurs**.
4. Click **Done**.

Note All-day events do not occupy blocks of time in Calendar; instead, they appear in banners at the top of the calendar.

 
View your appointments

To view your schedule

You can view your schedule in three different views: **Month**, **Week**, and **Agenda**.

1. On the Home screen, click **Start > Calendar**.
2. Click the left SOFT KEY or click **Menu** and choose the view you want.


Highlighted areas represent time segments that have scheduled appointments.

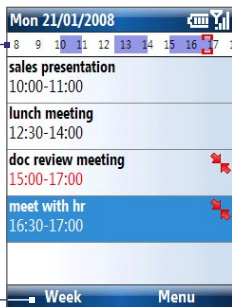

Click an item to view the details of the appointment.

Click to change the view.

Agenda View

An appointment with the  icon indicates that the scheduled appointment has a conflict with one or more existing appointments.

Send appointments

To send a meeting request

You can send meeting requests via email to persons that use Outlook or Outlook Mobile.

1. Click **Start > Calendar**.
2. Schedule a new appointment and then scroll down to **Attendees** and click **No Attendees**. Click **Add Required Attendee** or **Add Optional Attendee** to add the contacts you want to send the meeting request to.
3. Choose the contact(s) you want to send the meeting request to and click **Select**.
4. On the New Appointment screen, click **Done**. The meeting request is sent out.

- Notes**
- You can only specify if an attendee is required or optional if your phone is connected to a Microsoft Exchange 2007 server. Otherwise, all attendees are designated as required. For more information, see Chapter 7.
 - To remove an attendee from the list, select the attendee and click **Menu > Remove Attendee**.
 - When attendees accept your meeting request, the meeting is automatically added to their schedules. When their response is sent back to you, your calendar is updated as well.

To send a calendar appointment

You can send a calendar appointment to another phone over MMS.

1. On the Home screen, click **Start > Calendar**.
2. Select an appointment, then click **Menu > Send as vCalendar**.
3. Enter the recipient in the **To** line of the MMS message, then click **Send**.

5.4 Tasks

Use Tasks to keep track of things you need to do.

To create a task

1. On the Home screen, click **Start > Tasks**.
2. Click **Menu > New Task**.
3. Enter the necessary task information and click **Done**.
 - Set a **Priority** for the task. This item can be referenced when sorting tasks.
 - Enter a **Start date** and **Due date** if the task starts and ends at a specific time.
 - Enter a **Reminder** if you want to be notified if the task is due.
 - Enter the **Categories** (you can set more than one) that best describes the task. This item can be referenced when filtering tasks.

- Notes**
- You can synchronise information on your phone with your PC to keep your task list up to date in both locations.
 - If you create a new task with a reminder on your PC and then synchronise tasks with your phone, the reminder will play at the time that was set on your PC.

To locate a task

1. On the Home screen, click **Start > Tasks**.
2. In the task list, do one of the following:
 - To sort the list, click **Menu > Sort by**, and click a sort option.
 - To filter the list by category, click **Menu > Filter**, and click the category you want displayed.

To mark a task as completed

1. On the Home screen, click **Start > Tasks**.
2. Select the task, and click **Complete**.

5.5 Quick Notes

Quick Notes lets you type messages that you frequently use and save them on your phone. You can then send them via email, text message, or MMS.

To create a new note

1. On the Home screen, click **Start > Quick Notes**.
2. Click **New**.
3. Enter the text and click **Done**.

To send a note

1. On the Home screen, click **Start > Quick Notes**.
2. On the Quick Notes list, select the text you want to send and click **Menu > Send**.
3. On the Messaging list, select the account you want to use and click **Select**.

5.6 Voice Notes

Use Voice Notes to create short voice recordings. Voice notes are included in the All Notes list and are named consecutively (Recording1, Recording2, and so on).

To create a voice note

1. On the Home screen, click **Start > Voice Notes**.
2. Hold the phone's microphone near your mouth.
3. Click **Record** and say your voice note.
4. Click **Stop** to stop recording a voice note.

To delete a voice note

1. On the Home screen, click **Start > Voice Notes**.
2. Select the voice note to delete.
3. Click **Menu > Delete**.
4. Click **Yes**.

Tip If you delete a voice note that has a default name, such as Recording1, this name becomes available for a new voice note.

To listen to a voice note

1. On the Home screen, click **Start > Voice Notes**.
2. Select the voice note to play, and press CENTER OK.

Tip To stop listening to the voice note, click **Stop** while the voice note is playing.

To use a voice note as a ring tone

1. On the Home screen, click **Start > Voice Notes**.
2. Select the voice note, and click **Menu > Set As Ringtone**.

Chapter 6

Exchanging Messages

6.1 Messaging

6.2 Text Message

 
6.3 MMS Messages

6.4 Setting Up Email Accounts


6.5 Email

6.1 Messaging

Messaging is where all of your email, text message, and MMS accounts are located. When you receive a new message, you can open that particular message from the Home screen. Simply scroll to the row where the new message is and click it.

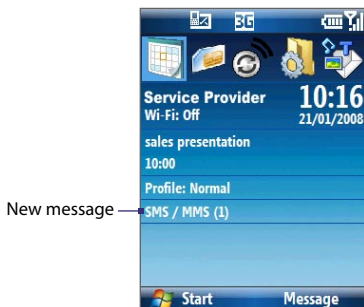

 To access your message accounts, click **Start > Messaging** and then click the account you want to open. While in a messaging account's main screen, click **Menu > Tools > Switch Accounts** to switch to another message account.

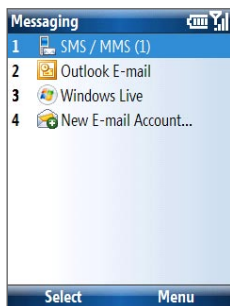

Messaging screen

To change message account settings

- On the Messaging screen, select the message account whose settings you want to change and click **Menu > Settings**.
- On a message account's message list, click **Menu > Tools > Options**.

6.2 Text Message

Send short text messages to your contacts.

Compose and send text messages

To compose and send a text message

1. On the Home screen, click **Start > Messaging > SMS \ MMS**.
2. Click **Menu > New > SMS**.
3. Enter the mobile phone number of one or more recipients, separating them with a semicolon (;).
To access phone numbers from Contacts, in **To**, click **Menu > Add Recipient**. Select a contact from the list and press CENTER OK.
4. Enter your message. You can enter up to 160 characters in one message.
5. Click **Send**.


Tips

- To cancel the text message, click **Menu > Cancel Message**.
- If you want to know whether your text message has been received, before sending the message, click **Menu > Message Options** and select **Request message delivery notification**.

Note Text messages can only be sent if your phone is connected to a GSM/EDGE or HSDPA/UMTS network.

Receive text messages

Text messages are automatically received when the phone function is turned on. When the phone is turned off, text messages are held by your wireless service provider until the next time your phone is turned on.

- Save your SMS messages to your SIM/USIM card by clicking **Menu > Copy to SIM**.
- Copy SMS messages saved on your SIM/USIM card to the Inbox by clicking **Menu > Copy to Phone**. Copying them to your phone results in duplicate messages in the Inbox folder when the SIM/USIM card is in use.
- The  icon next to a message indicates that it is saved on the SIM/USIM card.

6.3 MMS Messages

 
Creating and sending Multimedia Message Service (MMS) messages to your friends and family is fun and easy.

To access MMS

- On the Home screen, click **Start > Messaging > SMS \ MMS**.

To access MMS message folders

- Click **Start > Messaging > SMS \ MMS** then click **Menu > Folders**.

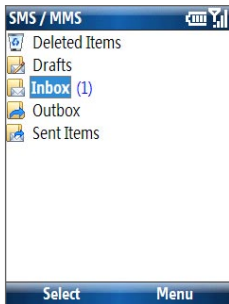

MMS Message Folders

Edit MMS settings

When you purchase your phone, it is already preset with your wireless service provider's MMS server settings. If you accidentally lost the preset settings or you changed to another wireless service provider, follow the steps below to configure MMS settings.

To configure MMS settings

 
- Click **Start > Message Options** to open the Preferences screen.
- Select or clear the provided check boxes according to your needs.
- On the Preferences screen, click **Menu > MMSC Settings** to access Multimedia Messaging Service Center (MMSC) settings.

4. Check if your phone is preset with MMS server settings.

If there are no preset settings, click

Menu > New on the MMSC Settings screen and enter the needed information you see on the screen. You can get the information from your wireless service provider.

5. Click **Done**. The MMS server settings will then be added as an entry on the MMSC Settings screen.

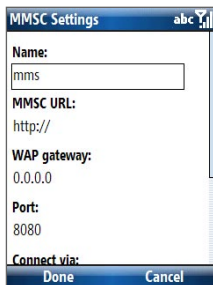

Note If you add several MMS service providers to the MMSC Settings screen, you can choose one as your default MMS provider. Select the MMS provider's name in the list, then click **Menu > Set as Default**.

 
Create and send MMS messages

You can compose MMS messages in a combination of various slides, where each slide can consist of a photo, audio or video clip, and/or text.

- Notes**
- MMS is a charged service. In order to use MMS successfully, this has to be provisioned on your mobile account. Please contact the wireless service provider to have this provisioned as part of your calling plan.
 - Make sure the size of the MMS is within the limits of the wireless service provider while sending it to another mobile phone user or to an email address.

To start composing an MMS message

1. Click **Start > Messaging > SMS \ MMS** then click **Menu > New > MMS**.
2. In **To**, enter the recipient's phone number or email address.
3. In **Subject**, enter a subject for your message.
4. Click **Insert Picture/Video** to select a photo or video clip from the Select Media screen and insert it.

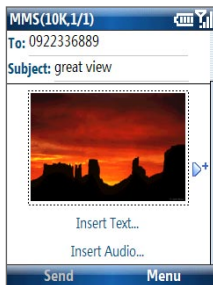

To capture a new photo, click the **Capture Image** icon () or click **Menu > Capture Image**.

To record a new video, click the **Capture Video** icon () or click **Menu > Capture Video**.

5. Click **Insert Text** to enter text for your MMS message.


To insert predefined text or emoticons, click **Menu > Insert My Text** or **Insert Emoticon**.

6. Click **Insert Audio** to insert an audio clip. Select an audio clip on the Select Audio screen.

To record a new audio clip, click **Menu > Capture Audio**.

7. Click **Send** to send the message.

Tip After inserting an MMS message element, press NAVIGATION right to add a new slide.

- Notes**
- To send a copy of this message to others, highlight the **To** field and use NAVIGATION up to display the **Cc** and **Bcc** fields.
 - To remove the photo, text, or audio, select the item and press the BACK key (.

View and reply to MMS messages

To receive MMS messages

- On any MMS message folder screen, click **Menu > Send/Receive**.
By default, messages are automatically downloaded to your phone.

To view an MMS message

You can view MMS messages in several ways.

- Press CENTER OK to view and play the message on your phone. Click **Pause** or **Menu > Stop** to pause or stop the playback of the message.
- Click **Menu > Content View** to see a list of files included in the message. To open a file, select it and click **Open**. To save a file, select it, and click **Save**, **Menu > Save Audio**, or **Menu > Save Photo**.
- View each slide included in the message by clicking **Menu > Next**.

To reply to an MMS message

- Click **Menu > Reply > Reply** to reply to the sender of the message, or click **Menu > Reply > Reply All** to reply to all persons listed in the To and CC boxes of the message. Click **Menu > Reply > Forward** to forward the message to someone else.

6.4 Setting Up Email Accounts

Types of Email Accounts

Before you can send and receive email, you need to set up your email account on your phone. You can set up the following types of email accounts on your phone:

- Outlook email that you synchronise with your PC or your company's Exchange Server
- Internet email account that you have from an Internet Service Provider (ISP)
- Work account that you access using a VPN connection
- Windows Live Mail
- Other web-based email accounts, such as Gmail, Yahoo! Mail, etc.

Set up your phone to synchronise Outlook email with the computer

If you have installed the synchronisation software on your PC and created a partnership with your phone, then your phone is ready to send and receive Outlook email. If you have not yet installed the synchronisation software or created a partnership, follow the procedures in Chapter 3.

Tip To set up your company email account so that you can access Outlook email messages wirelessly, you must set up your phone to synchronise via an over-the-air connection with your company's Exchange Server. For more information about synchronising with your company email server, see Chapter 7.

Email Setup Wizard

Windows Mobile's **Email Setup Wizard** lets you easily set up your personal and work email accounts. You can add an email account from an Internet Service Provider (ISP) or other email provider as well as web-based accounts such as Gmail®, Yahoo!® Mail Plus, AOL®, etc.

Note For more information about setting up your company Outlook email account, see Chapter 7.

Set up a POP3/IMAP4 email account

Set up a POP3 or IMAP4 email account on your phone if you have an email account from an Internet service provider (ISP), or a Web-based account such as Gmail, Yahoo! Mail Plus, etc. You can also add a work account that you access using a VPN server connection as a POP3/IMAP4 account.

1. On the Home screen, click **Start > Messaging > New Email Account**.
2. Enter your email address, and select the **Try to get email settings automatically from the Internet** check box.

By selecting the option, the phone attempts to download email server settings so that you do not need to enter them manually.

3. Click **Next**.
4. After Auto Setup finishes, click **Next**.

If Auto Setup is unsuccessful, select **Internet email** from the **Your email provider** list on the next screen. You will be asked to enter email server settings during the setup process. See "To specify email server settings" for details.

5. Enter your name. You can also edit the **Account display name** field to specify the name of your ISP or email provider. Click **Next**.
6. Enter your login name if it does not show automatically in the **User name** field. Also enter your password, and select the **Save password** check box. Click **Next**.
7. At this point, email setup is complete. In the **Automatic Send/Receive** list, choose how frequent you want email messages to be automatically sent and downloaded on your phone.

Click **Review all download settings** to select download options, set the email format as HTML or plain text, and more. For more information, see “To customise download and format settings.”

8. Click **Finish**.

To specify email server settings

If Auto Setup is unsuccessful, contact your ISP or email provider for the incoming mail server and outgoing mail server settings so you can enter them on your phone. Other options that you can select include the following:

- Select the **Outgoing server requires authentication** check box, if required by your provider.
- If the outgoing email server requires a different user name and password for sending email, clear the **Use the same user name and password for sending email** check box. You will be prompted to enter these information.
- Click **Advanced Server Settings**, then select the **Require SSL** check boxes if your email provider uses an SSL connection for more secured email.

From the **Network connection** list, select the data connection that you use for connecting to the Internet.

To customise download and format settings

Before you click **Finish** when setting up your POP3 or IMAP4 email account, you can click **Review all download settings** to choose download options, message format, and other settings. Click **Advanced Settings** for further options.

Options	Description
Automatic Send/Receive	You can select a time interval for connecting to the Internet automatically to send and receive messages.
Download messages	Set the number of days of messages that you want to be downloaded to your phone.
Send/receive when I click Send	By default, messages are immediately delivered when you click Send . If you prefer to save outgoing messages to the Outbox folder first, clear the check box. (In this case, you will need to manually send messages by clicking Menu > Send/Receive).

Options	Description
Use automatic send/receive schedule when roaming	This allows your phone to data roam when there is a set time interval for connecting to the Internet automatically. Since this may result in higher connection costs, you may want to leave the check box cleared.
When deleting messages	Choose whether to delete messages from the mail server when you delete them on your phone.
Message format	Select HTML or Plain Text.
Message download limit	Select the email download size. If you have large volumes of email, use a lower size or select to download headers only.

6.5 Email

After setting up email accounts on your phone, you can start sending and receiving email messages.

Create and reply to emails

To compose and send an email

1. Click **Start > Messaging** then select an email account.
2. Click **Menu > New**.
3. Enter the email address of one or more recipients, separating them with a semicolon. To access email addresses stored in Contacts, in **To**, click **Menu > Add Recipient**. Select a contact from the list and press CENTER OK.
4. Enter a subject and compose your message. To quickly add common messages, click **Menu > My Text** and click a desired message.
5. Click **Send**.

- Tips**
- To set the priority, click **Menu > Message Options**.
 - If you are working offline, email messages are moved to the Outbox folder and will be sent the next time you connect.

To add an attachment to an email

1. In the message that you are composing, click **Menu > Insert** and click the item you want to attach: **Picture**, **Voice Note**, or **File**.
2. Select the file you want to attach, or record a voice note.

View and reply to emails

 
When in an email account, press and hold **0** (zero) to open a shortcut list of often-used commands. Press and hold the shortcut key to execute the command.

To filter the Inbox message list

Filter the email messages in your Inbox to only display the emails that contain the sender or email subject you are searching for.

Enter the sender name or email subject you want to look for using the keypad or keyboard. As you press keys, the list narrows down to the conditions you set.

For example, pressing “S” then “A” narrows the list to only the emails that contain sender names and email subjects that start with “SA.”

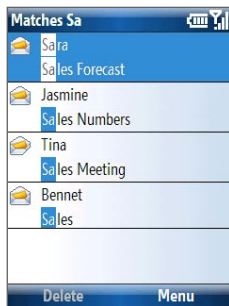

To read incoming messages

By default, only the first few kilobytes of a message are shown when you open and read an incoming message. To read the whole message, do one of the following:

- Scroll down to the end of the message and click **Get the rest of this message**; or
- Click **Menu > Download Message**.

To download an attachment

In an open message with an attachment to download, click the attachment. If there is more than one attachment, click the other attachments to download them. You can directly open the file in the associated programme after you download them by clicking the attachment again.

To reply to or forward an email

1. Open the message and click **Menu > Reply > Reply, Reply All, or Forward**.
2. Enter your response. To quickly add common messages, click **Menu > My Text** and choose a desired message.
3. Click **Send**.

Tips

- To see more header information, scroll up.
- To always include the original message, from the list view, click **Menu > Tools > Options > Sending**, and select the **Include copy of original message when replying to email** check box.
- In the Outlook Email account, you will send less data if you do not edit the original message. This may reduce data transfer costs based on your rate plan.

To view and reply to HTML emails

You can receive, view and reply to HTML emails from any type of email account. The HTML format is retained, without layout shifting or resizing.

Note HTML email support in Outlook Mobile is available only if your company is using Microsoft Exchange Server 2007.

1. Set the message format to HTML. To find out how to set the message format, see “Customise email settings”.
2. Click **Start > Messaging**, select your email account, and open an HTML email that you received.
3. Click **Get the rest of this message** that’s shown at the bottom of the message to download the whole message.
4. Scroll up (if needed) and click **Click to scroll right** to be able to scroll sideways and get a complete horizontal view of the message.
5. Click **Reply** or click **Menu > Reply** and choose whether to reply to the sender(s) or forward the message.
6. Enter your response and click **Send**.

Tip

Email can contain hyperlinks to Web pages.

Send and download emails

The manner in which you send and receive emails depends on the type of email account you have.

To send and receive email for an Outlook account

1. Click **Start > ActiveSync**.

2. Connect your phone to your PC.

Otherwise, connect wirelessly if you are synchronising Outlook email with your company email server. For more information, see Chapter 7.

3. Synchronisation automatically begins, and your phone sends and receives Outlook email.

Tip You can also manually synchronise anytime by clicking **Sync** in ActiveSync or **Menu > Send/Receive** in Outlook Mobile.

To send and receive email for a POP3/IMAP4 account

If you have an email account with an ISP or a work account that you access using a VPN server connection, you send and receive messages through a remote email server. Before sending and downloading messages, you first need to connect to the Internet or your corporate network.

1. Click **Start > Messaging** and click your POP3/IMAP4 email account.
2. Click **Menu > Send/Receive**. The messages on your phone and email server are synchronised: new messages are downloaded to the phone Inbox folder, messages in the phone Outbox folder are sent, and messages that have been deleted from the server are removed from the phone Inbox folder.

Customise email settings

To change the download size and format for Outlook email

1. Disconnect your phone from the computer.
2. Click **Start > ActiveSync**.
3. Click **Menu > Options**, select **Email**, then click **Settings**.
4. On the Email Sync screen, set the **Download size limit** and **Message format**.
5. Close ActiveSync and reconnect your phone to the computer.

To change the download size and format for POP3/IMAP4 email

1. On the POP3/IMAP4 email message list, click **Menu > Tools > Options > Account Settings**.
2. Keep clicking **Next** until you reach the screen where the first item is **Message format**.
3. Configure the **Message format** and **Message download limit** settings.
4. Click **Finish**.

To exclude your email address when replying to all

When you reply to all the recipients of an Outlook email, your own email address will also be added to the recipient list. Customise ActiveSync so that your email address will be excluded from the recipient list.

1. In ActiveSync on your phone, click **Menu > Options**.
2. Select the **Email** information type and click **Settings**.
3. Click **Menu > Advanced**.
4. In the **My email addresses** text box, enter your email address.
You can add multiple email addresses here. If you want to enter more than one, separate the email addresses with a semicolon.
5. Click **Done**.

Chapter 7

Working with Company Emails and Meeting Appointments

7.1 Synchronising with Your Company Email Server

7.2 Working with Company Emails

7.3 Managing Meeting Requests

7.4 Finding Contacts in the Company Directory

7.5 Email Security



7.1 Synchronising with Your Company Email Server

Synchronise your phone with your company's Microsoft Exchange Server to keep you connected with your emails, contacts, calendar, and other information.

Set up a company email server connection

Use your phone to access your company emails by setting up an Exchange Server connection. You can get the company email server information from your network administrator:

1. Click **Start > Messaging > New Email Account**.
2. Enter your email address. Clear the **Try to get email settings automatically from the Internet** check box, then click **Next**.
3. In **Your email provider**, select **Exchange server** and click **Next**.
4. On the screen that follows, click **Next**.
5. In **Server address**, enter the Exchange Server name, and click **Next**.
6. Enter your user name, password, and domain, and click **Next**.
7. Select the check boxes for the types of information items that you want to synchronise with the Exchange Server.
8. To change synchronisation settings of an information type, for example, email, select information type, and click **Menu > Settings**.
9. Click **Finish**.

- Tips**
- To change the rules for resolving synchronisation conflicts, click **Menu > Advanced**.
 - To change Exchange Server settings, open ActiveSync on your phone and click **Menu > Configure Server**.

Note If you synchronised emails with your PC before, open ActiveSync on your phone and click **Menu > Add Server Source** to set up an Exchange Server connection. When you are prompted to select information types for synchronisation, you need to clear the **Email** check box under the Windows PC item first before you can select the **Email** check box under Exchange Server.

Start synchronisation

Before you start synchronising with the Exchange Server, make sure your phone has been set up with a data connection to the Internet so that you can synchronise wirelessly. See Chapter 8 for details.

After you finish setting up an Exchange Server connection, your phone automatically starts synchronisation. You can manually start synchronisation anytime by clicking **Sync** in ActiveSync.

Note If you connect your phone to your office computer via a USB or Bluetooth connection, you can use this connection to the PC to “pass through” to the network and download Outlook emails and other information to your phone.

7.2 Working with Company Emails

Your phone gives you instant access to your company emails and lets you manage your messages easier. Messaging features such as Direct Push, Fetch Mail, and Filtering messages are just some of the tools you can use to manage your emails.

Note Some messaging features depend on the Microsoft Exchange Server version used. Please check with your network administrator for the availability of Exchange Server features.

Automatic synchronisation through Direct Push


Direct Push technology (push email feature) enables you to receive new emails on your phone as soon as they arrive in your Inbox on the Exchange Server. With this feature, items such as contacts, calendar and tasks are also immediately updated onto your phone when these items have been changed or new entries have been added on the Exchange Server. To make Direct Push work, you need to have a GPRS connection on your phone.


You need to perform a full synchronisation between your phone and the Exchange Server first before Direct Push can be enabled.

Requirement The Direct Push feature works for your phone only if your company is using **Microsoft Exchange Server 2003 Service Pack 2 (SP2) with Exchange ActiveSync** or higher version.

To enable Direct Push via Comm Manager

 
 
1. Click **Start > Comm Manager**.
2. On the Comm Manager screen, click the **Microsoft Direct Push** button.

The  button on this item indicates that you will receive emails as they arrive.

The  button on this item indicates that you need to manually retrieve your emails.

To enable Direct Push via ActiveSync

1. In ActiveSync on your phone, click **Menu > Schedule**.
2. Select **As items arrive** in the **Peak times** and **Off-peak times** boxes.

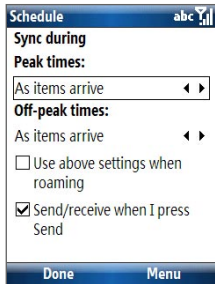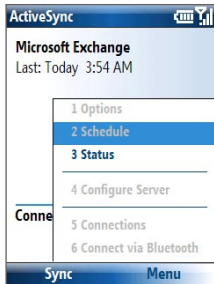

Note When both the GPRS and Wi-Fi connections are turned on at the same time, the Direct Push feature will always opt for GPRS, for which you could be charged as per your network operator's service plan.

Scheduled synchronisation

If you do not want to use Direct Push, you can set a regular schedule for synchronising Outlook email and information.

1. In ActiveSync on your phone, click **Menu > Schedule**.
2. Select a shorter time interval in the **Peak times** box for you to be able to receive emails more frequently.
3. Select a longer interval in the **Off-peak times** box.

Tip Click **Menu > Peak Times** to set the peak and off-peak times.

Instant download through Fetch Mail

Fetch Mail downloads an entire email immediately without the need for you to perform a full Send/Receive action.

Requirement Fetch Mail works for your phone only if your company is using **Microsoft Exchange Server 2007** or higher.

1. Click **Start > Messaging > Outlook Email**.
2. Click an email message to open it.
3. By default, only the first few kilobytes of the message is shown. To download the whole email, scroll to the bottom of the message then click **Get the rest of this message**.
4. A "Downloading message" status appears. Wait for the remainder of the message body to be downloaded.

Tip For information about changing email sync options such as the initial download size limit for email, see "Customise email settings" in Chapter 6.

Search for emails on the Exchange Server

You can access messages that are not available on your phone by searching your Microsoft Exchange Server mailbox. The search results will be downloaded and displayed in a Search Results folder.

Requirement Your company must be using **Microsoft Exchange Server 2007** or higher.

1. Click **Start > Messaging > Outlook Email**.
2. Click **Menu > Tools > Search Server**.
3. In the **Look for** text box, enter the search keyword.
4. Choose the **Date range** of messages to search from and where to search in **Look in**.
5. Click **Search**.

Search Server abc

Look for:

Date range:
 Past month ◀ ▶

Look in:
 Inbox ◀ ▶

☒ Include subfolders

Search **Cancel**

 
Flag your messages

Flags serve as a reminder to yourself to follow-up on important issues or requests that are indicated in the messages.

Requirement Flags are enabled only if emails are synchronised with **Microsoft Exchange Server 2007** or higher. Flags are disabled or hidden if emails are synchronised with earlier versions of Microsoft Exchange Server.

To flag or unflag a message

1. Click **Start > Messaging > Outlook Email**.
2. Select a message, or open a message.
3. Click **Menu > Follow Up** and select one of the following options:

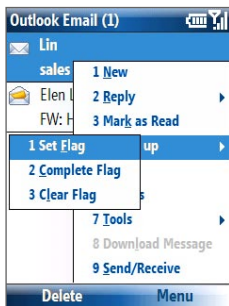

- **Set Flag.** Mark the message with a red flag to indicate that it needs follow up.
- **Complete Flag.** Mark the message with a check mark to indicate that the issue or request in the email is already completed.
- **Clear Flag.** Remove the flag to unmark the message.

Note Email message reminders are displayed on your phone if the messages are flagged with reminders and synchronised from the Exchange Server.

Out-of-office auto-reply

Outlook Mobile allows you to retrieve and change your out-of-office status. Just like desktop Outlook Email, Outlook Mobile automatically sends an auto-reply message when you're not available.

Requirement Your company must be using **Microsoft Exchange Server 2007** or higher.

To send out-of-office auto-reply messages

1. Click **Start > Messaging > Outlook Email**.
2. Click **Menu > Tools > Out of Office**.
3. From the **I am currently** list, select **Out of the Office**.
4. Enter your auto-reply message then click **Done**.

View SharePoint documents

When you receive an HTML email containing a link to a SharePoint document, you can click the link to access and view the document on your phone.

Note You need to setting VPN connection first. If you do not set up the VPN connection in advance, you will not be able to connect to Intranet and view the document.

Requirement Your company must be using **Microsoft Exchange Server 2007** or higher.

7.3 Managing Meeting Requests

When you schedule and send meeting requests from your phone, you can invite attendees to your meeting and check their status to know their availability.

When you receive a meeting request, you can reply by accepting or declining the request. The meeting request also clearly indicates whether or not there are conflicting or adjacent meetings.

Requirement Your company must be using **Microsoft Exchange Server 2007** or higher.

To check the status of invited attendees

 
 
1. Click **Start > Calendar**.
2. Follow the procedure in “To send a meeting request” in Chapter 5 to invite required and optional attendees and send a meeting request.
3. Wait for the attendees to respond. When their responses are sent back to you, your calendar is updated as well.

4. To check the status of the attendees who responded, click **Start > Calendar** and then click the scheduled meeting.
5. In the meeting details, click **Attendees**.

To reply to a meeting request

1. When there's an incoming email with a meeting request, a notification message will be displayed on your phone's Home screen. Scroll to **Outlook email** and click it.
2. In the Outlook message list, click the email to open it.
3. Click **Accept** to reply and accept the meeting request, or click **Menu > Decline** if you cannot attend the meeting.

- Tips**
- Before responding, you can check your availability during the time of the requested meeting by clicking **View your calendar**.
 - If the time of the meeting conflicts with your other appointments, a "Scheduling Conflict" status appears on top of the email.
4. Choose whether or not to edit the response email before sending and then click **OK**.

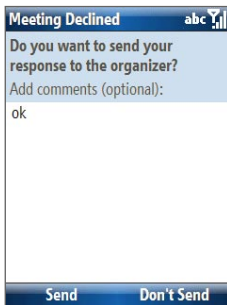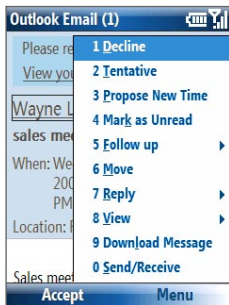


5. If you accepted the meeting request, it will automatically be added as an appointment in Calendar on your phone.

7.4 Finding Contacts in the Company Directory


In addition to having contacts on your phone, you can access contact information from your organisation's Company Directory.

Requirement Access to the Company Directory is available only if your organisation is running **Microsoft Exchange Server 2003 SP2** or higher, and you have completed your first synchronisation with the Exchange Server.

 1. Synchronise with Exchange Server if you have never done so.
2. Do any of the following:
 - In Contacts, click **Menu > Company Directory**.
 - In a new email, click the **To** box and then click **Company Directory** at the top of the list or click **Menu > Company Directory**.

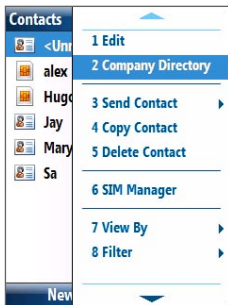



In Contacts

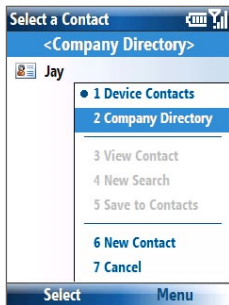 

In a new email

- In a new meeting request using Calendar, scroll to **Attendees** and click **No attendees > Add Required Attendee** or **Add Optional Attendee** and then click **Company Directory** at the top of the list.

  3. Enter the part or full contact name and click **Search**. In the search results list, click a contact to select it.

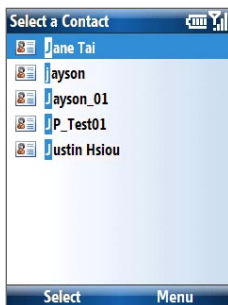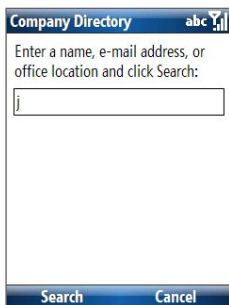

- Notes**
- You can save a contact from the Company Directory to your phone by selecting the contact and then clicking **Menu > Save to Contacts**.
 - You can search on the following information as long as that information is included in your organisation's Company Directory: First name, Last name, Email name, Display name, Email address, or Office location.

7.5 Email Security

Windows Mobile on your phone protects your Outlook emails through Secure/Multipurpose Internet Mail Extension (S/MIME), which allows you to digitally sign and encrypt your messages.

Requirement S/MIME encryption and digital signatures for Windows Mobile-based phones are available only with **Exchange Server 2003 SP2** or a later version that supports S/MIME. If you are not using one of these products, or have not yet synchronised, these options are unavailable.

Note You can encrypt a message with or without a certificate. However, to decrypt and read an encrypted message, you need a valid certificate.

To individually sign and encrypt a new message

1. Click **Start > Messaging > Outlook Email**.
2. Click **Menu > New** to create a new message.
3. Click **Menu > Message Options**.
4. From the **Security** list, select whether to encrypt only, sign the message only, or do both.
5. Click **Done**.

To verify the digital signature on a signed message you receive

1. Open the Outlook email message that has been digitally signed.
2. At the top of the message, click **View signature status**.
3. Click **Menu > Check Certificate**.

 
 
To view the details of the certificate in the message, click **Menu > View Certificate**.

Note There are several reasons why a digital signature may not be valid. For example, the sender's certificate may have expired, it may have been revoked by the certificate authority, or the server that verifies the certificate is unavailable. Contact the sender to report the problem.

To digitally sign and encrypt all messages

You can set up ActiveSync to digitally sign and encrypt all outgoing messages. You must obtain a valid certificate to sign and encrypt email messages successfully.

1. Click **Start > ActiveSync**.
2. Click **Menu > Options**.
3. Select the **Email** information type, and click **Settings**. On the Email Sync Options screen, click **Menu > Advanced**.

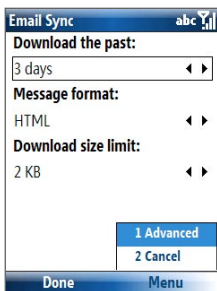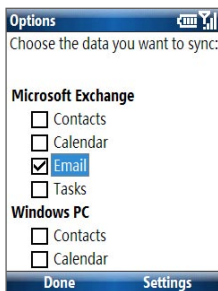

4. Select **Encrypt messages** to protect your emails from being viewed except by the intended recipients. Select **Sign messages** so that recipients are certain that emails are sent by you and have not been altered.
5. Click **Menu > Choose Certificate** to select a certificate for signing or encrypting outgoing email messages.

Set permissions on an email message

Another way of protecting your email messages is to send messages with restricted permissions using Information Rights Management (IRM).

Requirement This works only with a Microsoft Outlook email account and if your company is using RMS Server SP1.

1. Click **Start > Messaging > Outlook Email**.
2. Create a message, then click **Menu > Message Options**.
3. In **Permissions**, do one of the following:
 - To allow anyone to read the message, select **Unrestricted Access**.
 - To prevent the message from being forwarded, printed, or copied, select **Do Not Forward**.
4. Click **Done**.

Tip An IRM-protected message received on your phone can only be replied to or forwarded if the message permits it.

Chapter 8

Getting Connected

8.1 Comm Manager

8.2 Connecting to the Internet

8.3 Internet Explorer Mobile

8.4 Internet Sharing

8.5 Bluetooth

8.6 Windows Live™

8.7 Windows Live Messenger

8.1 Comm Manager

Comm Manager acts like a central switch that lets you enable or disable phone features as well as manage your data connections easily.

To open Comm Manager:

- Click **Start > Comm Manager**.



- 1 Click to toggle between turning on or off Airplane mode. Turning on Airplane mode turns off the phone, Bluetooth and WLAN functions.
- 2 Click to enabling or disable the phone. Click **Settings > Phone** to access phone settings.
- 3 Click to toggle between turning on or off Bluetooth. See “Bluetooth” for details. Click **Settings > Bluetooth** to configure Bluetooth on your phone.
- 4 Click to toggle between turning on or off Wi-Fi. Click **Settings > WLAN Settings** to configure Wi-Fi on your phone. See “Wi-Fi” for details.
- 5 Click to toggle between automatically receiving (as items arrive) or manually retrieving Outlook emails. See Chapter 7 for details.
- 6 Click to stop active data services (e.g. GPRS). You cannot reconnect data services in Comm Manager.

8.2 Connecting to the Internet

Ways of Connecting to the Internet

Your phone's networking capabilities allow you to access the Internet or your corporate network at work through wireless and conventional connections.

You can connect to the Internet by using one of the following:

- Wi-Fi
- GPRS/3G
- Dial-up

Note You can also add and set up the following connections:


- **VPN:** A VPN connection is used to access your corporate network by using an existing Internet connection.
- **Proxy:** A Proxy connection is used to access the Internet using an existing connection to your corporate or WAP network.

Wi-Fi

Wi-Fi provides wireless Internet access over distances of up to 100 meters.

Note The availability and range of your phone's Wi-Fi signal depends on the number, infrastructure, and other objects through which the signal passes.

To connect to an existing Wi-Fi network

1. On the Home screen, click **Start > Comm Manager** and click the **Wi-Fi** icon. The  button on this item is then highlighted to indicate that WLAN is turned on.
2. After a few seconds, a message asks you if you want to see the list of available networks, click **Yes**.
3. In **Select network**, choose the WLAN network to connect to.
4. In **Network type**, select **Internet** and click **Connect**.

If you are connecting to a security-enabled network, you will be asked to enter the **WEP Key**. Enter the **WEP Key** and click **Done**.

You can check the Wi-Fi icon on the Title bar of the screen to see if you are connected to the Wi-Fi network. To see the status icons, please see "Status Indicators" in Chapter 1.

- Notes**
- Wi-Fi connects to the default network that is available on your phone. However, GPRS starts by default if your phone does not detect any Wi-Fi signal.
 - In Comm Manager, click **Settings > WLAN Settings > Connection Status** to check the current connection status and signal quality of each Wi-Fi channel.

To increase security on the Wi-Fi network

The LEAP (Lightweight Extensible Authentication Protocol) feature of Comm Manager helps increase security on your phone, and ensures that nobody is able to access your network without your permission.

1. On the WLAN Settings screen, select **LEAP**.
2. Click **Menu > New**.
3. Enter the **SSID** (Service Set Identifier). You can obtain this information from your wireless service provider.
4. Enter the user name, password, and domain.
5. Select an **Authentication Type**.

By default, the **Authentication Type** for your phone is **Open System** authentication.

- Notes**
- By default, the LEAP screen displays data that you entered previously. However, you can modify or delete the data as required by clicking **Menu > Modify** or **Menu > Delete** on the LEAP screen.
 - For LEAP to work correctly, the receiving phone (your phone) must be set with the same SSID, user name, and password as the access point.

GPRS/3G

You can use GPRS/3G to connect to the Internet or to send and receive MMS on your phone. When you use GPRS/3G, you will be billed per KB (Kilobyte) when sending or receiving information.

If GPRS settings are not preset on your phone, obtain the **Access point name** from your wireless service provider. Also, check with your wireless service provider if a user name and password are required.

- Note** Check with your service provider how much it charges for its GPRS service.

To set up a new GPRS connection

1. On the Home screen, click **Start > Settings > Connections > GPRS > New**.
2. In **Description**, enter a name for the connection.
3. In **Connects to**, select **The Internet**.
4. Enter the name of the GPRS **Access point** of your wireless service provider.
5. Enter the appropriate information in the remaining fields, if required by your wireless service provider.
6. Click **Done**.

Dial-up

When you use your phone to dial up to your ISP and connect to the Internet or to your corporate network, you will be billed by the number of minutes that you use.

To set up a dial-up connection for browsing the Internet

1. On the Home screen, click **Start > Settings > Connections > Dial-up > New**.
2. In **Description**, enter a name for the connection.
3. In **Connects to**, select **The Internet**.
4. Enter the appropriate information in the remaining fields.
5. Click **Done**.

To set up a dial-up connection to your corporate network

1. On the Home screen, click **Start > Settings > Connections > Dial-up > New**.
2. In **Description**, enter a name for the connection.
3. In **Connects to**, select **Work**.
4. Enter the appropriate information in the remaining fields.
5. Click **Done**.

Advanced options

From the Connections screen, you can access advanced options to specify the service provider, the number of redial attempts, the amount of idle time to wait before disconnecting, and so on.

1. On the Home screen, click **Start > Settings > Connections > Menu > Advanced**.
2. Select a network service provider for each connection type. You can choose **Automatic** to allow the phone to set a service provider for each connection by default.
3. Click **Menu > Options**.
4. Choose the appropriate information in the remaining fields.
5. Click **Done**.

Add a URL exception

Some URLs for Web pages on your company intranet may use periods, for example: intranet.companyname.com. To view these pages in Internet Explorer Mobile, you must create a URL exception.

1. On the Home screen, click **Start > Settings > Connections > Menu > Advanced**.
2. Click **Menu > Work URL Exceptions > Menu > Add**.
3. In **URL Pattern**, enter the URL name. To add multiple URLs, use a semicolon (;).
4. Click **Done**.

Note You do not need to create URL exceptions for Internet URLs.

8.3 Internet Explorer Mobile

Internet Explorer Mobile is a full-featured Internet browser, optimised for use on your phone.

To open Internet Explorer

- On the Home screen, click **Start > Internet Explorer**.

Browsing the Web

- In Internet Explorer, click **Menu > Address Bar**.
- Enter the address and click **Go**.
- Use the NAVIGATION CONTROL to browse the Web page. Press CENTER OK when a link is highlighted to access it.

While browsing the Web, click **Menu** to open a list of options that will let you change the view, save Favourites, and set Internet Explorer Mobile preferences, and more.



Click **Menu > Add to Favourites** to save the current Web page in your Favourites folder. Click **Favourites** to access your Favourites folder.



Click **Menu > View** and then select the text size and type of view you want to use while browsing a Web page.



Click **Menu > Tools** to let you send the link via email, view the page's properties, or set Internet Explorer Mobile preferences.

For more information about Internet Explorer Mobile, please go to <http://www.microsoft.com/windowsmobile/help/smartphone/browseinternet.msp>

8.4 Internet Sharing

With Internet Sharing, you can use your phone as an external modem for another device such as a PDA or notebook computer.

- Notes**
- Make sure your phone has a SIM/USIM card installed, and you have set up a GPRS or phone dial-up modem connection on your phone. If your phone has not been set up with a data connection yet, click **Menu > Connection Settings** on the Internet Sharing screen. For more information about setting up a GPRS connection, see "GPRS/3G". For more information about setting up a phone dial-up connection, see "Dial-up".
 - Before using Internet Sharing, disable ActiveSync on your computer. To disable ActiveSync, open ActiveSync then click **File > Connection Settings** and clear **Allow USB Connections**.

Set up the phone as a modem

To set up the phone as a USB modem

1. On your phone, click **Start > Internet Sharing**.
2. In the **PC Connection** list, select **USB**.
3. In the **Network Connection** list, select the name of connection that your phone uses to connect to the Internet.
4. Plug in the USB cable between your phone and the computer.
5. Click **Connect**.

To end the Internet connection

- On the Internet Sharing screen, click **Disconnect**.

To set up the phone as a Bluetooth modem

You can connect your phone to a computer through Bluetooth and use the phone as a modem for the computer.

To learn how to set up the phone as a Bluetooth modem, see "Use the phone as a Bluetooth modem" in this chapter.

8.5 Bluetooth

Bluetooth is a short-range wireless communications technology. Phones with Bluetooth capabilities can exchange information within a distance of about 10 meters without requiring a physical connection.

Bluetooth modes

Bluetooth on your phone operates in three different modes:

1. **On.** Bluetooth is turned on. Your phone can detect other Bluetooth-enabled devices, but not vice versa.
2. **Off.** Bluetooth is turned off. In this mode, you can neither send nor receive information using Bluetooth.
3. **Visible.** Bluetooth is turned on, and all other Bluetooth-enabled devices within range can detect your phone.

Note By default, Bluetooth is turned off. If you turn it on, and then turn off your phone, Bluetooth also turns off. When you turn on your phone again, Bluetooth automatically turns on.

To turn on or off Bluetooth on your phone

You can enable Bluetooth by clicking the Bluetooth button in the Comm Manager. You can also do the following:

1. On the Home screen, click **Start > Settings > Connections > Bluetooth**.
2. Click **Bluetooth > Menu > Turn On Bluetooth**.
3. To turn off Bluetooth capabilities on your phone, click **Bluetooth > Menu > Turn Off Bluetooth**.

To make your phone visible

1. On the Home screen, click **Start > Settings > Connections > Bluetooth**.
2. Click **Bluetooth > Menu > Turn On Visibility**.

Tip Enter a Bluetooth phone name for your phone. This will be the phone name that will be shown on another Bluetooth-enabled device when it searches and detects your phone. To enter a name, on the Bluetooth screen, click **Security** and enter a **Device name**.

Bluetooth partnerships

A Bluetooth partnership is a relationship that you create between your phone and another Bluetooth-enabled device in order to exchange information in a secure manner.

To create a Bluetooth partnership

1. On the Home screen, click **Start > Settings > Connections > Bluetooth**.
2. Click **Bluetooth > Add new device**.
Your phone searches for other Bluetooth-enabled devices and lists them.
3. Select the desired device name in the list and click **Next**.
4. Enter a passcode (1 up to 16 characters) to establish a secure connection, then click **Next**.
5. Wait for the paired device to accept the partnership.
6. On your phone, a message will appear, indicating that your phone has connected with the paired device. Click **OK**.
7. The name of the paired device is then displayed. You may edit and enter a new name for that device, then click **Next**.
8. Select the check boxes of services that you want to use from the paired device and click **Done**.

To accept a Bluetooth partnership

1. Ensure that Bluetooth is turned on and in visible mode.
2. Click **Yes** when prompted to establish a partnership with the other device.
3. Enter a passcode (the same passcode that is entered on the device requesting the partnership) to establish a secure connection.
4. Click **Next**.
5. A message will appear, indicating that your phone has connected with the paired device. Click **OK**.
6. The name of the paired device is then displayed. You may edit and enter a new name for that device, then click **Next**.

7. Select the check boxes of services that you want to use from the paired device.
8. Click **Done**. You can now exchange information with the other device.

To change the display name of a Bluetooth device

1. On the Home screen, click **Start > Settings > Connections > Bluetooth**.
2. Click **Bluetooth** and then on the screen, select a Bluetooth device.
3. Click **Menu > Edit**.
4. Enter a new display name for the Bluetooth device, then click **Next**.
5. Click **Done**.

To delete a Bluetooth partnership

1. On the Home screen, click **Start > Settings > Connections > Bluetooth**.
2. Click **Bluetooth** and then on the screen, select a Bluetooth device.
3. Click **Menu > Delete**, and then click **Yes** in the confirmation screen.
4. Click **Done**.

Connect a Bluetooth hands-free or stereo headset

For hands-free phone conversations or to listen to music, you can use a Bluetooth hands-free or stereo headset.

Note You need a Bluetooth stereo headset to listen to music.

To connect a Bluetooth hands-free or stereo headset

 
1. Make sure that both your phone and the Bluetooth headset are turned on and within close range, and that the headset is visible. Refer to the manufacturer's documentation to find out how to set the headset in visible mode.
2. On the Home screen, click **Start > Settings > Connections > Bluetooth**.
3. Click **Bluetooth > Add new device**. Your phone searches for other Bluetooth-enabled devices and displays them in the list.

4. Select the name of the headset, and click **Next**.
5. In **Passcode**, enter the alphanumeric passcode for the Bluetooth headset, then click **Next**. The passcode is usually "0000".

A message will appear saying that your phone has connected to the headset, click **OK**.

6. Enter the display name for the headset and click **Next**.
7. Select the check boxes for the **Wireless Stereo** (if available) and **Hands Free** services, and click **Done**.

Note If the Bluetooth stereo headset becomes disconnected, turn the headset on and repeat steps 1 to 2 above. Select the stereo headset and click **Menu > Set as Wireless Stereo**.

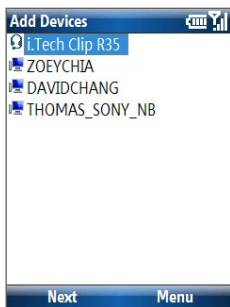

Beam information using Bluetooth

You can beam information, such as contacts, calendar items, and tasks, as well as files from your phone to your computer or to another Bluetooth-enabled device.

- Notes**
- If your computer does not have built-in Bluetooth capabilities, you need to connect and use a Bluetooth adapter or dongle on your computer.
 - Before beaming items to your computer, open Bluetooth Configuration or Bluetooth Settings in the Control Panel and check if there's an option for setting a location for saving beamed items.

To beam information from your phone to a computer

1. Set Bluetooth on your phone to visible mode. For information about this, see "To make your phone visible".
2. Next, set Bluetooth on your computer to visible mode, create a Bluetooth partnership, then enable your computer to receive Bluetooth beams.

If your computer has Windows Vista or Windows XP SP2 and your computer's Bluetooth adapter is supported by your Windows version, do the following steps:

- a. On your computer, open **Bluetooth Devices** from the Control Panel then click the **Options** tab.
- b. For Windows Vista, select **Allow Bluetooth devices to find this computer**; or
For Windows XP, select **Turn discovery on** and **Allow Bluetooth devices to connect to this computer**.
- c. Create a Bluetooth partnership between your phone and computer. For information about creating a partnership, see "Bluetooth partnerships".
- d. In the **Options** tab of **Bluetooth Devices**, select **Show the Bluetooth icon in the notification area**.
- e. To enable your computer to receive Bluetooth beams, right-click the Bluetooth icon at the bottom-right of your computer screen and select **Receive a File**.

3. Now you are ready to beam. On your phone, select an item to beam. The item can be an appointment in your calendar, a task, a contact card, or a file.
 - Calendar appointment: Click **Menu > Beam Appointment**.
 - Task: Click **Menu > Beam Task**.
 - Contact: Click **Menu > Send Contact > Beam**.
 - File: Click **Menu > Beam**.
4. Select the device name to which you want to beam to.
5. Click **Beam**.
6. If you beamed a calendar, task, or contact item to your computer and it is not automatically added to Outlook, click **File > Import and Export** to import it to Microsoft Outlook on your computer.

To beam information to a Bluetooth-enabled device such as another phone, create a Bluetooth partnership then perform steps 3 to 6 in the above procedure.

Note Not all file types can be sent via Bluetooth.

Tip The default folder on your computer where beamed items are stored may be
Windows XP: C:\Documents and Settings\your_username\My Documents
Windows Vista: C:\users\your_username\My Documents.

Bluetooth Explorer and Bluetooth file sharing

Bluetooth Explorer searches for other Bluetooth devices that have file sharing enabled and lets you access their Bluetooth shared folder. You can copy files from and to their shared folder, and create subfolders in it. When you enable Bluetooth file sharing on your device, other Bluetooth-enabled devices will also be able to access your Bluetooth shared folder.

To enable Bluetooth Explorer and Bluetooth file sharing on your phone

1. Click **Start > Settings > Connections > Bluetooth > FTP**.
2. Select the **Enable Bluetooth Explorer** check box. This makes the **/Bluetooth** phone folder visible in File Explorer.
3. Select the **Enable File Sharing** check box. Click **Browse** to change the folder to share.

To use Bluetooth Explorer

1. Bluetooth Explorer is integrated with the File Explorer programme. You can open it by clicking **Start > Bluetooth Explorer** or by clicking the **Bluetooth** folder under the My Device folder in File Explorer.
2. Bluetooth Explorer then scans for other Bluetooth-enabled devices. From the list, select a Bluetooth device you want to connect to. You may need to enter a passcode in order for you to connect to the device.
3. If there are files contained in the Bluetooth shared folder on the other device, you will be able to see them on the Bluetooth Explorer screen. Select a file and click **Menu > Edit** and choose to cut or copy the files.
4. Click **Up** twice.
5. Navigate to the folder where you want to paste the files on your device, then click **Menu > Edit > Paste**.

Use the phone as a Bluetooth modem

You can connect your phone to a notebook or desktop computer through Bluetooth and use the phone as a modem for the computer.

For the computer to use the Internet connection of your phone, activate Internet Sharing on your phone, then set up a Bluetooth Personal Area Network (PAN) between the computer and your phone.

1. On your phone, turn on Bluetooth and set it to visible mode.
2. Initiate a Bluetooth partnership from your phone by following the steps in "To create a Bluetooth partnership."
3. Click **Start > Internet Sharing**.
4. Select **Bluetooth PAN** as the **PC Connection**.
5. From the **Network Connection** list, select the name of the connection that your phone uses to connect to the Internet.
6. Click **Connect**.

7. On your computer, set up a Bluetooth Personal Area Network (PAN) with your phone:
 - **For Windows XP**
 - a. Click **Start > Control Panel > Network Connections**.
 - b. Under **Personal Area Network**, click the **Bluetooth Network Connection** icon.
 - c. Under **Network Tasks**, click **View Bluetooth network devices**.
 - d. In the Bluetooth Personal Area Network Devices dialog box, select your phone, then click **Connect**.
 - **For Windows Vista**
 - a. Click **Start > Control Panel > Network and Sharing Center**.
 - b. Click **Manage network connections** and then under **Personal Area Network**, double-click **Bluetooth Network Connection**.
 - c. In the Bluetooth Personal Area Network Devices dialog box, select your phone, then click **Connect**.
8. On the Internet Sharing screen on your phone, check if the connected status is displayed, which indicates that your computer has been successfully connected to the Internet using your phone as a Bluetooth modem.

Print files via Bluetooth

Connect your device to a Bluetooth printer to print contact information, appointment details, messages, and other file types.

Before you start printing, make sure to turn on the Bluetooth printer and to turn on Bluetooth on your phone. To turn on Bluetooth, select **Start > Comm Manager** and then select the Bluetooth button.

Note You can print files in the *.txt, *.jpg, *.xhtml, *.vcf, and *.vcs file formats.

To print contact information

1. Click **Start > Contacts** and then select the contact whose information you want to print.
2. Click **Menu > Print via Bluetooth**.

3. Click **Menu > Search Devices**. Your phone starts to search for Bluetooth devices.
4. Select the Bluetooth printer and then click **Menu > Send File**.
5. Set the printing options you want and then click **Print**.

To print a calendar appointment

1. Click **Start > Calendar** and then select the appointment whose details you want to print.
2. Follow steps 2 through 5 in the "To print contact information" procedure.

To print a message

1. Click **Start > Messaging** and then select the messaging account where the message you want to print is located.
2. Select the message you want to print.
3. Follow steps 2 through 5 in the "To print contact information" procedure.

To print a JPEG file

1. In Pictures & Videos, select the JPEG file and then click **Menu > Print via Bluetooth**.
2. Follow steps 3 through 5 in the "To print contact information" procedure.

8.6 Windows Live™

Windows Live™ gives you full Internet experience on your phone. It helps you to find information, pursue your interests, and get in touch with friends and family on the Internet easier.

Windows Live offers the following key features:

- **Live Search Bar**, which lets you search for information on the Web.
- **Live Messenger**, the next generation of MSN Messenger Mobile.
- **Live Mail**, the next generation of Hotmail.
- **Live Search**, which lets you find locations, browse maps, and check for directions.
- **Live Contacts**, address book for storing Live Mail, Live Messaging, and Hotmail contacts.

Set up Windows Live

The first time you use Windows Live, sign in by using your Windows Live ID, which is your Windows Live Mail or Hotmail address, and password.

To set up Windows Live for the first time

1. Click **Start > Windows Live**.
2. Click **Sign in to Windows Live**.
3. On the next screen, click the links to read the Windows Live Term of Use and the Microsoft Privacy Statement. After reviewing it, click **Accept**.
4. Enter your Windows Live Mail or Hotmail address and password, then click **Next**.

Windows Live 2/5

Sign in to Windows Live

E-mail address:
jimmy-connors@hotmail.com

Password:

☒ Save password

 
Next Cancel

5. Choose whether or not to show Windows Live's search bar and applications on the Home screen then click **Next**.

6. Choose what information you want to synchronise online with your phone.

If you select **Store Windows Live contacts in your mobile phone's contact list**, your online contacts will be added to the contact list and to Windows Live Messenger Mobile on your phone.

If you select **Sync email**, your Windows Live Mail or Hotmail inbox messages will be downloaded to your phone.

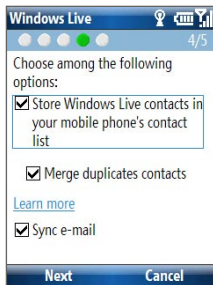


7. Click **Next**.

8. After synchronisation is complete, click **Done**.

The Windows Live interface

 On the main interface of Windows Live, you will see a search bar, navigation bar, and an area where you can customise to show your picture.

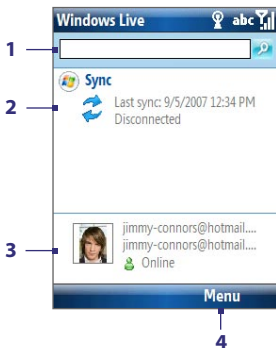

- 1 Windows Live Search bar.
- 2 Press NAVIGATION left or right to switch among Live Mail, Messenger, and Sync status. Click to open/activate the selected Windows Live component.
- 3 Click to access Windows Live Messenger settings.
- 4 Click **Menu** to access and change settings.

If you chose to display the search bar and Windows Live applications on the Home screen when you were setting up Windows Live, you will see them on the Home screen.

Search bar and
Windows Live applications



To show or hide them, open Windows Live and click **Menu > Options > Home screen options**.

8.7 Windows Live Messenger

Live Messenger lets you send and receive instant messages online. With this mobile version of Windows Live Messenger, you enjoy many of the same cool features that you get from the desktop version, which include the following:

- Instant messaging via text and voice
- Multiple conversations
- Add emoticons
- Contact list with presence
- Send and receive files including photos
- Change status/display name
- View contacts by online status, groups, and more
- Send messages even when a contact is offline

Note Before you can use Live Messenger, your phone must be connected to the Internet. For information about setting up an Internet connection, see “Ways of Connecting to the Internet” in this chapter.

Launch the messenger and sign in

To open Live Messenger

Do one of the following:

- On the Home screen, click **Start > Messenger**.
- On Windows Live of the Home screen, press NAVIGATION left or right until you see **Messenger**, then press CENTER OK.

To sign in and out

1. To sign in, click **Sign in** on the messenger screen.
2. If this is your first time to sign in, a message appears to inform you that your messenger contacts will be added to the contact list on your phone. Click **OK** to add them.

Signing in may take several minutes, depending on your connection speed.
3. To sign out, click **Menu > Sign Out**. Your status changes to **Offline**.

Add Windows Live contacts

You can add new Windows Live contacts in Live Messenger or in Contacts.

To add a Windows Live contact in Live Messenger

1. Click **Menu > Add new contact**.
2. Enter the email address of the contact then click **OK**.

To add a Windows Live contact in Contacts

1. On the Home screen, click **Start > Contacts**.
2. Click **New** then click **Windows Live**.
3. In the **IM** box, enter the email address of the contact, which can be a Windows Live ID or any other email address.
4. Click **Done**.
5. Follow the remaining instructions to add the new contact to your Windows Live contact list.

Tip You can fill in other information about the contact, if desired. This is not absolutely necessary if you intend to communicate with the contact only through Windows Live Messenger or Live Mail.

To delete a contact

 
1. In the messenger, select the contact and click **Menu > Contact options > Remove contact**.
2. Choose whether to block the contact.
3. Choose whether to delete the contact from your phone's contact list.
4. Click **OK**.

Send instant messages

You can send instant messages with emoticons, and even talk by sending a voice clip. While chatting, you can send and receive files directly on a message window. You can also start conversations with several contacts and switch between their message screens, or you can invite participants to join in a conversation.

To start and end conversations

1. In the contact list, select a contact then click **Send IM** to open a message screen.
2. Send an instant message. See "To send an instant message with emoticon" for details.
3. To start a conversation with another contact, press NAVIGATION left or right to go back to the contact list, then select another contact and click **Send IM** again. Another message screen opens.
4. To switch from one message screen to another, press NAVIGATION left or right to the display picture of the contact whom you want to talk to.

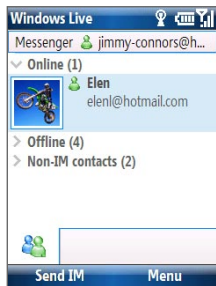

Pictures of contacts with whom you're talking to

5. To end a conversation with the current contact, click **Menu > End conversation**.
6. To end all active conversations, click **Menu > End all conversations**.

To send an instant message with emoticon

1. Select a contact and start a conversation.
2. Enter your text message in the text entry area of the message screen.
3. To add an emoticon, click **Menu > Add emoticon** then select an icon from the list of emoticons.
4. Click **Send**.

- Tips**
- To send a file, click **Menu > Send**. You can choose to send a picture, voice clip or any file.
 - To invite one or more contacts to the conversation, click **Menu > Options > Add participant**.

To send a voice message

1. Select a contact and start a conversation.
2. Click **Voice clip** then start talking.
3. After you have spoken a message, click **Send**.

Personalise the messenger

While on the contacts list, you can do the following:

- Click **Menu > Change status** to set your current status (such as Busy, Out to lunch, etc.) so that your contacts know whether you are available or not.
- Click **Menu > Change appearance** to change your display name, add a personal message, and add your picture.
- Click **Menu > Sort by** to organise contacts by online status, groups, name, or email address. You can also hide offline contacts from the contact list.
- Click **Options** to see more settings.

Chapter 9

Experiencing Multimedia

9.1 Camera

9.2 Pictures & Videos

9.3 Windows Media Player Mobile

9.4 Streaming Media

9.5 Audio Manager

9.6 Using Audio Booster

9.7 Flash Lite Player

9.8 Java

9.1 Camera

Taking photos and shooting video clips are easy with your phone's built-in camera.

Your phone has two built-in cameras:


- **Main camera:** A rear 2 megapixel camera for capturing high resolution pictures and video clips with audio.
- **Second camera:** A front camera for video calls and self-portrait shooting.


To open Camera

Do any of the following:

- Press the CAMERA button on the right side of the phone.
- On the Home screen, click **Start > Camera** or **Video Recorder**.

To exit Camera

- Press END ().

Note Pressing END () simply "minimises" the Camera programme, it is still running in the background. To close the Camera programme, go to Task Manager.

Install the storage card

If you have a microSD card inserted, or if you insert a microSD card while you are using the camera, you will be prompted to choose whether to save your pictures on the microSD card or the phone. Select the location for storing pictures and videos taken with the camera and click **OK**. Select the **Don't show again** check box to prevent this message from appearing the next time you insert a storage card.

Take a photo or capture a video clip

Aim the camera at the subject and then press CENTER OK to take the shot. When capturing video, press CENTER OK to start recording; press it again to stop.








Capture modes

To change the capture mode

- On the Camera screen, press NAVIGATION right or left to change the capture mode.

The Camera programme lets you capture pictures and video clips by using various built-in modes. The title bar displays the active capture mode.

The available capture modes are as follows:

Icon	Capture mode	Function
	Photo	Captures standard still images.
	Video	Captures video clips, with or without audio.
	MMS Video	Captures video clips suitable for sending via MMS.
	Contacts Picture	Captures a still image suitable for assigning as an identification photo to a contact.
	Picture Theme	Captures still images and places them within frames.
	Panorama	Captures a sequence of still images continuously in one direction, and stitches the images together to create a panoramic view of a scenery.
	Sports	Captures a sequence of still images (3 or 5 frames) automatically for a short duration at a defined frequency.

Using the above capture modes, the camera captures files in the following formats:

Capture type	Format
Still Image	JPEG
Video / MMS Video	MPEG-4 (.mp4) H.263 baseline (.3gp)

Camera mode icons and indicators

 
Note The camera icons and indicators disappear after a few seconds if there is no user interaction. Press the NAVIGATION CONTROL's direction keys, the Keypad's keys, or the left/right SOFT KEYS to redisplay the icons indicators.


The Camera [Photo] screen



- 1 Indicates the current capture mode.
- 2 Depending on the capture mode, this shows the remaining, available shots of pictures that you can take or remaining duration that can be recorded. While recording video, this shows the recorded duration.
- 3 Indicates the current zoom ratio. Use NAVIGATION up or down to increase or decrease the zoom level.
- 4 Click to open the Camera settings menu.
- 5 Click to view the picture or video in Pictures & Videos.

The Camera [Video] screen

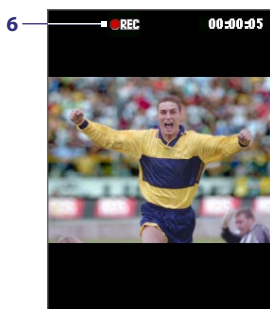

- 6 The Recording Status indicator  blinks while video recording is in progress.

The Camera [Picture Theme] screen



7

- 7 Displays the current and total number of photos that can be taken using the selected template.

Use zooming



Before capturing a still image or a video clip, you can first zoom in to make the object in focus move closer, and you can zoom out to make the object move farther away. In all capture modes, press NAVIGATION up on your phone to zoom in, NAVIGATION down to zoom out.

The camera zoom range for a picture or video depends on the capture mode and capture size. Also, please note the capture sizes available for certain capture formats also vary from one capture mode to another.

The Review screen

After capturing a photo or video, you will be presented with options that you can do with the captured media file.


Icon	Function
	Click to go back to Camera screen.
	Click to delete the captured image or video clip.
	Click to send the captured image or video clip to someone via email or MMS.

Icon	Function
	Click to switch to Pictures & Videos to show the still image, or switch to Windows Media Player to play back the video clip.
	(For Contacts Picture mode only) Click to associate the photo to a selected contact.

Note After you have taken photos in **Sports** mode, the total number of consecutive shots is shown at the lower right corner of the Review screen. Press NAVIGATION up or down to browse through the sequence of photos.

Customise Camera settings


Quick Settings Menu


Click  on the Camera screen to open the Quick Settings Menu where you can activate self-timer, change the ambience, customise capture settings, and more.


Use the NAVIGATION CONTROL to go through the available settings.






The following provides a list of the general options in the menu.

- **Self-timer.** Select the Self-timer option for capturing images: **Off**, **2 seconds**, or **10 seconds**. Selecting **2 seconds** or **10 seconds** delays the capturing by the specified time after you press CENTER OK.
- **Brightness.** Adjust the brightness from **-2** to **+2** (increments of 0.5).
- **Camera.** Choose whether to use the Main camera or the Second camera when taking pictures or shooting videos. There are three modes you can choose from:


Main Camera  : 2 megapixel camera at the back panel of the phone, is used for taking standard pictures and videos.

Second Camera  : Camera at the upper right corner of the front panel of the phone, used for shooting self-portrait pictures and videos.

Main Camera (Flip)  : Used for taking self-portrait pictures and videos without mirroring. If there is text on your self-portrait shot (for example, if you're wearing a shirt with text), the text appears inverted on the captured image/video in Second Camera mode. Use Second Camera (Flip) mode to invert your self-portrait so that the text is readable on the captured image/video.

- **Resolution.** Choose the resolution to use. The resolution options depend upon which camera mode you are using.
- **White Balance.** Specify the white balance setting such as Auto (), Daylight (), Night (), Incandescent (), and Fluorescent () to suit the lighting environment.
- **Template** (Picture Theme mode only). Allows you to toggle between one of five templates to use for Picture Theme mode.
- **Settings.** Access more advanced settings that lets you customise the Camera or Video Recorder functions. You can customise settings, such as the capture format, camera shutter sound, flicker adjustment, recording limit, and more. Refer to the next two sections for details.


Capture Settings

On the Quick Settings Menu screen, click  and select the **Capture Settings** tab. The following describes each option.

Option	Allows you to
Effect	Choose a special effect such as Grayscale, Sepia, Cool, or Negative to apply to your photos or video clips. Note: White Balance cannot be applied if an Effect has already been applied.
Quality	Select the JPEG image quality level for all captured still images. You can choose from Basic, Normal, Fine, and Super Fine. This option is available in all modes except Video and MMS Video.
Metering Mode	Select a metering mode to allow the camera to measure the amount of light in the center and around the image and calculate the best-fit exposure value before capturing. Choose either Center Area to measure light using the center area of the image or Average to measure light using the area all around the image.
Time Stamp	(Photo and Sports modes only) Choose whether or not to include the shooting date and time on captured photos.
Storage	Select where you want to save your files. You can either save the files to the main memory or to a storage card.
Capture Speed	(Sports mode only) This determines the interval between shots. Fast captures consecutive shots at the shortest interval.

Option	Allows you to
Snapshots	(Sports mode only) Select the number of consecutive shots to capture.
Template	(Picture Theme mode only) Enables you to select one of five Templates.
Direction	(Panorama mode only) Choose in what direction images will be stitched in a panorama.
Stitch Count	(Panorama mode only) Select the desired number of snapshots to be taken and stitched into a panorama.

Advanced settings

On the Quick Settings Menu screen, click  and select the **Advanced** tab. The following describes each option.

Option	Allows you to
Capture Format	Select the desired file format, JPEG (still picture) or MPEG4/HT63 (video).
Shutter Sound	Choose whether or not you want the camera to make a shutter sound when you take photos or record video clips.
Keep Backlight	Choose whether to turn the backlight on or off while using the camera. This overrides your phone backlight settings while you are using the camera.
Review Duration	Set a time length for displaying the captured image or video on the Review screen before automatically saving it and returning to the live Camera screen. Select No Limit to allow the picture to be displayed until you choose to take another action. Select No Review to immediately return to the live Camera screen after capturing.
Record with Audio	Select On to record audio while capturing video clips. This is selected On by default. If you select Off and then capture a video clip, it will have no audio.
Flicker Adjustment	When taking indoor shots, flicker on the camera screen may be caused by interference from fluorescent lighting. To reduce flicker, change the flicker adjustment setting to Auto or to the proper frequency (50Hz or 60Hz) of the country where your phone is being used.

Option	Allows you to
Prefix	<p>Enables you to set a prefix to image or video filenames. When Default is selected as the prefix, the filename of each new captured file is set to "IMAGE" or "VIDEO" followed by a sequential number, for example: IMAGE_001.jpg. You may also choose to prefix filenames using either the current Date or Date & Time.</p> <p>Note: If you set the Camera to save captured photos to a storage card, the prefix cannot be selected. Captured photos will be named using the DCIM (Digital Camera Images) naming standard.</p>
Counter	Select Reset to reset the naming counter to 1.
Template Folder	<p>(Picture Theme mode only). By default, templates are stored in the \My Documents\Templates folder on the phone's main memory. If you transferred some templates to a storage card (using File Explorer), set this option to Main + Card to specify that templates are located in both the main memory and the storage card.</p>
Show Reminder	(Contacts Picture mode only) Select On to be prompted to set the picture to a contact after taking a contact picture. Select Off to disable the prompt.
Recording Limit	Specify the maximum time or file size for recording video clips.
Image Properties	<p>This option allows you to adjust the camera display properties, such as Contrast, Saturation, Hue, and Sharpness. Adjust each item with the NAVIGATION right and left buttons. Switch between items with the NAVIGATION up and down buttons. Click OK when you are finished.</p>
About	Displays the Camera's firmware information.

9.2 Pictures & Videos

The Pictures & Videos programme allows you to view and manage media files on your phone.

To copy a picture or video clip to your phone

 
You can copy pictures and video files from your PC to the My Pictures folder on your phone, and then view them on your phone.

For more information about copying files from your PC to your phone, see Windows Mobile Device Center or ActiveSync Help on your PC.


Note You can also copy pictures and video files from your PC to your phone using a memory card. Insert the memory card into the memory card slot on your phone, and then copy them from your PC to the folder you created on the memory card.


To view media files

1. On the Home screen, click **Start > Pictures & Videos**.
2. Select a media file and click **View** or **Play** (if video file) to view or play back the file.

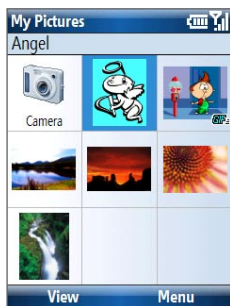

This icon  indicates that the file is a GIF animation file. Click **View** to play back the file.

 This icon  indicates that the file is a video file. Click **Play** to play back the file in Windows Media Player Mobile.

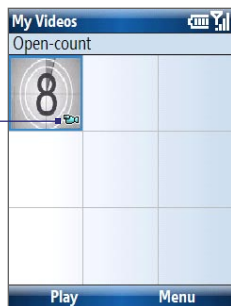


Note If you cannot find the media file in the default My Pictures folder, click **Menu** > **Folders** > **My Device** to go to other folders.

Pictures & Videos menu

Select a media file onscreen and click **Menu** to open a list of options that you can do with the selected media file.

You can choose to send the selected media file via one of your messaging accounts, beam it to another device, play the pictures as a slide show, send the picture to your Windows Live MySpace account, and more.

 Click **Options** to customise picture settings and slide show playback preferences.

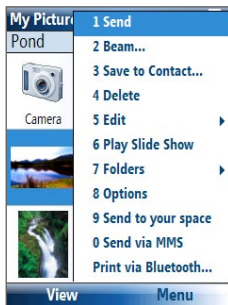


Note The available menu options depend on the selected media file.

When viewing a picture file, click **Menu** > **Use as Home Screen** to set the picture as your Home Screen background. You can also do minor touch ups to the picture such as rotate and crop by clicking **Menu** > **Edit**.

9.3 Windows Media Player Mobile

You can use Microsoft® Windows Media® Player Mobile for Smartphone to play digital audio and video files that are stored on your phone or on a network, such as on a Web site.

 To open Windows Media Player Mobile, click **Start > Windows Media**.

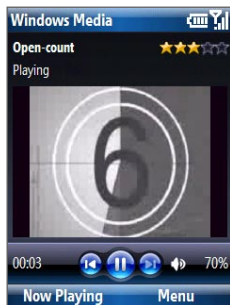

About the controls


By default, these hardware buttons are assigned to Windows Media Player Mobile functions.

Tip To change the assigned hardware buttons, on the Playback screen, click **Menu > Options > Buttons**.

To	Press
Play or pause	CENTER OK
Skip to a previous file	NAVIGATION left
Skip to the next file	NAVIGATION right
Increase the volume	NAVIGATION up
Decrease the volume	NAVIGATION down
Turn the sound on or off quickly (mute)	#
Switch to full screen during video playback	0
Change rating	*
Fast-forward a file	NAVIGATION right (hold)
Rewind a file	NAVIGATION left (hold)


About the screens and menus

 Windows Media Player Mobile has three primary screens:

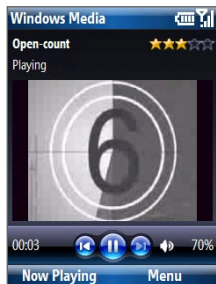


Playback screen

 The default screen that displays the playback controls and the video window.

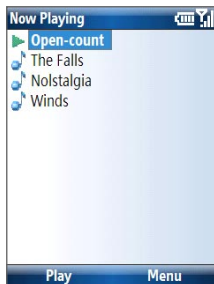

Now Playing screen

 This special playlist indicates the current file being played and files that are queued up to play next.

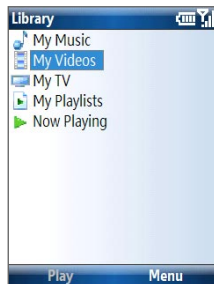

Library screen

The screen that lets you quickly find your audio files, video files, and playlists.

Click **Menu** to open a list of options that you can do in a particular screen. The commands on this menu vary, depending upon which screen you are viewing.

About licenses and protected files

Some media files have associated licenses that protect them from being unlawfully distributed or shared.

If you want to copy a protected file from your PC to your phone, use the Windows Media Player on your PC to synchronise the file to your phone. This will ensure that the license is copied along with the protected file. For more information about synchronising files to your phone and other mobile devices, see the Windows Media Player Help.

Note You can view the protection status for a file by checking its file properties (**Menu > Properties**).

Copy files to your phone

Use the **Sync** feature in Windows Media Player on your PC to synchronise (copy) digital media files from your PC to your phone. Using **Sync** ensures that protected files and album art (for skins) are copied to your phone correctly.

To synchronise content to your phone automatically

 
1. On your PC, start Windows Media Player and then connect your phone to your PC.
2. In the Device Setup Wizard, type a name for the phone and click **Finish**.
3. On the leftmost pane, right-click your phone and select **Set Up Sync**.
4. On the Device Setup dialog box, select the **Sync this device automatically** and then select the playlist(s) that you want to sync between the PC and your phone.
5. Click **Finish**.

Note You can also sync your storage card if you have one installed on your phone. To sync, right-click **Storage Card**.

The files begin synchronising to your phone. The next time you connect your phone to your PC while Windows Media Player is running, synchronisation will start automatically.

To synchronise and copy content manually to your phone

1. If you have not set up synchronisation between your phone and PC, follow steps 1 to 3 in “To synchronise content to your phone automatically.”
2. Click the **Sync** tab on the Windows Media Player. Select a Playlist or a Library on the left panel of the Windows Media Player.
3. From the content list, drag files you want to sync to your phone to the right panel of the Windows Media Player.
4. Click **Start Sync** to start copying files to your phone.

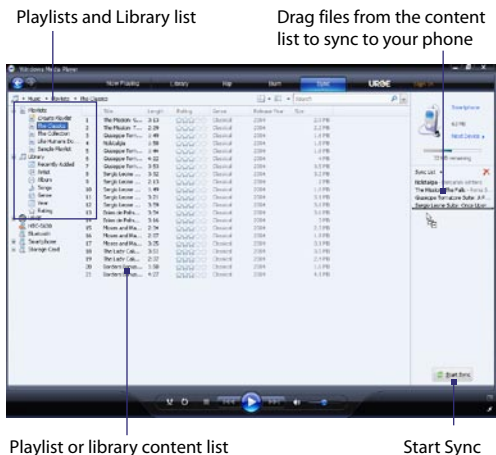

- Notes**
- Always use Windows Media Player 11 on your PC to synchronise (copy) files to your phone.
 - Audio files copy faster if Windows Media Player is configured to automatically set the quality level for audio files copied to your phone. For more information, see the Windows Media Player Help.

Play media

To play media on your phone

Use the library to find and play songs, videos, and playlists that are stored on your phone or storage card.

1. If you are not on the Library screen, click **Menu > Library**.
2. If necessary, on the Library screen, click **Menu > Library**, and then select the library that you want to use.
3. In most cases, Windows Media Player Mobile automatically updates the library. However, you can manually update the library to ensure that it contains new files that you recently copied to your phone or storage card. Click **Menu > Update Library** to manually update the library list.

4. Select a category (for example, **My Music** or **My Playlists**), select the item that you want to play (such as a song, album, or artist name), and then click **Play**.

Note To play a file that is stored on your phone but is not in a library, on the Library screen, click **Menu** > **Open File**. Select the item that you want to play (such as a file or a folder), and click **Play**.

Troubleshooting

For more information, see the Troubleshooting Windows Media Player Mobile page at the Microsoft Web site (<http://www.microsoft.com/windows/windowsmedia/player/windowsmobile/troubleshooting.aspx>).

9.4 Streaming Media

The Streaming Media programme allows you to stream live broadcasts or on-demand media content from the Web. You do not have to wait until the entire media content is completely downloaded before watching the video or hearing the sound. The media is sent in a continuous stream to your phone and is played as it arrives, along with the audio.



1. **Stop.** Press NAVIGATION left to stop playback.
2. **Play/Pause.** Press CENTER OK to play/pause playback.
3. **Volume.** Press NAVIGATION up/down to increase/decrease volume. Press NAVIGATION right to mute/unmute the audio.

The Streaming Media programme allows you to play 3GP and MPEG-4 files. It also supports playback of SDP (Session Description Protocol) files. An SDP file is a text file that contains the format, broadcast times, media content, and other information about a live broadcast, or it may contain a playlist and links to prerecorded media files if you are viewing on-demand streaming media.

To access streaming content via Internet Explorer

In Internet Explorer, you can open a Web page containing http links to streaming media content and play the content in the Streaming Media programme.

1. On the Home screen, click **Start > Internet Explorer**.
2. Click **Menu > Address Bar**. In the address bar, enter the URL address of the Web page that contains the http link to the desired ***.3gp**, ***.mp4**, or ***.sdp** file.
3. On the Web page, select the RTSP link and press CENTER OK.
4. Streaming Media then automatically opens and starts playing the file. During playback, use the button controls to play/pause the video and adjust the sound volume.

Tip Click **Menu > Zoom > Zoom In** to zoom in on the video.

To stream media files directly on the Streaming Media Player

Streaming Media only supports RTSP links when you stream ***.3gp** and ***.mp4** files directly on the programme.

Note Before you launch the Streaming Media programme, make sure that you are connected to the Internet.

1. On the Home screen, click **Start > Streaming Media**.
2. From the programme, click **Connect**.
3. Enter the URL for the Web site (rtsp://) and the file name.
4. Click **Go**.
5. Streaming Media then starts playing the file. During playback, use the button controls to play/pause and adjust the sound volume.

To view streaming video file information

You can view the properties and general information of a streaming video clip, such as file format, audio codec, dimension, frames, and duration of the video.

- Click **Menu > Properties** from the programme.

To configure streaming video connection settings

Click **Menu > Options** to configure the following settings:

- **Connect via.** Choose whether you want to connect to the Internet or corporate network (intranet) to locate a streaming video clip.
- **UDP port range.** Specify a range of port numbers to use for streaming.
- **Media buffer.** Specify the memory space (in terms of duration) to allot for storing video and audio data while streaming media.

9.5 Audio Manager

Audio Manager is a music browser and player in one. It gives you access to all the music files on your phone, and allows you to easily browse for the music that you want to play by organising music into categories.

To open Audio Manager

- Click **Start > Audio Manager**.

 
- Notes**
- Audio Manager searches for all music files stored on your phone memory and storage card that have the following audio formats: MP3, WMA, AAC, and AAC+.
 - Music files are categorised under **Artists, Album, Genre**, etc. if such metadata are found in the files.

Library

On the Audio Manager's **Library** screen, an arrow that appears in an item indicates that there is a submenu available. Use the NAVIGATION CONTROL to go through the items and press CENTER OK to open the submenu.



Library: Main screen

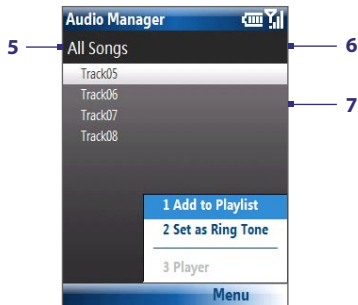

Library: All Songs screen

No.	Description
1	Open the All Songs submenu where you can browse music files by file name or song title.
2	Open the Playlists submenu where you can create playlists and play them back.
3	Open a submenu where you can browse music files by the selected category.
4	Switch to the Music Player screen. (Music Player does not automatically start playback. Press CENTER OK to start playback.)
5	Shows the current submenu name.
6	Shows a Search icon when the music database in Audio Manager is being updated. This occurs when music files have been added, renamed, or removed on the phone memory or storage card.
7	Shows the song titles or file names of music files when you are in the All Songs submenu. Use the NAVIGATION CONTROL to select a music file and play it in the Music Player. Shows more submenus when you are in one of the category screens, such as Artists , Album , etc. Press CENTER OK to open a submenu.

Tip Press NAVIGATION left or the BACK key (←) to go back to the upper-level menu.

When you press CENTER OK on a category on the Library's Main screen, you will see more submenus which may have deeper levels of menus. For example, when you select **Artists**, another level of submenus will be listed showing artist names. Just keep opening the submenus until you reach the level where song titles can be selected for playback.

 
Music files that are protected by Digital Rights Management (DRM) will be listed under the **Protected** category. A lock icon shown before song titles indicates that the music files are protected. A cross-marked lock icon shown before song titles indicates that the rights for the music files have expired, and you will not be able to play them.






Note When you exit Audio Manager and open it again, it will display the last submenu that you were in. Press NAVIGATION left until you reach the Library's Main screen.

Music Player

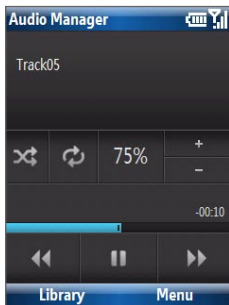Music Player is integrated with Audio Manager, and lets you play back music files. After selecting a song in the Library, Music Player opens and automatically plays it.

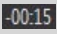Note If the last screen you were in was the Music Player when you closed Audio Manager, next time you launch Audio Manager, it will open Music Player directly. To switch back to the Library, click **Library**.




Control	Does this
Press CENTER OK	Play/Pause the song.
	Shows the playback time. Click Menu > Time Display to choose the display format for the playback time (Elapsed time or Remaining time).
Press and hold 1	Move backward in a song.
Press and hold 3	Move forward in a song.
Press NAVIGATION left/right	Go to the previous/next song.
Press 8	Mute/Unmute.
Press NAVIGATION up/down	  Increase/Decrease the volume.
Press 4	 Shuffle songs during playback.
Press 7	 Loop songs during playback.
Library	Return to the Library screen.
Menu	Open a menu where you can choose to add the current song to a playlist, set the playback mode, set the song as ring tone, and more.

Playlists

A playlist is a list of music files that play in a sequential order. The Playlists screen shows the current playlists that are found on the phone memory and storage card.

There are two types of playlists that will be shown on the Playlist screen:

- **Windows Media Player playlists.** These are playlists that are in Windows Media Player Mobile's Library (which is synchronised with Windows Media Player on your computer), and they are indicated by the Windows Media Player icon (). They can be played in Audio Manager's Music Player but cannot be edited.
- **Custom playlists.** These are playlists that are created in Audio Manager and can be edited.

- Notes**
- Audio Manager searches for playlists in the following locations:
Phone: \Playlists\Application Data\HTC\AudioManager\playlists
Storage card: \Storage Card\Playlist
 - If a Windows Media Player playlist contains a combination of music, video and image files, Audio Manager accesses the music files only and filters out the other media types.

To create a playlist

1. On the Library's Main screen, select **Playlists** and press CENTER OK.
2. On the Playlists screen, click **Menu > New**.
3. Enter a **Playlist name** then click **OK**.
4. On the Playlists screen, select the playlist you have just created and then click **Edit**.
5. Click **Menu > Add**.
6. Select the songs you want to add to the playlist by pressing CENTER OK, or click **Menu > Select All** to choose all the songs.
7. Click **OK** thrice to return to the Playlists screen.

Set music as ring tone

 
Audio Manager allows you to select your favourite music and set it as a ring tone for your phone.

1. Use the NAVIGATION CONTROL to select a song in the Library, or select a song to play it in Music Player.
2. Click **Menu > Set as Ring Tone**.
3. Select **Set as Default Ring Tone** and press CENTER OK.
4. A confirmation message is then displayed. Click **OK**.

Note If the selected song is in MP3 format, you can trim it first to make it shorter. Click **Trim** to open the MP3 Trimmer and trim the song.

Tip If you only want to save the song to the ring tone folder for future use, select **Save to Ring Tone Folder**. Later on, you can click **Start > Settings > Sounds** to set it as your ring tone.

To trim the MP3 file

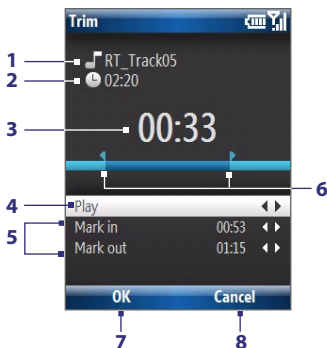


This control	Does this
1 Title	Shows the name for the song.
2 Duration	Shows the length of the song after trimming.
3 Time	Shows the playback time when the song is played.
4 Play/Stop	Press CENTER OK to toggle between playing and stopping playback.
5 Mark in/ Mark out	Allows precise marking of the start and end times of the song that will be used for the file.
6 Mark in/Mark out points	Shows the current mark in (start) and mark out (end) points of the song. The song will be trimmed based on these points.
7 OK	Click to confirm trimming the file.
8 Cancel	Click to exit MP3 Trimmer without trimming the file.

9.6 Using Audio Booster

Audio Booster enhances your music experience by providing you with controls for adjusting sound settings when listening to music. You can add and adjust 3D sound, treble and bass effects. Audio Booster even has an equaliser with presets as well as a control panel for fine tuning sound.

To open Audio Booster

 - Click **Start > Audio Booster**.

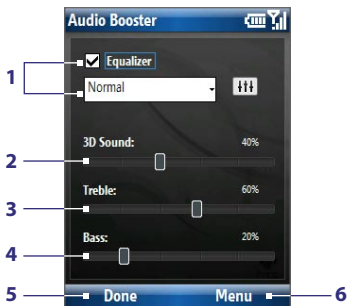

This control	Does this
1 Equaliser	Enables or disables the equaliser. Select the check box to enable the equaliser and to fine tune its settings, if desired. See "Equaliser" for more information.
2 3D Sound	Adds a three-dimensional effect to sound. Click the slider and use NAVIGATION right or left to increase or decrease the effect. To disable the 3D effect, adjust the setting to 0%.
3 Treble	Adds a treble effect to increase the high tones in sound. Click the slider and use NAVIGATION right or left to increase or decrease the effect. To disable the treble effect, adjust the setting to 0%.
4 Bass	Adds a bass effect to increase the low tones in sound. Click the slider and use NAVIGATION right or left to increase or decrease the effect. To disable the bass effect, adjust the setting to 0%.


This control	Does this
5 Done	Click to apply the modified settings.
6 Menu	<ul style="list-style-type: none"> Click Menu > Cancel to exit Audio Booster without applying the modified settings: Click Menu > Reset to change back to the default settings.

Equaliser


The Equaliser optimises sound for a better listening experience. It provides preset moods, such as hip hop, jazz, rock, etc., and several enhancement presets that suit different types of music. It also has a 10-band graphic equaliser that lets you adjust the loudness of sound by frequency.


To apply a preset

 1. Select the Equaliser check box to enable the equaliser.
2. Select a desired preset from the dropdown menu.

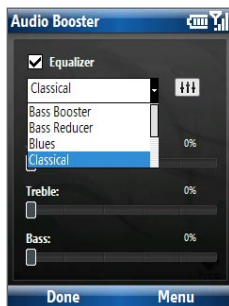


To create a custom equaliser preset

 1. Select the **Equaliser** check box to enable the equaliser.
2. Click .
3. Adjust the frequency bands to your desired values by clicking a slider and using NAVIGATION up and down to drag the equaliser controls. The selected values are indicated on top of the sliders.
4. Save your equaliser settings as a preset by clicking **Menu > Save as Preset**.

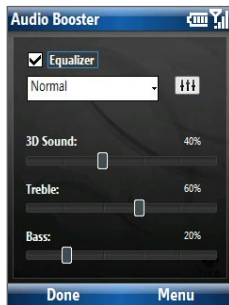

5. Enter a preset name then click **Done**. The preset is added to the list box.

 
To delete a custom equaliser preset

1. Select the **Equaliser** check box then click .
2. Click the list box then select the preset you want to delete.
3. Click **Menu > Delete Preset**.

Note You can only delete custom equaliser presets. Equaliser presets that are preinstalled cannot be deleted.

9.7 Flash Lite Player

Flash Lite Player lets you play back Flash Lite™ animation files, games, and other types of Flash Lite files on your device.

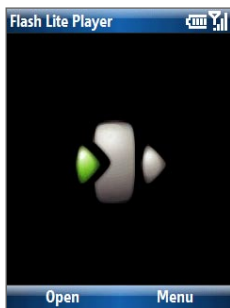

Note Flash Lite Player only supports playback of Flash Lite (not Flash) files.

To open a Flash Lite File

1. On the Home screen, click **Start > Flash Lite Player**.
2. Click **Open** and locate the Flash Lite file you want to open.
3. Click the file to open it.

To open a recently played back file

On the Flash Lite Player screen, click **Menu > Recent Files**. Select the file you want to open and click **Open**.

To adjust the playback resolution

On the Flash Lite Player screen, click **Menu > Quality** and then select a quality setting.

To view a file in full screen

Depending on the file, Flash Lite Player may expand the file to fill the whole screen or hide the title and bottom bars.

- On the Flash Lite Player screen, click **Menu > Full Screen**.

Note When in full screen mode, you can revert to normal view mode by pressing the right **SOFT KEY** and then clicking **Full Screen** on the shortcut menu.

9.8 Java

MIDlets are Java™-based applications that can run on mobile phones. Your phone supports Java 2 Edition, J2ME™. Java allows you to download Java-based applications, such as games and tools that are specifically designed for mobile phones. Java gives you the flexibility of installing and managing additional J2ME applications from the Internet.

Install and run MIDlets/MIDlet suite

To install MIDlets from the Internet

1. On the Home screen, click **Start > Java**.
2. Click **Menu > Install > Browser** to open Internet Explorer Mobile.
3. Locate the MIDlet/MIDlet suite while connected to the Internet.
4. Select the MIDlet/MIDlet suite to download.
5. To start installing the MIDlet/MIDlet suite, click **Yes**.
6. Click **Done** to confirm the installation.

Notes

- You can cancel the installation at any time.
- Downloaded MIDlets will be automatically saved in the My Documents folder.

To install MIDlets from a PC

You can install the MIDlets/MIDlet suites on your phone from a PC using the USB sync cable, or Bluetooth. MIDlets copied to your phone using Bluetooth or email attachments are automatically saved in the My Documents folder.

To install MIDlets from a local folder

1. On the Home screen, click **Start > Java**.
2. Click **Menu > Install > Local Files** to install the MIDlets currently saved in the My MIDlets folder.
3. Select the MIDlet/MIDlet suite from the list by using the NAVIGATION CONTROL.
4. Click **Install**.
You may be prompted to confirm installation of an untrusted MIDlet. Click **Yes** to install the MIDlet or **No** to cancel.
5. After selecting **Yes**, you are prompted to select a folder to install the MIDlet in.
6. Click **OK** to select the default folder or click **Menu > New Folder** to choose a different location.
7. The MIDlet/MIDlet suite is installed.

To run MIDlets/MIDlet suites on your phone

1. On the Home screen, click **Start > Java**.
2. Select a MIDlet from the list using the NAVIGATION CONTROL.
3. Press CENTER OK or click **Launch** to run the MIDlet.

Manage MIDlets/MIDlet suite

You can organise the MIDlets/MIDlet suites into folders. You can also uninstall, move or rename MIDlets/MIDlet suites.

To uninstall a MIDlet

Before you uninstall a MIDlet/MIDlet suite, make sure that it is not running.

1. On the Java Apps screen, select the MIDlet/MIDlet suite using the NAVIGATION CONTROL.
2. Click **Menu > Actions > Uninstall**.
3. Click **OK** to confirm.

Note On the Java screen, click **Menu > Uninstall All** to uninstall all MIDlets.

To update a MIDlet/MIDlet suite

Java will search for updates for the selected MIDlet/MIDlet suite where it was installed from before.

1. On the Java Apps screen, select the MIDlet/MIDlet suite using the NAVIGATION CONTROL.
2. Click **Menu > Actions > Update**. Java then searches for updates.
3. Click **Yes** or **No** depending on the update scenario.

To change the display name of a MIDlet or folder

1. On the Java Apps screen, select the MIDlet/MIDlet suite using the NAVIGATION CONTROL.
2. Click **Menu > Actions > Rename**.
3. Enter a new name for the MIDlet then click **Save**.

To move a MIDlet or folder to another location

1. On the Java Apps screen, select the MIDlet/MIDlet suite using the NAVIGATION CONTROL.
2. Click **Menu > Actions > Move**.
3. Click the location where you want to move the MIDlet or folder to then click **OK**.

Tip Click **Menu > New Folder** to create a new folder.

To view protection information of a MIDlet

If the MIDlet/MIDlet suite is protected by DRM (Digital Rights Management), there are some restrictions on how you can use the MIDlet/MIDlet suite. DRM is a technology used by publishers to control access to digital data.

1. On the Java Apps screen, select the MIDlet/MIDlet suite using the NAVIGATION CONTROL.
2. Click **Menu > Actions > Protection**.
3. Choose the information you want to view and click **Select**.

Chapter 10

Using Other Applications

10.1 Microsoft® Office Mobile

10.2 Microsoft® Office Word Mobile

10.3 Microsoft® Office Excel® Mobile

10.4 Microsoft® Office PowerPoint® Mobile

10.5 Adobe® Reader® LE

10.6 Speed Dial

10.7 Voice Speed Dial

10.1 Microsoft® Office Mobile

Microsoft® Office Mobile consists of three applications that let you view and edit Microsoft documents. These three applications are:

- **Microsoft® Office Word Mobile** lets you view and edit Microsoft Word documents and text files.
- **Microsoft® Office Excel® Mobile** lets you view and edit Microsoft Excel worksheets.
- **Microsoft® Office PowerPoint® Mobile** lets you view Microsoft PowerPoint slides.

To learn how to copy files, see “Managing and Backing Up Files” in Chapter 4.

10.2 Microsoft® Office Word Mobile

Microsoft® Office Word Mobile gives you editing and viewing capabilities for your Word documents and text files.

To open Word Mobile

- On the Home screen, click **Start > Office Mobile > Word Mobile**.

Note Word Mobile does not fully support some features of Microsoft Word. Some data and formatting may be lost when you save the document on your phone.

View documents

To open a document

1. In Word Mobile, click **Menu** and choose the location where the ***.doc**, ***.rtf**, or ***.txt** file is saved.
2. Locate the file you want to open and click **Select**.

Note You can only open one document at a time. You must close the opened document first before you can open another document.

To change the zoom ratio

Click **View** and then on the menu, select the zoom ratio to use.

Click **View > Wrap to Window** to adjust the text flow so that the text wraps based on the screen size. This way, you do not need to scroll right to read long paragraphs or sentences.

Note Text in tables cannot be wrapped.

To change scrolling preference

- Click **Menu > Scroll Up/Down** and then select **By Page** or **By Line**.

To find a word in a document

- Click **Menu > Find**.
- Type in the word you want to find in **Find What**. Select **Match case** and/or **Whole words** only if needed.
- Click **Find**.

To close the document

- Click **Menu > Close File**.

Edit and send documents

In order to edit Word documents or text files, you need to switch to Edit mode. To switch to Edit mode, click **Menu > Edit**.

To type words into the document

- In the document, use the NAVIGATION CONTROL to position the cursor where you want to insert the text.
- Type in the text using the QWERTY keyboard.

Tips

- Click **Menu > Format** to change the font format. You can use **Bold**, **Italic**, **Underline**, and **Highlight**.
- If you are using a formatting style and you want to revert to no formatting style, click **Menu > Format** and select the formatting style you are using from the menu.

To save the document

1. Click **Menu > File > Save As**.
2. Type in the **Name** you want to use for the edited document and select the **Location** where you want to save the document.
3. Click **Save**.

To send the document through email

1. Click **Menu > File > Send**.
2. In the Messaging screen, select the email account you want to use to send the document and click **Select**.
3. In the email, the file is automatically appended as an attachment.
4. Enter the recipient name and click **Send**.

10.3 Microsoft® Office Excel® Mobile

Microsoft® Office Excel® Mobile gives you editing and viewing capabilities for your Excel worksheets.

To open Excel Mobile

- Click **Start > Office Mobile > Excel Mobile**.

Note Excel Mobile does not fully support some features such as Microsoft Excel. Some data and formatting may be lost when you save the workbook on your phone.

View worksheets

To open a file

1. In Excel Mobile, click **Menu** and choose the location where the *.xls file is saved.
2. Locate the file you want to open and click **Select**.

Note You can only open one worksheet at a time. You must close the opened worksheet first before you can open another worksheet.

By default, the worksheet opens in Full Screen mode, to change the view mode, press the left SOFT KEY (to show the **View** menu) and click **View > Full Screen**.

To view the contents of a cell

There are times that the text in a cell cannot be fully displayed onscreen. To view the text in the cell in its entirety, select the cell and then click **View > Cell Text**.

To use Freeze Pane

1. Select the cell that is after and below the row and column you want to freeze.
For example, if you want to freeze **column E** and **row 4**, you should select cell **F5**.
2. Click **View > Freeze Panes**. To unfreeze the panes, click **View > Unfreeze Panes**.

To change the zoom ratio

- Click **View > Zoom** and then select the zoom ratio to use.

To switch to another worksheet

If your Excel file has multiple worksheets, you can go to a different worksheet by clicking **View > Sheet** and then select the worksheet you want to view.

Edit and send worksheets

In order to edit Excel worksheets, you need to switch to Edit mode. To switch to Edit mode, click **Menu > Edit**.

To edit the cell text

1. Select the cell whose text you want to edit and then press CENTER OK or click **Menu > Edit > Cell Text**.
2. Type in the text and click **Done**.

To delete the cell content

- Select the cell whose content you want to delete and click **Menu > Edit > Clear Cell**.

Tip You can select multiple cells by clicking **Menu > Select** and then choosing what to select in the worksheet.

To edit the cell range of a defined name

If your worksheet contains defined names created in Microsoft Excel on the PC, you can edit the cell range of the defined name.

1. Click **Menu > Edit > Define Name**.
2. In **Range Name**, select the name whose cell range you want to change.
3. In **Refers to**, type in the new cell range.
4. Click **Done**.

To delete cells

- Select the cell you want to delete and click **Menu > Edit > Delete Cells**.

Tip You can select multiple cells to delete by clicking **Menu > Select** and then choosing what to select in the worksheet.

To copy and paste cell contents

1. Select the cell(s) you want to copy and then click **Menu > Edit > Copy**.
2. Select the cell(s) where you want to copy the cell contents to and click **Menu > Edit > Paste**.

To insert a row or column

Select the cell where you want to insert a row or column and then click **Menu > Insert > Row** or **Column**. If you insert a row, the row will be inserted above the selected cell; if you insert a column, the column will be inserted at the left of the selected cell.

Tip You can also shift the contents of a row or column. To shift, select the cell you want to shift and click **Menu > Insert > Shift Right** or **Shift Down**.

To go to a cell

- Click **Menu > Tools > Go To** and then enter the Cell reference or name. Click **OK**.

Tip You can also sort and find text in the worksheet by clicking **Menu > Tools > Sort** or **Find**.

To undo and redo an action

- Click **Menu** > **Undo [Action]** or **Redo [Action]**.

To save the worksheet

1. Click **Menu** > **File** > **Save As**.
2. Type in the **Name** you want to use for the edited worksheet and select the **Location** where you want to save the worksheet.
3. Click **Save**.

To send the document through email

1. Click **Menu** > **File** > **Send**.
2. In the Messaging screen, select the email account you want to use to send the worksheet.
3. In the email, the file is automatically appended as an attachment.
4. Enter the recipient name and click **Send**.

10.4 Microsoft® Office PowerPoint® Mobile

Microsoft® Office PowerPoint® Mobile gives viewing capabilities for your PowerPoint presentations.

To open PowerPoint Mobile

- Click **Start** > **Office Mobile** > **PowerPoint Mobile**.

To open a file

1. In PowerPoint Mobile, click **Menu** and choose the location where the *.ppt file is saved.
2. Locate the file you want to open and click **Select**.

To go through the slides of the presentation

Press NAVIGATION right to go forward in the presentation; press NAVIGATION left to go back to the previous action or slide of the presentation.

You can also go to a particular slide in your presentation by pressing the right SOFT KEY (to show the **Menu**) and clicking **Menu** > **Go to Slide** then choosing the slide to go to.

To view a custom show

You can view custom shows that you created on Microsoft PowerPoint on your phone.

1. Press the right SOFT KEY to show **Menu**.
2. Click **Menu > Custom Show** and then select the custom show you want to view on the list.

To set PowerPoint Mobile preferences

1. Press the right SOFT KEY to show **Menu**.
2. Click **Menu > Options**.
3. Set the **Orientation** and **Playback options** and click **Done**.

To show links in a slide

On your phone, you can show and activate hyperlinks in slides that you created on Microsoft PowerPoint.

1. Press the right SOFT KEY to show **Menu**.
2. Click **Menu > Show Links**.
3. Press CENTER OK to activate the hyperlink. If there is more than one hyperlink on the slide, use NAVIGATION CONTROL to select the hyperlink you want to activate.

To end the presentation

- Press the left/right SOFT KEY (to show **End**) and then click **End**.

10.5 Adobe® Reader® LE

Adobe® Reader® LE lets you view Portable Document Format (PDF) files.

When you open a password-protected PDF file, you will be prompted to enter the password before the file can be opened.

To open a PDF file on your phone

1. Click **Start > Adobe Reader LE**.
2. Click **Open**.
3. Browse to a folder and click the PDF file you want to open.

Note To open another PDF file, click **Open > Menu > Browse For File**. You can also open a PDF file from File Explorer by clicking it.

To navigate through a PDF file

You can do any of the following:

- Use the **NAVIGATION CONTROL** to scroll through the pages.
- Click **Menu > Go To** and select an option to go to a specific page in the PDF file.

While reading a PDF file, click **Menu** to open a list of options that lets you zoom in, directly go to a bookmark, find text in the file, and more.



10.6 Speed Dial

You can create speed dial entries for frequently-called numbers or frequently-accessed items so you can dial a number or access an item by pressing a single key.

To create a speed dial entry for a contact

1. On the Home screen, click **Start > Contacts**.
2. Select a contact.
3. Press CENTER OK to view the contact details.
4. Select the desired phone number and click **Menu > Add to Speed Dial**.
5. Enter appropriate details in **Name**, **Value**, and **Keypad assignment**.
6. Click **Done**. To quit at any time during this process, click **Menu > Cancel**.

To create a speed dial entry for an item

1. On the Home screen, click **Start** then choose (just highlight) the item you want.
2. Click **Menu > Add Speed Dial**.
3. Enter details in **Name**, **Value**, and **Keypad assignment**.
4. Click **Done**. To quit at any time during this process, click **Menu > Cancel**.

Note The first speed dial location is generally reserved for your voicemail. Speed Dial uses the next available location by default. If you want to place a number in a location that is already used, the new number replaces the existing number.

To retrieve a voicemail message

- On the Home screen, press and hold **1** to access your voice mailbox, and follow the prompts to retrieve your messages.

To make a call or launch a programme using Speed Dial

- If you have assigned a speed dial (for example, the second location) to a contact or a programme in Speed Dial, you can simply press and hold the 2 key on the phone keypad to dial the contact's number or open the programme.

To delete a speed dial entry

1. On the Home screen, click **Start > Speed Dial**.
2. Select the desired entry and click **Menu > Delete**.

10.7 Voice Speed Dial

You can record a voice tag for a phone number, email address, or Web page address that is stored on your phone. Then, when you say the voice tag using Voice Speed Dial, your phone automatically dials the associated phone number, opens an email message using the associated address, or goes to the associated Web page.

To create a voice tag for a phone number, email address, or URL in Contacts

1. On the Home screen, click **Start > Contacts**.
2. Select the desired contact, and press CENTER OK to open the contact card.
3. Select the item to which you want to assign a voice tag.
4. Click **Menu > Add Voice Tag**.
5. After a “beep” sound, begin recording the voice tag (preferably one easy-to-recognise word).
6. When the voice tag is successfully trained, the phone will play back the voice tag. Click **OK**.
7. Enter appropriate details in **Name**, **Value**, and **Keypad assignment**.
8. Click **Done** to save the new voice tag. To quit at any time during this process, click **Menu > Cancel**.

To create a voice tag for a programme

To create a voice tag for a programme, for example, Camera, do the following:

1. On the Home screen, click **Start > Camera**. (Do not press CENTER OK when Camera is selected.)
2. Click **Menu > Add Voice Tag**.
3. After the message/beep, say "Camera."
4. When the voice tag is successfully trained, the phone will play back the voice tag. Click **OK**.
5. Enter appropriate details in **Name**, **Value**, and **Keypad assignment**. Click **Done** to save the new voice tag. To quit at any time during this process, click **Menu > Cancel**.

To make a call or launch a programme using the voice tag

1. Press and hold the **Volume Up** button (Voice Tag) on the left side of the phone.
2. After a "beep" sound, say the recorded voice tag that you have assigned to the phone number you want to call or the programme you want to launch. The phone plays back the voice tag and then dials the number or launches the associated programme.

Tip If the phone cannot recognise your voice tag, please try again and speak clearly and reduce the surrounding noise.

To delete and play voice tags

1. On the Home screen, click **Start > Speed Dial**.
2. Click the desired voice tag from the list.
3. Do any of the following:
 - To play back an existing voice tag at any time, click **Menu > Play Voice Tag**.
 - To delete the voice tag, click **Menu > Delete Voice Tag**.

Appendix

A.1 Regulatory Notices

A.2 Specifications

A.1 Regulatory Notices

Regulatory Agency Identifications

For regulatory identification purposes, your product is assigned a model number of WING220.

To ensure continued reliable and safe operation of your device, use only the accessories listed below with your WING220.

The Battery Pack has been assigned a model number of LIBR160 & WING160.

This product is intended for use with a certified Class 2 Limited Power Source, rated 5 Volts DC, maximum 1 Amp power supply unit.

European Union Notice

Products with CE marking comply with the R&TTE Directive (99/5/EC), the EMC Directive (89/336/EEC), and the Low Voltage Directive (73/23/EEC) issued by the Commission of the European Community.

Compliance with these directives implies conformity to the following European Norms (in parentheses are the equivalent international standards).

- **EN 60950-1 (IEC 60950-1)**
Safety of Information Technology Equipment.
- **ETSI EN 301 511**
Global system for mobile communications (GSM); Harmonised EN for mobile stations in the GSM 900 and GSM 1800 bands, covering essential requirements of article 3.2 of the R&TTE directive (1995/5/EC).
- **ETSI EN 301 489-1**
Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements.
- **ETSI EN 301 489-7**
Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 7: Specific conditions for mobile and portable radio and ancillary equipment of digital cellular radio telecommunications systems (GSM and DCS).

- **ETSI EN 301 489-17**
Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 17: Specific conditions for 2.4 GHz wideband transmission systems and 5 GHz high performance RLAN equipment.
- **EN 301 489-24**
Electromagnetic compatibility and radio spectrum matters (ERM); Electromagnetic compatibility (EMC) standard for radio equipment and services; Part 24: Specific conditions for IMT-2000 CDMA direct spread (UTRA) for mobile and portable (UE) radio and ancillary equipment.
- **EN 301 908**
Electromagnetic compatibility and radio spectrum matters (ERM); Base stations (BS) and user equipment (UE) for IMT-2000 third generation cellular networks.
- **ETSI EN 300 328**
Electromagnetic compatibility and Radio spectrum Matters (ERM); Wideband Transmission systems; data transmission equipment operating in the 2.4 GHz ISM band and using spread spectrum modulation techniques.
- **EN 50360:2001**
Product standard to demonstrate the compliance of mobile phones with the basic restrictions related to human exposure to electromagnetic fields (300 MHz - 3 GHz).
- **EN 50371:2002**
Generic standard to demonstrate the compliance of low power electronic and electrical apparatus with the basic restrictions related to human exposure to electromagnetic fields (10 MHz - 300 GHz)
- General public.



This equipment may be operated in:

AT	BE	BG	CH	CY	CZ	DE	DK
EE	ES	FI	FR	GB	GR	HU	IE
IT	IS	LI	LT	LU	LV	MT	NL
NO	PL	PT	RO	SE	SI	SK	TR

Safety precautions for RF exposure

- Use only original manufacturer-approved accessories, or accessories that do not contain any metal.
- Use of non-original manufacturer-approved accessories may violate your local RF exposure guidelines and should be avoided.

Exposure to Radio Frequency (RF) Signals

Your device contains a radio transmitter and receiver. The radiated output power is far below the international radio frequency exposure limits. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on the safety standards previously set by international standards bodies:

- American National Standards Institute (ANSI) IEEE. C95.1-1992
- National Council on Radiation Protection and Measurement (NCRP). Report 86. 1986
- International Commission on Non-Ionising Radiation Protection (ICNIRP) 1996
- Ministry of Health (Canada), Safety Code 6. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in usage.

As with other mobile radio transmitting equipment, users are advised that for satisfactory operation of the equipment and for the safety of personnel,

it is recommended that no part of the human body be allowed to come too close to the antenna during operation of the equipment.

Your device has an internal antenna. Use only the supplied integral antenna. Use of unauthorised or modified antennas may impair call quality and damage the phone, causing loss of performance and SAR levels exceeding the recommended limits as well as result in non-compliance with local regulatory requirements in your country.

To assure optimal phone performance and ensure human exposure to RF energy is within the guidelines set forth in the relevant standards; always use your device only in its normal-use position. Do not touch or hold the antenna area unnecessarily when placing or receiving a phone call. Contact with the antenna area may impair call quality and cause your device to operate at a higher power level than needed. Avoiding contact with the antenna area when the phone is IN USE optimises the antenna performance and the battery life.

SAR Information

- 0.738 W/kg @10g

Telecommunications & Internet Association (TIA) safety information

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should ALWAYS keep the phone more than six inches from their pacemaker when the phone is turned ON.
- Should not carry the phone in a breast pocket.
- Should use the ear opposite the pacemaker to minimise the potential for interference. If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider, or call the customer service line to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Other tips and cautions

- Avoid using your phone near metal structures (for example, the steel frame of a building).
- Avoid using your phone near strong electromagnetic sources, such as microwave ovens, sound speakers, TV and radio.
- Avoid using your phone after a dramatic change in temperature.

WEEE Notice

The Directive on Waste Electrical and Electronic Equipment (WEEE), which entered into force as European law on 13th February 2003, resulted in a major change in the treatment of electrical equipment at end-of-life.

The purpose of this Directive is, as a first priority, the prevention of WEEE, and in addition, to promote the reuse, recycling and other forms of recovery of such wastes so as to reduce disposal.

The WEEE logo on the product or on its box indicates that this product must not be disposed of or dumped with your other household waste. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste. Isolated collection and proper recovery of your electronic and electrical waste equipment at the time of disposal will allow us to help conserving natural resources. Moreover, proper recycling of the electronic and electrical waste equipment will ensure safety of human health and environment. For more information about electronic and electrical waste equipment disposal, recovery, and collection points, please contact your local city centre, household waste disposal service, shop from where you purchased the equipment, or manufacturer of the equipment.



RoHS Compliance

This product is in compliance with Directive 2002/95/EC of the European Parliament and of the Council of 27 January 2003, on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS) and its amendments.

A.2 Specifications

System information

Processor/Chipset • Qualcomm® MSM7200™ 400MHz

Memory • ROM-Nand Flash: 256 MB
• RAM: 64 MB SDRAM

Figures are the total ROM and RAM memory available for use and storage. Since the memory is shared by the Operating System, applications, and data, the actual available memory is less than what is written.

Operating system Microsoft® Windows Mobile® 6 Standard

Display

Type 2.4" Transmissive LCD with white LED back light

Resolution 320 x 240 dots resolution at 65K Colors (Landscape view)

Orientation Portrait and Landscape (Keyboard open)

HSDPA/UMTS/GSM/GPRS/EDGE Module

HSDPA/UMTS 2100MHz

GSM/GPRS/EDGE Quad-band (850, 900, 1800, & 1900)

Camera module

Type Main camera: 2 Megapixels CMOS
Second camera: VGA camera

Resolution UXGA: 1200 x 1600; SXGA: 960 x 1024; VGA: 480 x 640;
QVGA: 240 x 320; QQVGA: 120 x 160

Digital Zoom Up to 8X

Connection

I/O port HTC ExtUSB™ : an 11-pin mini-USB and audio jack in one
(ExtUSB is a proprietary connection interface that is trademarked by HTC)

Bluetooth V 2.0 with EDR, Class 2 transmit power

Wi-Fi IEEE 802.11b/g compliant, Internal WLAN antenna

Audio

Microphone/speaker Built-in microphone and loud speaker (for hands-free support)

Headphone MP3/AAC/AAC+/WMA/WAV/AMR codec

Physical

Dimension 105.8 mm(L) x 51 mm(W) x 19.4 mm(T)

Weight 150g with battery pack

Controls and lights

Navigation 5-way Navigation Pad/CENTER OK button

Buttons

- Power on/off
- Left and Right Softkeys
- Home screen
- Back
- Talk (start call/answer call)
- End call/Lock keypad
- 36 keys QWERTY keyboard
- 12 buttons keypad
- Volume buttons
- Camera
- Comm manager

Lights

- Event notification
- Charge status
- GSM/GPRS signals
- Bluetooth/Wi-Fi connection

Expansion slot

microSD slot microSD™ memory card (SD 2.0 compatible)

Power supply

Battery 1050 mAh Li-Ion Polymer removable, rechargeable battery

Talk time* Up to 318 minutes (GSM); up to 210 minutes (UMTS)

Standby* Up to 290 hours (GSM); up to 388 hours (UMTS)

AC adapter

- AC input/frequency: 100 ~ 240 AC, 50/60Hz
- DC output: 5V and 1A

* Subject to network and phone usage.

Index

A

Accessibility settings

- confirmation time out 61
- in-call alert volume 61
- multipress time out 61
- system font size 61

ActiveSync 52

- overview 27
- synchronise 53, 97

Add and remove programmes 62

Add attachment to message 91

Adobe Reader 27, 169

Airplane mode 108

Alarm 60

Alarm settings 59

Alerts 59

Answer/end call 43

Attachments 91

Audio Manager 27, 148

B

Back up files 64

Battery

- battery information 34
- battery management 61
- low battery 35

Beam via Bluetooth 119

Bluetooth

- beaming 119
- Bluetooth modem 121
- hands-free headset 117
- modes 115
- overview 115
- partnerships 116
- stereo headset 117

- synchronise 55

- visible 115

Bluetooth Explorer 27, 120

Browsing the Web 113

C

Calculator 28

Calendar 28, 74

Call History 28

Camera 132

- icons and indicators 134

- overview 28

- zoom 135

Camera settings 136

Capture formats 133

Capture modes 133

Check battery power 35

Clear Storage 27

Close running programmes 63

Comm Manager 28, 108

Company Directory 103

Compose MMS message 85

Compose text message 83

Conference call 44

Confirmation time out 61

Connecting to Wi-Fi Network 109

Connect phone to Internet

- Dial-up 111

- Wi-Fi 109

Connect phone to private network 111

Contacts 28, 70

- Beam contact information 72

- Call a contact 71

- Create a new contact 70

- Find a contact 71

- Send contact information via a text message 72

- Send contact information via MMS 72

- View and edit a contact 71

Contacts picture (capture mode) 133
Copy

- contacts to SIM/USIM card 73

- files between phone and PC 64

- media files from PC to phone 144

- pictures and videos 140

- SIM contacts to phone 73

- sound file to phone 60

Currency setting 58

Customise Home screen 58

D

Date setting 58

Device lock 67

Dial-up connection 111

Digitally sign messages 105

Digital Rights Management (DRM) 143

Digital signature 105

Direct Push 97

E

Email 90

- Outlook 87

- POP3/IMAP4 88

- security 104

Emergency call 45

Encrypt messages 105

Enter text and numbers 30

Error reporting 62

Event notification 59

Exchange Server 97

Exclude email address when replying to all 94

F

Fetch Mail 99

File Explorer 28, 64

Filter email 91

Find contacts online 103

Flag your messages 100

Font size (display) 61

Forward message 92

G

Games 28

GPRS 110

H

Home screen

- change background 58

- customise 58

- overview 24, 58

I

IMAP4 88

In-call alert volume 61

Insert a long pause in dialling sequence 46

Insert pause in dialling sequence 46

Insert SIM/USIM Card 22

Install microSD Card 23

Install Microsoft ActiveSync 52

Install MIDlets

- from Internet 157

- from PC 157

- locally 158

International call 45
 Internet 109
 Internet Explorer Mobile 28, 113
 Internet Sharing 28, 114

L

Language/locale setting 58
 LED indicator lights 20, 27
 Licensed and protected media 143
 Lock
 - keyboard 66
 - phone 67

M

Make call
 - from Call History 40
 - from Contacts 40
 - from Home Screen 39
 - from Speed Dial 41
 Managing Meeting Requests 101
 Memory 63
 Messaging 28, 82
 Messenger 28
 microSD Card 23
 Microsoft ActiveSync 52
 Microsoft Windows Mobile Device
 Center 51
 MMS
 - access MMS 84
 - create and send 85
 - MMS settings 84
 MMS video (capture mode) 133
 Modem
 - Bluetooth modem 121
 - USB modem 114
 Multipress mode 31

Music Player 150
 Mute call 45

N

Number format 58
 Numeric mode 32

O

Operating system version 62
 Out-of-office 100
 Outlook email 87
 Owner information 61

P

Parts and accessories 16
 Pause in dialling sequence 46
 PDF 169
 Personal information 61
 Phone specification 62
 Photo (capture mode) 133
 Pictures & Videos 29, 140
 Picture theme (capture mode) 133
 PIN 38, 66
 Playlists (Audio Manager)
 151
 Play media 145
 POP3 88
 Power management 61
 Profile 59
 Programmes 27
 - ActiveSync 27
 - Adobe Reader 27
 - Audio Manager 27, 148
 - Bluetooth Explorer 27
 - Calculator 28

- Calendar 28, 74
 - Call History 28
 - Camera 28
 - Clear Storage 27
 - Comm Manager 28
 - Contacts 28, 70
 - File Explorer 64
 - Games 28
 - Internet Explorer 28
 - Internet Sharing 28, 114
 - Messaging 28, 82
 - Messenger 28
 - Pictures & Videos 29, 140
 - Quick Notes 29
 - SAPSettings 29
 - SIM Manager 27, 73
 - Speed Dial 29, 170
 - Tasks 29, 77
 - Task Manager 29, 63
 - Video Recorder 29
 - Voice Notes 29, 78
 - Windows Live 29
 - Windows Live Mobile 124
 - Windows Media Player Mobile 29, 142
- Put call on hold 44

Q

- Quick List 30
- Quick Notes 29, 78
- QWERTY Keyboard 33

R

- Receive
 - call 43
 - MMS message 86

- Regional settings 58
- Reply message 92, 94
- Reset phone 68
- Restart phone 67
- Review screen 135
- Ring tone 38, 79, 152

S

- SAPSettings 29, 47
- Search for emails on the Exchange Server 99
- Secure/Multipurpose Internet Mail Extension (S/MIME) 104
- Securing Wi-Fi Connection 110
- Send
 - email/SMS message 90
 - MMS message 85
- Send and download emails 93
- Send appointments 76
- Send messages 90
- Settings 29
- Setting Up Email Accounts 87
- Set music as ring tone 152
- Set up ActiveSync on PC 52
- Set up Home screen 58
- SharePoint documents 101
- Share contact information 72
- SIM Access Profile (SAP) 47
- SIM Manager
 - copy contacts to SIM/USIM card 73
 - copy SIM contacts to phone 73
 - create SIM contact 73
- Sounds 59
- Speakerphone 45
- Speed Dial 29, 41, 170
- Sports (capture mode) 133

- Start menu 27
- Stop programmes 63
- Synchronise
 - ActiveSync 53
 - change information types 53
 - music and video 56
 - schedule synchronisation with Exchange Server 97
 - via Bluetooth 55
 - Windows Media Player 56
- System font size 61

T

- T9 mode 31
- Tasks 29, 77
- Task Manager 29, 63
- Time setting 58
- Turning On and Off the Phone 23

V

- Verify digital signature 105
- Video (capture mode) 133
- Video Call 41
- Video Recorder 29
- Viewing media files 140
- View and reply to MMS messages 86
- View your appointments 75
- Visible (Bluetooth) 115
- Voice Notes 29, 78
- Voice Tag 171
 - create voice tag for phone number, email address, or URL in Contacts 171
 - create voice tag for programme 172
 - edit, delete, and play voice tags 172

W

- Web browser 113
- Wi-Fi 109
- Windows Live 29
- Windows Live Messenger 126
- Windows Media Player
 - file formats 142
 - menus 143
 - overview 29
 - troubleshooting 146
- Windows Mobile Device Center 51
- Windows Mobile software version 62

Z

- Zoom 135