
3Mega Digital Camera

English



E- Manual

Contents

1 Getting Started

- *Camera Parts*
- *Battery Installation & Strap*
- *Tripod & External Memory*

2 Using Your Camera

- *Powering Your Camera On and Off*
- *Taking Still Pictures and Recording AVI Movies*
- *Playing Back AVI Movies and Still Pictures*
- *Deleting Files*
- *Focus*
- *Zoom In & Zoom Out*
- *Taking Nice Pictures*
- *Power*

3 Menu Setting


- *How to Enter Menu Setting*
- *Resolution*
- *Self Timer*
- *Flash Strobe*
- *Date Stamp*
- *Exposure*
- *EV Compensation*
- *User Setting*

4 Installation

- *Software Installation*
- *Hardware Installation*
- *Mass Storage (MSDC)*
- *Launching the Camera Manager*
- *Mode Selecting*
- *Troubleshooting*

Notice

1. Do not drop, puncture or disassemble the camera.
2. Remove batteries during long periods between use.
3. Avoid all contact with water and dry hands before using.
4. Do not expose the camera to high temperature or leave it in direct sunlight.
5. Avoid pressing hard on the camera body.

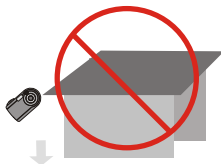

Bundled Accessories



Camera



CD driver



User guide



USB cable



TV-out cable



2 x AA Alkaline
batteries



Strap



Tripod









CF Card (Optional)



Getting Started

- *Camera Parts*
 - *Battery Installation & Strap*
 - *Tripod & External Memory*
-


Camera Parts

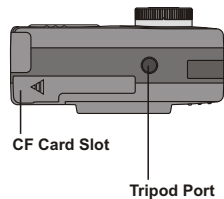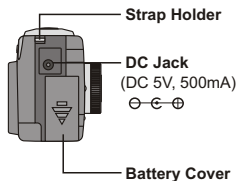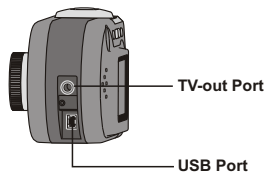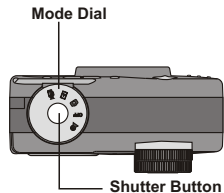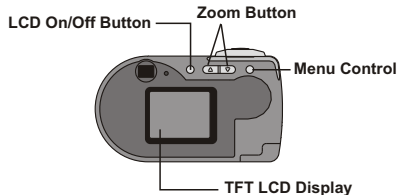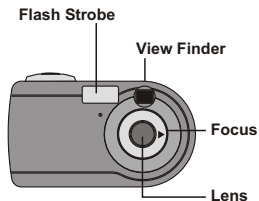

Battery Installation & Strap


Battery Installation

Your camera runs on two AA alkaline batteries. High performance batteries are recommended for this camera for maximum battery life.

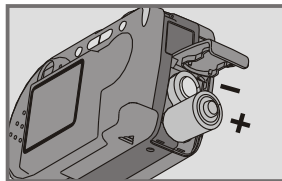

Strap


Attach the carrying strap for convenience and safety.

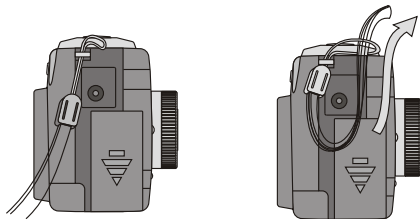

Tripod & External Memory


Tripod

Use a tripod to minimize camera movement and ensure optimal image quality, especially while shooting longer movies, self-portraits or video conferencing.

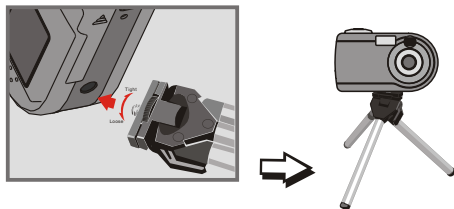

External Memory/ CF Card

Insert a CF card before starting taking pictures or AVI Movies. Files will be automatically stored on the CF Card after you've inserted the CF Card.

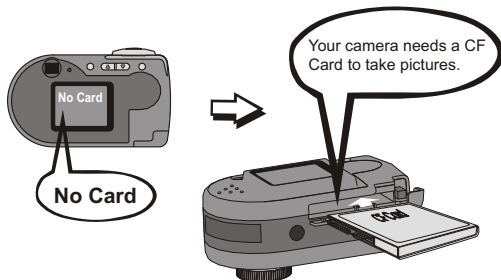


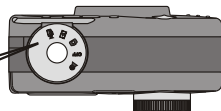
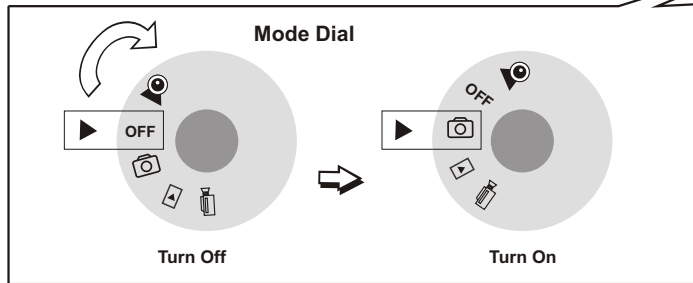


Using Your Camera

- *Powering Your Camera On and Off*
- *Taking Still Pictures and Recording AVI Movies*
- *Playing Back AVI Movies and Still Pictures*
- *Deleting Files*
- *Focus*
- *Zoom In & Zoom Out*
- *Taking Nice Pictures*
- *Power*

Powering Your Camera On and Off


Rotate <Mode Dial> to  (DSC Mode).





- Auto power-off: your camera will automatically power off after 3 minutes of inactivity.



Taking Still Pictures and Recording AVI Movies



Taking Still Pictures

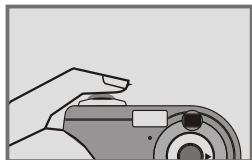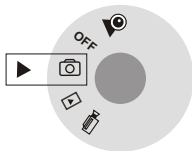- (1) Rotate <Mode Dial> to  (DSC Mode).
- (2) Center the target in the viewfinder or the LCD display.
- (3) Press the shutter button.
- (4) Wait for few seconds and an image is successfully captured.



Recording AVI Movies



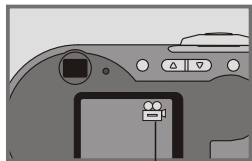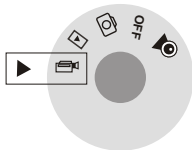


- (1) Rotate <Mode Dial> to  (AVI Mode).
- (2) Flashing  icon on the LCD display indicates recording in progress.
- (3) Press and release the shutter again to stop recording.









Recording_____

- When the camera is recording the camcorder symbol will blink.

Playing Back AVI Movies and Still Pictures

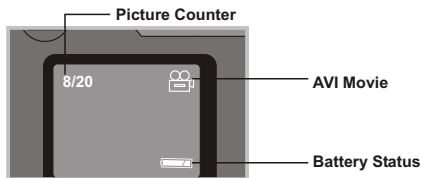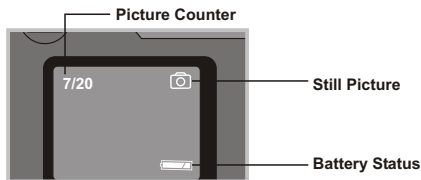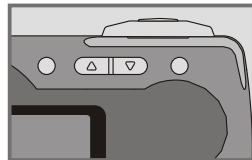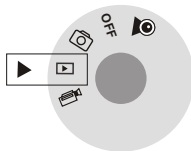
- (1) Rotate <Mode Dial> to  (Playback Mode).
- (2) Press  () to playback the previous file.
- (3) Press  () to playback the next file.




- Your camera will automatically playback AVI file when an AVI file is selected. To stop playing it back, simply press either  or .

Deleting Files


1

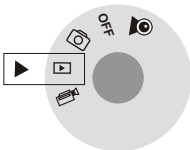



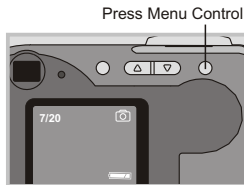


2

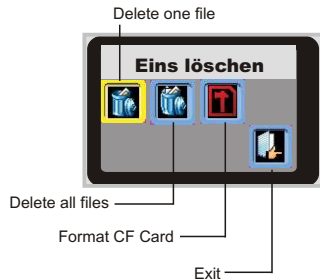





3



- (1) Rotate <Mode Dial> to  (Playback Mode).
- (2) Press  () or  () to shift between files.
- (3) Press <Menu Control> to enter Delete mode.
- (4) Press <Menu Control> again to delete one file.




- In Delete mode, press  () or  () to shift between modes. Press <Menu Control> to select the mode.

! All recorded files will be completely lost if you format your card or delete all files.

Focus

In order to take the best pictures, please switch to proper focus in accordance with the reference ranges as below.

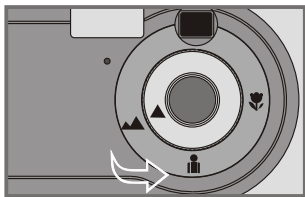

59" ~ ∞ (150cm ~ ∞)



31" ~ 59" (80cm ~ 150cm)




16" ~ 31" (40cm ~ 80cm)


Zoom In & Zoom Out

Zoom


1

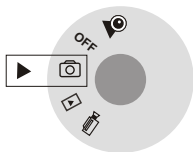



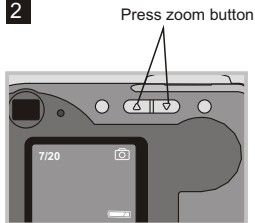


2

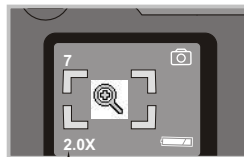


3





1.0X~4.0X

- (1) Rotate <Mode Dial> to  (DSC Mode).
- (2) Press and hold  () to zoom in preview image. Or press  () to zoom out preview image.
- (3) Zoom setting ranges from 1.0X to 4.0X.

Taking Nice Pictures

- ❶ Keep the focus set to  except for extreme close-ups.
- ❷ Make sure your subject is well lit from the front.
- ❸ Keep the camera level and steady when releasing the shutter.
- ❹ Make sure you have adequate light when taking still pictures or movies.
- ❺ For best quality video, move the camera slowly during filming.

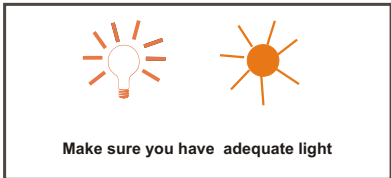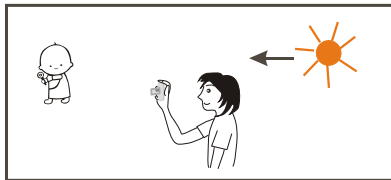

Power



Battery Indicators



Full



Out of power

DC Jack

"Use DC Jack to playback images and get the TV out function working only. It does not charge the batteries."



LCD ON/OFF

To reduce power consumption, LCD will enter suspend mode when idle over 30 seconds. Press LCD ON/OFF button to wake up LCD.




- When not using your camera for extended periods, we suggest you remove the batteries.
- Your camera will automatically turn off when idle over 3 minutes. To wake up your camera, press <Menu Control>.
- LCD will enter suspend mode when idle over 30 seconds. Press LCD ON/OFF button to wake up LCD.

Power Notice for 2 AA Alkaline Batteries

- Flash on: 300 times
- Still pictures: 1600 pictures
- LCD on: 1.5 hours

LCD ON/OFF Button

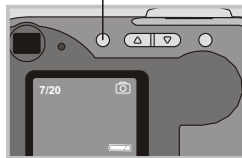

Memo






Menu Setting


- *How to Enter Menu Setting*
 - *Resolution*
 - *Self Timer*
 - *Flash Strobe*
 - *Date Stamp*
 - *Exposure*
 - *EV Compensation*
 - *User Setting*
-

How to Enter Menu Setting

1

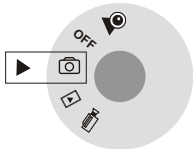

2

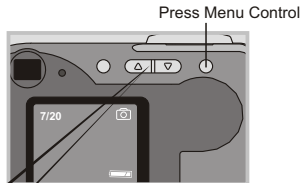






Use these two buttons to shift between modes.

3




- | | |
|----------------|-------------------|
| ① Resolution | ⑤ Exposure |
| ② Self Timer | ⑥ EV Compensation |
| ③ Flash Strobe | ⑦ User Setting |
| ④ Date Stamp | ⑧ Exit |

- (1) Rotate <Mode Dial> to  (DSC Mode).
- (2) Press <Menu Control> to enter Menu setting.
- (3) Press  () or  () to shift between modes.
- (4) Press <Menu Control> to enter a mode and then press <Menu Control> again to select the mode.


Resolution

1

2

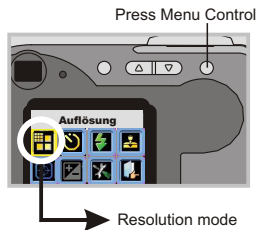

3

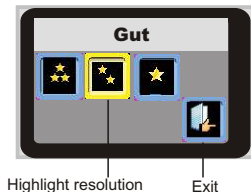

- (1) Highlight " Resolution" mode
- (2) Press <Menu Control> to enter " Resolution" mode.
- (3) Press \triangle (\odot) or ∇ (\odot) to highlight $\star\star$ (3Mega), \star (2Mega) or \star (800,000).
- (4) Press <Menu Control> to select resolution.

$\star\star\star$	3 Mega resolution (2048x1536 pixels)
$\star\star$	2 Mega resolution (1600x1200 pixels)
\star	800,000 resolution (1024x768 pixels)

Resolution



Still Pictures & AVI Storage Capacity

**16 MB CF Card
as example**



	Still Pictures
★★★	Up to 12 pictures
★★★	Up to 20 pictures
★	Up to 50 pictures


**16 MB CF Card
as example**




	AVI Movies
Recording Time	Up to 4 minutes

Self Timer


1 2

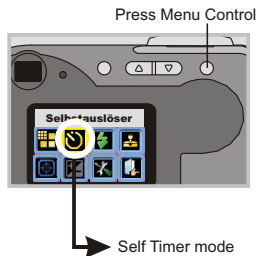

3


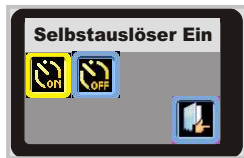


4

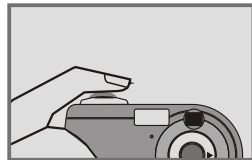

- (1) Press () or () to highlight " Self Timer " mode
- (2) Press <Menu Control> to enter " Self Timer " mode.
- (3) Highlight .
- (4) Press <Menu Control> to select " Self Timer On" mode
- (5) Press the shutter button and counter will count ten seconds and automatically take the photo.
- (6) After taking a picture, the camera switches the automatic "Self timer" off .

Flash Strobe

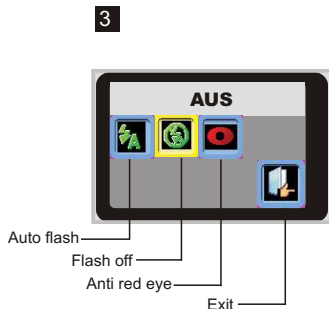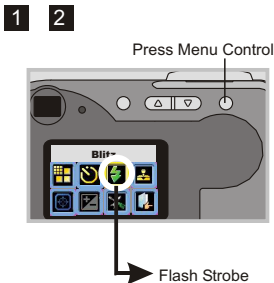


- (1) Press () or () to highlight "Flash" mode
- (2) Press <Menu Control> to enter "Flash" mode.
- (3) Press () or () to highlight either one of the modes.
- (4) Press <Menu Control>.


Auto flash	Use automatic flash mode to determine correct exposure.
Flash off	No flash strobe even when in dark or light scenes.
Anti red-eye	Anti Red-eye can remove Red-eye phenomenon occurs in photographs.

Date Stamp

1 2

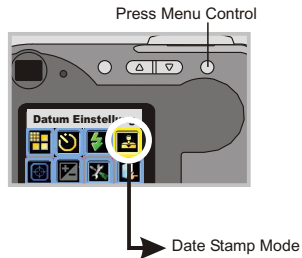

3

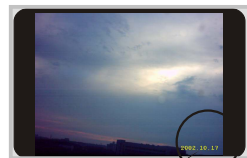

2002.10.17
Year/Month/Day


- (1) Press () or () to highlight " Date Stamp " mode
- (2) Press <Menu Control> to enter " Date Stamp " mode.
- (3) Highlight or .
- (4) Press <Menu Control>.

	Put date stamp on your image file.
	No date stamp on your image file.

Exposure

1

2

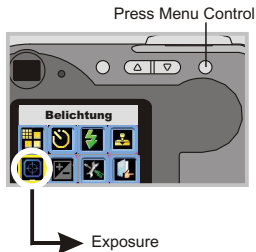

3



(1) Press () or () to highlight "Exposure" mode

(2) Press <Menu Control> to enter "Exposure" mode.


(3) Press () or () to highlight , or .

(5) Press <Menu Control>.

	Auto	This function will automatically select backlight or average metering.
	Backlight	This function determines the correct exposure for a given photograph which gives more importance to the meter reading at the centre of the frame than to its periphery.
	Average	This function takes a light reading from many different areas of a picture frame and produces an integrated reading which will take into account the differences within the frame.





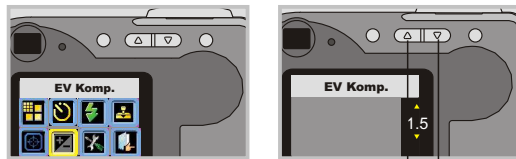



EV Compensation

EV Compensation allows adding or subtracting evaluation values (EV) for an image. Usually you use this method to bring out details in dark zones or lessen the intensity of bright zones.



(In dark zones) Add EV Comp

(In bright zones) Subtract EV Comp

- (1) Press  () or  () to highlight " EV Comp " mode
- (2) Press <Menu Control> to enter " EV Comp " mode.
- (3) Press  () or  () to add or subtract EV Comp.
- (5) Press <Menu Control>.

User Setting


Several settings including date setting, buzzer setting, flicker setting and color system can be reset in this mode.

User Setting



Date Setting

Press <Menu Control> to highlight year, month, date and time. Press () or () to add or subtract the number of year, month, date and time.

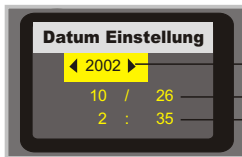

Year

Month/ Day

Hour/ Minute



Buzzer

Highlight and then press <Menu Control> to turn off buzzer.



User Setting



Flicker Setting

Flicker setting is country specific. Improper flicker setting will cause the LCD display or PC screen to flicker. Please refer to the table to adjust flicker setting.

Country	England	Germany	France	Italy	Spain	Netherlands
Setting	50Hz	50Hz	60Hz	50Hz	50Hz	50Hz
Country	Portugal	America	Taiwan	China	Japan	Korea
Setting	50Hz	60Hz	60Hz	50Hz	50/ 60Hz	60Hz



TV Color System (PAL/NTSC)












Color system is also country specific. It's important to know what kind of TV color system you use (PAL or NTSC) and the color system setting of your camera is supposed to go with TV color system. Improper color system will cause TV display problems. Please refer to the table to adjust color system setting.

NTSC	America, Taiwan, Japan and Korea, etc.
PAL	Germany, England, Italy, Netherlands, China, Japan and Hongkong, etc.

User Setting



Change the language of the interface



- (1) Rotate <Mode Dial> to  (DSC Mode).
- (2) Press <Menu Control> to enter Menu setting.
- (3) Press  () or  () to select the  icon, and then press <Menu Control> to enter the mode.
- (4) Press  () or  () to select the , and then press <Menu Control> to change the language of the interface.



TV out Mode

Connect your camera and TV via TV out cable for real time display. In TV out mode you can take still pictures and record AVI Movie, and further on you can share recorded AVI Movies and pictures with your family and friends.

- (1) Change the color system of your camera the same as the TV color system. (either PAL or NTSC)
- (2) Turn on your TV and switch TV mode to AV-in mode.
- (3) Please plug in AV cable to your TV first and then plug in the camera.
- (4) Turn on the camera.

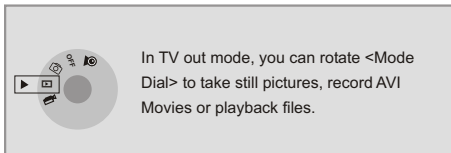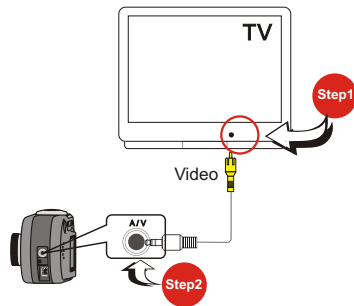



Installation


- *Software Installation*
 - *Hardware Installation*
 - *Mass Storage (MSDC)*
 - *Launching the Camera Manager*
 - *Mode Selecting*
 - *Troubleshooting*
-

Software Installation




Installing the 3 Mega Digital Camera



(1) Insert the CD-ROM in your CD drive. The Installation menu should open automatically.

(2) Click  to start 3 Mega Digital Camera Installation.

(3) Follow the onscreen instructions to complete Installation.


(4) Click "Yes" to install Direct X 8.1. This will restart your PC.

(5)  icon will appear on PC desktop after Installation.

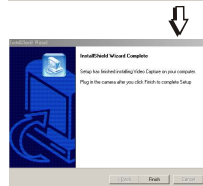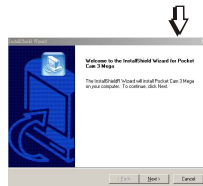

Click on " Finish" to complete installation.


Hardware Installation

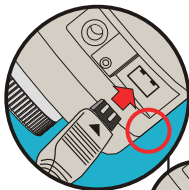

- 1 Connect the smaller end of the USB cable to the USB port of your camera.



- 2 Plug the larger end of the USB cable to the USB port of your PC.

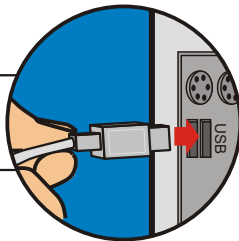


Hardware Installation



MS Windows XP/ME/2000 Users

- (1) Installing " USB Mass Storage Device " Driver
 1. Connect your camera and PC via USB cable.
 2. Your PC will automatically install " USB Mass Storage Device" driver and complete " removable disk " installation. Your PC will add a " removable disk " under " My computer" icon.

 - (2) Installing " PC Camera" Driver:
 1. Connect your camera and PC via USB cable.
 2. During hardware installation, please rotate <Mode Dial> to  to continue hardware installation.


 - (3). Please follow the onscreen instructions to complete hardware installation.
-

Hardware Installation




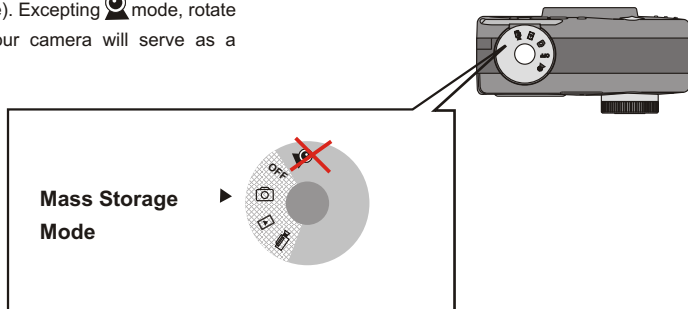
MS Windows 98 SE Users:

- (1) Installing " USB Mass Storage Device " Driver
 1. Connect your camera and PC via USB cable.
 2. Please follow the onscreen instructions to complete " removable disk " installation. Your PC will add a " removable disk " under " My computer" icon.

 - (2) Installing " PC Camera " Driver
 1. During hardware installation, please rotate <Mode Dial> to  to continue hardware installation.
 2. MS Window 98SE users may be asked to insert licensed 98SE CD-ROM in your CD Drive.
-

Mass Storage (MSDC)


While connecting to PC, your camera also serves as a removable disk (Mass storage). Excepting  mode, rotate to the other four modes, your camera will serve as a removable disk.



- (1) Rotate <Mode Dial> to either DSC, AVI or Playback mode.
 - (2) Double-click "My Computer" on the desktop.
 - (3) Double-click "Removable Disk" under "My Computer."
 - (4) Double-click "DCIM" and then enter "100MEDIA". You'll find all files in this folder.
-


Launching the Camera Manager

Follow the following two ways to launch your camera Manager,
3 Mega Digital Camera (If the program doesn't automatically launch).

- 1 Click the "  " icon on the Desktop to execute the program where you can begin to use your camera.



OR


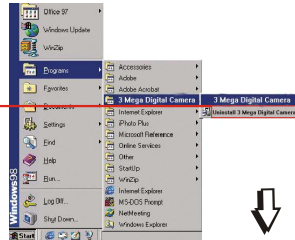
- 2 Click on the "Start" menu and go up to "Programs".
Then go to the folder named " 3 Mega Digital Camera"
and select it.




- To uninstall 3 Mega Digital Camera,
select " Uninstall 3 Mega Digital Camera "

Mode Selecting

- ▶ Rotate <Mode Dial> to  to change the camera to PC Camera mode.
- ▶ Rotate <Mode Dial> to  mode to change the camera to Album mode.

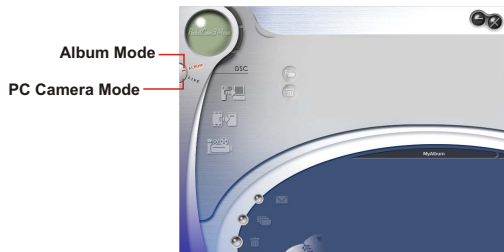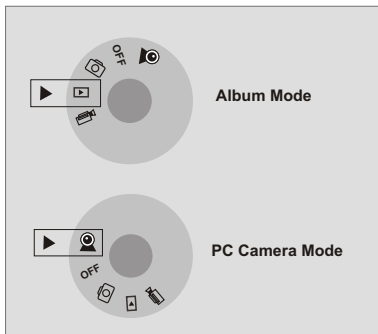

This message will appear when you rotate <Mode Dial> to PC camera mode. Please click "OK".

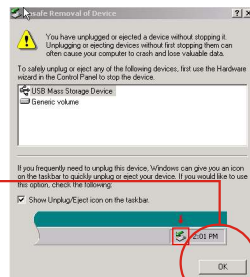


Album Mode




Downloading pictures and movies

1. Make sure your camera is connected to your PC via the USB cable.
2. Set the 3 Mega Digital Camera to Album mode.
3. A dialogue box will pop up and ask if you want to download photos from your camera.
4. Check "Enhanced" to enhance your images from 3 Mega to 4 Mega, from 2 Mega to 3 Mega, or from 800,000 to 2 Mega. This enhanced format offers higher quality images, but also require more disk space.

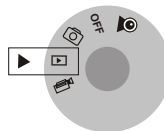


Album Mode

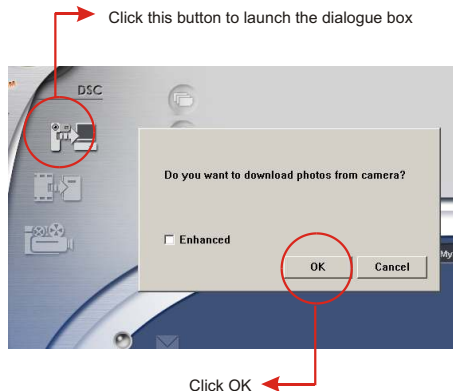

Album Mode

- (1) Album Mode
- (2) Transfer images to the work area
- (3) Transfer images to the album
- (4) Create AVI file
- (5) Send Mail
- (6) Select All
- (7) Delete
- (8) Album Manager
- (9) Album
- (10) Delete
- (11) Select All
- (12) Image
- (13) Work area
- (14) Minimize
- (15) Exit

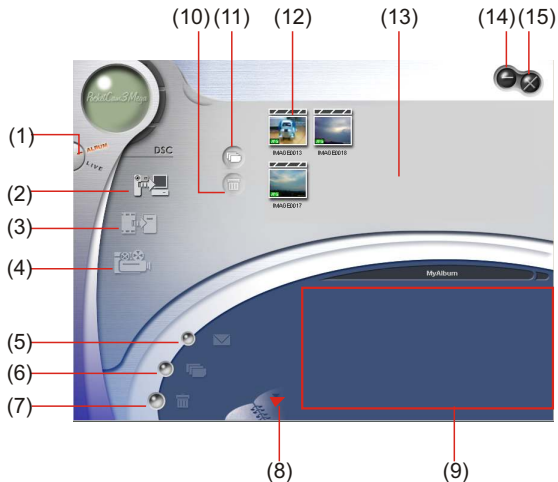

Album Mode



Viewing pictures


Double-click any picture or movie to launch the viewer.

Next picture
Previous picture
Slide Show
Exit




Viewing movies


Double-click any AVI movie to automatically launch the movie in your default media player.

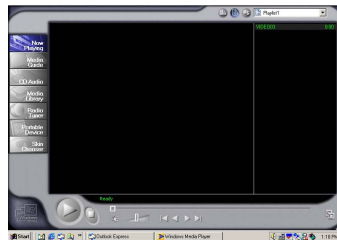

Album Mode

Album Manager

1. Highlight a picture on the work area and click  to transfer to the Photo Album.



2. Click the Album Manager  to create a new Photo Album.

3. Key in a new album name. Then click the function "new".

4. Click **4** to designate a path where the album will be stored.

5. Click "Update" **5** to confirm the new album is created.


6. Click **6** to enter the new created album.

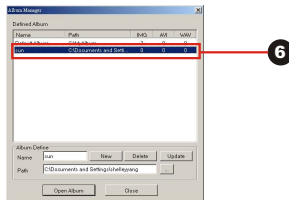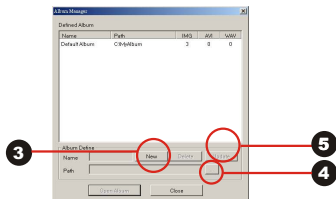


Album Mode





Creating AVI files


1. Select jpg / bmp images from the work area.
2. Click  to load the images to the AVI File Manager.
3. Order the image sequence, and adjust the frame rate.

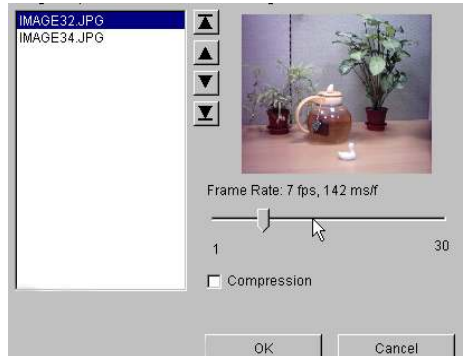

PC Camera Mode

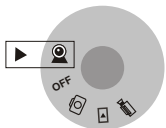

► Rotate <Mode Dial> to  to change the camera to PC Camera mode.

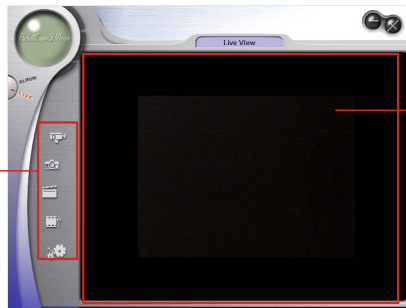

Preview Window



Record live video



Capture live still image



Set image size




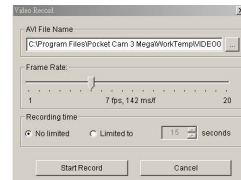
Advanced settings (default settings recommended)



Select video source (if you have more than one image import device installed)

● Steps

1. Press 
2. Adjust recording speed and time.
3. Press " Start to Record ".



PC Camera Mode



Set Image Size

- **Color Space**


Select one of the following functions when you have different needs.

- RGB 24: better image quality
- I420: faster speed

- **Output Size**

Setting output size can change the size of the preview window. The default size is 320x240. Choose larger pixels when you need a larger preview window.

320 x 240
640 x 480

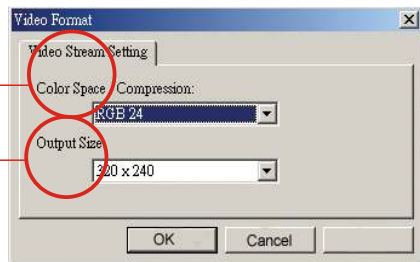

PC Camera Mode




Advanced settings

● Video Setting

- Banding Filter:

When your PC screen flickers, please change the banding filter in Video Setting. The refresh rate (the number of times the screen is redrawn per second) is the most likely cause of flicker. Select 50Hz or 60Hz until your PC screen stops flickering.

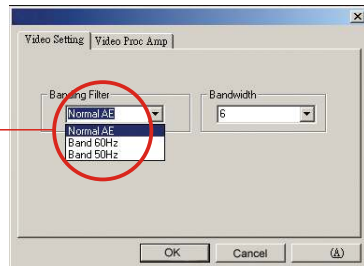

● Custom Video Pro Amp

You can use the default setting or change settings (brightness, contrast, saturation, sharpness, and hue) on your own.

