

SIEMENS SX45

Quick start guide

PN441005-001 MO0105-A Printed on recycled paper. Printed in Japan

This **quick start guide** helps you to get your SX45 up and running.


The following user guides can be found on the Siemens CD:

- **Pocket PC hardware manual:** General description of the SX45 hardware and how to use it.
- **Pocket PC user guide :** The Windows CE basics.
- **Communications user guide:** Description of the communications and data services (hardware and software).

Getting started


What’s in the box?

Check to make sure that all the items listed below are included.

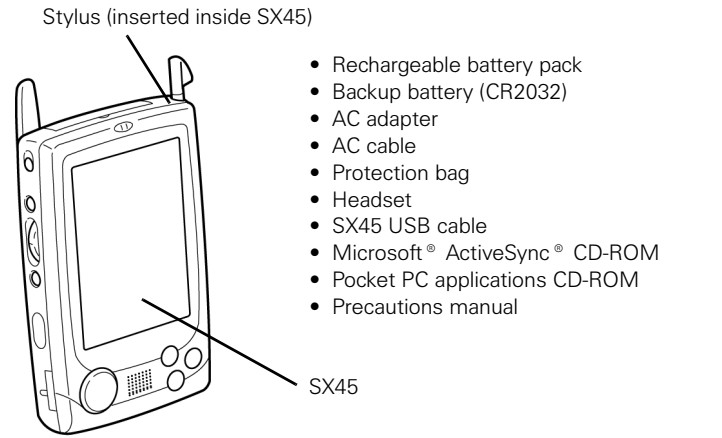

Hardware manual, Pocket PC user guide, and other documentation are included in digital form as PDF files on the bundled CD-ROM. Make sure that you read the separate CD-ROM and hardware manual first.

General guide

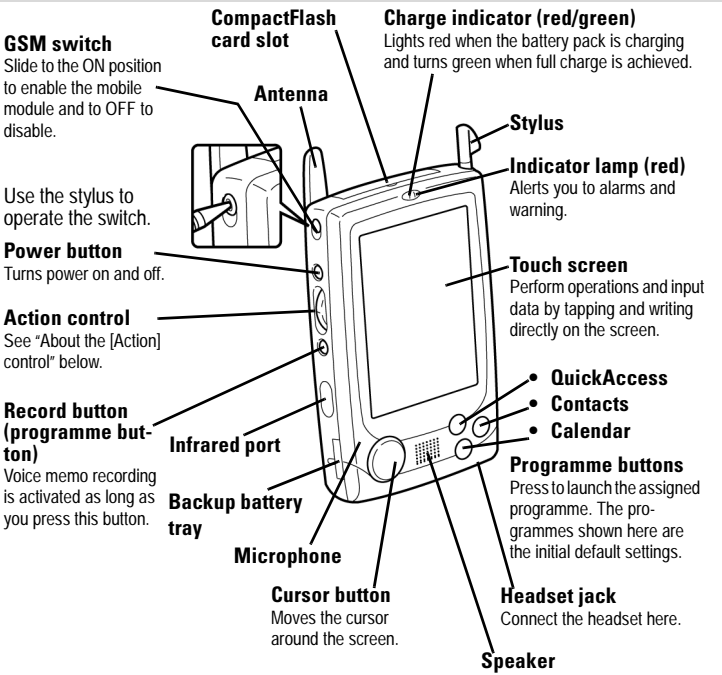


About the [Action] control

Operations can be performed by pressing and rotating the [Action] control button.

Pressing the [Action] control button performs an operation similar to the Enter key of a computer keyboard.

Rotating the [Action] control button performs operations similar to the up and down arrow keys of a computer keyboard.

See SX45 online help for information about using the [Action] control button with each application. The text in the online help indicates an [Action] control press operation as "Action," and an [Action] control rotate operation as "Up/Down control."

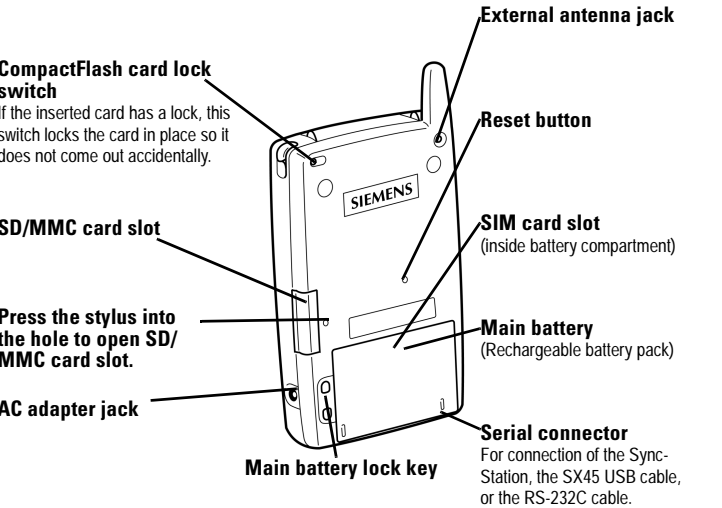

Stylus operation

- **Tap.**
Touch the screen once with the stylus to open items and select options.
- **Drag.**
Hold the stylus on the screen and drag across the screen to select text and images. Drag in a list to select multiple items.
- **Tap-and-hold.**
Tap and hold the stylus on an item to see a list of actions available for that item. On the pop-up menu that appears, tap the action you want to perform.

Setting up your SX45


1 Load the main battery (rechargeable battery pack).

Make sure that you use the AC adapter to charge the battery pack before doing anything else. Your device will not operate correctly if you load the back-up battery before charging the battery pack.

- ① Slide the main battery lock key to the **FREE** position.
- Insert the tip of the stylus into the lower depression, and slide up.
- Insert the tip of the stylus into the upper depression, and slide up again.
- ② Position the battery pack as shown in the illustration below, insert it into the battery compartment.
- Make sure you insert the flat end of the battery pack first, and then lower the terminal end into place.
- ③ Reverse the two-step procedure in step ① to slide the main battery lock to the **LOCK** position.

2 Use the AC adapter to charge the battery pack.

- Connect the AC adapter to the SX45 as shown in the illustration.

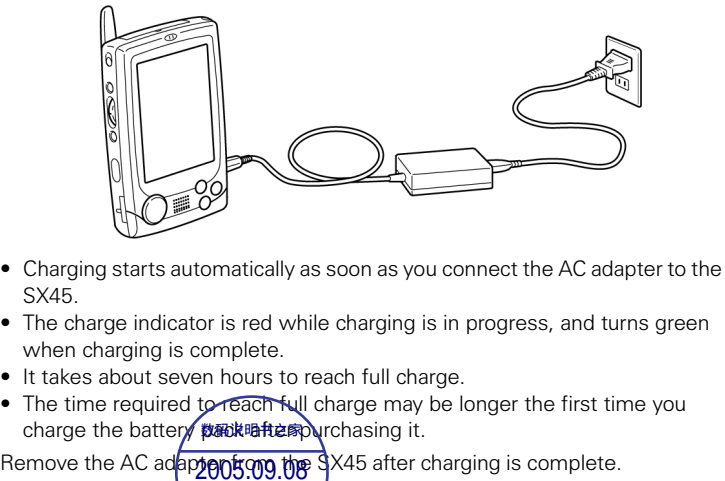

3 Load the backup battery (CR2032).

- ① Insert the tip of the stylus under the backup tray, and pull the tray out.
 - ② After wiping both sides of a new lithium battery (CR2032) with a dry cloth, place it into the backup battery tray with the positive side facing up (see picture).
 - ③ Replace the backup battery tray into the SX45.
- Do not apply excessive force! This may result in damage to the tip of the stylus.**

4 Press the [Power] button.

- After a few moments the Welcome screen appears.

5 Follow the steps in the Welcome Wizard.

6 When finished, you’ll see the Today screen.

- See "Pocket PC basics" at the back of this quick start guide for information about the Today screen and other Pocket PC basics.
- You also need to install ActiveSync before you can communicate with a desktop computer.

⚠ Important

- If the touch panel does not respond when you tap it or if nothing appears on the display, try performing a full reset. If this does not restore proper operation, remove the main battery and the backup battery and wait for about five minutes. Reload the main battery first and then the backup battery, and perform the above procedure again from step 4.
- If the message "A problem with memory contents has been found..." appears on the display, perform a full reset.
- See the *hardware manual* for information on performing a full reset.
- See the *hardware manual* for important information about replacing batteries.

Adjusting display contrast

To do this:	Perform this operation:
Make contrast darker	[Action] + Cursor up
Make contrast lighter	[Action] + Cursor down
Increase brightness	[Action] + Cursor right
Decrease brightness	[Action] + Cursor left

Loading a SIM card

Your SX45 must have a SIM card loaded before you can use it for data communication and telecommunication. Use the following procedure to load a SIM card into your SX45.

1 Turn off the SX45 and remove the battery pack.

- ② With the terminal side of the SIM card facing upwards, slide it into the SIM card slot, which is located inside of the SX45 battery compartment.

- Gently press the SIM card in until you hear it click into place.
- Never apply too much force when sliding a SIM card into the slot.
- Slide the SIM card in as far as it will go.

3 Replace the battery pack.

4 Turn on your SX45.


5 Slide the GSM switch to the ON position.

- In response to the message that appears on the display, enter the correct PIN code.
- See "Input methods" at the back of this document for information about inputting text.
- Note that you must re-input your PIN code following to a full reset of the SX45.

Data communication using SMS, the WAP browser


Information about this can be found in the communications user guide and the WAP browser description (on the Siemens CD).

Access via QuickAccess

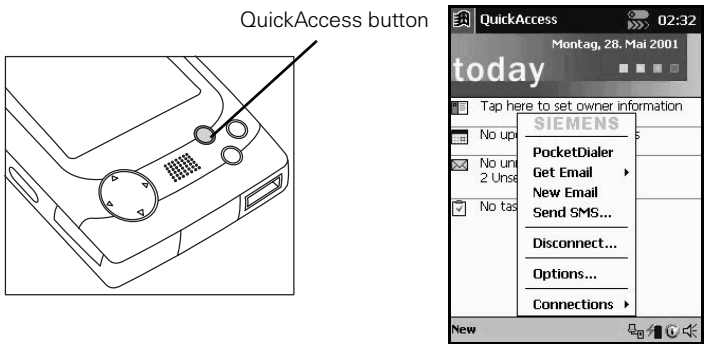

Attaching the headset

Plug the headset into the SX45 as shown in the illustration below.

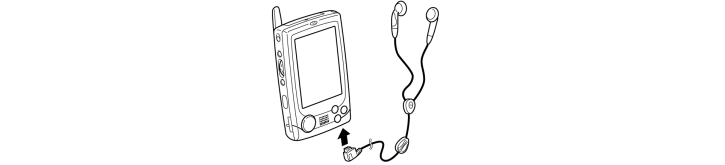

Installing ActiveSync to communicate with a desktop computer

Installing ActiveSync makes it possible for your SX45 to communicate with a desktop computer and perform the following tasks.


- Data synchronisation for Calendar, Contacts, Tasks, Inbox, Channels, etc.
- Backup of SX45 data
- Copying of files between the SX45 and a desktop computer

See the ActiveSync online help for detailed information about how to perform these operations.

To install ActiveSync

1 Connect the SX45 USB cable to your computer.

- The cable should not be connected to the SX45 at this time.

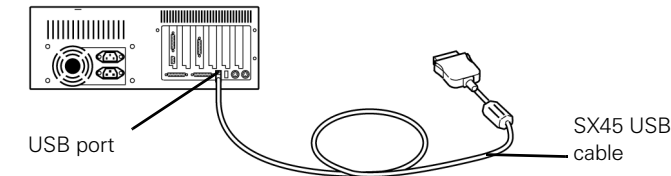

2 Turn on your desktop computer and wait as Windows starts up.


3 Insert the ActiveSync CD-ROM into your computer's CD-ROM drive.

4 Follow the instructions that appear on your computer screen to install ActiveSync.

What happens next depends on whether your computer already has Windows CE Services installed.

- In most cases, the "Get Connected" dialogue appears after ActiveSync is installed.
- The "Get Connected" dialogue does not appear if your computer already has Windows CE Services installed. Click [Finish] and advance to the next step.

5 After turning off the SX45, connect the other end of the SX45 USB cable to it.

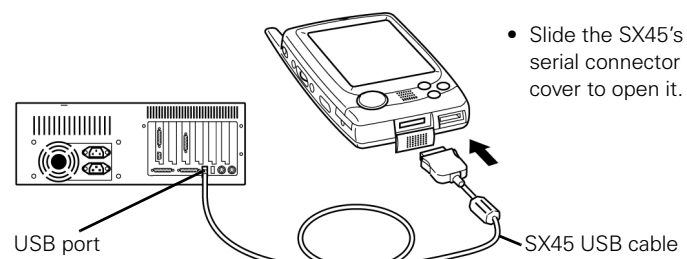

6 ActiveSync automatically locates the port where your SX45 is connected and configures the communication port.


- Depending on how the SX45 is connected to your computer, you may be required to click the [Next] button before ActiveSync starts the above step. Follow the instructions that appear on your computer screen.


7 Use the dialogue that appears to make the settings you want.

- At this point, if you want to continue working with your SX45, see the *Pocket PC user guide* and online help for guidance. Otherwise, turn off the SX45 power and disconnect it from the cable.
- For more information on installing ActiveSync, see the booklet accompanying the ActiveSync CD.
- For information on how to transfer Palm-size PC data, see the *Pocket PC user guide*.
- Certain computer hardware and/or software configurations may not allow ActiveSync to run properly.

Pocket PC basics


The Today screen

When you turn on your device for the first time each day (or after four hours of inactivity), you'll see the Today screen. You can also display it by tapping  and then **Today**. On the Today screen, you can see at a glance the information you need for the day.

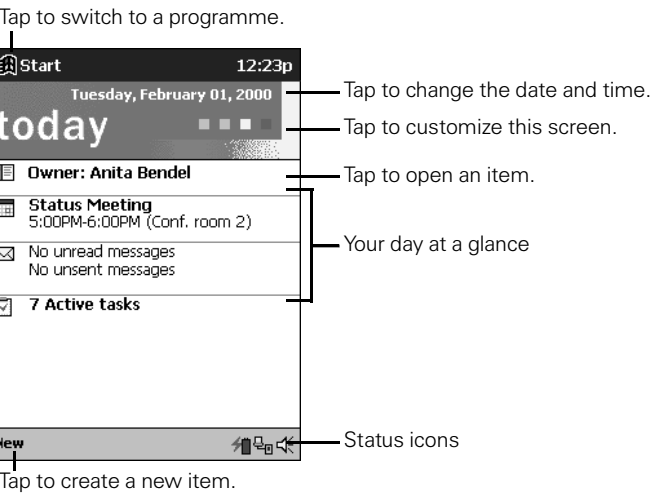


Navigation bar and command bar

The navigation bar is located at the top of the screen. It displays the active program and current time, and allows you to switch to programmes and close screens. The command bar is displayed at the bottom of the screen. Use the menus and buttons to perform tasks in programmes.

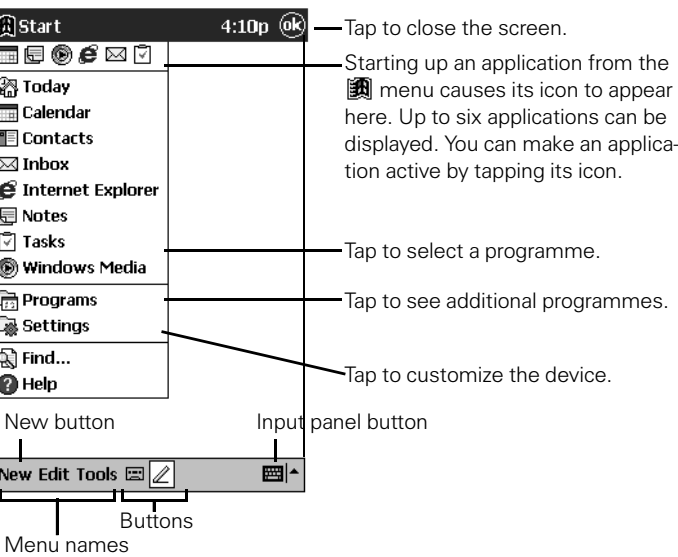


Pop-up menus

With pop-up menus, you can quickly choose an action for an item.

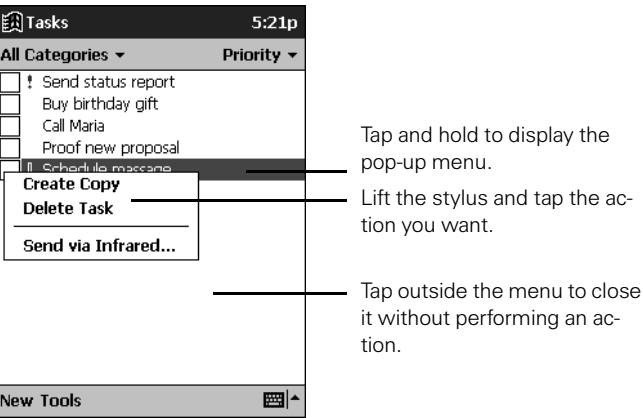


Input methods

You can enter information in any programme on your SX45 by typing with the soft keyboard or writing using the Character recognizer.

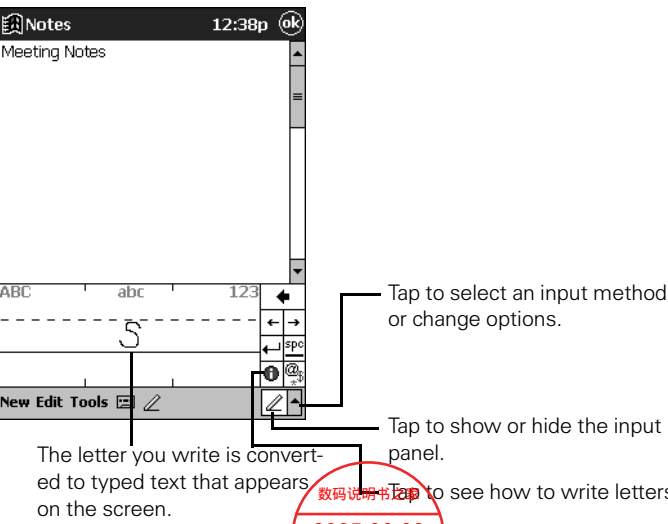


The Character Recognizer input panel is divided into three writing areas. Letters written in the left area (labelled **ABC**) will create uppercase letters and letters written in the middle area (labelled **abc**) will create lowercase letters. The right area (labelled **123**) is for writing numbers, symbols, special characters, and punctuation.

The following chart is a partial display of the characters you can write while in lowercase mode (the dot on each character is the starting point for writing). For more information on using Character Recognizer and for demos of all characters, tap  on the Character Recognizer input panel.

Letter area				Number/punctuation area			
A a	N n	0 0))				
B b	O o	1 1	+ +				
C c	P p	2 2	* x				
D d	Q q	3 3	/ /				
E e	R r	4 4 4 4	\ \				
F f	S s	5 5 5	? ? ?				
G g	T t	6 6	! !				
H h	U u	7 7	@ @				
I i	V v	8 8	& &				
J j	W w	9 9	¢ ¢				
K k	X x	ˆ ˆ	“ “				
L l	Y y	˙ ˙	- -				
M m	Z z	((

space	—	enter	—
back space	—	back space	—

For more information

For information on:	See this source:
Programmes on your SX45	<ul style="list-style-type: none">• <i>Pocket PC user guide</i>• Device Help. To view Help, tap  and then Help.• Manuals on the CD-ROM
Additional programmes that can be installed on your SX45	The extras folder, located on the ActiveSync CD
Connecting to and synchronising with a desktop computer	The ActiveSync booklet or ActiveSync Help on your desktop computer. To view Help, click Help and then Microsoft ActiveSync Help.
Last-minute updates and detailed technical information	The Readme files, located in the Microsoft ActiveSync folder on the desktop computer and on the ActiveSync CD.
Up-to-date information on Windows-powered devices	http://www.microsoft.com/windowsce/
Pocket PC Hardware information	<i>Hardware manual</i>
SMS, the WAP Browser, and telephone headset	Manuals on the CD-ROM
Problems and their solutions	Troubleshooting information in the <i>hardware manual</i> and the <i>Pocket PC user guide</i>
Information on SX45	http://www.my-siemens.com/sx45

- Siemens AG assumes no responsibility for any damage or loss resulting from the use of this manual.
- Siemens AG assumes no responsibility for any loss or claims by third parties which may arise through the use of this product.
- Siemens AG assumes no responsibility for any damage or loss caused by deletion of data as a result of malfunction, repairs, or battery replacement. Make sure that you back up all important data on other media to protect against its loss.
- Data can be uploaded from this unit to a personal computer for storage on a hard disk, disk, or other storage medium. Make sure that you make multiple copies of all important data to protect against its accidental loss.
- The contents of this manual are subject to change without notice.
- No part of this manual may be reproduced in any form without the express written consent of the manufacturer.
- Sample displays shown in this manual may differ somewhat from the displays actually produced by the product.

© Siemens AG 2001
All rights reserved.

Copyright Information

- Microsoft, ActiveSync, Outlook, Pocket Outlook, Expedia, AutoRoute Express, MapPoint, Windows, Windows NT, and the Windows logo are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. Microsoft products are licensed to OEMs by Microsoft Licensing, Inc., a wholly owned subsidiary of Microsoft Corporation.
- CompactFlash is a registered trademark of SanDisk Corporation.
- All other product and company names mentioned herein may be the trademarks of their respective owners.

Issued by
Information and Communication mobile
Haidenauplatz 1
D-81667 Munich

© Siemens AG 2001
All rights reserved. Subject to availability.
Rights of modification reserved.

Siemens Aktiengesellschaft
<http://www.my-siemens.com/sx45>

Ref.No.: A31008-H9000-S102-1-7619

