

laserfax 725/755




PHILIPS

Safety instructions

Please read and follow all warnings and instructions.

Ensure the machine is stable and secure on a level surface. The surface should be smooth and horizontal. Do not place the machine on carpet. The fax machine may be damaged if it falls and may cause serious injury, especially to small children.

Do not place anything in front of the fax machine, as this will obstruct the document feeder.

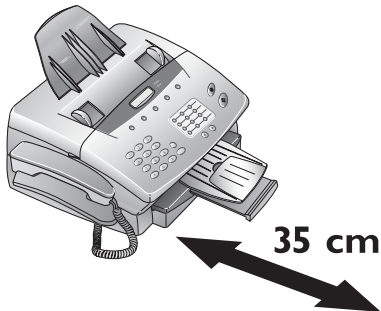

Do not place the fax machine in direct sunlight. Do not place it near to a radiator, heater, radio, television or air conditioning unit. Do not allow it to come into contact with dust, water or chemicals.

To avoid risk of overheating do not cover your fax machine. Place the fax machine so that air can circulate freely. Do not operate it in enclosed spaces such as cabinets, cupboards or drawers. Do not cover the fax machine with tablecloths, paper or folders. Do not place the fax machine on soft surfaces such as beds, duvets, cushions, sofas or carpets as there is a risk of overheating and fire.

Do not connect the mains or telephone line in a damp atmosphere, unless the connectors are especially adapted. Do not touch sockets or telephone connectors with wet hands.

If you want to use a cordless phone, place the base station at least 15 cm away from the fax machine to avoid interference.

Do not touch telephone wires or mains cables where the insulation is missing or damaged unless they are already disconnected.

Ensure the cabling is safe and does not present a trip hazard as this may damage both the cable and the fax machine.

Unplug the fax machine from the mains and the telephone line before cleaning.

Do not use liquid or aerosol cleaners such as sprays or polishes.

Never spill liquid of any kind into the machine. There is a risk of electric shock or other injury. The machine may be damaged. If liquid is accidentally spilled into the machine, unplug the machine immediately and have it inspected.

If the display is broken, a weak acid may leak out. Avoid contact with skin and eyes.

If the casing or the mains cable is damaged, unplug the fax machine. The cover of the fax machine may only be opened by authorized service personnel.

Your machine has been tested to EN 60950 or IEC 60825-1 and may only be operated on telephone networks and power supplies that conform to these standards.

Do not expose your fax machine to rain or other liquids, as there is a risk of electric shock or fire.

Disconnect the fax machine from the mains and the telephone line during thunderstorms. If this is not possible, avoid using the fax machine or the telephone during the storm. There is a risk of electric shock from lightning and risk of damage to the machine.

If there is a power failure neither the fax machine nor the telephone will work.

During a power failure the numbers and names stored in the telephone book and the speed dial keys and other data will be saved with the aid of a backup battery. If the battery is dead, the information will be lost.

If there is a power failure any faxes stored in the memory will be lost.

This fax machine is only intended for use in the country in which it was purchased. It meets the requirements of the telephone companies.

Contents

Installation 4

Packaging	4
Description	5
Controls	6
Accessories	7
Inserting paper	8
Inserting toner	8
Changing toner	9
Connecting the fax machine	9
Additional telephones	10
ISDN connection	11
Private branch exchange (PABX)	11
Computer connection *	11

Basic settings 12

Country selection	12
Display language	12
Help	12
Your number	12
Your name	12
Time and date	12
Volume	12
Energy save mode	13
Toner save mode	13
List of settings	13

Fax switch 14

TEL mode	14
FAX mode	14
AUT mode	14
TAM mode	14
Fax reception from a different phone	14

Telephone 15

Making a call	15
Re-dialling	15
Speed dialling	15
Phonebook	15
Groups	16
Calling line identification	16
Printing a journal	17

Fax 18

Inserting a document	18
Sending a fax	18
Resolution	18
Reducing	18
Memory	19
Sending later	20
Sending with code	20
Receive polling	20
Transmit polling	20
Transmission speed	21
Reception speed	21
Transmission report	21
Reception report	21

Copy - scan - print 22

Copy	22
Scan *	22
Printing from the PC *	22

Troubleshooting 23

Error codes 25

Annex 27

Technical data	27
Glossary	27
Guarantee	28
Order service	28
Declaration of conformity	29

Index 30

* only for LPF 755


Installation

Packaging


The shipment includes the following parts:




Fax machine with paper tray

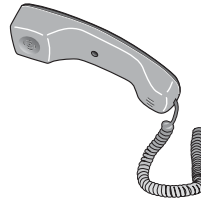

Telephone handset with spiral cable

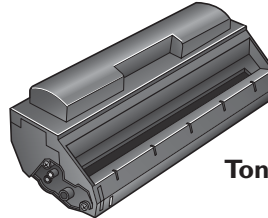


Toner cartridge

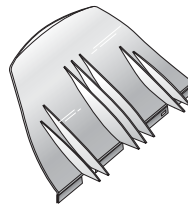


Document holder




Telephone cable with connector

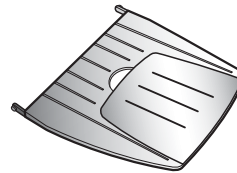

Document exit tray

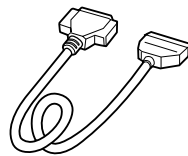


Printer cable*

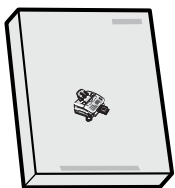

User Manual






CD-Rom for connecting to a computer*

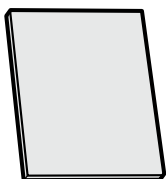

Installation Guide

* only included for LPF 755

Description

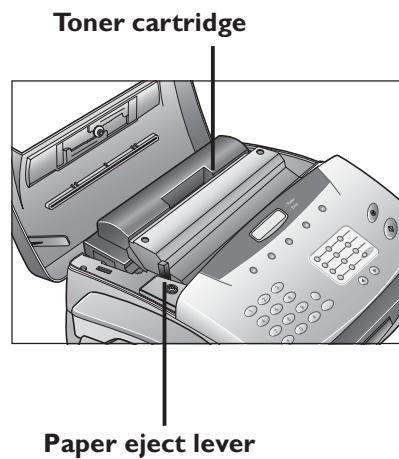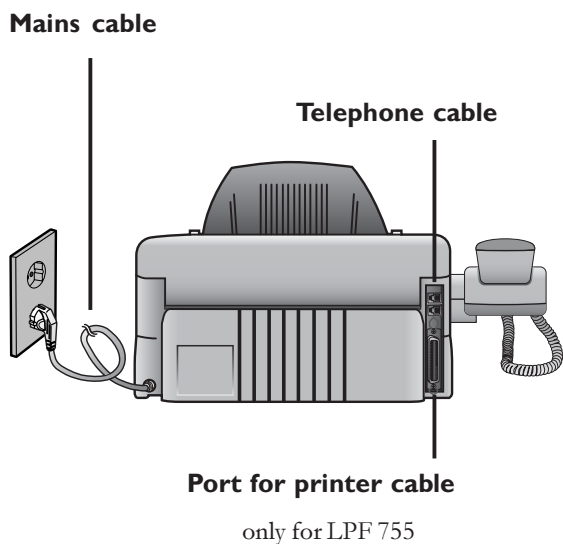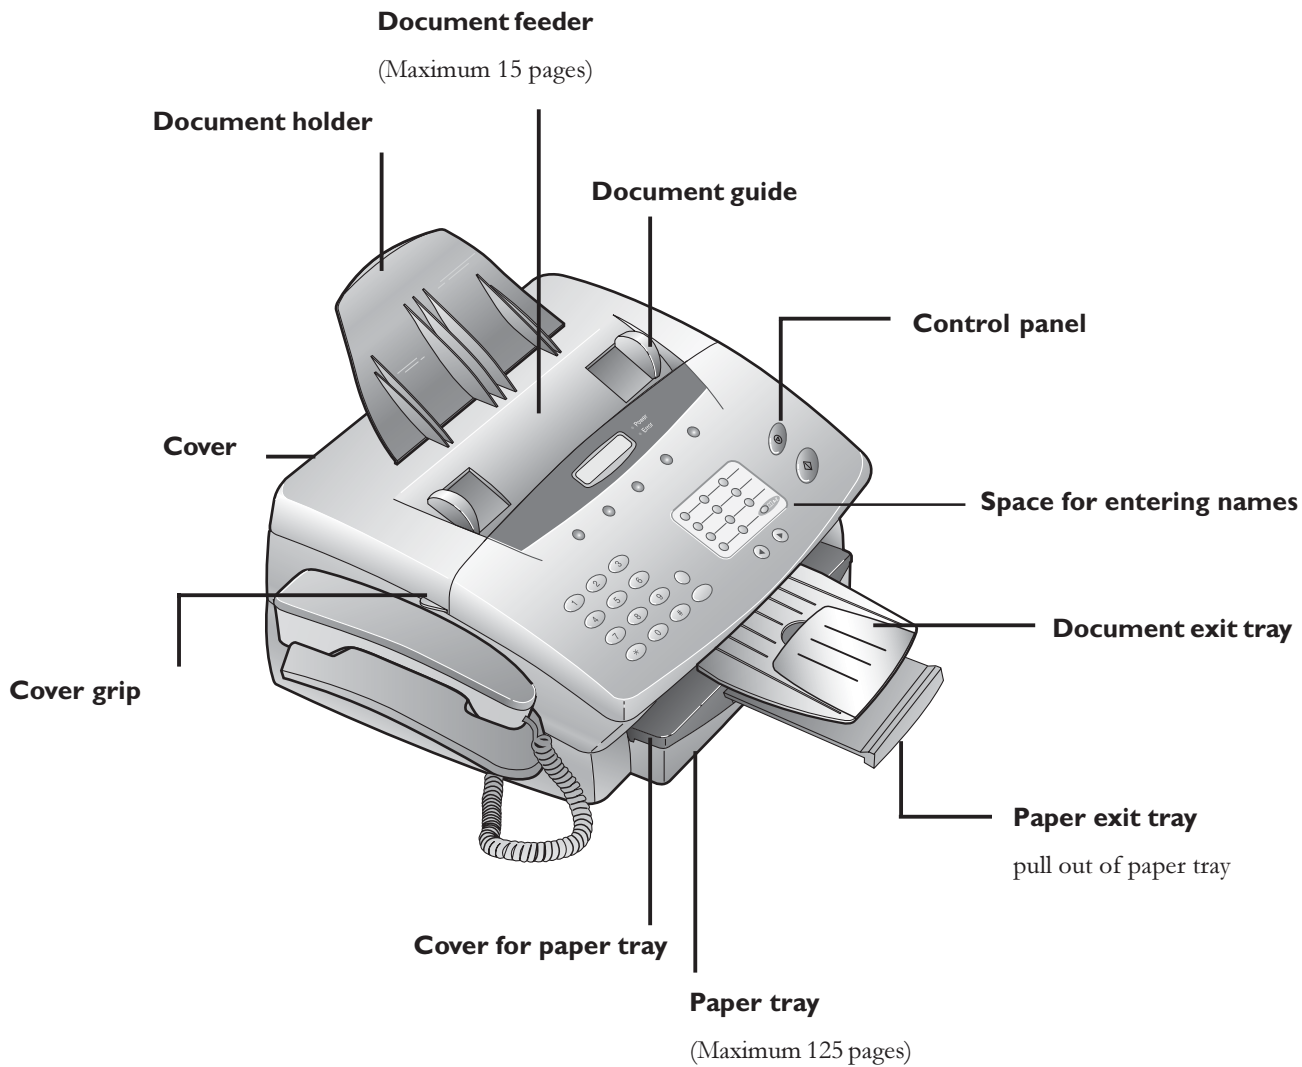

Controls

RESOLUTION

Improves the clarity of text and drawings when sending and copying



Select options / set volume / move display cursor

MENU

Use to select functions

TEL/FAX/AUTO

Set receive mode (TEL/FAX/AUTO/TAM)



Indicates that you are making a telephone call/dialing on-hook/printing from the PC (Laserfax 755 only)




If this symbol flashes please read the display

STOP

Interrupts the process / ejects the document / cancels the input

START/COPY

Starts fax transfer or copies document

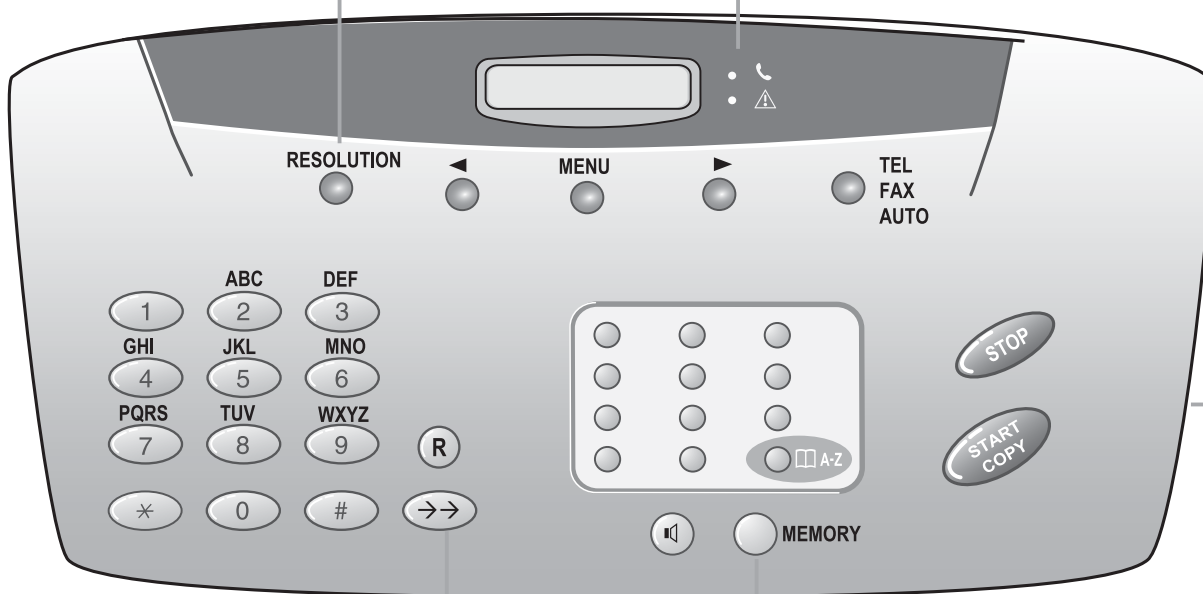

R

For special functions e.g. when using a PABX or accessing functions provided by your telephone provider (toggling, call waiting, etc.)



Redial the last five numbers dialed / insert a pause between two digits

Speed dial keys

Dial stored numbers

A-Z

Look up names and telephone numbers



On-hook dialing. Press this key to signal a voice request after sending or receiving documents


MEMORY

Memory functions

Accessories




Document holder

Insert the paper holder **firmly** into the opening behind the document feeder until it blocks.

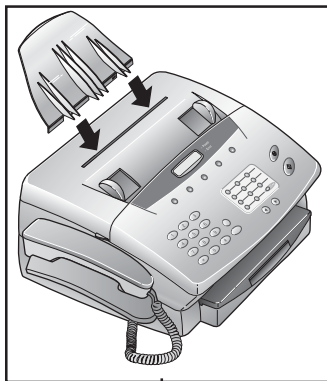


Document exit tray

Insert the document exit tray gently into the opening under the control panel. For non-standard documents (e.g. larger than A4) just extend the tray.

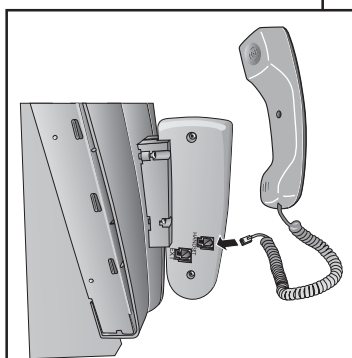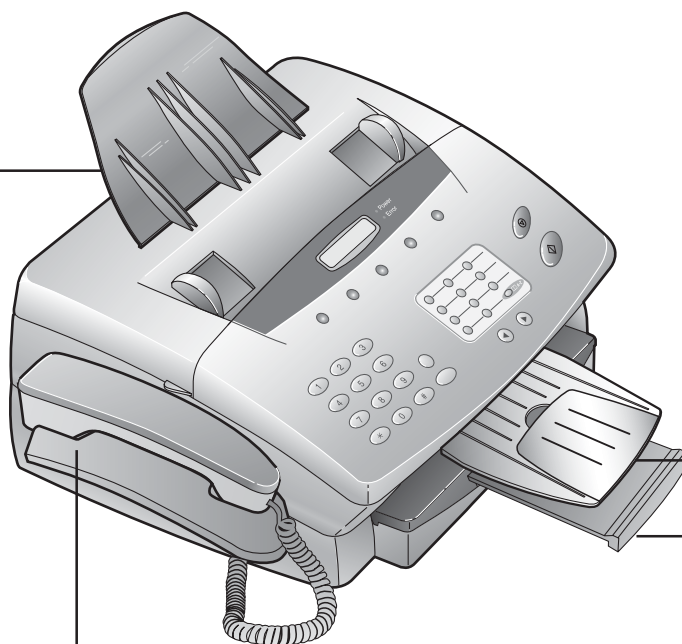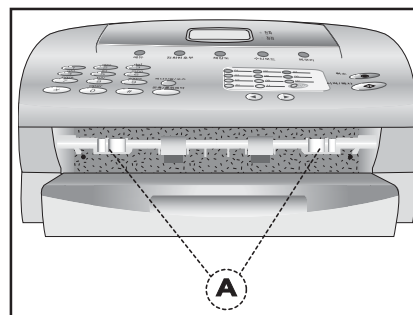

Fax machine handset

Insert the handset with the spiral cable into the socket marked **HANDSET on the underside of the machine**. For details on connecting further devices to the **EXT** socket see **Installation/Additional devices**.

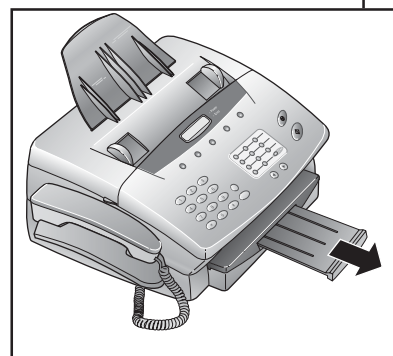

Paper exit tray


The paper exit tray is permanently attached to the paper tray. When pulling out the paper exit tray keep one hand on the paper tray.

Inserting paper


- 1 Pull out the paper tray.




- 2 Fan the paper to prevent more than one sheet being drawn through at a time.

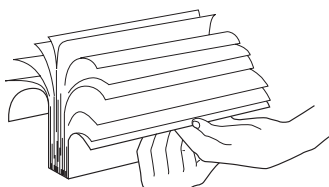


- 3 Open the cover of the paper tray and insert paper up to the mark (Standard A4 210 x 297 mm, 80 g/m²). The tray holds up to 125 sheets.

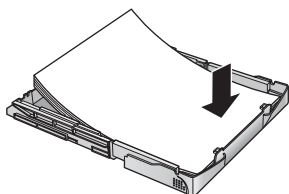

- 4 Insert documents that need to be printed or copied (such as templates or headed paper) **with the printed side (face) down**.

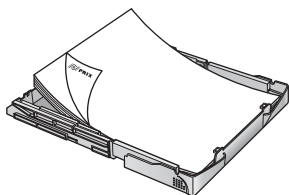

- 5 Push the paper down until the small lever (A) locks into place. Replace the cover.

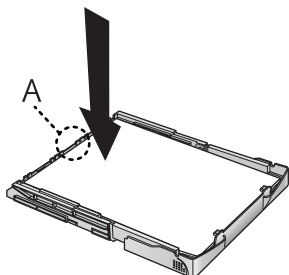

- 6 Carefully push in the paper tray.




- ⚠ Do not fill the paper tray above the mark. Do not insert paper when the machine is printing. Do not use paper that has already been printed by a laser printer as this can lead to paper jams.**


Inserting toner

Before you can send, receive or copy documents, there must be a toner cartridge in the fax machine. A free toner cartridge is included with your fax machine.

- 1 Take the cartridge out of the packaging and remove the extra paper.

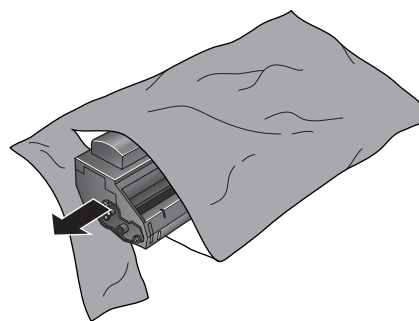


- 2 Shake the toner several times to improve the print quality.

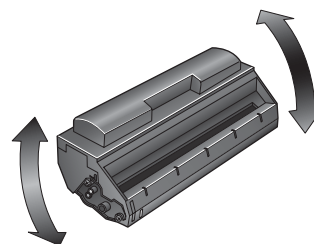

- ⚠ Do not touch the underside of the toner cartridge as this can affect the print quality.**

- 3 Carefully pull out the tab on the left-hand side of the cartridge.

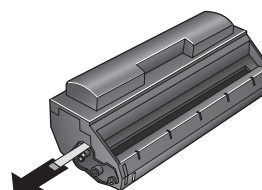

- 4 Grip the cover at the sides and fold it backwards. Insert the toner cartridge into the holder until it locks and then close the cover.



💡 Only use PHILIPS original toner PFA721. You can order toner cartridges directly from PHILIPS. (See **Annex/Order Service**)

Changing toner

- 1 Follow points 1-3 under Inserting a toner cartridge.
- 2 Grip the cover at the sides and fold it backwards.



- 3 Remove the toner cartridge by grasping it firmly in the middle and pulling upwards.



- 4 Insert the new toner in the holder until it locks and then close the cover.




💡 Keep the open/used toner in its original packaging or wrap it in a cloth and return it to your local retailer.

Connecting the fax machine

To the mains


- 1 Plug the fax machine into the wall socket.
- 2 The display shows **SELECT COUNTRY**.
- 3 Press **START/COPY** and choose the country where the fax machine will be used with ◀/▶.
- 4 Confirm with **START/COPY**. After warming up the machine passes into the energy save mode.

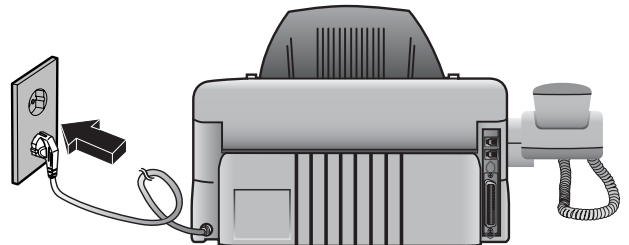


To the telephone line

Connect the telephone cable to the fax machine by inserting it into the socket labeled **LINE** on the rear of the machine.

In the UK

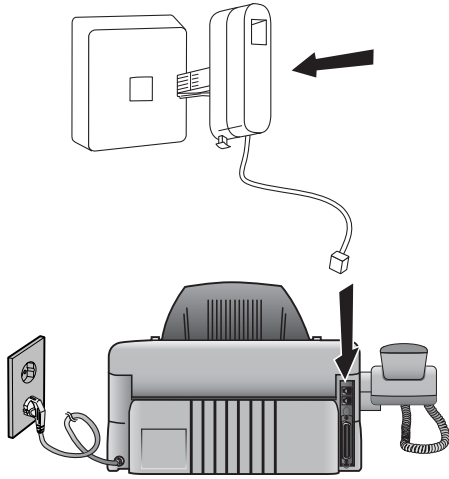

For all other countries

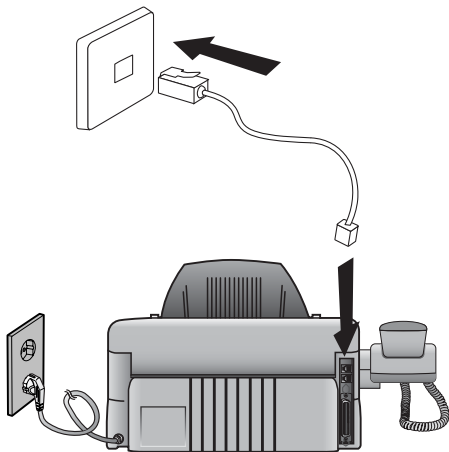

Additional telephones


In addition to your fax machine you can connect other devices to your telephone line such as cordless phones, answering machines, charge counters or modems to a single telephone line. For UK: As long as the Ringer Equivalent Number (REN value) on the line doesn't exceed 4. The REN value of this fax is 1.

If you want to use other equipment with your fax machine please contact your dealer.

Same socket

(not in all countries)

You can connect additional devices to the same telephone socket. Make sure the fax machine is the first device connected to the line.

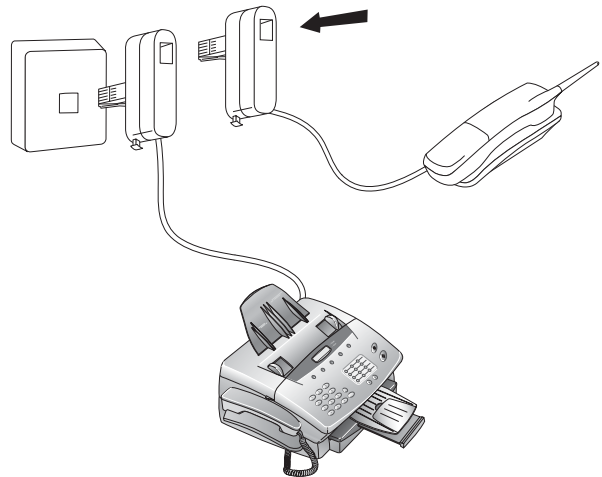


Connecting additional devices to the same socket ensures you the optimal functionality of your fax switch. Your fax machine can control the additional devices.

Separate sockets

(not in all countries)

You can connect additional devices to separate sockets on the same line even if they are in different rooms.

Please note: If you connect additional devices to separate sockets (e.g. in separate rooms) your fax switch cannot control them (which means that your fax machine behaves like any ordinary fax machine). Therefore we recommend you to connect your additional devices to the same socket.

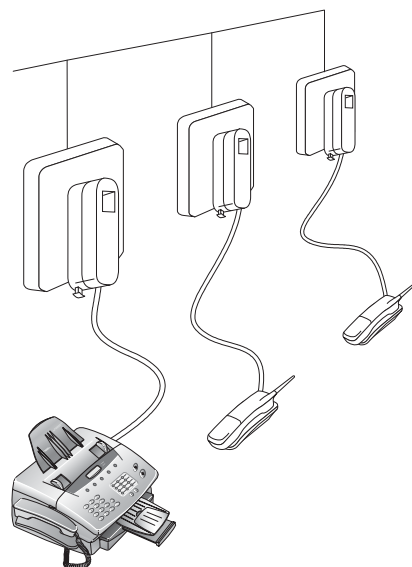

ISDN connection

Your fax machine does not support ISDN fax (Group 4). It is an analog (Group 3) fax machine. It cannot be directly connected to an ISDN connection but requires an (analog) adapter or an ISDN system with connections for analog terminals. For further information please see the user guide for your ISDN system.

Private branch exchange (PABX)

PABXs are common in large companies. ISDN systems that are now often used in homes are also PABXs. To obtain a connection from an extension on such a system to the public network a digit must be dialed before each call to get an outside line.

- 1 To connect your fax machine to a PABX press **MENU** and **③③⑥**. Then press **START/COPY**. The display shows **LINE TYPE: PSTN**.
- 2 Use **◀/▶** to select the PABX mode: **LINE TYPE: PABX**.
- 3 Press **START/COPY** and then **STOP** twice.

⚠ **The exchange code is provided by the manufacturer. It may be 0, R (known as FLASH on some systems) or any other digit.**

💡 In case your PABX requires **R** to obtain an outside line but it is still not possible to get through to the line, your system might not be according to the most recent regulations. Therefore some technical settings have to be changed on your fax machine. Please refer to your Fax Call Centre (see backside of the cover).

Computer connection

(Laserfax 755 only)

In order to be able to use your fax machine as a printer and scanner in conjunction with your computer, you must connect it to the computer and install the software provided with the fax machine.

Requirements

For Windows® 9X, ME:


Pentium® 166 MHz or higher, at least 32 MB RAM

For Windows® NT, 2000 or XP:

Pentium II® or higher, at least 64 MB RAM

VGA screen

parallel port : IEEE 1284 ECP

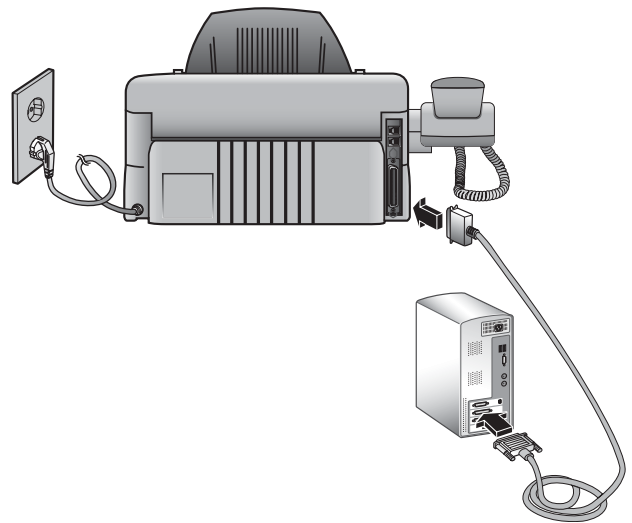

Connection

- 1 Make sure that the fax machine and the computer are both unplugged from the power supply.
- 2 Insert the printer cable to the corresponding sockets of the computer and of the fax machine.
- 3 Reconnect the fax machine to the mains and switch on the computer.

Software installation

- 1 Close down all programs on the computer.
- 2 Insert the installation CD provided with the fax machine.
- 3 Start the program "setup.exe" on the installation CD. Follow the instructions on the screen.
- 4 Once this is complete, re-start the computer.

💡 To uninstall the FAX printer software select the menu Programs / FAX printer / Uninstall FAX printer.

Basic settings

Country selection

- 1 To select the country press **MENU** and ①⑧. The display shows 18 COUNTRY.
- 2 Press **START/COPY** and use ◀/▶ to select the country, where the fax machine will be used.
- 3 Confirm with **START/COPY** and press **STOP** twice.

Display language

- 1 To set the display language press **MENU** then ①⑦. The display shows 17 LANGUAGE.
- 1 Press **START/COPY**. Use ◀/▶ to select the display language.
- 1 To confirm the entry press **START/COPY** and then **STOP** twice.

Help

- 1 Press **MENU**, ⑥⑥⑦ and **START/COPY**.
- 2 A list of functions (including a brief description of the main functions) is printed.

Your number

When you enter your number, it will appear on the recipient's fax printout. You can enter up to 20 digits for your number.

- 1 Press **MENU** and ①④. The display shows 14 YOUR NUMBER.
- 2 Then press **START/COPY**. The display shows ENTER NUM.
- 3 Enter your telephone or fax number using the digit keys. Use ▶ to move the cursor one position to the right. Use ◀ to delete the last digit. To delete the whole entry press **STOP**.
- 4 Confirm the entry by pressing **START/COPY** and then **STOP** twice.

Your name

You can use the digit keys to write up to 32 letters to enter your name. Each key is assigned several letters (see table). By pressing a digit key several times you can reach the next character in the table. After the fifth character the row starts again.

- 1 Press **MENU** and ①⑤. The display shows 15 YOUR NAME.
- 2 Press **START/COPY**. The display shows ENTER NAME.

- 3 Enter your name using the keypad. Use ▶ to move the cursor one position to the right. Use ◀ to delete the last digit. To delete the whole entry press **STOP**.

Key	character
0	space . - 0 + ? / : * % ! () [" ' `
1	1
2	A B C 2 a b c Ä Å Æ Ç ä å æ ç
3	D E F 3 d e f
4	G H I 4 g h i
5	J K L 5 j k l
6	M N O 6 m n o Ñ Ö ñ ö
7	P Q R S 7 p q r s
8	T U V 8 t u v Ü ü
9	W X Y Z 9 w x y z

- 4 Confirm the entry by pressing **START/COPY** and then **STOP** twice.

💡 “Your name” and “your telephone number” are transmitted at the top of each page (the first 4 mm) together with the date, time and page number.

Time and date

- 1 Press **MENU** then ①⑥. The display shows DATE/TIME
- 2 Press **START/COPY**: YEAR: 2002.
- 3 Enter the year using the keypad.
- 4 Press **START/COPY**. The display shows MONTH: 05.
- 5 Enter the month (e.g. ①⑤ for May).
- 6 Press **START/COPY** and enter the day (e.g. ①⑦ for 7 May 2002).
- 7 Finalise the entry by pressing **START/COPY**. The display shows TIME 00:00.
- 8 Enter the exact time (e.g. ②③③① for 23:30). The display shows TIME 23:30.
- 9 To confirm the entry press **START/COPY** and then **STOP** twice.

Volume

Ringing tone

You can set the volume of the ringing tone when the machine is in standby mode or is actually ringing.

- 1 Press ◀/▶. You will see the current setting displayed for approximately 3 seconds and hear the volume.
- 2 To change the value, press ◀/▶ until the desired volume is reached.

⚠ **If the volume level is set to zero, no ringing tone will be heard but faxes will still be automatically received.**

Loudspeaker

- 1 Press to set the loudspeaker volume.
- 2 Set the volume using .
- 3 Exit using or **STOP**.

Key tones

- 1 Press **MENU** and . The display shows BEEPER VOL.
- 2 Press **START/COPY**. Use to select the volume of the key tones.
- 3 To confirm the entry press **START/COPY** and then **STOP** twice.

Energy save mode

Energy save mode reduces the energy consumption in standby mode. You can select how many minutes after the last entry before energy save mode is activated.

- 1 Press **MENU** and . The display shows SAVE MODE.
- 2 Press **START/COPY**. Use to select POWER SAVE.
- 3 Press **START/COPY**. Use to select 5, 15, 30, 60 minutes or OFF.
- 4 To confirm the entry press **START/COPY** and then **STOP** three times.

Toner save mode

The toner save mode decreases the consumption of the toner. Printing quality may fall off.

- 1 Press **MENU** and . The display shows SAVE MODE.
- 2 Press **START/COPY**. Use to select TONER SAVE.
- 3 Press **START/COPY**. Use to select ON or OFF.
- 4 To confirm the entry press **START/COPY** and then **STOP** three times.

List of settings

You can print out a list of all functions and settings currently available.

- 1 Press **MENU**, and **START/COPY**.
- 2 A list of all settings is printed.

Fax switch

The built-in fax switch enables a single telephone connection to be used to make phone calls, send and receive faxes and use extra devices. There are four operating modes. Your machine is preset to FAX mode.

- 1 The desired operating mode can be selected using **TEL/FAX/AUTO**. Press the button until the desired mode appears.

TEL mode

In **TEL** mode your fax machine behaves like a normal telephone. If you receive a fax call (you will hear a high-pitched tone or nothing at all) you can press **START/COPY** to start fax reception. Automatic fax reception is turned off.

FAX mode

In **FAX** mode the machine rings twice and then answers automatically. This mode is suitable for fax operation.

AUT mode

In **AUT** mode your machine will ring up to nine times depending on the setting and will decide whether the incoming call is a voice or fax call. Faxes are received automatically.

- 1 To set the number of rings press **MENU** and ②②②. The display shows **AUTO RING COUNT**.
- 2 Press **START/COPY** and enter the desired number of rings.
- 3 Press **START/COPY** and then **STOP** twice.

TAM mode

In this mode you can connect an external telephone answering machine. Ensure that the number of rings is greater than the number of rings set on the external answering machine.

- 1 To set the number of rings press **MENU** and ②②③.
- 2 Press **START/COPY** and enter the desired number of rings.
- 3 Press **START/COPY** and then **STOP** twice.

⚠ **If the volume level is set to zero, no ringing tone will be heard but faxes will still be automatically received.**



Fax reception from a different phone

If you pick up another phone and hear a fax call (you will hear a high-pitched tone or nothing at all) you can start the fax machine using a code. If this does not work, press **START/COPY** on the fax machine.

- 1 To define the code press **MENU** and ②②④. The display shows **REMOTE FAX START**.
- 2 Press **START/COPY**. Use ◀/▶ to select **ON** or **OFF**.
- 3 Press **START/COPY** and enter the last digit of the code. This always starts with *⑤.
- 4 Press **START/COPY** and then **STOP** twice.

Making a call

- 1 Key in the number you want to dial.
- 2 Lift the handset.

 If you want to dial without lifting the handset, press .

Re-dialling

By means of →→ you can redial the last five numbers.

- 1 Press →→.
- 2 Press ◀/▶ until the number you want appears.
- 3 The machine will dial the number automatically.

Speed dialling

There are eleven speed dial keys for numbers you use regularly.

Storing numbers

- 1 Press **MENU** and ①. The display shows 11 SPEED DIAL.
- 2 Press **START/COPY**.
- 3 Press the speed dial key where you want to store the entry and confirm by pressing **START/COPY**.
- 4 Enter a name using the digit keys (up to 32 characters) and press **START/COPY**.
- 5 Enter the telephone number. Press **START/COPY** to confirm.
- 6 Press **STOP** three times to end the function.

Using speed dial

- 1 Press the relevant speed dial key.
- 2 Lift the handset or, if you want to send a fax, press **START/COPY**.

Changing speed dial entries

- 1 Press **MENU** and ①.
- 2 Press **START/COPY**.
- 3 Press the relevant speed dial key and press **START/COPY** to confirm.
- 4 Enter a name using the digit keys (up to 32 characters) and press **START/COPY**.
- 5 Enter the telephone number. Press **START/COPY** to confirm.
- 6 Press **STOP** three times to end the function.

Speed dial list

- 1 Press **MENU**, ⑥⑥② and **START/COPY**.
- 2 The speed dial list will be printed out.

Phonebook

Your fax machine has space to store around 99 names and numbers. The precise number will depend on the length of the entries.

Storing numbers

- 1 Press **MENU** and ①②.
- 2 Press **START/COPY**.
- 3 Use ◀/▶ to select ENTRY#: NEW and press **START/COPY** to confirm.
- 4 Enter a name using the digit keys (up to 32 characters) and press **START/COPY**.
- 5 Enter the telephone number. Press **START/COPY** to confirm.
- 6 Press **STOP** three times to end the function.

Using the phonebook

- 1 Press  A-Z and **START/COPY**. The first name in the alphabet will appear on the display. Use ◀/▶ to select the desired entry.
- 2 Lift the handset or, if you want to send a fax, press **START/COPY**.

Correcting entries

- 1 Press **MENU** and ①②, and then **START/COPY**.
- 2 Use ◀/▶ to select ENTRY#: OLD and press **START/COPY** to confirm.
- 3 Press **START/COPY** again and use ◀/▶ to find the entry you want to correct.
- 4 Press **START/COPY** and make the changes.
- 5 Press **START/COPY** again and then **STOP** twice to end the function.

Deleting entries

- 1 Press **MENU** and ①②, and then **START/COPY**.
- 2 Use ◀/▶ to select ENTRY#: OLD and press **START/COPY** to confirm.
- 3 Press **START/COPY** again and use ◀/▶ to find the entry you want to delete.
- 4 Press **STOP**.

- 5 Use ◀/▶ to select **DELETE? Y** and press **START/COPY** to confirm. If you don't want to delete the entry, press **STOP**.
- 6 Press **STOP** twice to end the function.

Printing the phonebook

- 1 Press **MENU**, ⑥⑥③ and then **START/COPY**.
- 2 The telephone numbers stored are printed out.

Groups

You can combine **entries in your phonebook** into groups so you can send a fax to several people at the same time, for example.

Setting up a group

- 1 Press **MENU**, ①③ and then **START/COPY**. The display shows **13 GROUPS**.
- 2 Use ◀/▶ to select the digit under which you want to store the group (max of five groups), e.g. **GROUP NO.: 01**.
- 3 Press **START/COPY**.
- 4 Enter a name for the group using the digit keys (up to 32 characters) and press **START/COPY**.
- 5 Enter the first telephone number. Press **START/COPY** to confirm. The display shows **NUMBER: 01**.
- 6 The machine will automatically ask you for the next number (maximum of ten). Press **START/COPY** to confirm each time.
- 7 Press **STOP** four times to end the function.

Sending to a group

- 1 Place the document to be faxed (maximum of 15 sheets) face down in the document feeder.
- 2 Press **MEMORY**, ② and **START/COPY**. The display shows **2 BROADCAST**.
 - a If you want to send the fax immediately, select ① **NOW** and press **START/COPY**.
 - b If you want to send the fax later select ② **LATER**, enter the time you want to send it (within 24 hours, e.g. ①⑧③① for 6.30 pm) and press **START/COPY**.
- 3 Use ◀/▶ to select the group and press **START/COPY**.

- 4a If you want to enter further numbers, use ◀/▶ to select **ANOTHER? Y** and enter the numbers you want.
- b When you have finished entering numbers, use ◀/▶ to select **ANOTHER? N**. Then press **START/COPY**.
- 5 The document is scanned and automatically sent.

Canceling

To cancel automatic redial, press **MENU**, ⑦⑦⑥ and **START/COPY**. Press **START/COPY** again to confirm.

💡 If you want to clear the fax from the memory, press **STOP**.

💡 If the line is busy, automatic redial is activated.

Correcting groups

- 1 Press **MENU**, ①③ and then **START/COPY**.
- 2 Use ◀/▶ to select the group you want to change and press **START/COPY** to confirm.
- 3 Use ◀/▶ to select **ENTRY: OLD** and press **START/COPY**.
- 4 You can now change the name of the group. When you have done this, press **START/COPY**.
- 5 Change the entry you want to change and press **START/COPY**.
- 6 Press **STOP** four times to end the function.

Deleting a group

- 1 Press **MENU**, ①③ and then **START/COPY**.
- 2 Use ◀/▶ to select the group you want to delete and press **START/COPY** to confirm.
- 3 Use ◀/▶ to select **DELETE? Y** and press **START/COPY**.

Group overview

- 1 Press **MENU** and ⑥⑥④ and **START/COPY**.
- 2 The group overview is printed out.

Calling line identification

(not available in all countries)

Your fax machine can display the telephone number of the caller before you lift the handset. Check with your telephone company whether you can activate this function on your telephone line.

The numbers of the last twenty callers are stored.

Printing a caller list

The caller list contains the numbers of the last twenty telephone and fax calls received, provided the callers have activated calling line identification.

- 1 Press **MENU**, **6 6 5** and then **START/COPY**.
- 2 The caller list is printed out.

The caller list can be printed out automatically as soon as it reaches twenty entries.

- 1 Press **MENU** and **2 2 7**. The display shows 27 AUTO PRINT.
- 2 Press **START/COPY** and use **◀/▶** to select 2 CALLER ID LIST.
- 3 Press **START/COPY** and use **◀/▶** to select ON or OFF.
- 4 Press **START/COPY** and then **STOP** three times to end the function.

Printing a journal

The journal contains the numbers of the last forty calls or faxes sent or received.

- 1 Press **MENU**, **6 6** and then **START/COPY**.
- 2 The journal is printed out.

The journal can be printed out automatically.

- 1 Press **MENU** and **2 2 7**. The display shows 27 AUTO PRINT.
- 2 Press **START/COPY** and use **◀/▶** to select 1 CALL LOG LIST.
- 3 Press **START/COPY** and use **◀/▶** to select ON or OFF.
- 4 Press **START/COPY** and then **STOP** three times to end the function.

Fax


- ⚠ It is best only to use **A4 documents (80 g/m²)**. Documents smaller than **A5** may jam in the machine.
- ⚠ **Do not try to send documents that are**
 - ... **damp, coated with correction fluid, dirty or have coated surfaces,**
 - ... **written on in soft pencil, ink, crayon or charcoal,**
 - ... **taken from newspaper (printer's ink!),**
 - ... **held by paper clips or staples; always remove these before faxing,**
 - ... **wrinkled or torn,**
 - ... **glued together, too thick or too thin or covered with any adhesive notes ("Post-It®" notes),**
 - ... **made of foil or continuous paper.**

Inserting a document

- 1 Place the document **face down** in the document feeder (maximum of 15 sheets).



- 2 Adjust the guides to match the width of the document.

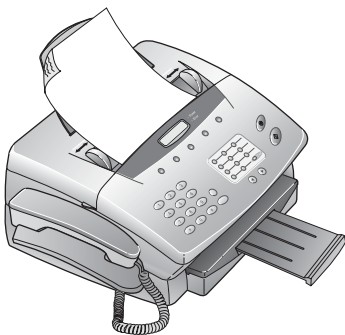

Sending a fax

- 1 Dial the number.
- 2 To improve the image quality press **RESOLUTION**.
- 3 Press **START/COPY**.

Transmission starts. If the fax machine is unable to establish a connection, it will redial automatically after a certain time.

💡 If you wish to cancel automatic redial with the document still in the machine, press **STOP**. The document will be ejected.

💡 If you wish to cancel automatic redial without ejecting the document, press **MENU**, **773** and then **START/COPY**. Press **START/COPY** to confirm.

Resolution

Your fax machine has four different resolutions. In addition to **STANDARD** (for faxes), there is **FINE** (for small print and drawings), **SUPER FINE** (for copies) and **PHOTO** (for photographs and other such images). Keep pressing **RESOLUTION** until the display shows the option you want.

Reducing

To ensure that faxes that are longer than A4 are printed out on one page, you can automatically reduce the page. You can define the extent to which the page is reduced.

Automatic

If this function is activated, an over-long fax is reduced by the amount specified in the function described below (see **Limit**).

- 1 Press **MENU** and **334**. The display shows **34 REDUCTION**.
- 2 Press **START/COPY** and use **◀/▶** to select **AUTO REDUCTION**.
- 3 Press **START/COPY** and use **◀/▶** to select **ON** or **OFF**.
- 4 Press **START/COPY** and then **STOP** three times to end the function.

Limit

This function lets you select the amount by which an over-long fax is to be reduced.

- 1 Press **MENU** and **334**. The display shows **34 REDUCTION**.
- 2 Press **START/COPY** and use **◀/▶** to select **THRESHOLD**.
- 3 Press **START/COPY** use **◀/▶** to select a value between **0** and **30** mm.
- 4 Press **START/COPY** and then **STOP** three times.

Memory

If there is no paper in the paper tray or if the toner is empty, incoming faxes will be stored in memory (around 120 pages according to Slerexe letter). If an incoming fax has been stored in memory the display will show **FAX IN MEMORY**. Once the paper tray is refilled or the toner replaced all the faxes stored in memory can be printed out (see Printing from memory).

When a fax has been printed it is deleted from memory. If printing is interrupted all the faxes that have not yet been printed in full remain in memory. Once the memory is full no further pages can be stored.

Printing later

You can choose whether faxes are to be printed immediately from memory or later.

- 1 Press **MENU**, **3 3 3**. The display shows **33 MEMORY MODE**. Press **START/COPY**.
- 2 Use **◀/▶** to select **PRINT NOW** (faxes are printed out as soon as the paper tray is refilled) or **PRINT LATER** (faxes are printed out when you want).
- 3 Press **START/COPY** and then **STOP** twice.

Printing from memory

If there is a document in memory the display will show **FAX IN MEMORY**.

- 1 Press **MEMORY** and **3**.
- 2 Press **START/COPY**. If faxes are stored they will be printed out.

Sending from memory

You can scan in documents, store them in memory and send them from memory. When they have been sent, the faxes are cleared from memory.

- 1 Place the document to be faxed (maximum of 15 sheets) loosely in the document feeder, face down.
- 2 Press **MEMORY**, **2** and **START/COPY**.
 - a If you want to send the fax immediately, select **1 NOW** and press **START/COPY**.
 - b If you want to send the fax later select **2 LATER**, and press **START/COPY**. Enter the time you want to send it (within 24 hours, e.g. **1 8 3 0** for 6.30 pm) and press **START/COPY**.
- 3 Enter the fax number and press **START/COPY**. The document will be scanned and sent.

Canceling

- 1 Press **MEMORY**, **4** and **START/COPY**. The display shows **ARE YOU SURE?**
- 2 Press **START/COPY** to delete the faxes from memory.

If the line is busy, automatic redial is activated.

- 1 If you wish to cancel automatic redial, press **MENU**, **7 7 4** and then **START/COPY**.
- 2 Press **START/COPY** again to confirm.

 A power failure will clear the faxes from memory.

Broadcast

You can send the fax either to a group you have already stored or to individual telephone numbers.

- 1 Place the document to be faxed (maximum of 15 sheets) loosely in the document feeder, face down.
- 2 Press **MEMORY** and **2**. The display shows **2 BROADCAST**. Press **START/COPY**.
 - a If you want to send the fax immediately, select **1 NOW** and press **START/COPY**.
 - b If you want to send the fax later select **2 LATER** and press **START/COPY**. Enter the time you want to send it (within 24 hours, e.g. **1 8 3 0** for 6.30 pm) and press **START/COPY**.
- 3 The display shows: **DIAL NUM. : GROUP**. Enter the recipients:
 - a If you want to send the fax to a group, use **◀/▶** to select **GROUP** and press **START/COPY**. Use **◀/▶** to select the group. You can also use the digit keys to select a group.
 - b If you want to send the fax to specific telephone numbers, use **◀/▶** to select **ENTER NUMBER** and press **START/COPY**. Enter the telephone number and press **START/COPY**. If you want to enter further numbers, use **◀/▶** to select **ANOTHER ? Y** and enter the press **START/COPY** to confirm. When you have finished adding numbers, press **ANOTHER? N**.
- 4 Finally, press **START/COPY**. The document will be scanned and automatically sent.

Broadcast list

The broadcast list contains the numbers of all the addresses in a broadcast (up to 50 telephone numbers).

- 1 Press **MENU** and **6 6 4**. The display shows **64 GROUP LIST**.
- 2 Press **START/COPY**. The list will be printed out.

Clearing memory

With this function you can delete faxes or documents from memory.

- 1 Press **MEMORY**, **4** and **START/COPY**. The display shows **ARE YOU SURE?**

- 2 Press **START/COPY** to delete the faxes from memory or press **STOP** to cancel.

Sending later

If you wish to take advantage of off-peak telephone charges or if you know that the person to whom you are sending a fax is available only at certain times you can set up your fax machine to send a fax automatically at a later time (within 24 hours).

- 1 Place the document to be faxed (maximum of 15 sheets) loosely in the document feeder, face down.
- 2 Press **MENU**, **44**. The display shows **41 SEND LATER**. Press **START/COPY** two times.
- 3 Enter the time you want to send it (within 24 hours, e.g. **18 30** for 6.30 pm) and press **START/COPY**.
- 4 Enter the fax number and press **START/COPY**.

Canceling

If you remove the document the delayed fax job will be canceled.

You can also cancel the time. To do this, press **MENU**, **77** and **START/COPY**. The display shows **ARE YOU SURE?** Press **START/COPY** again to confirm.

Sending with code

If your fax partner has entered a code to protect the fax reception please follow the procedure:

- 1 Place the document to be faxed (maximum of 15 sheets) loosely in the document feeder, face down.
- 2 Press **MENU**, **442** and **START/COPY**.
- 3 Enter the code which you have received from your fax partner (up to 20 digits) and press **START/COPY**.
- 4 Enter the fax number and press **START/COPY**.

Receive polling

This function enables you to receive documents that have been stored for you in a remote fax machine.

Quick polling

- 1 Press **MENU**, **552**. The display shows **52 POLLING RX**. Press **START/COPY**.
- 2 Select the telephone number and press **START/COPY** two times.

Receive polling with code


If your fax partner has entered a code to protect the documents, proceed as follows:

- 1 Press **MENU**, **552**. The display shows **52 POLLING RX**. Press **START/COPY**.
- 2 Use **◀/▶** to select **WITH CODE** and press **START/COPY**.
- 3 Enter the code (up to 20 digits) and press **START/COPY**.
- 4 Enter the telephone number and press **START/COPY**.

Delayed polling

If you wish to take advantage of off-peak telephone charges you can poll a fax at a later time (within 24 hours).

- 1 Press **MENU**, **552**. The display shows **52 POLLING RX**. Press **START/COPY**.
- 2 You now have two options:
 - a If you want to poll a fax without a code, use **◀/▶** to select **LATER** and press **START/COPY**. Enter a time (within 24 hours, e.g. **18 30** for 6.30 pm) and press **START/COPY**.
 - b If you want to enter a code, use **◀/▶** to select **LATER/C** and press **START/COPY**. Enter a time for polling and press **START/COPY**. Now enter the code (up to 20 digits) and press **START/COPY**.
- 3 Enter the fax number and press **START/COPY**.

 If the line is busy, automatic redial is activated. If you wish to cancel automatic redial, press **MENU** and **775**. The display shows **75 POLL REDIAL**. Press **START/COPY** two times.


 If you wish to cancel the entire process, press **MENU**, **771** and **START/COPY**.


Transmit polling

You can program your fax machine to send documents when it is polled by a remote fax machine.

- 1 Place the document to be faxed (maximum of 15 sheets) loosely in the document feeder, face down.
- 2 Press **MENU** and **55**. The display shows **51 POLLING TX**. Press **START/COPY**.
- 3 You can now choose whether or not to protect the fax against unauthorized access.
 - a If you want to protect the fax, use **◀/▶** to select **WITH CODE** and press **START/COPY**. Enter a code (up to 20 digits) and press **START/COPY**. Anyone you give this code to will be able to poll the fax.
 - b If you do not want to use a code, use **◀/▶** to select **NOW** and press **START/COPY**.

The process is canceled as soon as you remove the document from the fax machine.

 Poll coding is based on the international ITU standard. However, there are manufacturers who use different procedures. Their machines are therefore not compatible.

 If you send faxes to or poll faxes from fax databases, some of these databases allow you to append the subaddress directly to the telephone number. This will save you telephone charges. First enter the telephone number of the database and press **R**. Now enter the subaddress. If you are not sure whether your fax polling service supports subaddresses, contact the service provider.

Transmission speed

If the telephone connection used for transmission is poor, transmission errors may occur at normal speed (14,400 bps). In such cases it is best to reduce the speed. When you have successfully sent the fax, remember to set your fax machine back to the standard speed.

- 1 Press **MENU** and **③③**: 31 TX SPEED.
- 2 Press **START/COPY** and use **◀/▶** to select the speed you want.
- 3 Press **START/COPY** and then **STOP** twice.

Reception speed

If the telephone connection used for reception is poor, errors may occur at normal speed (14,400 bps). In such cases it is best to reduce the speed. When you have successfully received the fax, remember to set your fax machine back to the standard speed.

- 1 Press **MENU** and **③③②**: 32 RX SPEED.
- 2 Press **START/COPY** and use **◀/▶** to select the speed you want.
- 3 Press **START/COPY** and then **STOP** twice.

Transmission report

In the default setting, a transmission report is printed out only in the event of a transmission error. However, you can change this setting so that a transmission report is printed for every fax transmitted, only in the event of an error or never.

- 1 Press **MENU** and **②②⑤**: 25 TX REPORT.
- 2 Press **START/COPY** and use **◀/▶** to select **ERROR, ON** or **OFF**.
- 3 Press **START/COPY** and then **STOP** twice.

Reception report

In the default setting, a reception report is printed out only in the event of a transmission error. However, you can change this setting so that a reception report is printed for every fax received, only in the event of an error or never.

- 1 Press **MENU** and **②②⑥**: 26 RX REPORT.
- 2 Press **START/COPY** and use **◀/▶** to select **ERROR, OFF** or **ON**.
- 3 Press **START/COPY** and then **STOP** twice.

Copy - scan - print

Copy

You can use your fax machine to make copies of an original. Resolution **STANDARD** is set by default. To select a better image quality press **RESOLUTION** (see chapter **Fax / Resolution**).

- 1 Place the document (maximum of 15 sheets) in the document feeder, **face down**.



- 2 To select a better image quality press **RESOLUTION**.

Single copies

- 1 To make a single copy of the original, press **START/COPY** three times. Copying starts immediately.

Multiple copies and enlarging/reducing

- 1 To make multiple copies of the original, press **START/COPY** once.
- 2 The display shows **COPY COUNT: 01**. Use the digit keys to enter the number of copies you want (maximum of 99). Press **START/COPY**.
- 3 The display shows **SIZE: 100%**. Use **◀/▶** to enlarge or reduce the copy.

You can reduce the copy to 50% and enlarge it up to 200%.

- 4 Press **START/COPY**. The fax machine will scan the first page of the document and start copying it.

Scan

(only for fax machines with a PC interface)

- 1 Place your documents **face down** (maximum of 15 sheets) in the document feeder.



- 2 There are two ways you can call up the scan function:
 - a Click on the **START** symbol on the left lower edge of your screen. Choose the Program menu and select **FAX printer**. A sub-menu will appear. Select the **Imaging Software**. Choose the command “Scan New” in the pull down menu “File”.
 - b Open the graphics program into which you wish to scan. Select as source the **FAX scanner driver** and choose the command to acquire an image.
- 3 The **FAX scanner** window will open.
- 4 Select the desired scan settings.
- 5 Press the “Scan” command.
- 6 Once the scanning procedure is completed, the image of the document can be stored.

💡 If you click on the “Help” command, on-line help will open.

Printing from the PC

If the software installation has been performed successfully, your fax machine is now set up as a standard printer. You can now print out on the fax machine from any program you like.

- 1 Simply choose the print command in the application from which you wish to print.
- 2 You can modify the printer settings for each respective application. If you give a print command or select printer installation, a dialogue box opens. Select the command which will take you to printer setting and make the desired modifications.
- 3 In “Control Panel”, you can modify the printer settings for all applications. Highlight the **FAX printer** and under “File / Properties” make the desired modifications.
- 4 Under “File / set as default” you can determine whether you wish to use the fax machine as a standard printer or not.

💡 You may also click on the “Help” command. The overview of on-line help will open.

Troubleshooting

Maintenance

PAPER JAM

Received faxes or copies are not ejected.

Open the cover and take the toner out of the machine. Pull the green lever towards you. Carefully remove the paper without tearing it.

CHECK PAPER

Take out the paper cassette and remove the paper. Fan it and straighten it on a smooth surface and replace it.

CHECK DOCUMENT

Press **STOP**. The document will be ejected. If not, pull it gently out of the machine.

SERVICE

Disconnect the machine from the mains and plug it back in. If the display still says **SERVICE** please contact customer services.

Problems faxing or printing

Cannot send a fax.

Check that the recipient's machine is working.
Check whether the display shows an error message.
Lift the handset to check whether you are getting dial tone. If not, check the telephone connection.

Cannot receive a fax.

Check that you have selected the **FAX, AUTO** or **TAM** mode.
Lift the handset to check whether you are getting dial tone. If not, check the telephone connection.

You or the recipient has received a blank sheet.

The sender has faxed the back of the document.
Check the machine by making a copy of the document.
If the copy is OK the recipient's fax machine may be faulty.

Your document has been sent without an error message but has not been printed out on the recipient's machine.

Ask the recipient if their machine is working.

The documents you send are arriving with loss of quality.

Check the document or increase the resolution. Reduce the transmission speed. Check the machine by making a copy of the document. If the copy is OK the recipient's fax machine may be faulty.

Received faxes and copies are too light.

Make a copy of any document. If the copy is OK there is a problem with the sender's fax machine. Inform the sender. If the copy is also too light the toner is almost all gone. Shake the cartridge a few times. If the toner cartridge is empty, replace it. You can obtain toner from specialist retailers or directly from Philips (see **Annex** / Order service). Only use PHILIPS original PFA 721 toner cartridges.

There are white lines on the printout.

Clean the toner drum with a soft cloth.

There are black lines on the printout.

The toner cartridge is damaged and must be replaced. Only use PHILIPS original PFA 721 toner cartridges. You can order them directly from Philips (see **Annex**/Order service).

Problems with the connection

No dial tone.

Check that the machine is connected to the mains and to a telephone line.

Receive polling does not work.

Check that the machine from which you are trying to receive faxes is set for automatic fax operation and for polling. If you need a code, check you have the right one.

Error codes

Error codes when sending faxes

	Problem
# 102	No document in the feeder.
# 104	Fault on the telephone line.
# 105	The receiving fax machine has a transmission error.
# 109	The receiving fax machine is not responding.
# 110	There is no signal from the receiving fax machine at the end of transmission.
# 111	An error message is sent by the receiving fax machine at the end of transmission.
# 113	The receiving fax machine requests a second transmission as there were too many transmission errors in the first transmission.
# 114	The document is too long.
# 115	Transmission of one page took too long (more than eight minutes).

Error codes when receiving faxes

	Problem
# 152	An error message is received from the sending fax machine at the start of reception.
# 153	The person polling the fax has entered an incorrect password.
# 154	The sending fax machine does not send a signal at the start of reception.
# 158	The sending fax machine does not send a standard signal.
# 160	The machine is not correctly connected to the telephone line or there is no signal from the sending fax machine.
# 161	At the end of the reception process the sending fax machine does not send a signal or the connection was interrupted.

# 166	There are repeated errors in the received data.
# 167	The data received contains so many errors that a second transmission is needed.
# 168	At the start of password-protected polling the machine detects that the wrong password has been entered on the sending fax machine.
# 169	In attempting to poll a fax, the machine detects that the sending fax machine has not been set up correctly for polling.

Other error codes

Problem

# 201	The correct protocol signal is not sent during the transmission process.
# 202	The correct protocol signal is not sent during the reception process.
# 205	Transmission is canceled by the other fax user.
# 206	There is not enough memory capacity during transmission.
STOP BUTTON PRESSED	The STOP button was pressed during transmission.
NO REPOSE	The other fax user does not answer during transmission and the connection is interrupted.

Technical data

Compatibility	ITU-T Group 3
Connection type	Exchange line (PSTN) / Extension (PABX)
Flash times	Exchange line (PSTN): 100 ms Extension (PABX): 100 ms
Document size	Width: 128-218 mm Length: 128-356 mm
Document feeder	max. 15 pages (80 g/m ²)
Paper	A4 210x297 mm, 80 g/m ²
Capacity of paper tray	max. 125 sheets
Maximum scan width	208 mm
Scan and copy resolution:	
horizontal	8 points/mm (200 dpi)
vertical standard	3.85 lines/mm (200x98 dpi)
vertical fine	7.7 lines/mm (200x196 dpi)
vertical super fine	15.4 lines/mm (200x300 dpi)
photo	64 greyscales
Print resolution	600x600 dpi
Data compression scheme	MH, MR
Modulation	V29, V27ter, V23, V21, V17
Transmission speeds	14k4/12k2/9600/7200/4800/2400 bps
Fax memory	2 MB, approx. 120 pages
Recording method	Laser Jet
Toner capacity	Initial cartridge approx. 1000 pages, PFA 721 approx. 3000 pages
Speed dial	11 entries
Phonebook	99 entries
Group dial	5 entries, maximum of 10 digits each
Dimensions (WxDxH)	449x325x165 mm excl. paper holder
Weight	Approx. 8 kg
Power draw	Standby: less than 15 W Operation: less than 200 W
Mains connection	220-240 V / 50-60 Hz
Temperature range	10-32°C
Relative humidity	20-80 % (relative)
Security	EN 60950, IEC 60825-1
Interference	To EN 55022 class B
Immunity	To EN 55024

Glossary

Additional fax machine, additional telephone: You can use your fax machine with additional equipment such as cordless phones and answering machines connected to a single telephone line.

Calling line identification: When you receive a call the telephone number of the caller is displayed (not in all countries).

Document: The typed or handwritten sheet, sketch or drawing you want to fax to someone else.

DTMF (Dual Tone Multiple Frequency): This tone dialing signal lets you start the fax machine from any phone that has tone dialing.

Fax switch, ring patterns: The fax switch analyzes incoming calls and selects the appropriate ring pattern. It detects whether the call is a normal voice call or a fax call. In **TEL** mode, faxes have to be received manually; in other modes they are received automatically.

Hook flash function: Press **R** to access a wide range of new services from the telephone company (togglng, call waiting, etc.).

ITU (International Telecommunications Union): An international body that publishes telecommunications standards.

Laserjet: A printing method in which black powder (see Toner cartridge) is burnt onto paper by means of a laser.

Memory: Faxes that are not printed out are stored in memory.

PABX, number for outside line: PABXs (private automatic branch exchanges) are installed in all companies over a certain size. They provide a kind of internal telephone network. To obtain an outside line from a PABX you need to dial a particular digit.

Paper: Standard A4 paper (210x297 mm, 80 g/m²)

Polling: This lets you receive documents stored in another fax machine.

Pulse dialing: Pulse dialing is the old dialing method in which each number dialed produces a certain number of pulses.

Receive polling: This lets you receive documents stored in another fax machine.

Sender ID: The name and telephone number of the user can be entered on most fax machines. This sender ID is printed out on the transmission report and also appears on fax machines to which you send documents.

Togglng: Switching from one call to another and back again.

Toner cartridge: This contains the black powder, known as toner, that is transferred to the paper by heat. White stripes on the printout indicate that the toner is running out. The cartridge can be shaken to provide a short-term solution, but will need replacing before long.

Guarantee

(UK Terms and Conditions)

ATTENTION

At the beginning of April 2002, SAGEM SA bought the PHILIPS fax business unit. SAGEM SA is now the European Number 1 in fax and offers a complete range of fax terminals with Internet access and SMS function, multifunctional terminals and servers covering the needs of all its customers - from home-users to multinational organisations.

In order to apply the guarantee, you should contact your dealer. Proof of purchase will be required. Should malfunctioning arise, the dealer will advise you what to do.

If you bought your equipment from SAGEM directly, the following shall apply :

A SAGEM undertakes to remedy by repair, free of charge for labour and replacement parts, any defects in the equipment during a period of twelve (12) months from the date of original delivery of the Equipment, where those defects are a result of faulty workmanship.

During this twelve month guarantee period, the defective equipment will be repaired free of charge; the customer must however return the defective equipment at his/her own expense, to the address given by SAGEM After Sales Department, the phone number of which can be found on the delivery slip. Unless the customer has concluded with SAGEM a maintenance contract in respect of the equipment which specifically provides for repairs to be carried out at the customer's premises, the repairs will not be carried out on the equipment at the customer's premises.

The following sentence applies to purchases of equipment for the customer's trade, business or profession. Except as otherwise expressly provided in this Document and to the extent permitted by law, SAGEM makes no representations or warranties, express or implied, statutory or otherwise, and to such extent, all terms and conditions implied by law are hereby excluded.

This guarantee does not affect the Customer's statutory rights.

B Exclusions From Guarantee

SAGEM shall have no liability under the guarantee in respect of :

- o damage, defects breakdown or malfunction due to :
 - failure to properly follow the installation process and instructions for use; or
 - an external cause to the equipment (including but not limited to, lightning, fire, shock or water damage of any nature); or
 - modifications made without the written approval of SAGEM SA; or
 - a failure or neglect to maintain the equipment or inappropriate maintenance; or

- unsuitable operating conditions, particularly of temperature and humidity; or

- repair or maintenance of the equipment by persons not authorised by SAGEM; or

- o wear and tear from normal daily use of the equipment and its accessories

- o damage due to insufficient or bad packaging of equipment when returned to SAGEM

- o supply of new versions of software

- o work on any equipment or software modified or added without the prior written consent of SAGEM

- o malfunctions not resulting from the Equipment or from software installed in user workstations for the purpose of use of the equipment

- o communication problems related to an unsuitable environment, including :

- problems related to access and/or connection to the Internet such as interruptions by access networks or malfunction of the line used by the subscriber or his correspondent

- transmission faults (for example poor geographical coverage by radio transmitters, interference or poor line quality)

- the local network fault (wiring, servers, workstations) or the failure of the transmission network

- o the normal servicing (as defined in the user guide supplied with the equipment) as well as malfunctioning due to servicing not being carried out, servicing costs are in any event always borne by the customer.

C In the cases set forth in § B) as well as after expiry of the twelve month guarantee period, the customer must ask SAGEM for an estimate, and he/she must accept the estimate and agree to pay the charges mentioned in it before returning the equipment to SAGEM. The repair and delivery costs will be invoiced to the customer.

The foregoing shall apply unless otherwise agreed in writing with the customer and only for the UK. If any provision of this guarantee shall be held to be in whole or in part invalid or illegal due to an obligatory rule applicable to consumers pursuant to their national legislation, such invalidity or illegality shall not impair or affect the remaining provisions or parts of this guarantee.

Please note that only Philips toner cartridges should be used. Your Philips guarantee does not cover damage to your fax machine that may be caused by the use of any other toner cartridges.

Order service

You can order toner cartridges and cleaning accessories at your local dealer or directly from Philips (free delivery) on Freephone 0800 358 08 07 (United Kingdom).

Declaration of conformity

We,

SAGEM Communication Austria GmbH
Gutheil-Schoder-Gasse 17
A-1230 Wien, Österreich

declare under our sole responsibility that the product

Plain paper Fax

PHILIPS LPF 725

to which this declaration relates is in conformity with the following standard(s) or other normative document(s):

Safety:


EN 60950:1992 + A1:1993 + A2:1993 + A3:1995 + A4:1997
+ A11:1997

Electromagnetic Compatibility:

EN 55022:1998 class B, EN 55024:1998

following the provisions of the Directive 1999/5/EC on radio equipment and telecommunication terminal equipment and the mutual recognition of their conformity.

Wien, 2002-05-10

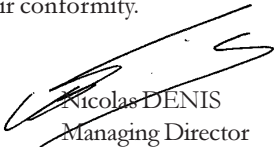
Nicolas DENIS
Managing Director

We,

SAGEM Communication Austria GmbH
Gutheil-Schoder-Gasse 17
A-1230 Wien, Österreich

declare under our sole responsibility that the product

Plain paper Fax

PHILIPS LPF 755

to which this declaration relates is in conformity with the following standard(s) or other normative document(s):

Safety:


EN 60950:1992 + A1:1993 + A2:1993 + A3:1995 + A4:1997
+ A11:1997

Electromagnetic Compatibility:

EN 55022:1998 class B, EN 55024:1998

following the provisions of the Directive 1999/5/EC on radio equipment and telecommunication terminal equipment and the mutual recognition of their conformity.

Wien, 2002-05-10

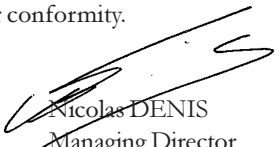
Nicolas DENIS
Managing Director

Index

- A**
 - A-Z
 - key 6
 - accessories 7
 - additional
 - telephone 14
 - annex 27
 - AUT
 - mode 14
- B**
 - book
 - telephone 6
- C**
 - cable
 - printer 4
 - telephone 4
 - caller
 - identification 16
 - cartridge
 - toner 4
 - CD-ROM 4
 - character
 - enter 12
 - code
 - error 25
 - computer
 - CD-ROM 4
 - connect 4
 - install 4
 - print 22
 - scan 22
 - connection 9
 - computer 9
 - PABX 11
 - power supply 9
 - type 27
 - copy 6
 - enlarge 22
 - multiple pages 22
 - reduce 22
 - single page 22
 - cover
 - grip 5
- D**
 - date
 - enter 12
 - delete
 - entry 6
 - group 16
 - telephone book 15
 - description
 - machine 5
 - dial
 - speed 6
 - without handset 15
- display
 - lamp 6
- document
 - insert 18
 - security 18
- E**
 - enlarge
 - copy 22
 - enter
 - character 12
 - date and time 12
 - number 15
 - entry
 - delete 6
 - error
 - code 25
- F**
 - fax
 - mode 14
 - polling 20
 - reduction 18
 - resolution 18
 - fax switch 14
 - flash
 - time 27
- G**
 - glossary 27
 - grip
 - cover 5
 - group 16
 - delete 16
 - list 16
 - guarantee 28
- H**
 - handset 7
 - Help 22
- I**
 - identification
 - caller 16
 - image quality
 - key 6
 - insert
 - document 18
 - paper 8
 - install
 - computer 9
 - instruction
 - safety 2
 - interrupt
 - process 6
 - ISDN
 - connection 11
- K**
 - key
 - A-Z 6
 - MEMORY 6
 - MENU 6
 - R 6
 - RESOLUTION 6
 - speed dial 6
 - START/COPY 6
 - STOP 6
 - TEL/FAX/AUT 6, 14
- L**
 - lamp
 - display 6
 - list
 - group 16
 - settings 13
- M**
 - machine
 - description 5
 - make a call 15
 - MEMORY
 - touche 6
 - memory
 - key 6
 - print 19
 - print later 19
 - send later 20
 - MENU
 - key 6
 - mode 14
 - AUT 14
 - FAX 14
 - TAM 14
 - TEL 14
- N**
 - name
 - enter 12
 - number
 - enter 12
 - identification 16
 - redial 6
- O**
 - options
 - select 6
 - other telephone 14
- P**
 - paper
 - insert 8
 - quality 8
 - paper tray 8
- PC
 - print 22
 - scan 22
- polling
 - fax 20
- power
 - connection 9
- print
 - computer 22
 - group list 16
 - later 19
 - memory 19
 - PC 22
 - resolution 27
- printer software
 - uninstall 11
- private branch exchange
 - connection 11
- R**
 - R
 - key 6
 - reception mode
 - TEL/FAX/AUTO 6
 - redial
 - number 6
 - reduce
 - copy 22
 - fax 18
 - value 18
 - resolution 18
 - key 6
 - print 27
 - scanner 27
 - ring pattern 14
- S**
 - safety
 - instructions 2
 - scan
 - computer 22
 - PC 22
 - resolution 27
 - send
 - later 20
 - service
 - order 29
 - settings
 - list 13
 - START/COPY
 - key 6
 - STOP
 - key 6

T

TAM

mode 14

TEL

mode 14

TEL/FAX/AUT

key 14

TEL/FAX/AUTO

key 6

telephone 15

additional 14

other 14

telephone book

delete 15

time

enter 12

flash 27

toner 4

tray

document ejection 7

type

connection 27

U

uninstall

printer software 11

V

value

reduction 18

Y

your name 12

your number 12

<http://www.fax.philips.com>

Internet keyword: Philips Fax

E-mail: fax.infoline@philips.com

United Kingdom

Tel.: 0870 124 37 37

Fax: 0870 124 02 02



The CE mark confirms that the machine corresponds to the relevant guidelines of the European Union.

This product is intended for use on an analogue public switched network (PSTN) and for use in the country indicated on the label of the box. The usage in other countries could cause malfunction.

For further information please contact your national technical support centre. Initially contact your dealer if problems occur during operation.

This operation manual has been printed on chlorine-free, recycled paper, in line with the highest standards of environmental friendliness.

The used cardboard packaging as well as the cardboard protecting your facility at its sides made of waste paper can be recycled like waste paper; corresponding to your country's demands dispose the plastic foils either for recycling or with your rubbish.

This electronic facility contains recyclable material. At the end of use of this facility please inform yourself about the corresponding recycling demands of your country. Technical changes and errors excepted.

Copyright 2002 © Sagem Communication Austria GmbH

5103 506 1903.1 (LPF 725/755)

GB/INT

5103 506 1903.1

