


English Simple Manual (簡易英語版)

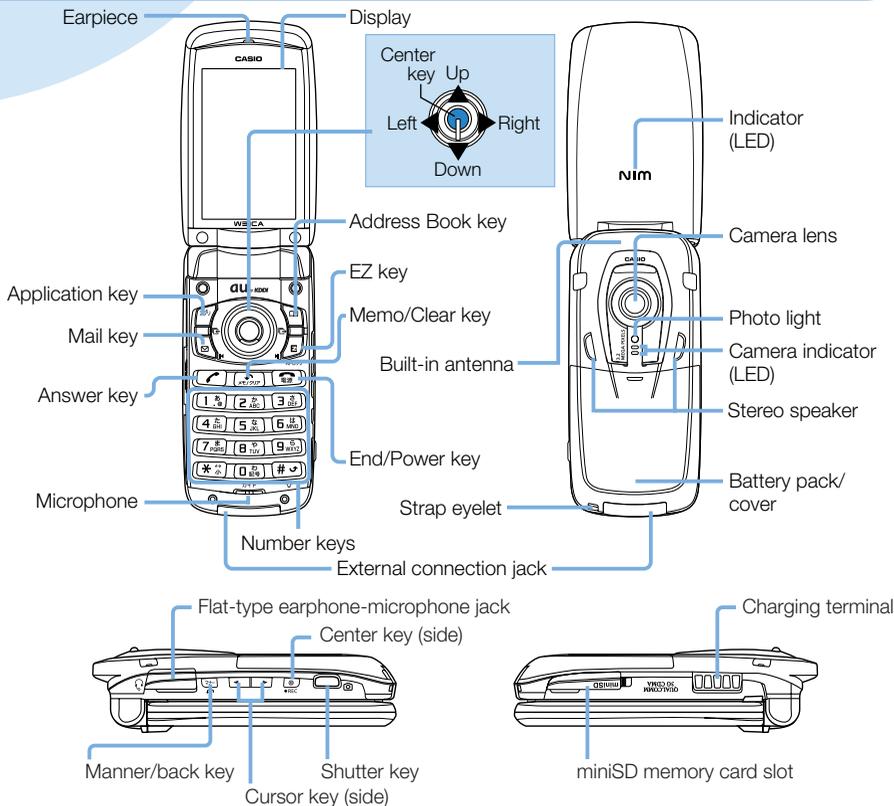

Turning Power On and Off

Turning power on

Hold down  for a few seconds.

Turning power off

Hold down  for at least one second.

Applying the Phone's Default Settings

From the stand-by screen: Press . ▶ Press .

Checking Your Own Phone Number and E-mail Address

From the stand-by screen: Press . ▶ Press .

Making and Answering a Call

Making a Call

From the stand-by screen: Enter the phone number you want to call.

▶ Press .

To end a call: Press .

Answering a Call

When the phone starts ringing, press .

To adjust the earpiece volume during a call: Use .

Storing and Recalling an Address Book Data

● Storing Data

From the stand-by screen: Hold down  for at least one second.

- ▶ Use  to select the Address Book record you want to edit. ▶ Press  [編集] (Edit).
- ▶ Enter the data. ▶ Press  [登録] (Register).

● Recalling Data

From the stand-by screen: Press  to display the Hiragana Row Search screen.

- ▶ Use  to select the Hiragana and English row for the record you want.
- ▶ Use  to select the name of the record.
- ▶ Press  [表示] (Display) to view the record in detail.

Using the Camera (Movie and Snapshot)

● Recording a Movie Clip

From the stand-by screen: Hold down  for at least one second and then press  [ムービー] (Movie).

- ▶ Press  [録画] (Record) or  to start recording. ▶ Press  [終了] (End) to stop.
- ▶ Press  [保存] (Save) to store the movie.

Press  [III] (Pause) during recording to pause recording.

Press  [フォト] (Photo) in the Movie mode to change to the Photo mode.

● Taking a Snapshot

 
From the stand-by screen: Hold down  for at least one second.

- ▶ Press  [シャッター] (Shutter) or  (Shutter) to record a snapshot.
- ▶ Press  [保存] (Save) to store the photo.

Press  [ムービー] (Movie) in the Photo mode to change to the Movie mode.

Making an International Call

Ex: To call 212-123-△△△△ in the USA



English Voice Mail Answering Messages

You can configure Voice Mail to play operation instructions and answering messages in English.

From the stand-by screen: Press . ▶ Press  [7]. ▶ Press  [1]. ▶ Press  [6]. ▶ Press .

Other Handy Features

● Manner Mode

From the stand-by screen: Hold down  for at least one second.

Repeat the above operation to disable the Manner mode.

● Take A Message Feature (Voice Recording)

From the stand-by screen: Hold down  for at least one second.

Repeat the above operation to disable the Take A Message feature.

For inquiries, please contact

au Customer Service Center (General Information)

- If you are calling from a landline phone:  0077-7-111 (toll free)
- If you are calling from an au mobile phone: 157 (toll free)