

# SANYO

INSTRUCTION MANUAL

VPC-CA9EX  
VPC-CA9  
VPC-CA9GX

Dual Camera

Xacti **HD**  
HIGH DEFINITION



## Important note

This manual explains how to safely operate the VPC-CA9EX, VPC-CA9 and VPC-CA9GX.

Any information regarding only one of these products will be labeled as such.

Please read these instructions carefully before using the camera.  
Make sure to read and understand the separate booklet "SAFETY MANUAL".  
Keep this manual in a safe place for later reference.

## Warning

TO PREVENT THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

## FOR AMERICAN USERS

The following advisory is included in accordance with the laws of the State of California (USA):

### WARNING:

This product contains chemicals, including lead, known to the State of California to cause cancer, birth defects or other reproductive harm. **Wash hands after handling.**

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### Declaration of Conformity

Model number: VPC-CA9

Trade Name: SANYO

Responsible party: SANYO FISHER COMPANY

Address: 21605 Plummer Street, Chatsworth, California 91311

Telephone No.: (818) 998-7322

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

## FOR CANADIAN USERS

- This Class B digital apparatus complies with Canadian ICES-003.

## FOR EU USERS

The symbol mark and recycling systems described below apply to EU countries and do not apply to countries in other areas of the world.

Your SANYO product is designed and manufactured with high quality materials and components which can be recycled and/or reused.

The symbol mark means that electrical and electronic equipment, batteries and accumulators, at their end-of-life, should be disposed of separately from your household waste.

### Note:

If a chemical symbol is printed beneath the symbol mark, this chemical symbol means that the battery or accumulator contains a heavy metal at a certain concentration. This will be indicated as follows: Hg: mercury, Cd: cadmium, Pb: lead

In the European Union there are separate collection systems for used electrical and electronic equipment, batteries and accumulators.

Please, dispose of them correctly at your local community waste collection/recycling centre.

Please, help us to conserve the environment we live in!



### **SANYO FISHER Sales (Europe) GmbH**

Stahlgruberring 4, D-81829 München, Germany

### **SANYO Electric Co., Ltd.**

1-1, Sanyo-cho, Daito City, Osaka 574-8534, Japan

## FOR RUSSIAN USERS



AP46

This product is certified by an official certification company which is authorized by the Russian Federation.

---

# HOW TO READ THIS MANUAL

---

## **For first-time users**

Please read the sections on "SETUP" and "SIMPLE" in this manual, as well as the included "QUICK GUIDE" to familiarize yourself with your camera's operation.



## **To use the various camera features**

Please read the sections on "NORMAL" and "OPTION SETTINGS" in this manual. To view on a TV, please read the section on "OTHER DEVICES AND CONNECTIONS" in this manual. To connect to a computer, please see the "Xacti Software CD INSTRUCTION MANUAL".



## **To use additional features**

To use a computer to edit the recorded data or to save data to a DVD, please read the "Xacti Software CD INSTRUCTION MANUAL".

You may find the answers to questions or problems concerning camera operation in the sections "COMMONLY ASKED QUESTIONS" (page 143) and "TROUBLESHOOTING" (page 150).


## **Symbols used in this manual**

- |                  |   |
|------------------|---|
| <b>HINT</b>      | Points giving some extended instructions or special points to pay attention to. |
| <b>CAUTION</b>   | Points that require special attention.  |
| <b>(page xx)</b> | Refer to the page indicated for detailed information.                           |

# SHOOT, PLAY BACK AND SAVE


## Install the battery pack and card

### 1 Insert the battery pack.

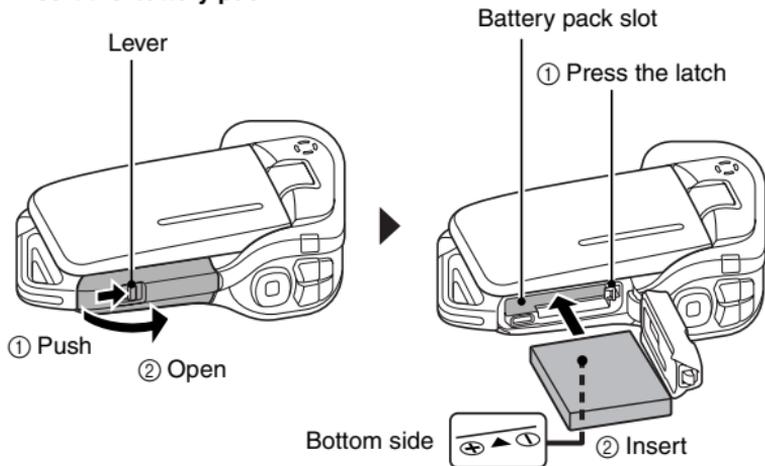

### 2 Insert the SD Memory Card.

- An SD Memory Card is not included with your camera. Please purchase a commercially sold card.
- In this manual, the SD Memory Card is referred to as the "card".

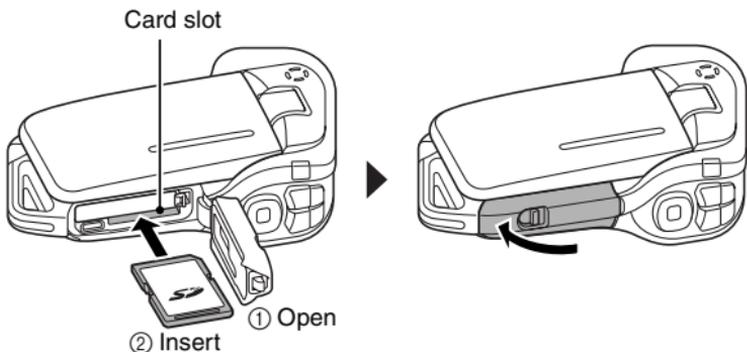

# SHOOT, PLAY BACK AND SAVE

## Shooting

### Video clip recording

**1** Open the monitor unit, and press the ON/OFF button for at least 1 second.

- The camera turns on.
- If the screen to set the date and time appears, press the MENU button 2 times to cancel it.

**For how to set the date and time, see page 32.**


**2** Record.

**To record a video clip:**

- Press the [  ] button to begin recording a video clip.
- Press the [  ] button again to end the recording.

**To take a photo:**

- Press the [  ] button.
- A still image is captured.

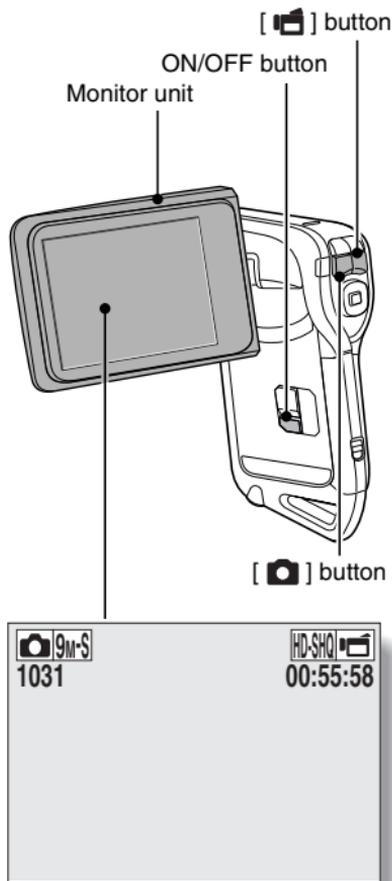

**Before capturing those important shots, be sure to first take a test shot to confirm that your camera is set up and ready to go**

- Sanyo declines any claim for compensation for recorded contents etc. in case of photographing or recording failure due to a chance camera or card flaw.


## Playback

### 1 Press the REC/PLAY button.

- The display changes to the Playback Screen.

### 2 Select the image to play back.

- Press the [◀] or [▶] button to move the orange frame to the image you wish to play back.
- The image information for the framed image is shown at the bottom of the screen.

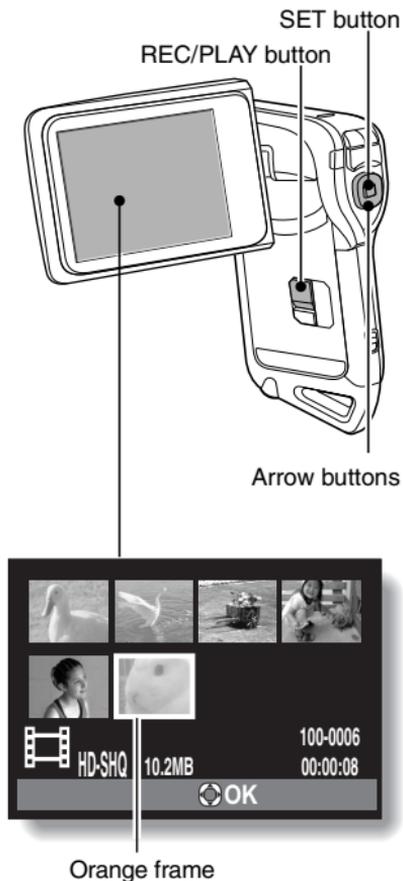

---

## SHOOT, PLAY BACK AND SAVE

---

- 3** Press the SET button.
- <Video clip playback>
    - Playback begins.
  - <To return to the recording mode>
    - Press the REC/PLAY button.

### When you are finished using the camera...

Press the ON/OFF button for at least 1 second to turn the camera off.

### To continue to the next operation...

Please confirm that your computer is connected to the Internet.

## Burn your recorded video clips onto a DVD (Windows Vista)

Using the supplied CD-ROM (Xacti Software CD), you can store your captured images on a DVD. Detailed information about the Xacti Software CD can be found on page 4 in the Xacti Software CD INSTRUCTION MANUAL.

### Install application program

---

- 1 Set the supplied CD-ROM in your computer's DVD drive.**
  - The installation window opens.
- 2 Click on [TotalMedia Extreme for SANYO].**
  - After clicking on the application program, follow the instructions shown on the monitor to install the program.
  - When the window appears requesting to restart your computer, click the [Finish] button to reboot.
- 3 Remove the CD-ROM from the computer's DVD drive.**
  - <About the Kodak online service>**
    - When the installation window closes, a dialog box to connect to the website introducing Kodak's online service appears. Check the [No thanks !] option button, and then click on the [OK] button.

---

## SHOOT, PLAY BACK AND SAVE

---

### Copy data from your camera to the computer

Connect your camera to a computer, and copy the desired data to the computer.

---


**1 Turn on the computer, and use the supplied dedicated USB interface cable to connect your camera to the computer.**

- Connect the cable between the camera's USB/AV terminal and the computer's USB connector.

---

**2 Turn on the camera (page 30).**


- The USB Connection Screen appears on the camera's monitor.

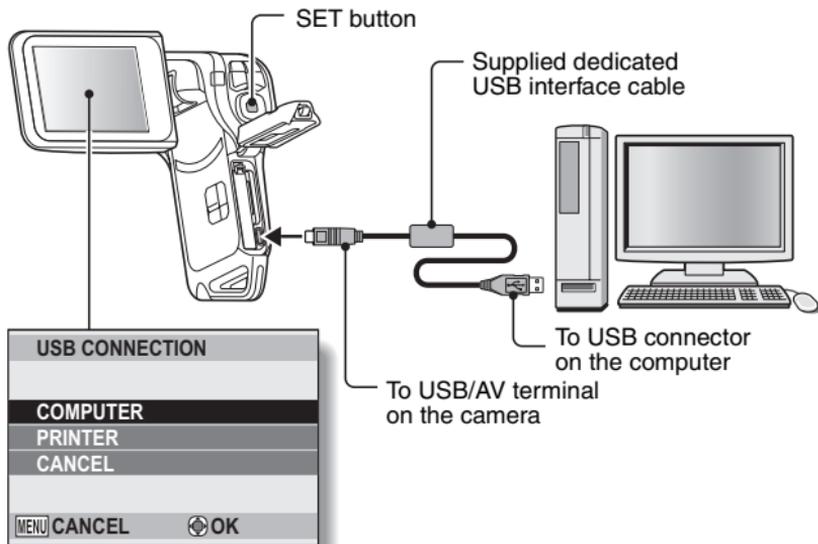

---

**3** Select “COMPUTER”, and press the SET button.

- The screen to select the computer connection mode appears.

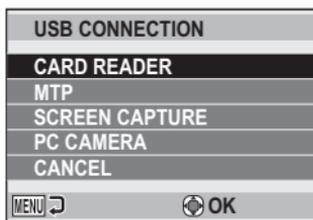

---

**4** Select “CARD READER”, and press the SET button.

---

**5** Copy data from your camera to a computer.

---

## SHOOT, PLAY BACK AND SAVE

---

### Burn video clips onto a DVD (For Windows Vista users)

Here's how to write your recorded data onto a DVD in the mpeg2 format. For information on other operations, please see the Help file for TotalMedia Extreme. To access the TotalMedia Extreme Help file, click the [?] Help button on the TotalMedia Extreme start screen.

---

**1** Insert a blank DVD in your computer's DVD drive.


---

**2** Double-click the [TotalMedia Extreme] icon on your desktop.

- The TotalMedia Extreme application starts, and the startup page appears.



- 
- 3** Click the [Create video] icon.
- The “Create DVD” window appears.

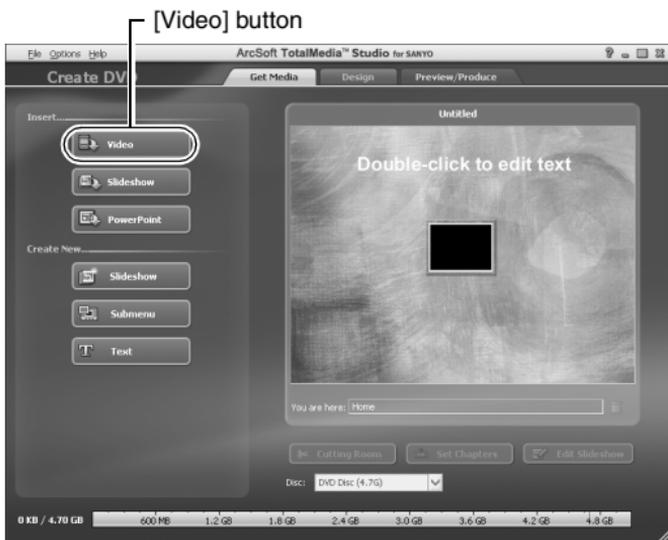

- 
- 4** Click the [Video] button in the “Insert” field.
- The screen to select the video clip file to write to a DVD appears.
  - Click the file you wish to write to a DVD.
  - To select multiple files, keep the [Ctrl] key pressed while selecting files.

---

## SHOOT, PLAY BACK AND SAVE

---

### 5 Click on the [Open] button.

- The file(s) selected in step 4 and the DVD file capacity appear in the “Create DVD” window.



## 6 Click the [Design] tab.

- The window appears to design the title menu for when the DVD is played back.
- Select the desired design.




---

## SHOOT, PLAY BACK AND SAVE

---

- 7** Click the [Preview/Produce] tab.
- A warning regarding the image quality of the preview image appears.

- 8** Click the [OK] button.
- The screen to begin burning to disk appears.

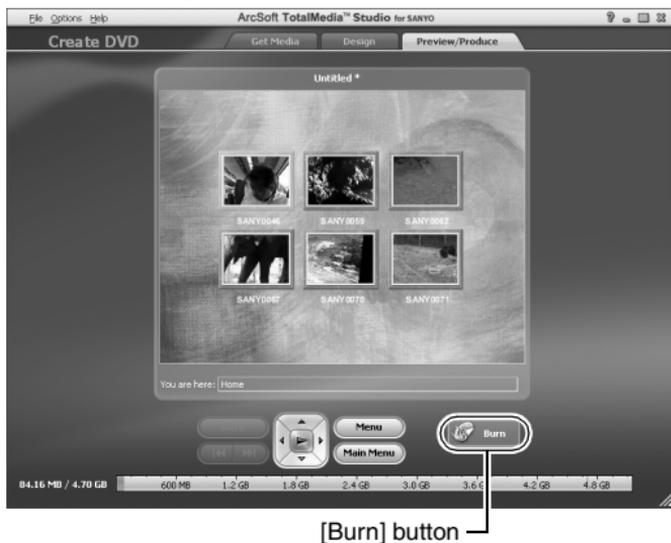

- 9** Double-click the [Burn] button.
- The "save project" confirmation window appears.

- 
- 10** Click the [Yes] button.
- Enter a name for the project file.

- 
- 11** Click the [Save] button.
- The “Burn disk” window appears.



[OK] button

- 
- 12** Click the [OK] button.
- Burning begins.
  - Depending on your computer's capacity, it may take some time to burn a large file.
  - When burning is completed, the DVD is ejected from the DVD drive.

---

## SHOOT, PLAY BACK AND SAVE

---

**13** Click the [OK] button.

---

**14** Click the [x] button to close the “Create DVD” window.

- The TotalMedia Extreme top page appears.

---

**15** Click the [x] button to close the startup page.

- TotalMedia Extreme is exited.

---

## CAUTION

### Does the window requesting confirmation to enable the MPEG-2 Codec appear?

When using TotalMedia Extreme for the first time, a window requesting you to confirm activation of the MPEG-2 Codec appears during the procedure. The MPEG-2 Codec must be activated in order to burn files to a DVD. Complete the following procedure to activate the MPEG-2 Codec.

- Note that your computer must be connected to the Internet in order to complete this procedure. Please confirm that your computer is connected to the Internet.
- ① **When the window requesting confirmation to activate the MPEG-2 Codec appears, click the [Yes] button.**
    - The ArcSoft website appears.
  - ② **Click on [Special downloads].**
    - The window appears for you to enter your email address, name, license ID, etc.
    - Enter the correct information.
  - ③ **Click the [Submit] button.**
    - Soon thereafter, the URL for the download to activate the MPEG-2 Codec will be sent to the email address you entered in step ②.
  - ④ **Click the download URL link.**
    - The program will be downloaded to your computer.
  - ⑤ **Double-click the icon for the downloaded program.**
    - Follow the instructions to activate the MPEG-2 Codec.
    - DVD burning via the TotalMedia Extreme program is now enabled.
    - When the procedure above has been completed, continue to the procedure to burn to DVD.

### United States/Canada

Tel: +1-510-979-5599

Web: <http://www.arcsoft.com/support/>

E-mail Support: [http://www.arcsoft.com/public/content\\_page.asp?pageID=83](http://www.arcsoft.com/public/content_page.asp?pageID=83)

Hours: M-F from 9:00am - 5:00pm

(Pacific Standard Time, excluding holidays observed by ArcSoft)

Language: English

---

## SHOOT, PLAY BACK AND SAVE

---

### Europe

Tel: +353 (0) 61-702087

Web: <http://www.arcsoft.com/en/support>

Email Support: [eurosupport@arcsoft.com](mailto:eurosupport@arcsoft.com)

Hours: M-Th from 8:30am - 5:30pm GMT

(excluding holidays observed by ArcSoft's Affiliates)

F from 8:30am - 5:00pm GMT

(excluding holidays observed by ArcSoft's Affiliates)

(Adjusted for daylight savings time when applicable)

Language: English, French, Italian, German, Spanish and Dutch

### China

Tel: +86 (0) 571-88210575

Web: <http://www.arcsoft.com.cn/support>

E-Mail Support: [support@arcsoft.com.cn](mailto:support@arcsoft.com.cn)

Hours: M-F 8:30am-5:30pm

(Beijing local time) (excluding holidays observed by ArcSoft)

Language: Chinese

How was that? The convenient accessories not only let you immediately view images captured with the camera, but you can also upload images to your computer and create your original DVDs. Read the following explanations to find out how you can fully enjoy your camera's digital video feature.



## Important!

## Concerning your camera's waterproof feature

This camera complies with JIS IPX8 (formerly JIS protection grade 8) waterproof standard and can be used in water. Note, however, that failing to heed the following precautions may result in damage or injury that is not covered by the warranty. Please take the time to carefully read and heed the following cautions.

### NOTE

#### ■ Before using the camera

- When closing the battery/card compartment cover, make sure that no foreign object such as sand, hair, dust, etc. is caught in the seal.
- Make sure that the battery/card compartment cover is completely and securely closed to prevent water from getting inside the camera and damaging it.
- Please note that the camera accessories are not waterproof.



#### ■ Cautions concerning use in water

- The waterproof properties of the camera apply to fresh water and saltwater only; they do not apply to cleaning substances, chemicals or water from spas, etc. In case of a splash, immediately wipe off any moisture.
- Do not immerse in water at a depth greater than 1.5 m (4.92 ft.).
- Do not subject the camera to high-pressure water.
- Do not immerse in water for longer than 60 minutes. After 60 minutes of use in water, allow it to dry for at least 10 minutes.
- Do not immerse in water that is warmer than 40 °C (104°F).
- Do not open and close the battery/card compartment cover when the camera is wet or while it is immersed in water.
- Do not open and close the battery/card compartment cover with wet hands.
- Do not open the battery/card compartment cover on the beach or at the poolside.
- Do not jolt the camera while it is immersed in water. Doing so may cause the battery/card compartment cover to open.



## NOTE

---

### ■ Storing and maintaining your camera

- Do not leave the camera unwashed after it has been immersed in salt water or if salt water is adhering to it. Doing so may cause corrosion and discoloration of the plating, as well as deterioration of the camera's waterproof capability.
- After the camera has been used in water, use fresh water to wash it. Never use soap or detergent to clean the camera, as doing so will cause deterioration of the camera's waterproof capability.
- After washing the camera, take care to completely drain it, and use a dry cloth to wipe off any drops of water adhering to it (page 67).
- Do not leave the camera in an environment colder than 0 °C (32°F) or warmer than 40 °C (104°F), as doing so may cause deterioration of the camera's waterproof capability.
- Waterproof seals are used in this camera. It is recommended that the waterproof seals be replaced every year with new ones. For replacing the seals, please consult your dealer.
  - \* Please note that there is a fee for replacing the waterproof seal.



---

### ■ Other cautions

- Do not subject the camera to severe jolts, as doing so may deform the battery/card compartment cover or camera body, thus compromising its waterproof capability. If the camera has been subjected to a strong jolt, please consult with your dealer.

---

### HINT

#### What is “JIS IPX8” (formerly “JIS protection grade 8”)?

- “JIS IPX8” specifies that a device is protected against the effects of continuous immersion in water.

---

# CONTENTS

---

|   |    |
|---|----|
| QUICK SEARCH BY OPERATION .....                                   | 6  |
| CHECKING THE INCLUDED ACCESSORIES .....                           | 11 |
| How to use the accessories .....                                  | 13 |
| Media cards that can be used with this camera .....               | 15 |
| What "card" means in this manual .....                            | 15 |
| SPECIAL FEATURES .....  | 16 |
| Waterproof capability .....                                       | 16 |
| Movable monitor for any shooting angle .....                      | 17 |
| Capture still shots while recording a video clip .....            | 18 |
| Lots of accessories for optimal use of your captured images ..... | 19 |
| SYSTEM MAP .....  | 20 |

## ■ SETUP

|  |    |
|--|----|
| PARTS NAMES .....  | 21 |
| CHARGING THE BATTERY PACK .....  | 23 |
| Recharging the battery pack .....  | 24 |
| INSTALLING THE BATTERY PACK AND CARD .....   | 25 |
| Install the battery pack .....   | 25 |
| Installing the DC adaptor (sold separately: VAR-A2U/A2EX) .....  | 26 |
| Install the card .....   | 28 |
| About the temperature alert icon  ..... | 29 |
| TURNING THE CAMERA ON AND OFF .....  | 30 |
| Turning on the camera .....  | 30 |
| Turning on the camera when the power save (sleep) function is<br>active .....  | 30 |
| Turning off the camera .....   | 31 |
| DATE AND TIME SETTING .....  | 32 |
| SWITCHING BETWEEN THE RECORDING MODE AND<br>PLAYBACK MODE .....  | 35 |
| SWITCHING THE OPERATING MODE .....   | 36 |
| Switching between the SIMPLE and NORMAL modes .....  | 36 |
| Accessing/exiting the SIMPLE/NORMAL Mode Menu Screen .....   | 37 |
| Overview of the SIMPLE Mode Setting Screen .....   | 41 |
| Overview of the NORMAL Mode Setting Screen .....   | 45 |

## ■ SIMPLE

### SHOOTING

|  |    |
|--|----|
| BEFORE TAKING PICTURES .....                           | 53 |
| For best results .....                                 | 53 |
| Using the autofocus .....                              | 54 |
| Select the recording size .....                        | 56 |
| Select the focus setting .....                         | 57 |
| Hints for taking pictures .....                        | 58 |
| VIDEO CLIP RECORDING .....                             | 59 |
| SHOOTING SINGLE SHOTS .....                            | 60 |
| Using the flash .....                                  | 62 |
| SHOOT A STILL IMAGE WHILE RECORDING A VIDEO CLIP ..... | 64 |
| MACRO-PHOTOGRAPHY (ZOOM) .....                         | 66 |
| AFTER USING THE CAMERA IN WATER .....                  | 67 |

### PLAYBACK

|  |    |
|--|----|
| PLAYING BACK VIDEO CLIPS AND STILL IMAGES .....                | 69 |
| How to save one frame from a video clip as a still image ..... | 71 |
| SLIDESHOW PLAYBACK .....                                       | 72 |
| PLAYBACK VOLUME .....  | 73 |
| DELETING FILES .....   | 74 |
| Delete single/delete all .....                                 | 74 |
| Delete selected .....  | 75 |
| PLAYBACK MODES .....   | 77 |
| Multi-image display .....                                      | 77 |
| Selecting the playback folder .....                            | 78 |
| Magnifying (zooming in) the image .....                        | 79 |

---

# CONTENTS

---

## ■ NORMAL

### SHOOTING

|                                     |    |
|-------------------------------------|----|
| RECORDING MENU 1 .....              | 80 |
| Video setting .....                 | 80 |
| Still image setting .....           | 83 |
| Scene select setting .....          | 84 |
| Filter setting .....                | 84 |
| Self-timer setting .....            | 85 |
| RECORDING MENU 2 .....              | 86 |
| Video stabilizer setting .....      | 86 |
| Focus range setting .....           | 87 |
| Focus mode setting .....            | 88 |
| Light-measuring mode setting .....  | 88 |
| ISO sensitivity setting .....       | 89 |
| RECORDING MENU 3 .....              | 90 |
| White balance setting .....         | 90 |
| Exposure setting .....              | 91 |
| Face chaser setting .....           | 92 |
| High sensitivity mode setting ..... | 93 |
| Exposure compensation .....         | 94 |

### PLAYBACK

|                             |     |
|-----------------------------|-----|
| PLAYBACK MENU 1 .....       | 96  |
| Slideshow settings .....    | 96  |
| File protect setting .....  | 97  |
| Resize .....                | 99  |
| Rotate .....                | 99  |
| PLAYBACK MENU 2 .....       | 100 |
| Correcting the image .....  | 100 |
| Editing video clips .....   | 101 |
| Printing instructions ..... | 112 |
| FILE INFO DISPLAY .....     | 115 |

## ■ OPTION SETTINGS

|   |     |
|---|-----|
| DISPLAY THE OPTION SETTING MENU .....                                     | 116 |
| INTRODUCTION TO THE OPTION SETTING MENU .....                             | 117 |
| Setting up the shortcuts .....  | 123 |
| TV output setting .....   | 125 |
| File No. continued setting .....  | 129 |
| Formatting (initializing) .....   | 131 |
| CHECKING THE REMAINING CARD MEMORY .....                                  | 132 |
| Checking the remaining number of images and<br>video recording time ..... | 132 |
| For audio recordings .....  | 133 |
| CHECKING THE REMAINING BATTERY PACK CHARGE .....                          | 134 |

## ■ OTHER DEVICES AND CONNECTIONS

### CONNECTING TO A TV

|   |     |
|---|-----|
| CONNECTING TO A TV .....                            | 136 |
| Connecting to a standard video input terminal ..... | 137 |
| Connect to the 480p/720p terminal .....             | 138 |
| PLAYING BACK ON A TV .....                          | 139 |

### CONNECTING TO A PRINTER

|                          |     |
|--------------------------|-----|
| PRINTING .....           | 140 |
| Print preparations ..... | 140 |

---

# CONTENTS

---

## ■ APPENDICES

|   |     |
|---|-----|
| COMMONLY ASKED QUESTIONS .....  | 143 |
| TROUBLESHOOTING .....   | 150 |
| Camera .....  | 150 |
| Notes regarding the Scene Select feature and filters .....  | 158 |
| SPECIFICATIONS .....  | 160 |
| Camera .....  | 160 |
| Camera connectors .....   | 164 |
| Battery life .....  | 164 |
| Possible No. of Images/Possible Shooting Time/<br>Possible Recording Time .....   | 165 |
| Concerning the multi-indicator .....  | 166 |
| Supplied battery pack charger .....   | 167 |
| Supplied Li-ion battery pack .....  | 167 |
| Others .....  | 168 |
| Before capturing those important shots, be sure to first<br>take a test shot to confirm that your camera is set up and<br>ready to go ..... | 169 |
| HINTS FOR TAKING PICTURES .....   | 170 |

# QUICK SEARCH BY OPERATION

Your camera has an abundance of convenient features and functions. From creating precisely the photo you want, to viewing images using various techniques, you can locate the exact operation for your purposes in the following table.

| Shooting/recording  |  |  |
|---|--|--|
| Basic operation   | Convenient functions   | Additional functions   |
| <b>Getting started shooting/recording</b> <ul style="list-style-type: none"> <li>• "VIDEO CLIP RECORDING" on page 59</li> <li>• "SHOOTING SINGLE SHOTS" on page 60</li> <li>• "Sequential shots" on page 83</li> <li>• "Audio recording" on page 80</li> </ul>        | <b>Log the date and time of your photos</b> <ul style="list-style-type: none"> <li>• "DATE AND TIME SETTING" on page 32</li> </ul> <b>Zoom in on the subject</b> <ul style="list-style-type: none"> <li>• "MACRO-PHOTOGRAPHY (ZOOM)" on page 66</li> </ul> <b>Close-up photography</b> <ul style="list-style-type: none"> <li>• "Focus range" (super macro mode) on pages 42 and 48</li> <li>• "Select the focus setting" (super macro mode) on page 57</li> </ul> | <b>For more accurate focus</b> <ul style="list-style-type: none"> <li>• "How to use the manual focus" (manual focus) on page 87</li> </ul> <b>Set the focus to a narrow range</b> <ul style="list-style-type: none"> <li>• "Focus mode setting" on page 88</li> </ul> <b>Reduce noise when recording</b> <ul style="list-style-type: none"> <li>• "NOISE REDUCTION setting" on page 120</li> </ul> |
| <b>Optimize the photo quality</b> <ul style="list-style-type: none"> <li>• "Select the recording size" on pages 42 and 56.</li> <li>• "Video setting" on pages 46 and 80</li> <li>• "Still image setting" on pages 46 and 83</li> </ul>                               | <b>Set the camera's color/contrast characteristics</b> <ul style="list-style-type: none"> <li>• "Image quality setting" on page 120</li> </ul>   |  |
| <b>Capture fast-moving subjects</b> <ul style="list-style-type: none"> <li>• "Scene select" (sports mode) on page 46</li> </ul> <b>Suppress camera shake effect</b> <ul style="list-style-type: none"> <li>• "Video stabilizer setting" on pages 48 and 86</li> </ul> |  |  |

# QUICK SEARCH BY OPERATION

| Shooting/recording   |  |  |
|--|--|--|
| Basic operation  | Convenient functions   | Additional functions   |
| <b>Shoot in dark conditions</b> <ul style="list-style-type: none"> <li>• “Exposure compensation” on page 94</li> <li>• “Using the flash” on pages 42, 46 and 62</li> <li>• “Scene select setting” (night view portrait mode/fireworks mode/lamp mode) on pages 46 and 84</li> </ul>  |  |  |
|  |  | <b>Increase the camera’s sensitivity</b> <ul style="list-style-type: none"> <li>• “ISO sensitivity setting” on pages 48 and 89</li> <li>• “High sensitivity mode setting” on pages 50 and 93</li> </ul>  |
| <b>Photographing people</b> <ul style="list-style-type: none"> <li>• “Scene select setting” (portrait mode/night view portrait mode) on pages 46 and 84</li> <li>• “Filter setting” (cosmetic filter) on pages 46 and 84</li> </ul> <b>Sharp face shots</b> <ul style="list-style-type: none"> <li>• “Face chaser setting” on pages 50 and 92</li> </ul> |  |  |
| <b>Simplified operation for shooting/playback</b> <ul style="list-style-type: none"> <li>• “SWITCHING BETWEEN THE RECORDING MODE AND PLAYBACK MODE” on page 35</li> </ul>  |  |  |
| <b>Photographing landscapes</b> <ul style="list-style-type: none"> <li>• “Scene select” (landscape mode) on page 46</li> </ul>   |  |  |
| <b>Take a self-photo</b> <ul style="list-style-type: none"> <li>• “Self-timer setting” on pages 46 and 85</li> </ul>   |  |  |
|  | <b>Make images lighter or darker</b> <ul style="list-style-type: none"> <li>• “Exposure compensation” on page 94</li> <li>• “High sensitivity mode setting” pages 50 and 93</li> </ul> | <b>Measure the brightness of a specific area</b> <ul style="list-style-type: none"> <li>• “Light-measuring mode setting” on pages 48 and 88</li> </ul> <b>Adjust the camera’s sensitivity</b> <ul style="list-style-type: none"> <li>• “ISO sensitivity setting” pages 48 and 89</li> </ul> <b>For a more precise exposure setting</b> <ul style="list-style-type: none"> <li>• “Exposure setting” (manual exposure control) on pages 50 and 91</li> </ul> |
|  | <b>Change the color of the images</b> <ul style="list-style-type: none"> <li>• “Filter setting” (monochrome filter/sepia filter) on pages 46 and 84</li> </ul>                         | <b>Make white appear natural</b> <ul style="list-style-type: none"> <li>• “White balance setting” on pages 50 and 90</li> </ul>  |

| Playback   |   |  |
|--|---|--|
| Basic operation  | Convenient functions  | Additional functions   |
| <b>Getting started viewing images</b> <ul style="list-style-type: none"> <li>• "PLAYING BACK VIDEO CLIPS AND STILL IMAGES" on page 69</li> </ul>   | <b>Adjust the speaker volume</b> <ul style="list-style-type: none"> <li>• "PLAYBACK VOLUME" pages 44 and 73</li> </ul> <b>Search for image/ audio files</b> <ul style="list-style-type: none"> <li>• "Multi-image display" on page 77</li> <li>• "Selecting the playback folder" on pages 52 and 78</li> </ul> <b>Magnify an image</b> <ul style="list-style-type: none"> <li>• "Magnifying (zooming in) the image" on page 79</li> </ul> | <b>Change the angle of view</b> <ul style="list-style-type: none"> <li>• "Rotate" on pages 51 and 99</li> </ul> <b>Reduce the photo size</b> <ul style="list-style-type: none"> <li>• "Resize" on pages 51 and 99</li> </ul> |
| <ul style="list-style-type: none"> <li>• "Audio playback" on page 82</li> </ul>  | <b>Adjust the speaker volume</b> <ul style="list-style-type: none"> <li>• "PLAYBACK VOLUME" on pages 44 and 73</li> </ul>   |  |
| <b>Continuous playback</b> <ul style="list-style-type: none"> <li>• "SLIDESHOW PLAYBACK" on pages 44, 72 and 96</li> </ul>   |   |  |
| <b>Adjust the monitor brightness</b> <ul style="list-style-type: none"> <li>• "BRIGHTNESS setting" on page 120</li> </ul>  |   |  |
| <b>Playback on a TV</b> <ul style="list-style-type: none"> <li>• "PLAYING BACK ON A TV" on page 139</li> </ul> <b>Set the TV system</b> <ul style="list-style-type: none"> <li>• "TV output setting" on pages 120 and 125</li> </ul> |   |  |

---

## QUICK SEARCH BY OPERATION

---

| File managing/processing  |  |                      |
|---|--|----------------------|
| Basic operation   | Convenient functions   | Additional functions |
| <b>Search for image/audio files</b> <ul style="list-style-type: none"><li>• “Multi-image display” on page 77</li><li>• “Selecting the playback folder” on pages 52 and 78</li></ul> |  |                      |
| <b>Delete files</b> <ul style="list-style-type: none"><li>• “DELETING FILES” on pages 44 and 74</li></ul>   | <b>Protect files from accidental erasure</b> <ul style="list-style-type: none"><li>• “File protect setting” on pages 51 and 97</li></ul> <b>Format a card</b> <ul style="list-style-type: none"><li>• “Formatting (initializing)” on pages 122 and 131</li></ul> |                      |
| <b>Delete a part of a video clip and join video clips</b> <ul style="list-style-type: none"><li>• “Editing video clips” on pages 52 and 101</li></ul>                               |  |                      |
| <b>Specify the number of prints, index print, and date imprint</b> <ul style="list-style-type: none"><li>• “Printing instructions” on pages 52 and 112</li></ul>                    |  |                      |
| <b>View the settings that were in effect when the image/audio files were recorded</b> <ul style="list-style-type: none"><li>• “FILE INFO DISPLAY” on page 115</li></ul>             |  |                      |


| Using with a computer   |   |                      |
|---|---|----------------------|
| Basic operation   | Convenient functions  | Additional functions |
| <b>Use the camera as a card reader</b> <ul style="list-style-type: none"> <li>• "SETTING THE CONNECTION MODE" on page 9 in the Xacti Software CD INSTRUCTION MANUAL</li> <li>• "USING AS A CARD READER" on page 11 in the Xacti Software CD INSTRUCTION MANUAL</li> </ul>   |   |                      |
| <b>Use your computer to organize/edit files that were recorded with your camera</b> <ul style="list-style-type: none"> <li>• "The software" on page 4 in the Xacti Software CD INSTRUCTION MANUAL</li> </ul>  |   |                      |
| <b>Copy data from your camera to a computer</b> <ul style="list-style-type: none"> <li>• "Copy data from your camera to the computer" on page ix</li> <li>• "Operating environment" on page 6 in the Xacti Software CD INSTRUCTION MANUAL</li> <li>• "SETTING THE CONNECTION MODE" on page 9 in the Xacti Software CD INSTRUCTION MANUAL</li> </ul> | <b>Using with Windows Vista</b> <ul style="list-style-type: none"> <li>• "SETTING THE CONNECTION MODE" on page 9 in the Xacti Software CD INSTRUCTION MANUAL</li> </ul> |                      |
| <b>Playback</b> <ul style="list-style-type: none"> <li>• "About video clip files recorded with this camera" on page 8 in the Xacti Software CD INSTRUCTION MANUAL</li> </ul>  |   |                      |
| <b>Using as a webcam</b> <ul style="list-style-type: none"> <li>• "USING AS A PC CAMERA" on page 14 in the Xacti Software CD INSTRUCTION MANUAL</li> </ul>  |   |                      |
| <b>Record an image of the computer screen</b> <ul style="list-style-type: none"> <li>• "INSTALLING THE APPLICATION SOFTWARE" on page 15 in the Xacti Software CD INSTRUCTION MANUAL</li> <li>• "SCREEN CAPTURE" on page 16 in the Xacti Software CD INSTRUCTION MANUAL</li> </ul>   |   |                      |

---

# CHECKING THE INCLUDED ACCESSORIES

---


- Handstrap and soft case (pages 13 and 14): 1 set

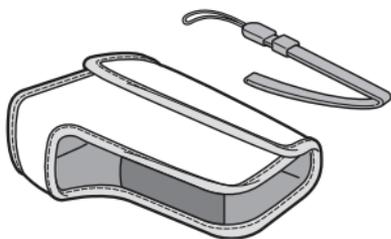


- Xacti Software CD (CD-ROM) (page 4 in the Xacti Software CD INSTRUCTION MANUAL): 1




- Li-ion battery pack (pages 23 and 25): 1

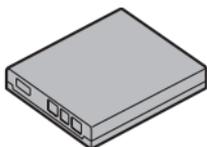


- Lithium-ion battery pack charger (page 23): 1

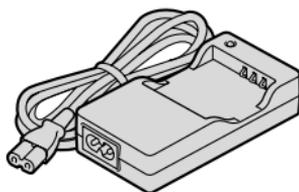

- Dedicated USB interface cable (page 140, page 9 in the Xacti Software CD INSTRUCTION MANUAL): 1

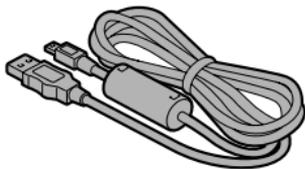

- Dedicated AV interface cable (page 136): 1

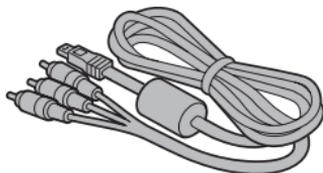

- **QUICK GUIDE**



- **SAFETY MANUAL**  
(safety precautions booklet)  
Please read this booklet  
carefully before using the  
camera.





---

## CHECKING THE INCLUDED ACCESSORIES


---

### How to use the accessories

#### ■ Handstrap

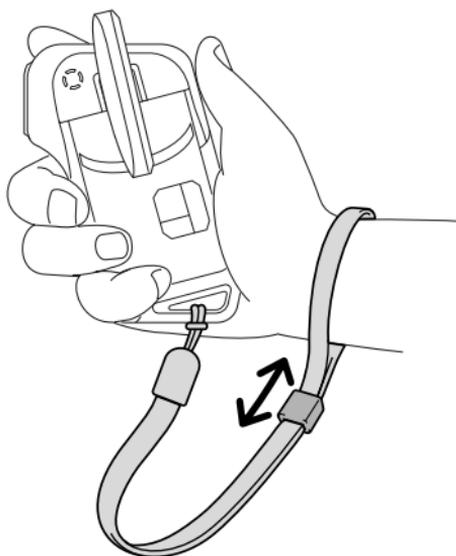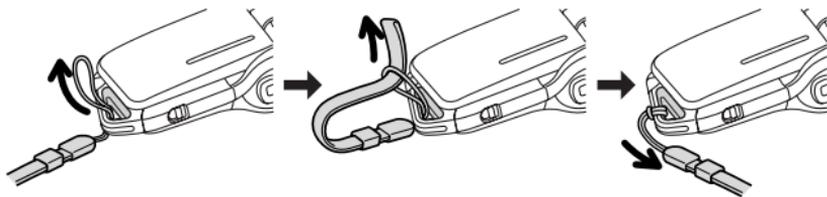

■ Soft case

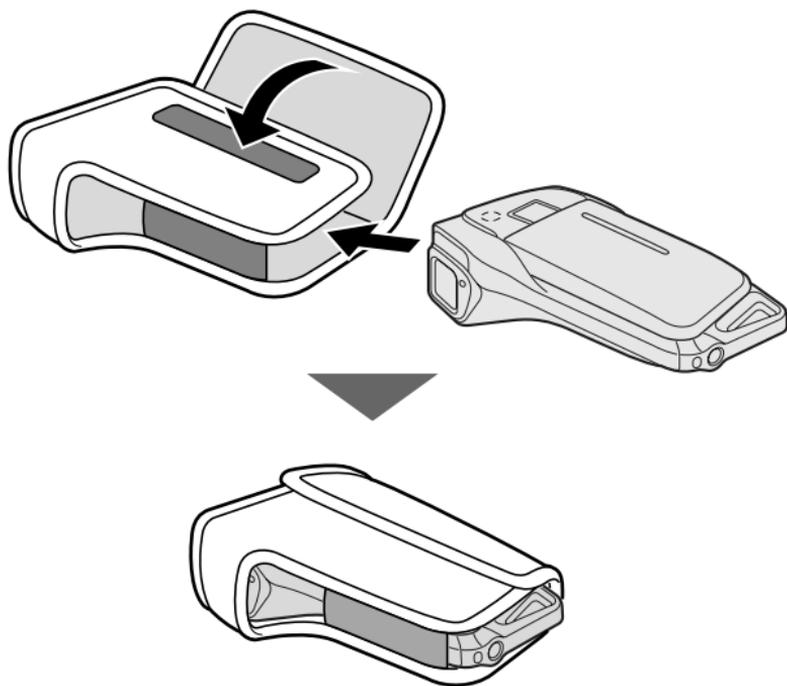

---


## CHECKING THE INCLUDED ACCESSORIES

---

### Media cards that can be used with this camera

The types of card that can be inserted into and used with this camera are:

- SD Memory Card
- SDHC Memory Card

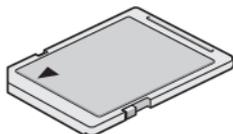

### What “card” means in this manual

- In this manual, SD Memory Cards and SDHC Memory Cards that can be used in this digital camera are referred to as “card”.

---

## SPECIAL FEATURES

---

Your dual camera can not only record video clips, you can also take still photos and make audio recordings. For example, you can snap a still image while recording a video clip, or make just an audio recording.

### Waterproof capability

The camera is equipped to safely be used in water at a temperature of less than 40 °C (104°F), at a depth of less than 1.5 m (59 in.), for up to approximately 60 minutes. You can enjoy taking pictures at the beach or by the pool.





---

## SPECIAL FEATURES

---

### Movable monitor for any shooting angle


The movable monitor lets you shoot from any angle. Hold the camera high to get a great view of a parade, or swivel the monitor around to snap a photo of yourself.

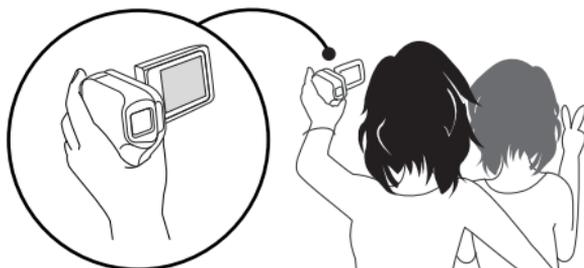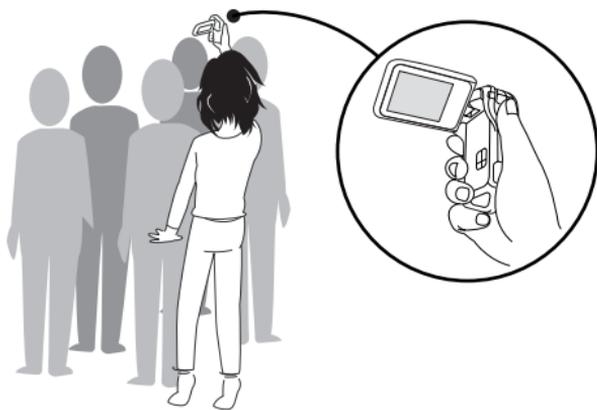

If you swivel the monitor unit to its farthest position, the image on the monitor will be inverted.

## Capture still shots while recording a video clip (page 64)

Suppose that while you're recording a video clip, there's a scene you'd like to keep as a still photo. Your camera makes it possible to record the still photo without interrupting the video clip recording.

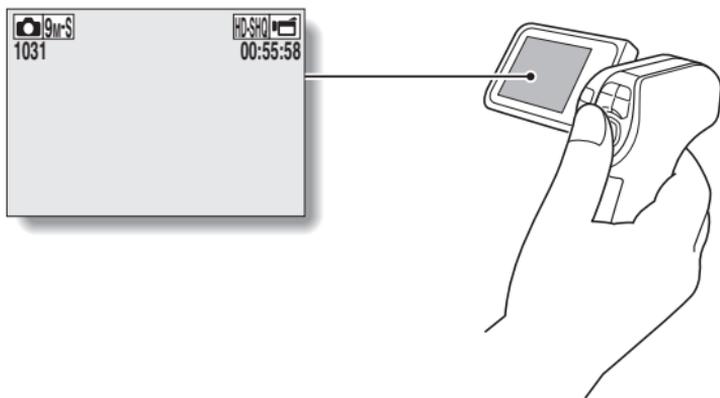

---

## SPECIAL FEATURES

---


### Lots of accessories for optimal use of your captured images (page 20)

Use the accessory cables to view images on a TV or computer. Or connect the camera directly to a printer to make prints of your photos. And with the software in the supplied CD-ROM (Xacti Software CD), you can create your original DVDs and CDs.




# SYSTEM MAP

You can connect the camera to various devices to expand its capabilities.

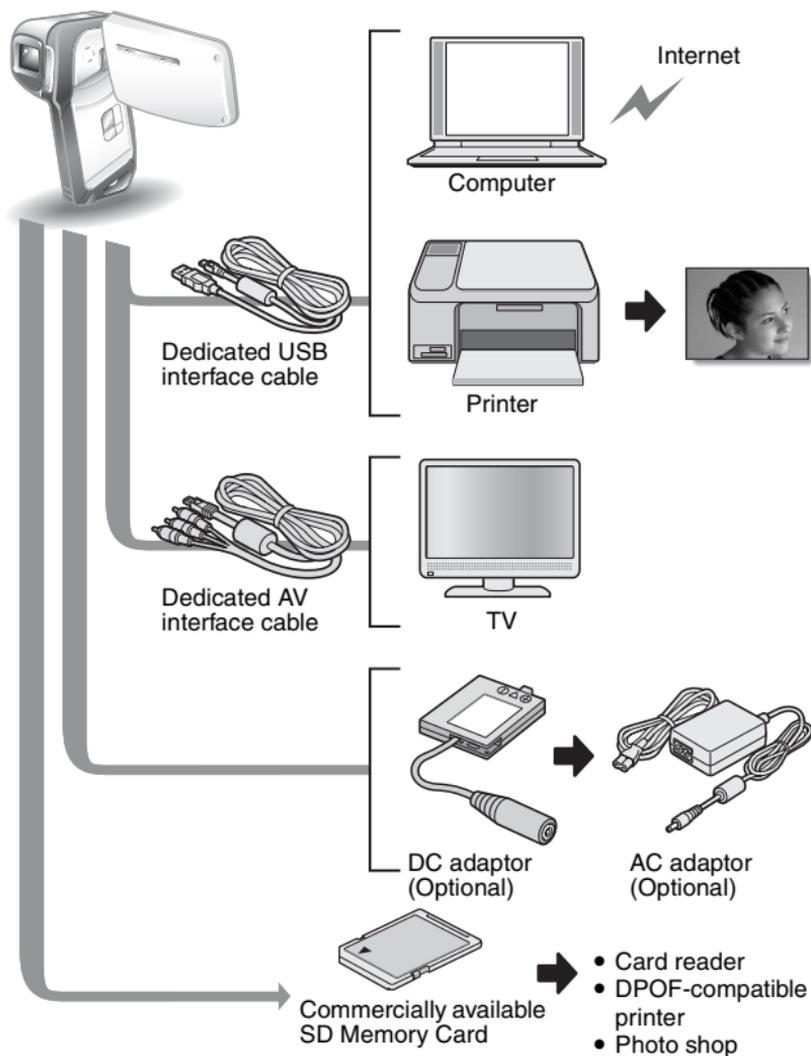



# PARTS NAMES

## Front

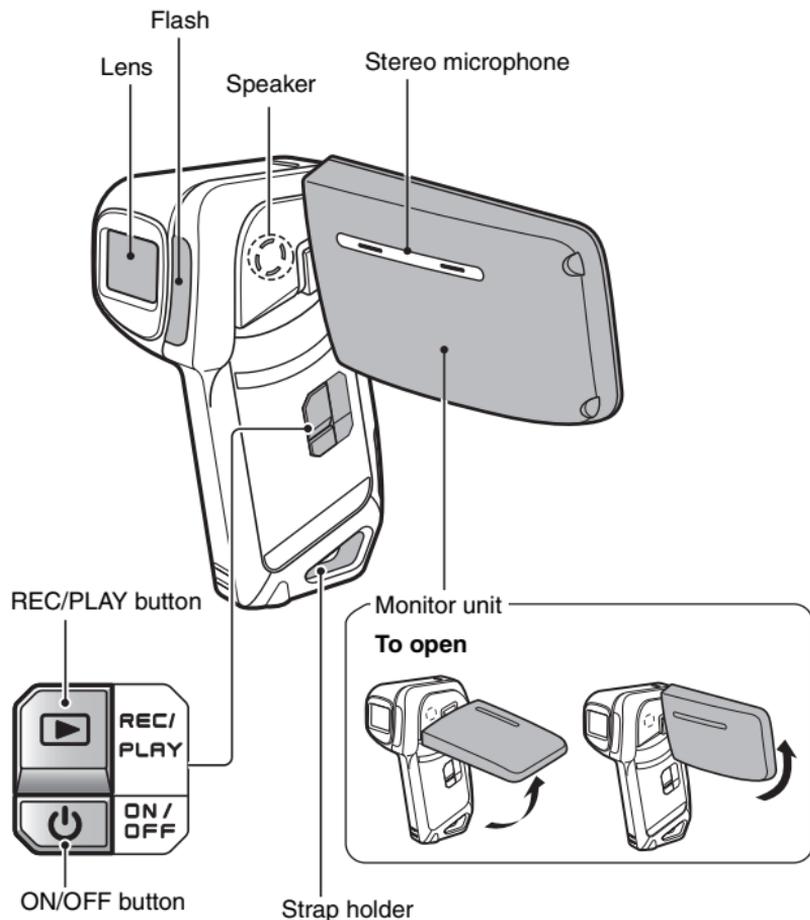

There are places in the camera where water might accumulate, but this will not affect its waterproof properties.  
Concerning the drainage holes, see page 67.

## Rear

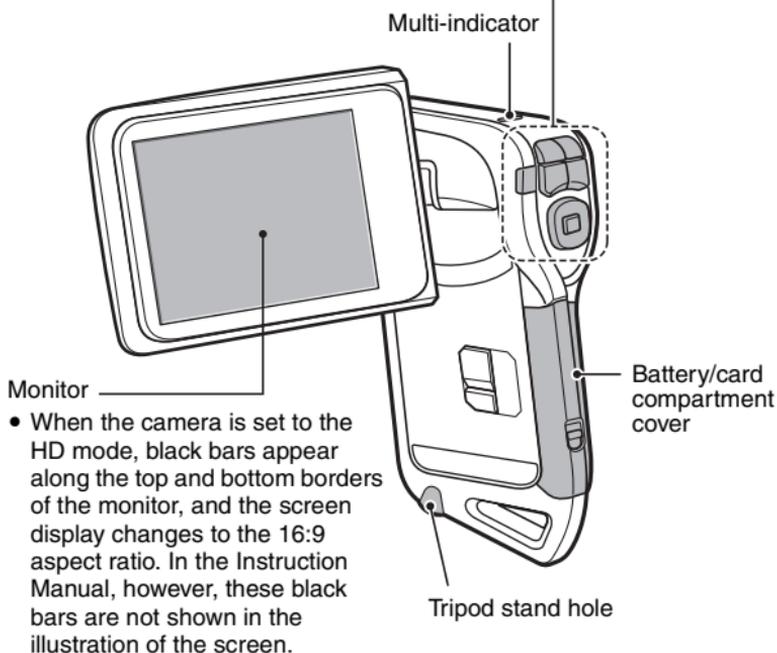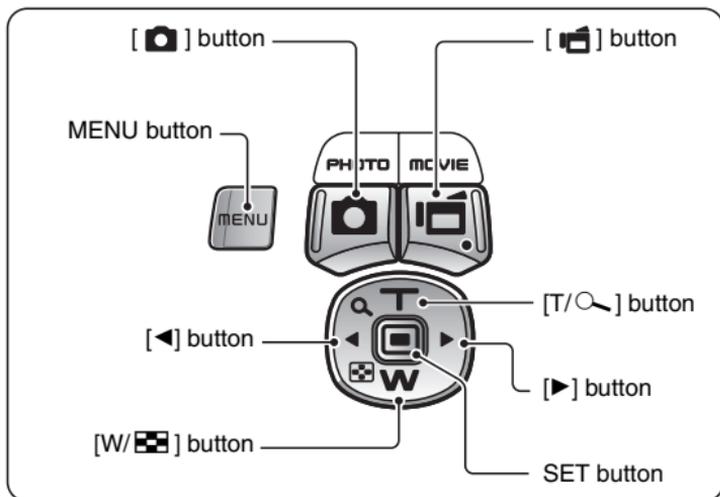

# CHARGING THE BATTERY PACK

Please charge the supplied battery pack before using it.

## 1 Insert the battery pack in the battery charger.

- Insert it in the direction indicated by the [△] mark on the battery pack.


## 2 Connect the supplied power cord to the socket on the battery pack charger.

- Insert the connector straight and securely.

## 3 Plug the power plug into a power outlet (AC 100 V to 240 V).

- Charging begins.
- During charging, the CHARGE indicator is lit red.
- The charging time is approx. 90 minutes.

## 4 When the CHARGE indicator turns off, unplug the power cord from the power outlet, and remove the battery pack from the charger.

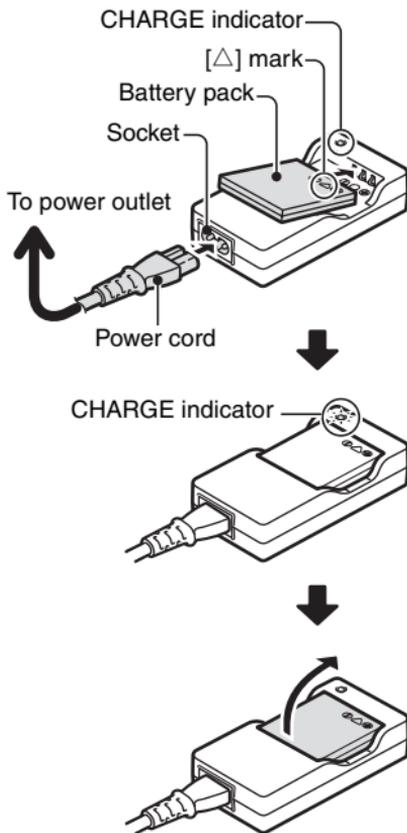

## Recharging the battery pack

Be sure to fully charge the supplied or separately sold battery pack before using it in your camera. For charging the battery pack, use the supplied charger.

Charge the battery pack if it is being used for the first time, and recharge it whenever the remaining charge is low (see "CHECKING THE REMAINING BATTERY PACK CHARGE" on page 134).

### **If there is interference to your TV or radio during recharging...**

- Move the battery pack and charger further away from the TV or radio.

### **Ambient temperature during recharging**

- During recharging, the charger and battery pack will be warm. This is normal and does not indicate a malfunction.
- It is recommended that the ambient temperature during recharging be between about 0 °C and 40 °C (32°F and 104°F). Due to the characteristics of the battery pack, at temperatures below 0 °C (32°F), it may not be possible to sufficiently recharge it.
- When the battery pack temperature is high, it may take longer to recharge it.

### **Recharge a battery pack in the following cases**

- A battery pack which has not been used for a long time
- Newly purchased battery pack

---

# INSTALLING THE BATTERY PACK AND CARD

---


Make sure that the battery pack and the card orientation are correct.

## Install the battery pack

---

### 1 Open the battery/card compartment cover.


- While gently pressing the lever, open the battery/card compartment cover.

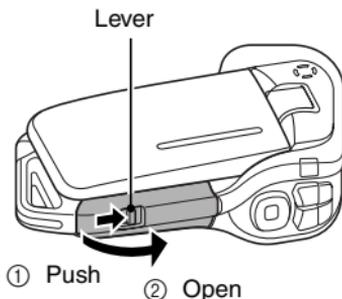

---


### 2 Insert the battery pack.

- Press the latch, insert the battery pack, and firmly push it all the way in.

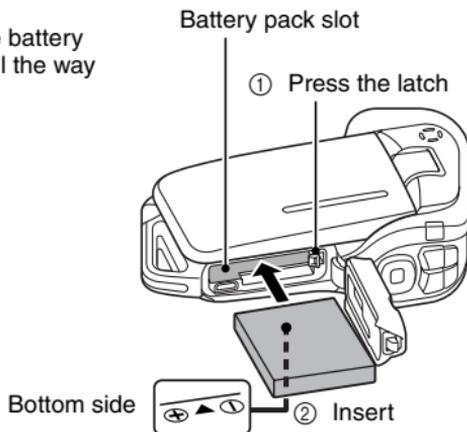

**<To remove the battery pack...>**


- Press the latch securing the battery pack, and remove the battery pack.

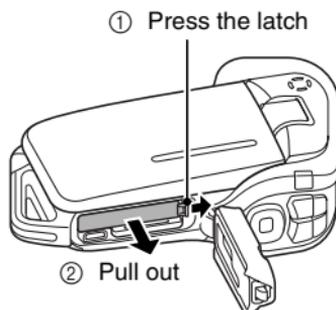


**3 Close the battery/card compartment cover.**

- Press the PUSH LOCK part to close the cover securely.
- At the time of purchase the battery pack is not charged. Be sure to fully charge the battery pack (page 23).

Press the PUSH LOCK part to securely close the cover.

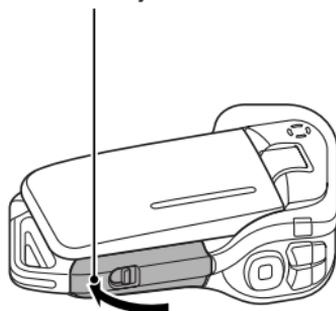

**Installing the DC adaptor (sold separately: VAR-A2U/A2EX)**

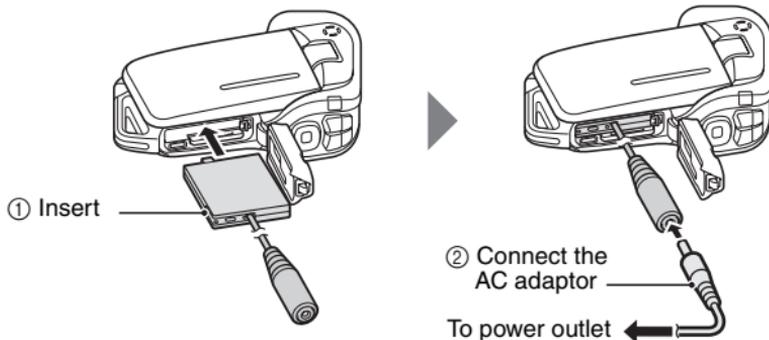

---

## INSTALLING THE BATTERY PACK AND CARD

---

### CAUTION

#### **Close the battery/card compartment cover securely**

- If the battery/card compartment cover is not closed or is not closed completely, the camera will no longer be waterproof. When closing the battery/card compartment cover, make sure that no foreign object such as sand, hair, dust, etc. is caught in the seal.

#### **Do not charge the battery pack immediately after the camera has been in continuous use for a long time**

- The battery pack becomes hot when the camera is used continuously for a long time. If you attempt to charge the battery pack in this state, the charge indicator may flash red and it may not be possible to charge the battery pack. Wait until the battery pack has cooled down before attempting to charge it.

#### **Does the battery pack appear swollen?**

- The lithium-ion battery used in this camera may expand slightly when stored in a hot environment or repeatedly used, but this is not a safety hazard.

---

### HINT

#### **About the internal backup battery**

- This camera's internal battery serves to maintain the date and time settings, as well as the shooting settings. The backup battery will be fully charged when the battery pack is kept in the camera continuously for about 2 days. In the fully charged state, the backup battery will maintain the camera settings for about 7 days.

#### **When not using the camera for a long time, remove the battery pack**

- A small amount of power is still used even if the camera is turned off, and it is therefore recommended that the battery pack be removed from the camera if it is not going to be used for a long time. Note that when the battery pack is removed for a long period, the time and date settings may be cleared. Before using your camera again, be sure to confirm that the camera settings are correct.

#### **To prolong the life of the battery pack**


- Although the battery pack is an expendable item, you can maximize the life of the battery by heeding the following suggestions.
  - Do not leave the battery under the hot summer sun or exposed to other high-temperature environments.
  - Do not continually recharge the battery when it is already fully charged. After fully charging it once, for example, use it for a while to partially discharge it before recharging it again.
  - When the battery is not to be used for a long time, if possible store the partially charged (not fully charged) battery in a cool environment.

## Install the card

The card can be used after it has been formatted with the camera (page 131).


- 1** Open the battery/card compartment cover.

- 2** Insert the card.
  - Firmly insert the card until it clicks into place.

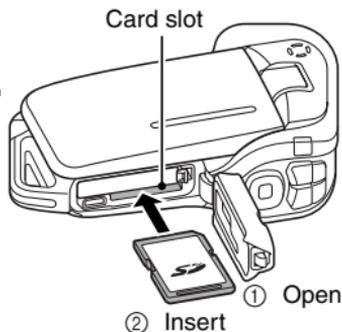

- 3** Close the battery/card compartment cover.  
<When removing the card...>

- To remove the card, press it down, and then release. The card will protrude slightly, and you can then pull it out.

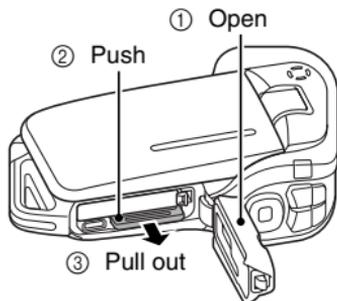

---

## INSTALLING THE BATTERY PACK AND CARD

---

### CAUTION

#### Do not attempt to forcibly remove the card

- Never remove the card when the multi-indicator is flashing red. In doing so, you risk losing the data stored in the card.

### HINT

#### Shooting without a card installed

- When a card is installed, images are recorded to and played back from the card. When no card is installed, images are recorded to and played back from the camera's internal memory. When the camera is turned on with no card installed, the internal memory icon  is shown on the monitor to let you know that the images you capture will be saved to the camera's internal memory.

### About the temperature alert icon

During camera use, if the temperature of the battery or inside the camera (excluding the battery) rises, a temperature alert icon  will appear as described below.

#### ■ When the battery or internal camera (excluding battery) temperature rises during use


- During camera use, if the temperature of the battery or inside the camera (excluding the battery) rises, a  icon lights on the monitor. It is still possible to record and play back even when the  icon is lit; however it is advised that you discontinue use as soon as possible and turn the camera off.
- If the temperature rises further, the  icon will start to flash, and the camera will turn off automatically. The camera cannot be turned on until the temperature has dropped (or as long as the  icon remains flashing). Please wait until the temperature has dropped before resuming use.
- During video recording, a countdown indicator will show the time starting about 15 seconds before shutdown. When the indicator shows 0 seconds, recording stops.
- If the camera is turned off while the temperature is high (that is, while the  icon is flashing), it cannot be turned on again until the temperature has dropped (or as long as the  icon remains flashing).

# TURNING THE CAMERA ON AND OFF

## Turning on the camera

**1** Open the monitor unit, and press the **ON/OFF** button for at least 1 second.

- If you press the REC/PLAY button for at least 1 second, the camera turns on in the playback mode.
- If you press the ON/OFF button once, the camera will switch to the power save mode.

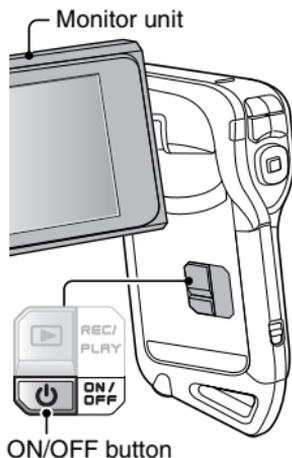

## Turning on the camera when the power save (sleep) function is active

In order to preserve battery pack power, the power save (sleep) function will automatically turn off the camera after about 1 minute of no use during shooting, or about 5 minutes of no use during playback (factory-preset setting).

- When the power save function is active, you can restore the power by any of the following methods:
  - Press the **ON/OFF** button.
  - Press the [ ] or [ ] button.
  - Open the monitor unit.
  - Press the **SET** button.
- The camera will switch to the standby mode after the power save function has been active for about 1 hour, or when you close the monitor unit.
- The power save mode will not be activated while you are recording.
- The user can specify the time elapsed before the power save function is activated (page 122).
- When the camera is connected to a computer or printer using the dedicated USB interface cable, the power save function is disabled, and the camera turns off after about 12 hours.

---

## TURNING THE CAMERA ON AND OFF

---

### Turning off the camera

---

- 1 **Press the ON/OFF button for at least 1 second.**
  - The camera turns off.
  - To turn off the camera while it is in the recording mode or power save mode, press the ON/OFF button for at least 1 second.

---

#### HINT

##### To immediately activate the power save function

- Press the ON/OFF button briefly to activate the power save function.

##### About the standby mode

- To turn off the camera only briefly, you can close the monitor unit to put the camera in the standby mode. The standby mode uses almost no power. When the monitor unit is opened again, the camera turns on immediately and you are ready to shoot or view images without any delay.

---

#### CAUTION

##### If the icon appears...

- When a picture is taken, the date and time it was captured are recorded with it. If the date and time settings have not been completed (page 32), the date and time cannot be recorded with the captured images. For this reason, immediately after the camera is turned on, the “Set date and time” screen appears. To have the date and time recorded with the images, please complete this setting before capturing images.

# DATE AND TIME SETTING


The camera will record the date and time an image or audio recording is taken so that you can display them during playback. Therefore, before capturing images, make sure the correct date and time are set.

\* To correct the date and time setting, please see under **HINT** on page 34.

Example: To set the clock to 7:30 p.m. on December 24, 2009

## 1 Turn on the camera (page 30), and press the SET button.

- The Clock Set Screen appears.
- Follow the procedures below to enable or disable the date display during playback, to set the display format for the date, and to set the date and time.
- To display the Recording or Playback Screen, press the MENU button 2 times.

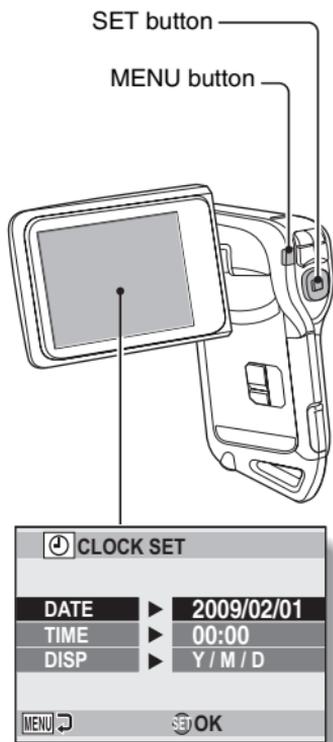


---

## DATE AND TIME SETTING

---

### 2 Set the date.


- ① Select "DATE".
- ② Press the SET button.
  - The Set Date Screen appears.
- ③ Set the date to "2009/12/24".
  - The date is set in the following order: Set the year → Set the month → Set the day.
  - Press the [◀] or [▶] button to select year, month or day.
  - Press the [T/↻] or [W/⊞] button to increase or decrease the number.
- ④ Press the SET button.

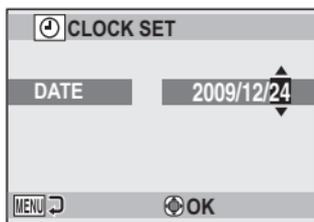

---

### 3 Set the clock.

- ① Select "TIME".
- ② Press the SET button.
  - The Set Time Screen appears.
- ③ Set the time to "19:30".
  - The time is set in the following order: Set the hour → Set the minute.
  - A 24-hour clock is used for the time display.
- ④ Press the SET button.

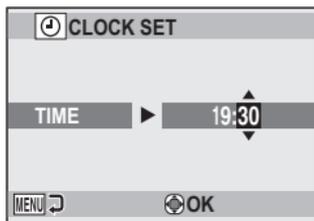


## 4 Set the order in which the date is displayed during playback.

- ① Select "DISP".
- ② Press the SET button.
  - The Set Date Format Screen appears.
- ③ Press the [T/🔍] or [W/🔲] button.
  - Press the [T/🔍] button to change the displayed date order as follows:

→ Y / M / D → M / D / Y → D / M / Y

Press the [W/🔲] button to change it in the reverse order.

- ④ Press the SET button.

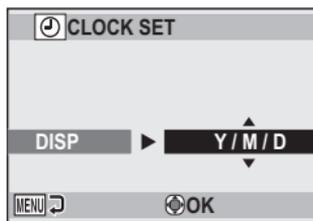

## 5 Press the MENU button.

- The date and time setting is completed.
- To display the Recording or Playback Screen, press the MENU button.

### HINT

#### About the settings backup

- Under normal conditions, while the battery pack is being replaced, an internal battery will maintain the date and time settings. However, there is a small chance the settings may be lost (the backup will last for about 7 days). It is recommended to check that the date and time settings are still correct after replacing the battery pack and before shooting or recording of any type (follow step 1).

#### To correct the date and time settings

- ① Turn on the camera.
- ② Display the Option Menu [🔑 1] (page 116).
- ③ Select "CLOCK SET" and press the SET button.
  - The screen to set the date and time appears.
  - The current date and time settings are shown.
- ④ Select the line you wish to change, and make the correction.

---

# SWITCHING BETWEEN THE RECORDING MODE AND PLAYBACK MODE

---


Switch between the recording mode (for shooting) and the playback mode (for viewing your recorded images).

---

**1** Turn on the camera (page 30).

**2** Press the REC/PLAY button.

- The mode changes.
- The mode changes each time the REC/PLAY button is pressed.

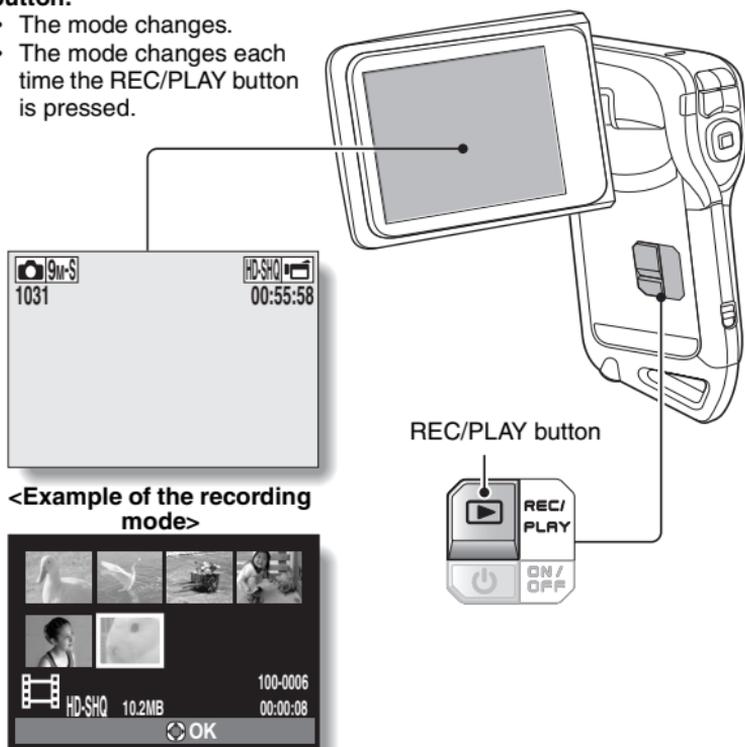


# SWITCHING THE OPERATING MODE

The “SIMPLE mode” comprises only those functions that are most often used and necessary to operate the camera, while the “NORMAL mode” enables full use of all the camera’s many functions. Select the mode that is suitable for your purposes.

## Switching between the SIMPLE and NORMAL modes

- 1 Turn on the camera (page 30).**
  - The previous mode is active.
- 2 Press the MENU button.**
  - The Menu Screen for the active mode appears.

- 3 Select the operating mode icon, and press the SET button.**
  - Switch from the SIMPLE mode to the NORMAL mode, or from the NORMAL mode to the SIMPLE mode.
  - Press the MENU button to cancel the Menu Screen.

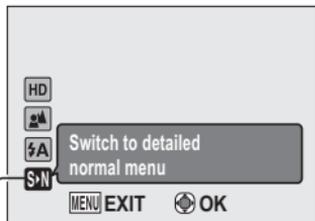

Operating mode icon

<SIMPLE Mode Menu Screen>




Operating mode icon

<NORMAL Mode Menu Screen>

## SWITCHING THE OPERATING MODE

### Accessing/exiting the SIMPLE/NORMAL Mode Menu Screen



- 1 Set the camera to the recording or playback mode (page 35).
- 2 Select the desired operating mode (page 36).
- 3 If the Menu Screen is not displayed, press the MENU button.
  - The Menu Screen appears.
  - To cancel the Menu Screen, press the MENU button.

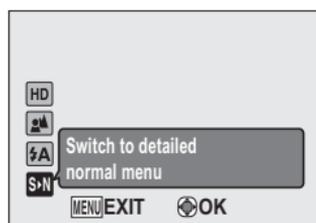

<Example: SIMPLE Mode Recording Menu>




<Example: NORMAL Mode Recording Menu>

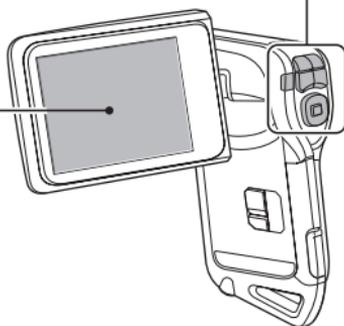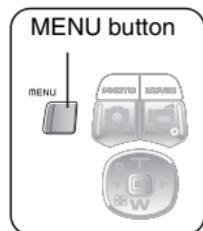

## Using the SIMPLE Mode Menu

- 4** Press the [T/🔍] or [W/📷] button to select the item you wish to change, and press the SET button.
- The Setting Screen for the selected item appears.

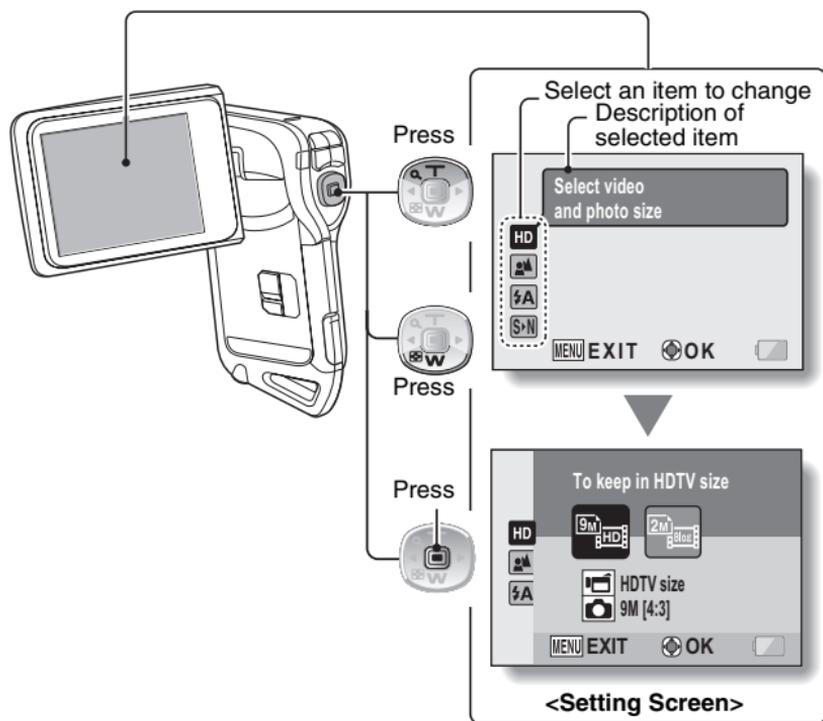

---


## SWITCHING THE OPERATING MODE

---


### Using the NORMAL Mode Menu

---

- 4** Press the [T/🔍] or [W/📷] button to select a tab.
- The Menu Screen for the selected tab appears.

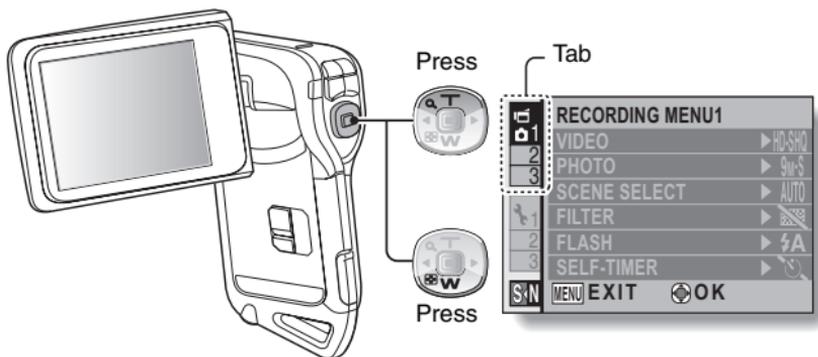


- 5** Press the [▶] button.

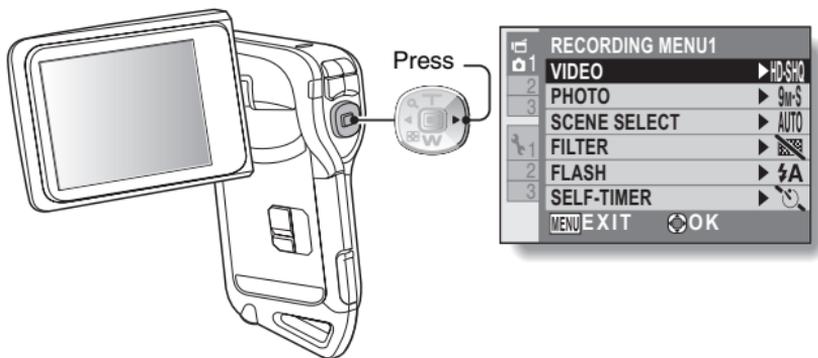

**6** Press the [T/🔍] or [W/📷] button to select the item you wish to change, and press the SET button.

- The Setting Screen for the selected item appears.
- To return to the Menu Screen, press the MENU button.

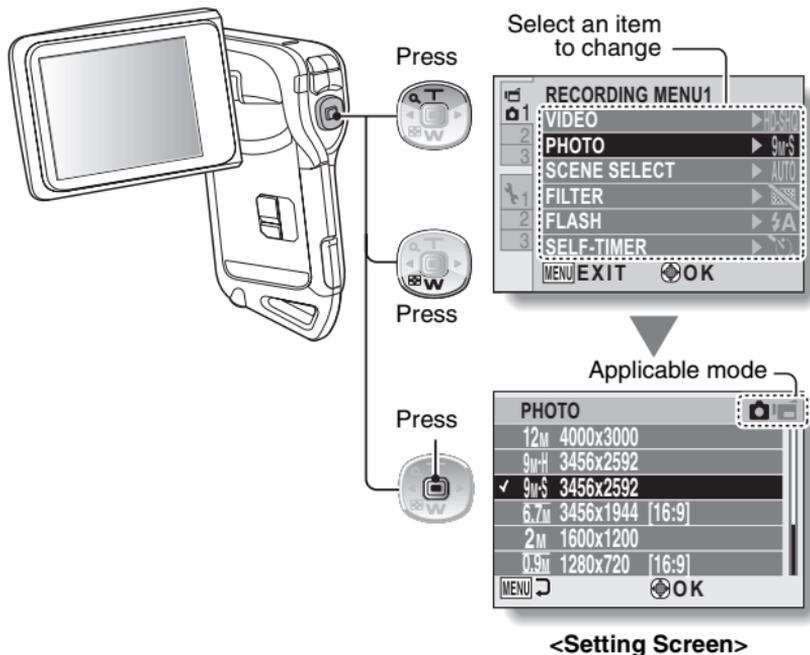

**HINT**

**About the applicable mode indicator**

- This indicator shows the shooting mode(s) for which the selected setting is effective.

📷: This setting is effective during still image shooting.

🎥: This setting is effective during video clip recording.

📷 🎥: This setting is effective during still image shooting and video clip recording.

---

## SWITCHING THE OPERATING MODE

---

### Overview of the SIMPLE Mode Setting Screen

#### SIMPLE Mode Recording Menu



① **Recording size (page 56)**

- Select the video clip size to record, and the still image size to shoot.



: The video clip size will be 1280 × 720 pixels, and the still image size will be 3456 × 2592 pixels.



: The video clip size will be 640 × 480 pixels, and the still image size will be 1600 × 1200 pixels.

② **Focus range (page 57)**

- Select the focus range that corresponds to the distance to the subject.



: The camera automatically focuses on the subject within a range of 50 cm (19.69 in.) to infinity (normal).



: The camera focuses on a subject within a range of 1 cm (0.39 in.) to 80 cm (31.50 in.) (super macro).

③ **Flash (page 62)**

- Specify how the flash will operate.



: The camera detects the subject brightness and uses the flash only when necessary.



: The flash operates with every image captured regardless of the conditions.



: The flash does not operate even in dark situations.

④ **S/N (page 36)**

- Set to the NORMAL mode.


⑤ **Remaining battery power indication (page 134)**

---

## SWITCHING THE OPERATING MODE

---

### SIMPLE Mode Playback Menu

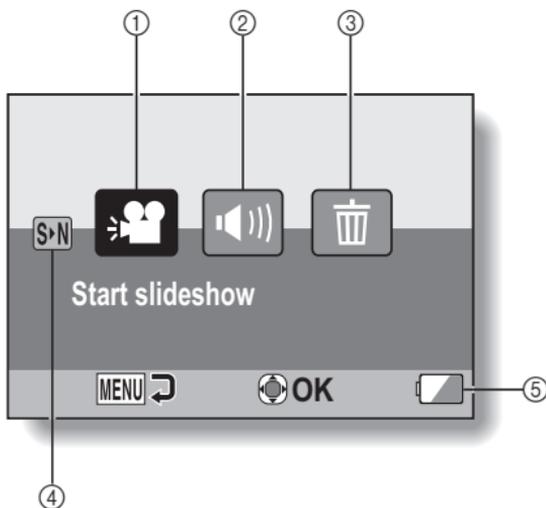

- ① **Slideshow (page 72)**
  - Specify the slideshow settings and play the slideshow.
- ② **Playback volume (page 73)**
  - Adjust the volume for video clip and audio file playback.
- ③ **Delete (page 74)**
  - Delete files.
- ④ ** (page 36)**
  - Set to the NORMAL mode.
- ⑤ **Remaining battery power indication (page 134)**

---

## SWITCHING THE OPERATING MODE

---

### Overview of the NORMAL Mode Setting Screen

#### NORMAL Mode Recording Menu

<Tab 1>



① **Video clip settings (page 80)**

<HD mode>

: Record at 1280 × 720 pixels, 30 fps (30p).

<SD mode>

: Record at 640 × 480 pixels, 60 fps (60p).

: Record at 640 × 480 pixels, 30 fps (30p).

: Make an audio recording.

② **Still image settings (page 83)**

: Image size is 4000 × 3000 pixels.

: Image size is 3456 × 2592 pixels (low compression).

: Image size is 3456 × 2592 pixels (normal compression).

: Image size is 3456 × 1944 pixels (16:9 aspect ratio).

: Image size is 1600 × 1200 pixels.

: Image size is 1280 × 720 pixels (16:9 aspect ratio).

: Image size is 640 × 480 pixels.

: 3456 × 2592-pixel sequential shots.

: 1600 × 1200-pixel sequential shots.

③ **Scene select (page 84)**

: Full auto setting

: Sports mode

: Portrait mode

: Landscape mode

: Night view portrait mode

: Snow & beach mode

: Underwater mode

: Fireworks mode

: Lamp mode

④ **Filter (page 84)**

: No filter

: Cosmetic filter

: Monochrome filter

: Sepia filter

⑤ **Flash**

: The camera will detect the subject brightness and use the flash only when necessary.

: The flash will operate with every image captured regardless of the conditions.

: The flash will not operate even in dark situations.

⑥ **Self-timer (page 85)**

: Self-timer is off.

: Shooting begins 2 seconds after the [  ] or [  ] button is pressed.

: Shooting begins 10 seconds after the [  ] or [  ] button is pressed.


⑦ **Remaining battery power (page 134)**

---

## SWITCHING THE OPERATING MODE

---

<Tab 2>

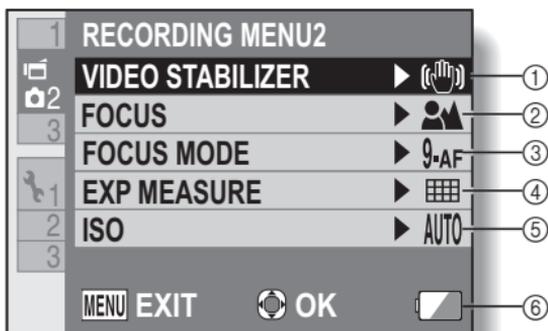

① **Video stabilizer (page 86)**

- Compensate for camera shake during video clip recording.

: Record with image stabilizer on.

: Record without image stabilizer.

② **Focus range (page 87)**

- Select the focus range that corresponds to the distance to the subject.

: The camera automatically focuses on the subject within a range of 50 cm (19.69 in.) to infinity (normal).

**MF**: Set the focus distance manually (manual).

: The camera focuses on the subject within a range of 1 cm (0.39 in.) to 80 cm (31.50 in.) (super macro).

③ **Focus mode (page 88)**

: 9-point range finder focus

: Spot focus

④ **Light-measuring mode (page 88)**

: Multi-section light measuring

: Center-weighted light measuring

: Spot light-measuring

⑤ **ISO sensitivity (page 89)**

**AUTO**: Sensitivity is set automatically

**50**: Sets sensitivity to ISO 50

**100**: Sets sensitivity to ISO 100

**200**: Sets sensitivity to ISO 200

**400**: Sets sensitivity to ISO 400

**800**: Sets sensitivity to ISO 800

**1600**: Sets sensitivity to ISO 1600

\* The indicated ISO value is the standard output sensitivity.


⑥ **Remaining battery power (page 134)**

---

## SWITCHING THE OPERATING MODE

---

<Tab 3>

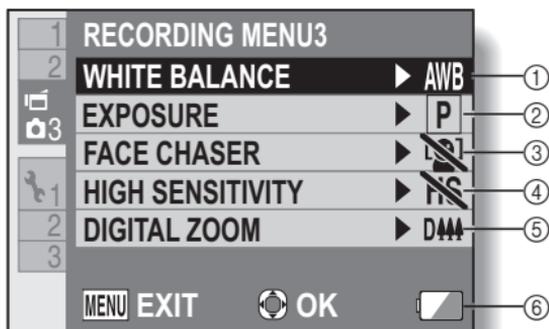

① **White balance (page 90)**

 **AWB**: White balance is automatically adjusted depending on the ambient lighting (auto).

: For shooting in sunny conditions (fair)

: For shooting in overcast conditions (cloudy)

: For shooting under fluorescent lighting (fluorescent)

: For shooting under incandescent lighting (incandescent)

: For setting the most accurate white balance (one push)

② **Exposure (page 91)**

 **P**: The exposure is set automatically.

 **S**: Set the shutter speed manually.

 **A**: Set the aperture manually.

 **M**: Set the aperture and shutter speed manually.

③ **Face chaser (page 92)**

: Enable face chaser.

: Disable face chaser.

④ **High sensitivity mode (page 93)**

 **HS**: Increased sensitivity

: Normal sensitivity

⑤ **Digital zoom**

: Enable the digital zoom.

: Disable the digital zoom.

⑥ **Remaining battery power indication (page 134)**


---

## SWITCHING THE OPERATING MODE

---


### NORMAL Mode Playback Menu

<Tab 1>

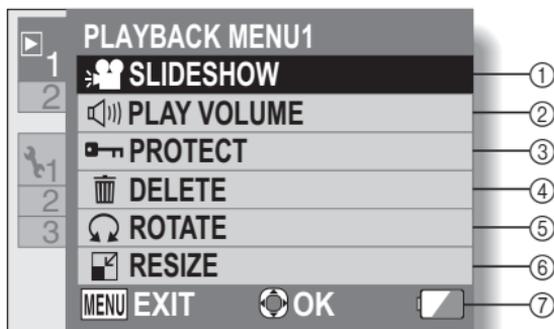

- ① **Slideshow (page 96)**
  - Specify the slideshow settings and play the slideshow.
- ② **Playback volume (page 73)**
  - Adjust the volume for video clip and audio files playback.
- ③ **Protect (page 97)**
  - File protect setting (delete prohibited)
- ④ **Delete (page 74)**
  - Delete files.
- ⑤ **Rotate (page 99)**
  - Rotate a still image.
- ⑥ **Resize (page 99)**
  - Reduce the resolution of a still image.
- ⑦ **Remaining battery power (page 134)**

<Tab 2>

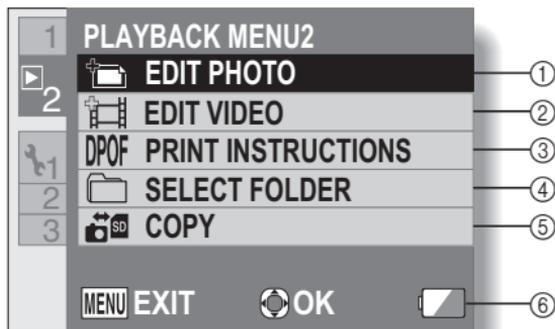

- ① **Edit photo (page 100)**
  - Repair the “red-eye” caused by the flash, reduce the blur from camera shake, or enhance the contrast (still images only).
- ② **Video clip edit (page 101)**
  - Edit video clips.
- ③ **Printing instructions (page 112)**
  - Specify the printing instructions (DPOF settings).
- ④ **Select folder (page 78)**
  - Select a folder to play back.
- ⑤ **Copy**
  - Copy files from the card to the internal memory, or vice versa.
- ⑥ **Remaining battery power indication (page 134)**

# BEFORE TAKING PICTURES

## For best results

Hold the camera securely, keeping your elbows close to your body and making sure the camera is stable.

Correct hold



Incorrect hold



### <Holding the camera>



**Example 1:**  
Grip the camera by wrapping the fingers of the right hand, from the little finger to the middle finger, around the camera, and hook the index finger above the lens.



**Example 2:**  
Grip the camera by wrapping the fingers of the right hand, from the little finger to the index finger, around the camera.

A finger is blocking the lens or flash.

Make sure that the lens and flash are not blocked by your fingers or the handstrap.

## Using the autofocus

The autofocus will work in almost all situations; however, there are certain conditions that may cause the autofocus function to not work properly. If the autofocus function is not working properly, set the focus range to capture images (page 57).

### ■ Conditions that may cause incorrect focus

The following examples are some of the situations where the autofocus function may not work.


- **Subjects with low contrast, very bright subjects at the center of the image or dark subjects or locations**

Use the focus-lock function to lock the focus on an object with contrast at the same distance as the desired subject.



- **Subjects without vertical lines**

Use the focus-lock function to lock the focus while framing the subject vertically, then re-orient the camera to compose a horizontally framed image.

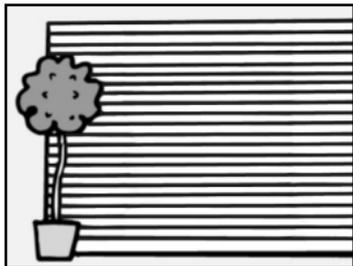

---

## BEFORE TAKING PICTURES

---

The following examples are some of the situations where the autofocus function may work, but not as desired.


- **When both near and far objects are present**

Use the focus-lock function to lock the focus on an object at the same distance as the desired subject, then reposition the camera to compose the picture.



- **Fast-moving subjects**

Use the focus-lock function to lock the focus on an object at the same distance as the desired subject, then reposition the camera to compose the picture.

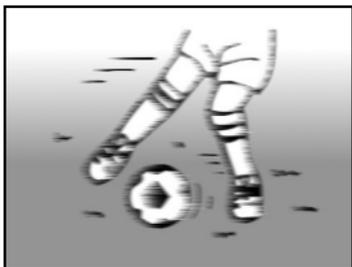

---


### HINT

- Still images can be rotated when they are played back (page 99).
- When the [  ] button is pressed halfway, the image in the monitor may waver vertically. This is the result of internal image processing and is not a malfunction. This wavering is not recorded and will not affect your images in any way.
- When the optical zoom is used or when the autofocus is operating, the image may appear to waver, but this is not a malfunction.

## Select the recording size

The larger the image size (number of pixels), the better the image quality will be, but the file size will also be larger. Select the image quality that is correct for the intended purpose.

- 1 Display the **SIMPLE Mode Recording Menu** (page 37), select the recording size setting, and press the **SET** button.

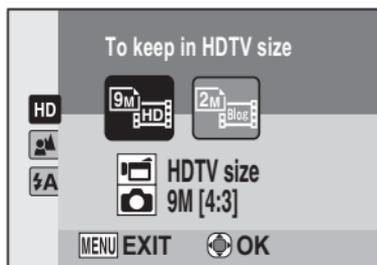

- : The video clip size will be 1280 × 720 pixels, and the still image size will be 3456 × 2592 pixels.
- : The video clip size will be 640 × 480 pixels, and the still image size will be 1600 × 1200 pixels.

- 2 Select the desired video clip recording size, and press the **SET** button.
  - This completes the recording size setting.

---


## BEFORE TAKING PICTURES

---

### Select the focus setting

Select the focus range corresponding to the distance between the camera and the subject.

- 1 Display the **SIMPLE Mode Recording Menu** (page 37), select the focus setting, and press the **SET** button.

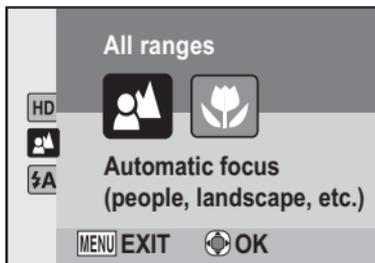

- : The camera automatically focuses on the subject within a range of 50 cm (19.69 in.) to infinity (normal).
- : The camera focuses on a subject within a range of 1 cm (0.39 in.) to 80 cm (31.50 in.) (super macro).

- 2 Select the desired focus range, and press the **SET** button.
  - This completes the focus range setting.

## Hints for taking pictures

### Muting the operation sounds

- The audio guidance that sounds when you operate the camera can be muted (page 118).

### Where are the image and audio files saved?

- All the image and sound files are recorded on the card installed in the camera or in the camera's internal memory.

### Taking pictures in backlight conditions...

- When taking pictures with the light coming from behind the subject, due to the characteristics of the lens, ghost patterns (flare phenomenon) may appear in the captured image. In this situation, it is recommended that you avoid taking pictures with the subject lit from behind.

### While the image files are being recorded...

- While the multi-indicator is flashing red, the image files are being written to the memory, during which time it is not possible to capture another image. Another image can be captured after the flashing red indicator turns off. However, even when the multi-indicator is flashing red, depending on the camera's internal memory remaining capacity, in some cases the next image can be captured about 2 seconds after shooting.


# VIDEO CLIP RECORDING

- 1 Turn on the camera (page 30), and set it to the recording mode (page 35).

- 2 Press the [  ] button.
  - Recording begins.
  - It is not necessary to keep the [  ] button pressed while recording.
  - When the remaining recording time available for the currently recording clip becomes little, a countdown of the remaining recording time appears on the display.

- 3 End the recording.
  - Press the [  ] button again to stop recording.

[  ] button

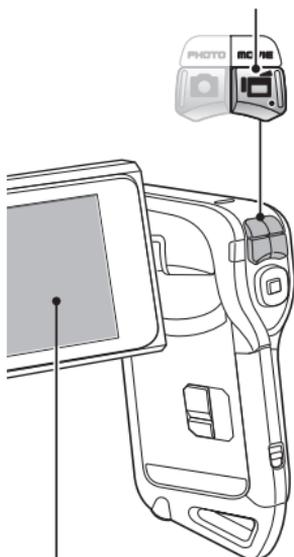

Recording time



Available recording time remaining



# SHOOTING SINGLE SHOTS

Capture a still image (single-shot).

- 1 Turn on the camera (page 30), and set it to the recording mode (page 35).

## 2 Press the [ ] button.

- ① Press the [  ] button halfway.
  - The autofocus operates, and the image is focused (focus lock).
- ② Continue to gently press the [  ] button all the way.
  - The shutter releases and the image is captured.
  - You can view the captured image on the monitor by keeping the [  ] button depressed when you capture the image.

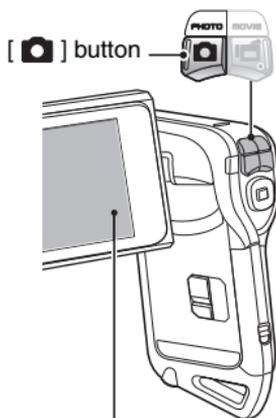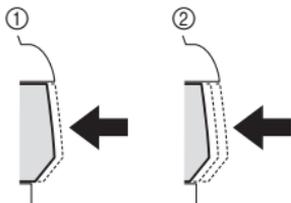

Target mark

# SHOOTING SINGLE SHOTS


## HINT

### Adjusting the monitor brightness

- While the Recording Screen is active, you can quickly access the screen for adjusting the brightness of the monitor (page 120) by pressing the MENU button for at least 1 second.

### What is the camera focusing on?

- A target mark  on the monitor shows the area the camera is focusing on.
- The camera automatically determines the correct focus by measuring from 9 different focus points within the shooting area. If the target mark is at a position that is different from the point you wish to focus on, you can refocus, for example, by changing the shooting angle.
- The large target mark appears when the camera focuses on a wide area in the center of the screen.

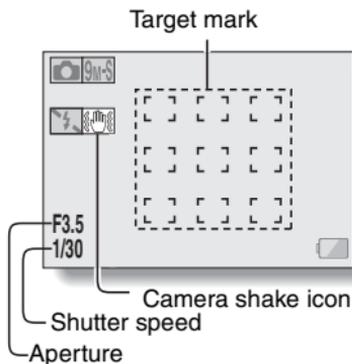

### The focus and exposure can be locked (NORMAL mode)

- By assigning an operation shortcut to an arrow button (page 123), you can set the autofocus or the exposure to a fixed setting. When the exposure setting is fixed, the  icon appears on the monitor; when the autofocus setting is fixed, the  icon appears on the monitor.
- When the focus range (page 57) setting is changed, the focus lock is released.

### The shutter speed and aperture are displayed (NORMAL mode)

- In the NORMAL mode, the shutter speed and aperture settings are shown on the Recording Screen. You can use them as a reference when shooting.

### If the camera shake icon appears... (NORMAL mode)


- During still image shooting, if the shutter speed is slow and the possibility that the image may be blurred due to camera shake becomes high, the camera shake icon may appear on the monitor. In this case, use a tripod to stabilize the camera when shooting, or set the flash operation mode to automatic (page 62).
- When shooting with the scene select function set to the fireworks  mode, the camera shake icon always appears, but this is normal.

## Using the flash

The flash is not only used for photographing under dark conditions, but is also convenient for example when the subject is in shadow or lit from behind. The flash is available only when shooting single-shot still images.

**1** Display the **SIMPLE Mode Recording Menu** (page 37), select the **flash setting**, and press the **SET** button.

- The screen to select the flash operation appears.

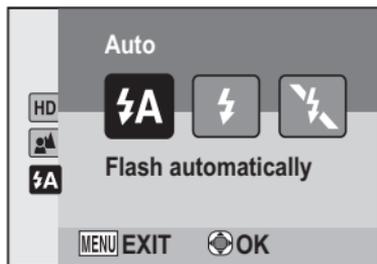

- : The camera detects the subject brightness and uses the flash only when necessary.
- : The flash operates with every image captured regardless of the conditions.
- : The flash does not operate even in dark situations.

**2** Select the desired flash operation, and press the **SET** button.

- This completes the flash operation setting.

**3** Press the [ ] button to take the picture.

---

## SHOOTING SINGLE SHOTS

---

### CAUTION

#### **Do not touch the flash unit when shooting**

- The flash unit becomes very hot and may cause a burn. Avoid touching the flash unit when shooting.

---



### HINT

- The flash works only when shooting single-shot still images.
- The flash cannot be used during video clip recording.
- By assigning an operation shortcut to an arrow button (pages 120 and 123), you can change the flash mode from the Recording Screen (NORMAL mode).

# SHOOT A STILL IMAGE WHILE RECORDING A VIDEO CLIP

You can capture a still image (a single-shot) while recording a video clip.

- 1** Turn on the camera (page 30), and set it to the recording mode (page 35).
- 2** Press the [  ] button.
- 3** When you see a scene you'd like to capture as a still image, press the [  ] button.
- 4** Press the [  ] button to end the video clip recording.

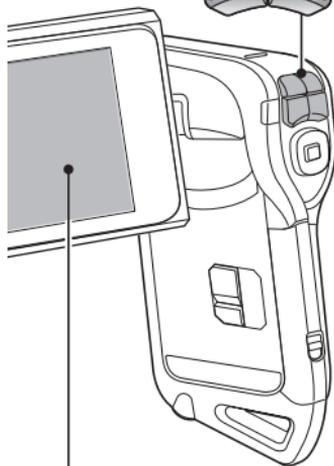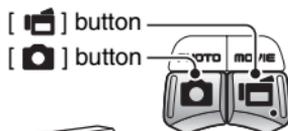

---

## SHOOT A STILL IMAGE WHILE RECORDING A VIDEO CLIP

---

### HINT

- When shooting a still image while recording a video clip, the flash does not operate.
- When the remaining video recording time becomes approximately 50 seconds, it will no longer be possible to capture a still image while recording a video clip. The exact remaining recording time at which this occurs will differ depending on the subject and on the video clip mode setting (page 80). If you intend to capture a still image while recording a video clip, it is suggested that you take note of the remaining video recording time.

### About the recording size of still images

- The size of a still image captured during video clip recording depends on the video clip recording size.

| Video clip recording size setting   | Still image recording size   |
|---|--|
|  |  (16:9) |
|  |  (4:3)  |
|  |  (4:3)  |
|   |  (4:3)  |

- It is not possible to capture sequential shots.

# MACRO-PHOTOGRAPHY (ZOOM)

Your camera has two zoom functions: optical zoom and digital zoom.


**1** Point the camera lens at the subject.

**2** Press the [T/🔍] or [W/📐] button to compose the desired image.

[T/🔍]: Zoom in on the subject.

[W/📐]: Zoom out.

- When the zoom switch is pushed, the zoom bar appears on the monitor.
- When the optical zoom factor is at maximum, zooming stops temporarily. When the [T/🔍] button is pressed again, the mode changes to the digital zoom mode and zooming continues.

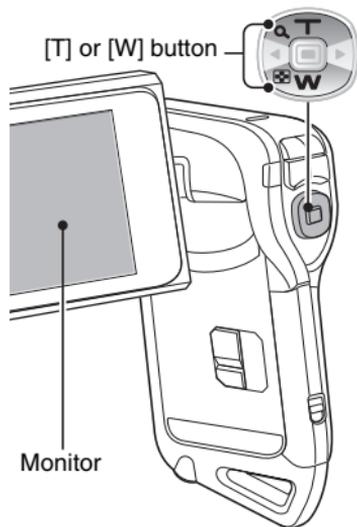


**3** Take the picture.

For video clip recording, see page 59.

For shooting single shots, see page 60.

For shooting sequential shots, see page 83.

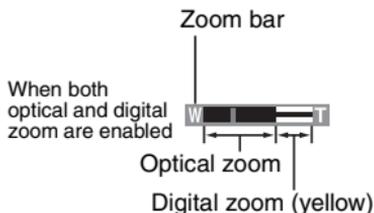

When optical zoom only is enabled



---

# AFTER USING THE CAMERA IN WATER

---

After using the camera in water, wash it with fresh water and dry it completely.

---

**1** Turn off the camera, and close the battery/card compartment cover securely.


---

**2** Wash the camera with fresh water.

- Fill a shallow basin with fresh water, and immerse the closed camera for about 5 minutes. Rotate the monitor unit several times to clean it completely.
- 

**3** Allow the water to drain out through the drainage holes.

- Drain the water through the five drainage holes.

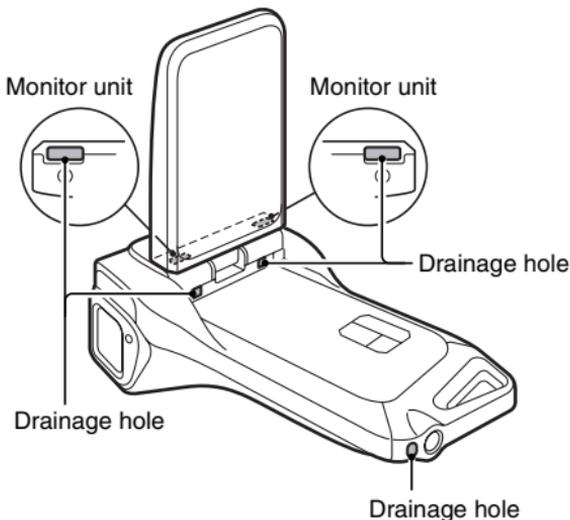


---

## 4 Dry the camera.

- Use a dry cloth to wipe off any drops adhering to the camera, and leave it to dry completely in a well-ventilated place away from direct sunlight.
- Water may seep out from the drainage holes if the camera is not completely dry inside. Take special care not to let water get inside the battery/card compartment.
- Do not use a hair dryer or the like to dry the camera. Exposing the camera to high temperatures may cause the camera and/or waterproof seal to become deformed.

# PLAYING BACK VIDEO CLIPS AND STILL IMAGES

- 1 Set the camera to the playback mode (page 35).
- 2 Press the [◀] or [▶] button to display the image you wish to play back.

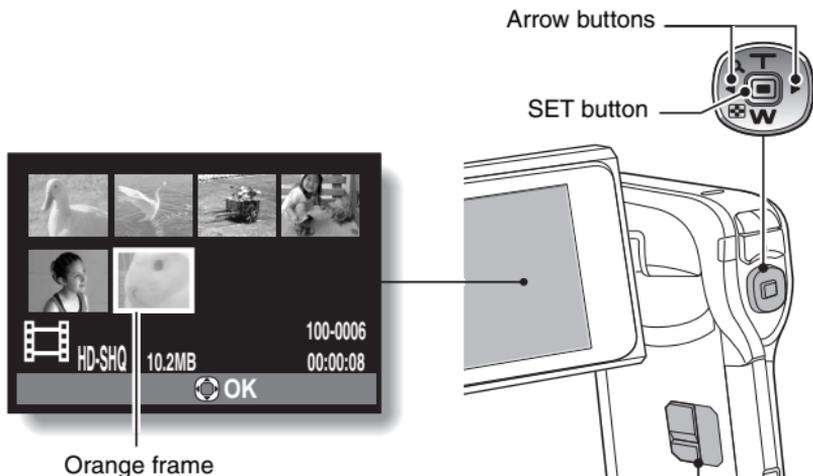

- 3 Press the SET button.
  - The image you selected in step 2 is displayed fullscreen.
  - If a video clip was selected, playback begins.

<To return to the screen to select playback files>

**During still image playback:**

Press the [W/📷] button.

**During video clip playback:**

Press the [W/📷] button once to stop video clip playback, and press the [W/📷] again.

| To do this...  |                  | Do this   |
|--|------------------|---|
| Normal forward playback                              |                  | Press the SET button.   |
| Stop playback  |                  | During playback, press the [W] button.  |
| Pause  |                  | During playback, press the SET button or press the [T] button.<br>During accelerated playback, press the [T] button.  |
| To play back one image at a time (single-frame step) | Forward playback | After pausing playback, press the [▶] button.   |
|  | Reverse playback | After pausing playback, press the [◀] button.   |
| Slow playback  | Forward playback | After pausing playback, press and hold the [▶] button.  |
|  | Reverse playback | After pausing playback, press and hold the [◀] button.  |
| To accelerate playback                               | Forward playback | During forward playback, press the [▶] button.<br>* The playback speed changes each time the [▶] button is pressed, as follows:<br>Normal playback → 2× → 5× → 10× → 15×<br>Press the [◀] button to resume normal playback speed. |
|  | Reverse playback | During forward playback, press the [◀] button.<br>* The playback speed changes each time the [◀] button is pressed, as follows:<br>15× ← 10× ← 5×<br>Press the [▶] button to resume normal playback speed.                        |
| Return to normal playback speed                      |                  | Press the SET button.   |

**HINT****If the  icon appears on the Playback Screen...**

- The  icon appears when playing back a file that was saved in segments (page 81). Although playback of these multiple files is continuous, there is a slight pause at the point where the files are joined.

---

## PLAYING BACK VIDEO CLIPS AND STILL IMAGES

---

### How to save one frame from a video clip as a still image

- 1** Play back the video clip. Pause the playback at the point you wish to “snap” a photo.
- 2** Press the [  ] button.
  - The currently displayed frame is saved as a still image.

---

#### HINT

##### The size of a video clip file is very large

- Therefore, be aware that if the video clip is uploaded to a computer to be played back, the computer may not be able to play back the video fast enough, making it appear jerky. (The video will always be displayed properly on the monitor or a television.)
- Depending on the card, shooting may end even before the possible shooting time indicated.

##### Display the video clip playback point

- During video clip playback, press the MENU button for at least 1 second to display a bar showing the current playback point in the video clip.
- Press the MENU button for about 1 second to cancel the bar.

---

#### CAUTION

##### During video clip playback, the sound of a motor is audible...

- During recording, the sound of the optical zoom movement or autofocus movement was recorded. This is not a malfunction.

##### If no audio is heard...

- The audio is not played back when the video clip is played back in the frame-by-frame, fast playback or reverse playback mode.

---

# SLIDESHOW PLAYBACK

---

You can play back files in succession with the “slideshow playback” feature.

---

- 1** Display the **SIMPLE Mode Playback Menu (page 37)**, select the **slideshow setting**, and press the **SET** button.

- : Play back all files.
- : Play back video clips and audio files.
- : Play back still image files.



- 2** Select the type of file to play back, and press the **SET** button.

- Slideshow playback begins.
- To stop slideshow playback, press the SET button or MENU button.

---

## HINT

### About the slideshow settings

- The slideshow settings can be changed from the **NORMAL Mode Playback Menu (page 96)**.

---


# PLAYBACK VOLUME

---

Adjust the playback volume for video clips and audio files.

---

- 1** Display the **SIMPLE Mode Playback Menu** (page 37), select the playback volume setting, and press the **SET** button.
  - The volume control bar appears.

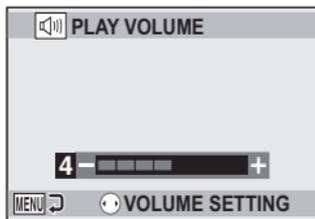

- 2** Press the [**◀**] or [**▶**] button to set the volume, and press the **SET** button.
  - The playback volume is set, and the display returns to the **SIMPLE Mode Playback Menu**.

---

## HINT

### In the **NORMAL** mode

- When you select "PLAY VOLUME" from the **NORMAL Mode Playback Menu** and press the **SET** button, the volume control bar appears.

---

# DELETING FILES

---

You can delete files if you no longer need them. You can delete single files, selected files or all the files at one time.

## Delete single/delete all

- 1** Display the SIMPLE Mode Playback Menu (page 37), select the delete setting, and press the SET button.

**DELETE SINGLE:**


Deletes one file at a time.

**DELETE SELECTED:**

Deletes the selected files (page 75).

**DELETE ALL:**

Deletes all files.

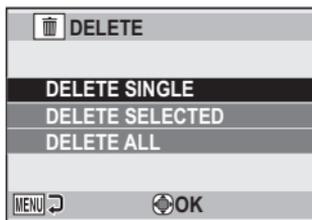

- 2** Select the desired delete mode, and press the SET button.

- The Delete Confirmation Screen appears.

**<DELETE SINGLE>**

- Press the [◀] or [▶] button to select the file you wish to delete.
- There is no confirmation screen when deleting single files. Please make sure that the displayed image is one you wish to delete.

**<DELETE ALL>**

- Press the [◀] or [▶] button to confirm the files to delete.

---

## DELETING FILES

---

### 3 Select “DELETE”, and press the SET button.

#### <DELETE SINGLE>

- The currently displayed file is deleted.
- To delete other files, select the files, select “DELETE” and press the SET button.

#### <DELETE ALL>

- The Delete Confirmation Screen again appears. To delete the files, select “YES”, and press the SET button. When file delete is completed, “No image” is shown.

## Delete selected

Delete selected files.

---

### 1 Display the SIMPLE Mode Playback Menu (page 37), select the delete setting, and press the SET button.

---

### 2 Select “DELETE SELECTED”, and press the SET button.

- The screen to select files to delete appears.



---

### 3 Select an image you wish to delete.

- Press the [◀] or [▶] button to move the orange frame to the file you wish to delete.

---

**4** Press the **SET** button.

- The selected file is marked with the delete icon [  ].
- Up to 100 files can be selected.
- To cancel a delete selection and remove the delete icon from a file, move the orange frame to the marked file and press the SET button.

---

**5** Press the [  /  ] button.

- The Confirm Delete Screen appears.

---

**6** Select “YES”, and press the **SET** button.

- The selected files are deleted.

---

**HINT****In the NORMAL mode**

- When you select “DELETE” from the NORMAL Mode Playback Menu and press the SET button, the Delete Screen appears.

---


**CAUTION**

- Files that are protected from accidental delete cannot be deleted. To delete protected files, set the protect setting for the files to off (pages 51 and 97), and then follow the file delete procedure.

# PLAYBACK MODES

## Multi-image display

- 1 Display the image you wish to play back.**
- 2 Press the [W/☒] button.**
  - The 21-image display appears.
- 3 Select the image to play back.**
  - Press the [◀] or [▶] buttons to move the orange frame to the desired image, and press the SET button to switch to normal (full-screen) playback of the selected image.
  - If the [W/☒] button is pressed while the 21-image display is shown, the display changes to the screen to select a folder (page 78).
  - It is not possible to perform the file delete or file protect settings on the 21-image display.

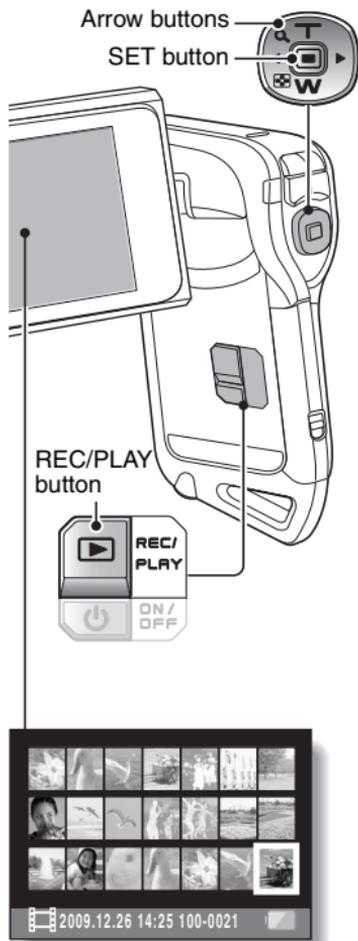


## Selecting the playback folder

If the card contains multiple folders, you can select from which folder you would like to play back.

### 1 Display the Playback Screen.

### 2 Press the [W/ ] button 2 times.

- The screen to select the playback folder appears.
- If the [T/ ] button is pressed, the camera changes to the 21-image display (page 77).

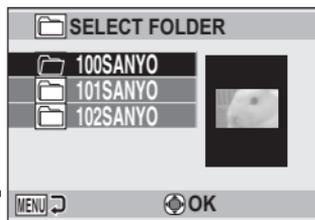

### 3 Press the [T/ ] and [W/ ] buttons to select the desired folder to play back, and press the SET button.

- The files in the selected folder are displayed in the Playback Screen.

#### HINT

##### In the NORMAL mode

- When you select “SELECT FOLDER” from the NORMAL Mode Playback Menu and press the SET button, the screen to select the playback folder appears.

---

## PLAYBACK MODES

---

### Magnifying (zooming in) the image

---

**1** Display the image that you want to magnify.

- 2** Push the [T/🔍] button.
- Magnification is enabled.
  - The image is magnified, and the central portion of image is displayed.

**To magnify:**

Magnification increases each time the [T/🔍] button is pressed.

**To return to normal size:**

Magnification decreases each time the [W/🔍] button is pressed.

- You can press the SET button to switch to the scan operation. Use the arrow buttons to see different parts of the image.
- Press the SET button again to switch to the magnify/reduce operation.
- Press the MENU button to return to the normal (100%) view.



---

#### HINT

**The magnified portion of the image can be saved as a separate image**

- Press the [📷] button. The magnified portion is saved as a new still image.

---

# RECORDING MENU 1

---

## Video setting

You can record video clips in either the HD mode (16:9 horizontal to vertical aspect ratio) or the SD mode (4:3 aspect ratio). In addition, the higher the frame rate number, the smoother playback will be. However, as with the recording size, the file size is also proportionately larger, using up more memory. This menu is also used when making audio recordings.

---

### CAUTION

#### When editing video clips...

- In order for video clips to be joined, they must have been photographed in the same mode.
- Video clips that were photographed in different modes cannot be joined.


## Audio recording

### ■ Audio recording

---

**1** Select , and press the SET button.

- The audio recording mode is enabled.
- The menu display is canceled if the MENU button is pressed.

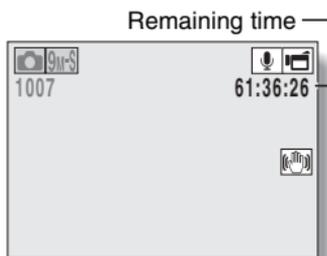


---

## RECORDING MENU 1

---

- 2** Press the [  ] button.
- Audio recording begins. During recording,  appears in the monitor. It is not necessary to continue pressing the [  ] button while recording.

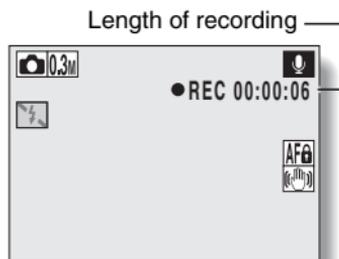

- 3** End the recording.
- Press the [  ] button again to stop recording.

---

### HINT

#### You can capture a still image during an audio recording

- Press the [  ] button during audio recording to capture a **0.3M** still image.

#### About files saved in segments

- When the video setting is set to a voice memo  that exceeds about 13 hours, the recorded file is saved once, and the recording continues in a new file. For other video settings, when the file size exceeds 4 GB, the recorded file is saved once, and the recording continues in a new file. (These 4 GB segments are automatically created. The recording session continues until you stop recording, but video clip or voice memo recording is temporarily interrupted while the file is being saved.)

# Audio playback

**1** Display the desired audio file.

**2** Play back the recording.

| To do this...                 |                           | Do this   |
|-------------------------------|---------------------------|---|
| Normal playback               | Start playback            | Press the SET button.   |
|                               | Pause                     | Press the SET button.<br>Press the [T/⏏] button.  |
|                               | Stop playback             | Press the [W/⏏] button.   |
| Fast forward/<br>fast reverse | Fast forward              | During playback, press the [▶] button. Each time the [▶] button is pressed, the speed increases. If the [◀] button is pressed during fast forward, the speed decreases. |
|                               | Fast reverse              | During playback, press the [◀] button. Each time the [◀] button is pressed, the speed increases. If the [▶] button is pressed during fast reverse, the speed decreases. |
|                               | Pause                     | Press the [T/⏏] button.   |
|                               | Return to normal playback | Press the SET button.   |

## CAUTION

### If no audio is heard...

- The audio is not played back when the audio recording is played back in the fast playback or fast reverse mode.

---

## RECORDING MENU 1

---

### Still image setting

For still images, you can select either the 4:3 or 16:9 horizontal to vertical aspect ratio. This menu is also used for shooting sequential shots.

### Sequential shots

---

- 1** Select  or , and press the SET button.
- The camera changes to the sequential shots mode.

- 2** Press the [  ] button.
- Shooting begins. Shooting continues as long as the [  ] button is kept pressed.

---

#### HINT

#### What is the maximum number of images in a sequential shots sequence?

: 15 images

: 13 images

<At the  setting>

- If you continue shooting even after the maximum number of images has been captured, recording does not stop.
- If you continue shooting after the maximum number of images has been captured, subsequent captured images will overwrite the sequence already captured, beginning from the first image in the sequence.

<At the  setting>

- After 13 images have been captured, the images are saved and recording stops.

#### About the focus when shooting sequential shots

- When sequential shots are captured, the autofocus operates when the [  ] button is pressed halfway, fixing the focus.

#### Can the flash be used?

- The flash does not operate when shooting sequential shots.

## Scene select setting

You can select from various preset settings (aperture, shutter speed, etc.) for specific shooting conditions.

### HINT

- To return to normal photography, select  from the scene select menu, and press the SET button.
- When capturing images using the lamp , fireworks  or night view portrait  setting, use a tripod or other method to stabilize the camera.
- In the sequential shots mode, it is not possible to select night view portrait , fireworks , or lamp .
- A table showing the limitations for settings corresponding to scene select icons other than  is on page 158.

## Filter setting

The filter feature changes image characteristics such as color tones, to apply unique effects to the photographed image.

### HINT

- To return to normal photography, select  from the filter menu, and press the SET button.
- A table showing the limitations for settings corresponding to filter icons other than  is on page 159.

---

## RECORDING MENU 1

---

### Self-timer setting

By assigning an operation shortcut to an arrow button (pages 120 and 123), you can set the self-timer from the Recording Screen.

---


#### HINT

##### To pause or cancel the self-timer function...

- If the [  ] button or [  ] button is pressed again before the shutter is released, the self-timer countdown temporarily stops. Press the [  ] button or [  ] button one more time to restart the self-timer.
- To cancel self-timer photography, select the  icon from the self-timer menu, and press the SET button.
- The self-timer is automatically reset to off  after the power save mode is activated and the camera turned off.

##### When is selected...

- When the [  ] button or [  ] button is pressed, the multi-indicator will blink for about 10 seconds, and then the image is captured. Also, 4 seconds before the shutter releases, the indication shown in the illustration appears on the monitor.

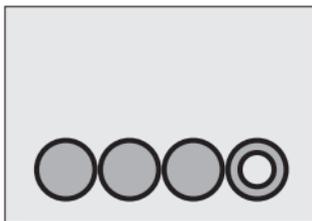

# RECORDING MENU 2

## Video stabilizer setting

Your camera can minimize a jittery picture by compensating for unintentional hand motion during video clip recording.

### HINT

#### If the motion compensation does not seem to be working...

- Due to the mechanical characteristics of this function, it may not be possible for the camera to compensate for violent motion.
- If the digital zoom (page 66) is being used, the large magnification factor may make it difficult for the motion compensation function to work correctly.
- When the scene select function is set to night view portrait  or lamp , the motion compensation effect may be insignificant.

#### When motion compensation is enabled,

- The following icons are shown on the monitor:



Image stabilizer icon

---

## RECORDING MENU 2

---

### Focus range setting

#### How to use the manual focus

---

- 1 Select **[MF]**, and press the **SET** button.
  - The focus distance adjustment bar appears.



- 2 Press the **[◀]** or **[▶]** button to adjust the focus distance, and press the **SET** button.
  - The focus distance is set, and you are returned to the Recording Screen.

---

#### HINT

##### About the focus range

- The focus distance indication shows the distance between the center of the lens and the subject.
- In some cases there may be a slight variance between the distance (numerical figure) you set in the manual focus mode and the actual distance.

##### About zoom movement when using the manual focus


- If the focus distance is set to 70 cm (27.56 in.) or less, the zoom changes to the largest setting that is suitable for that focus distance.
- When the focus distance is set to 70 cm (27.56 in.) or less, the zoom will function only within the range at which the image is focused.

##### About the super macro mode

- When the focus range is set to super macro **[SM]**, the zoom is temporarily set to the wide end.
- By assigning an operation shortcut to an arrow button (pages 120 and 123), you can change the focus range setting from the Recording Screen.

## Focus mode setting


When the spot focus setting is selected, the focus mark + appears in the center of the monitor.

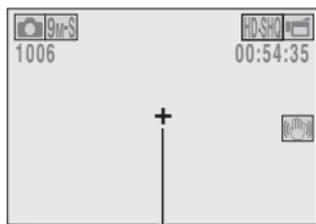

Focus mark

## Light-measuring mode setting

When spot light-measuring is selected, the light-measuring spot mark □ appears in the center of the monitor.

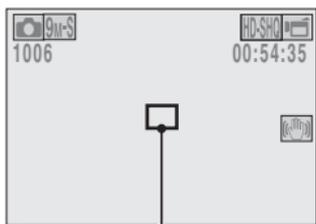

Light-measuring spot mark

---

## RECORDING MENU 2

---

### ISO sensitivity setting

With the initial settings, the ISO sensitivity is automatically set according to the brightness of the subject. However, the ISO sensitivity can be set to a fixed setting.

---

#### HINT

- At the **AUTO** setting, the ISO sensitivity is set automatically (video clip recording: ISO 200 to 1600; still image shooting: ISO 50 to 400).
- By setting a higher ISO sensitivity, you can set faster shutter speeds and capture images in darker locations, but noise in the captured images may increase or the images may be irregular.
- By assigning an operation shortcut to an arrow button (pages 120 and 123), you can change the ISO setting from the Recording Screen.

---

#### CAUTION

##### Does the image appear to flicker when recording a video clip?

- If recording a video clip under fluorescent lights with the ISO sensitivity set to **400** or higher, a noticeable flicker may appear in the image.

---

# RECORDING MENU 3

---

## White balance setting

This camera automatically adjusts the white balance under most lighting conditions. However, if you want to specify the lighting conditions or change the overall tone of the image, the white balance can be manually set.

### How to use the one push setting

---

**1** Select the  icon.

**2** Fill the entire screen with a plain white card (or piece of paper, etc.), and press the SET button.

- This completes the white balance setting.

---

#### HINT

##### To cancel the white balance setting

- Select **AWB**, and then press the SET button.

## RECORDING MENU 3


### Exposure setting

The shutter speed and aperture size can be set individually.

- 1** Select the desired icon from the exposure menu, and press the SET button.

<If [S], [A] or [M] was selected>

- ① Press the [W/☐] or [T/☐] button to select aperture value or shutter speed.
- ② Press the [◀] or [▶] button to change the setting for the selected parameter.

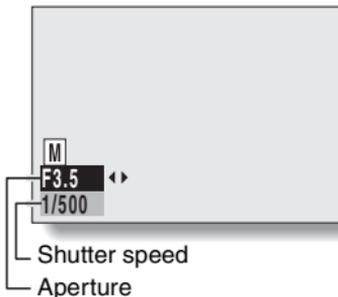

- 2** Press the SET button.

- This completes the exposure setting.

#### HINT

- To prevent the effects of camera shake at slow shutter speeds, it is recommended to use a tripod or other method to stabilize the camera.
- A slow shutter speed may be useful for photographing in a darker environment, but noise in the image may be increased.
- To minimize noise in the image, complete the noise reduction setting (page 120).
- The exposure setting automatically becomes [P] if the scene select function is active.
- In the sequential shots mode, the shutter speed is faster than 1/15 sec.
- Even if the shutter speed is set to slower than 1/29 sec., the shutter speed during video clip recording is 1/30 sec.
- If the exposure setting is set to [S], [A] or [M], by assigning an operation shortcut to an arrow button (pages 120 and 123), you can select the [S], [A] or [M] exposure setting from the Recording Screen.

## Face chaser setting

As you record, the face chaser detects the subject's face, and adjusts the brightness and focus in a way that produces a clear and bright photo of the subject's face.

---

### HINT

#### When the face chaser is set to ON...

- Each face in the Recording Screen is marked with a green frame.
- Faces that are in focus are marked with a double green frame.
- When shooting begins, the frames marking the faces that are in focus change to orange.
- If the scene select function setting was fireworks  or landscape , it automatically changes to **AUTO**.
- The light measuring mode changes to multi-section light measuring.
- When you play back an image that was captured using the face chaser function and magnify it, the magnified image will be centered on the face(s) that were focused on.

---

### CAUTION

- The face chaser function does not work while the digital zoom is being used.
- The face chaser function does not work when zooming in or out.
- The face chaser function may not work when the subject's face in the monitor is relatively small or appears dark.

---

## RECORDING MENU 3

---

### High sensitivity mode setting

When you shoot in the high sensitivity mode, the captured image appears even brighter than that specified by the ISO sensitivity and exposure compensation settings.

---

#### CAUTION

##### Limitations of the high sensitivity mode

- When the shutter speed is reduced to create a bright image, video clip motion will appear uneven during playback.
- When shooting in a dark environment, the autofocus and auto exposure may not function effectively.

## Exposure compensation

By assigning the exposure compensation operation shortcut to an arrow button (pages 120 and 123), you can make the image lighter or darker when capturing images.




**1** Assign the operation shortcut to the SET button (pages 120 and 123).

**2** Press the arrow button to which the operation shortcut was assigned.

- The exposure compensation bar appears.

**3** Press the [◀] or [▶] button to adjust the exposure.

- The exposure compensation numerical value is shown at the left end of the exposure compensation bar.
- The exposure compensation can be set to a value from -1.8 EV to +1.8 EV.
- The exposure compensation bar is canceled when the MENU button or the SET button is pressed.

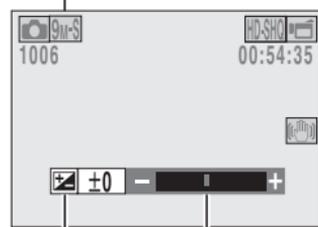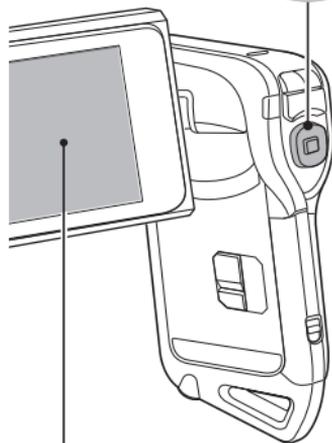

Exposure compensation bar  
Pointer

---

## RECORDING MENU 3

---

### HINT

**The exposure compensation setting is canceled in the following cases:**

- When the pointer is set to the center position.
- When the camera is set to the playback mode.
- After the power is turned off.
- When the camera is set to the standby mode.

---

# PLAYBACK MENU 1

---


## Slideshow settings

Specify the settings for playing back files continuously in a “slideshow” format. In a slideshow of still images, you can set the transition time, transition effects and BGM.

### Changing a setting

---

- 1 Select the item you wish to change, and press the SET button.
- 2 Press the [T/🔍] or [W/📐] button to change the setting.
- 3 Press the SET button.

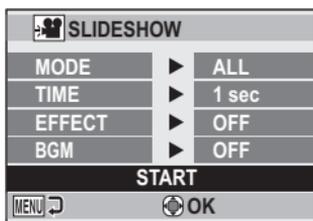

### Begin the slideshow

---

- 1 Select “START” and press the SET button.
  - Slideshow playback begins.
  - To stop slideshow playback, press the SET button or MENU button.

---

#### HINT

##### BGM for video clips?

- When video clips are played back in a slideshow, the recorded audio track is played back; the BGM is not played.

---

## PLAYBACK MENU 1

---

### File protect setting

Prevent accidental erasure of image and audio files.

### Protect files one by one


---

**1** Display the file that you want to protect from accidental erasure, and display the NORMAL Mode Playback Menu (page 37).

**2** Select “PROTECT” and press the SET button.

**3** Select “PROTECT SINGLE” and press the SET button.

- “LOCK” appears.
- If the protect mode has already been enabled for the file, then “UNLOCK” appears.

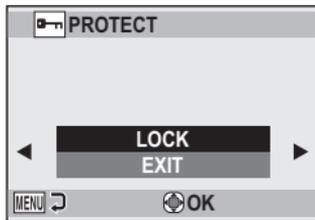

**4** Press the [T/🔍] or [W/📐] button to select “LOCK”, and press the SET button.

- The protect mode is set for the file.
- The protect mark  indicates that the file is locked.

---

### CAUTION

- Even if the protect mode is set for certain files, they will be deleted if the card is reformatted.

---

## HINT

### To select a different image in step 3...

- Press the [◀] or [▶] button.

### To cancel the protect mode for a file...

- Display the desired file and repeat steps 1 to 4. The protect mark  will disappear and the protect mode is canceled.

---

## PLAYBACK MENU 1

---

### Protect selected files


Select multiple files to protect.

**1** Display the NORMAL Mode Playback Menu (page 37).

**2** Select “PROTECT” and press the SET button.

**3** Select “PROTECT SELECTED” and press the SET button.

- Press the [◀] or [▶] button to move the orange frame to the file you wish to protect.

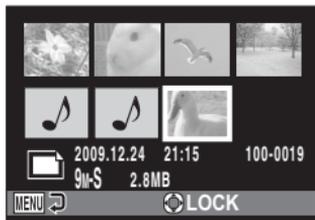

**4** Press the SET button.

- The selected file is marked with the protect icon [🔒].
- To cancel a protect selection and remove the protect icon from a file, move the orange frame to the marked file and press the SET button.

## Resize

A captured image can be resized to a smaller size and saved as a separate image.

### HINT

#### Why can't the image be resized?

- An image can be resized only to a smaller (or the same) size, not to a larger size.

## Rotate

Captured still images can be rotated to the correct orientation for viewing.

### HINT

- An image for which the protect mode has been enabled cannot be rotated. To rotate a protected image, cancel the protect mode before beginning the rotate image procedure (pages 51 and 97).

---

# PLAYBACK MENU 2

---

## Correcting the image

Repair the red-eye effect in still images to make the eyes appear more natural, enhance the contrast, or correct a blurry image due to camera shake.

---

### HINT

**If the “Contrast correction not successful”, “Red-eye correction not successful” or “Blur correction not successful” message appears...**

- The camera was not able to successfully repair the image.
- The correction function works to automatically edit flaws that the camera detects in captured images. In some cases, the camera may fail to correct a flaw.

**Concerning the date and time information for the saved image**


- When an image is corrected and saved, the recorded date and time of capture (Exif information) remains unchanged from the original image. However, the file date shown on the computer changes to the date and time the image was revised.

## PLAYBACK MENU 2

### Editing video clips

You can trim away unwanted portions from a video clip and save it as a new video clip (video clip cutting [extracting]). You can also join video clips together and save them as one separate clip ("joining").

### Procedure to cut (extract) a portion of a video clip

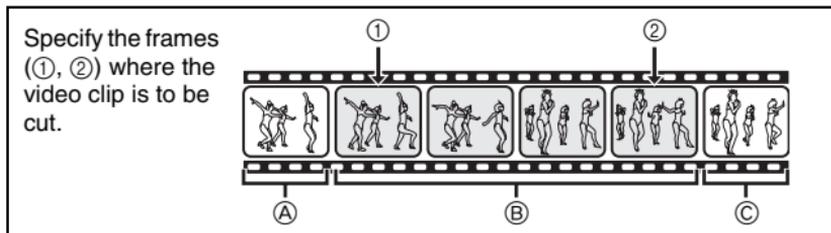

#### Extract the specified portion.

##### [Two ways to cut the video clip]


- Trim away portions ① and ③, and save portion ②.



- Delete portion ②, and join portions ① and ③.



- The original video clip is not affected.



(You can also choose to erase the original video clip when the new clip is saved.)

## Procedure to join video clips

Specify the video clip that will come first.



Specify the video clip that you wish to append (join).




Join the video clips.

- The video clips are joined.



- The original video clips are not affected.  
(You can also choose to erase the original video clips when the new clip is saved.)

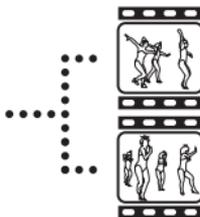

---

## PLAYBACK MENU 2

---

### CAUTION

#### Caution when editing video clips

- When editing video clips, do not press the REC/PLAY button. If you press the REC/PLAY button while editing video clips, not only will the editing not be properly completed, but the original video clip may also be erased.
- As the number or size of the video clips increases, the card memory may become full, making it impossible to edit or save the video clips. In this case, you will need to free some of the memory on the card by deleting files that are no longer necessary (pages 44 and 74).

#### Regarding the capture date of the saved files

- The capture date of edited images changes to the date that the files are saved.

## Video clip cutting (extracting)


**1** Display the video clip from which you wish to extract a segment.

**2** Display the NORMAL Mode Playback Menu (page 37), select “EDIT VIDEO”, and press the SET button.



**3** Select “CUT” and press the SET button.

- The Cutting Screen appears.

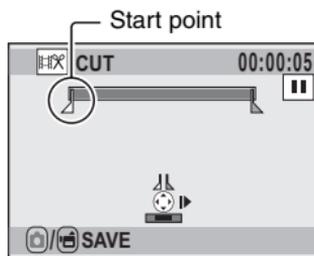

---

## PLAYBACK MENU 2

---

### 4 Specify the start point of the extract.

- Use the procedure below to specify the frame from which the video clip extract will start.
- Play the video clip until approximately the desired point, pause the video clip, then play the video clip one frame at a time, stopping at the start point of the extract. This will be the first frame of the extract.
- If the start point of the video clip is also the start point of the extract, proceed to step 5.

#### <Procedure>

##### **Play:**

After pausing playback, press and hold the [▶] button for about 2 seconds for forward playback, or to the [◀] button for reverse playback.

##### **Pause:**

During playback, press the SET button.

##### **Accelerated playback:**

During playback, press the [◀] or [▶] button to change the playback speed.

##### **Single frame:**


After pausing playback, press the [▶] button to move forward one frame, or the [◀] button to move back one frame.

## 5 Press the [T/🔍] button.

- The start point of the video clip extract is set, and the screen to specify the end point appears.
- Specify the end point of the extract by following the same procedure as in step 4.

### <When joining the first and latter portions>

- ① Press the [W/🗑️] button.
  - Each time the [W/🗑️] button is pressed, the sections to delete and the sections to save are reversed.
- ② Specify the end point of the extract. The frame following the end point of the extract will be the start point of the latter portion to be joined.

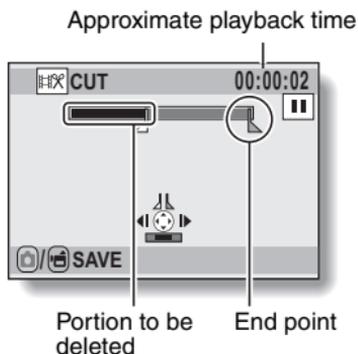

---

## PLAYBACK MENU 2

---

### 6 Press the [ / ] button.

- A screen appears for you to select either to save the edited video clip as a new (separate) file, or to delete the original video clip and replace it with the edited video clip.

#### **SAVE AS NEW:**


The edited video clip will be saved as a new file. The original video clip remains unchanged.

#### **OVERWRITE:**

The original video clip will be deleted. Only the edited video clip will be saved.

#### **REVIEW CLIP:**

Play back the edited video clip before saving it.

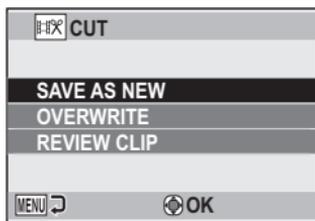

---

## **7** Select the desired option, and press the SET button.

- Editing starts.
- When editing ends, you are returned to the NORMAL Mode Playback Menu.

---

### **HINT**

- You will not be able to overwrite the file if the original file is protected.
- If the “Insufficient memory remaining” message appears, you will need to free some of the memory by deleting files that you do not need to keep.

---

### **CAUTION**

#### **Warning concerning the battery pack remaining charge**

- During the editing of lengthy video clips, the time to process the large amount of data can become quite long. To avoid problems caused by the battery pack becoming depleted in the middle of video clip editing, before starting to edit be sure that a sufficiently charged battery pack is installed in the camera, or connect the AC adaptor.
- It is recommended that a computer be used to edit long video clips.

---

## PLAYBACK MENU 2

---


### Joining video clips

---

#### CAUTION


- Video clips that were photographed in different modes cannot be joined.

- 1** Display the **NORMAL Mode Playback Menu (page 37)**, select **“EDIT VIDEO”**, and press the **SET** button.

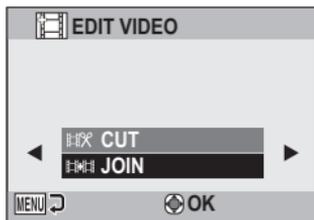

- 2** Select **“JOIN”** and press the **SET** button.

- The 8-image playback display for video clips appears.

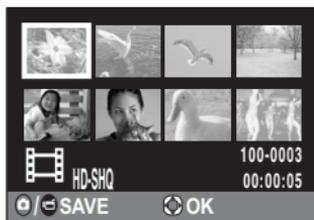

- 3** Move the orange frame to the video clip you wish to join, and press the **SET** button.

- The specified video clip is labeled with a number.
- Up to 9 video clips can be selected.
- To cancel a selection and remove the number label from a video clip, select the video clip and press the **SET** button.



---

**4** Press the [  /  ] button.

- A screen appears for you to select either to save the joined video clip as a new (separate) file, or to delete the original video clips and replace them with the joined video clip.

**SAVE AS NEW:**


The joined video clip will be saved as a new file. The original video clips remain unchanged.

**OVERWRITE:**

The original video clips will be deleted. Only the joined video clip will be saved.

**REVIEW CLIP:**

Play back the joined video clip before saving it.

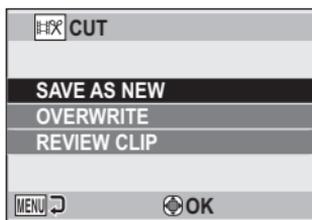

---

**5** Select the desired option, and press the SET button.

- Editing starts.
- When editing ends, you are returned to the NORMAL Mode Playback Menu.

---

## PLAYBACK MENU 2

---

### HINT

- If the file size of the video clip after editing exceeds 4 GB, it is not possible to either "SAVE AS NEW" or "OVERWRITE".
- You will not be able to overwrite the file if the original file is protected. If you want it to be erased, you will need to first remove the protection (pages 51 and 97).
- If the "Insufficient memory remaining" message appears, you will need to free some of the memory by deleting files that you do not need to keep.

---

### CAUTION

#### **Warning concerning the battery pack remaining charge**

- During the editing of lengthy video clips, the time to process the large amount of data can become quite long. To avoid problems caused by the battery pack becoming depleted in the middle of video clip editing, before starting to edit be sure that a sufficiently charged battery pack is installed in the camera, or connect the AC adaptor.
- It is recommended that a computer be used to edit long video clips.

## Printing instructions

In addition to using your printer to print out still images captured with your camera, as with conventional film, you can have prints made at shops offering digital print services. Moreover, this camera is DPOF-compatible, so you can use the camera to specify the number of prints, whether or not the date is displayed on the print, and also to request an index print.

### Display the printing instructions screen

- 1 Display the **NORMAL Mode Playback Menu** (page 37), select **“PRINT INSTRUCTIONS”**, and press the **SET** button.

**ALL IMAGES:**

The specified printing instructions apply to all the images.

**EACH IMAGE:**

The printing instructions are specified for each individual image.

**INDEX:**

All the still images are printed as miniature images (thumbnail images), several images on one print.

**ALL CLEAR:**

Clear all the printing instructions. This cannot be selected if no printing instructions have been specified for the image.



#### HINT

##### Printing a single frame from a video clip

- To print with a printer or have the digital print service shop print out a still image from a video clip, you must first save it (extract still) as a still image (page 71).

##### About the DPOF format

- DPOF (Digital Print Order Format) is a print order format. You can connect your camera to a DPOF-compatible printer to produce your prints. You can also set the printing instructions for the desired images, and then have the requested images printed automatically (page 141).

##### About the finished prints

- Rotated images (page 99) will be printed in their original orientation.
- The quality of the print output will differ depending on the print service and printer used.

---

## PLAYBACK MENU 2

---

### Specifying date imprinting and print quantities

You can specify printing instructions for each individual image (EACH IMAGE), or apply the printing instructions to all the images (ALL IMAGES).

---

#### 1 Display the Printing Instructions Screen (page 112).

---

#### 2 Select "ALL IMAGES" or "EACH IMAGE".

##### ALL IMAGES:

The printing instructions are applied to all the images.

##### EACH IMAGE:


The printing instructions are applied only to the image currently displayed.




---

#### 3 Press the SET button.

- The Date/Copies Print Screen appears.
- If "EACH IMAGE" was selected, press the [◀] or [▶] button to display the desired image to print.
- The printing instructions that are currently active for the displayed image are shown. You can press the [◀] or [▶] button to confirm the printing instructions for each image.

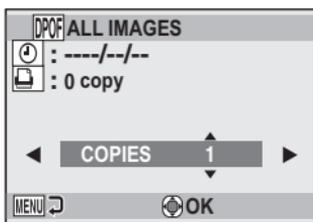

Printing instructions

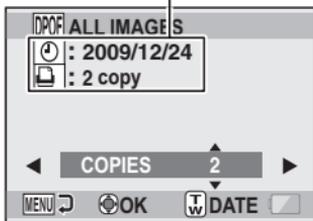


<Completed printing instructions>

---

## 4 Specify whether the date is displayed on the print, and the number of prints.


### <Specify the number of prints>

- Press the [T/🔍] or [W/📄] button.
  - The quantity indication changes.
  - Display the desired number of prints.
- Press the SET button.
  - The number of prints is set.

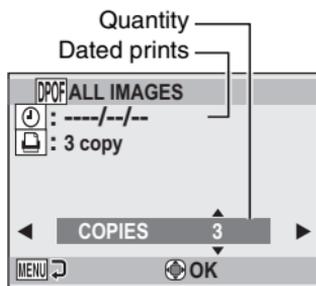

### <Specify dated prints>

- From the screen on which the number of prints is set, press the MENU button.
  - The screen to confirm dated prints appears.
    - YES:** Print the date on the photo.
    - NO:** Do not print the date.
- Press the [T/🔍] or [W/📄] button to indicate your selection.

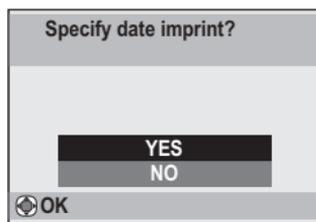

---

## 5 Press the SET button.

- The printing instructions for the requested print quantities and dated prints are stored.

## Index print

Printing out many small images on one sheet is called an “index print”. This is convenient for use as a list of the images you have captured.

# FILE INFO DISPLAY

On the Information Screen you can check what the settings were when a file was recorded with your camera.

- 1 Display the desired file on the camera monitor.

- 2 Press the MENU button for at least 1 second.

- The Information Screen appears.
- If the MENU button is pressed again, the Information Screen is canceled.


- ① Video clip mode settings
- ② Image or sound number
- ③ Protect setting
- ④ File size
- ⑤ Shooting or recording time
- ⑥ Exposure compensation setting
- ⑦ Aperture value
- ⑧ Shutter speed
- ⑨ Remaining battery charge
- ⑩ Date and time of image
- ⑪ Still image resolution settings
- ⑫ ISO sensitivity setting



<Video clip file>



<Still image file>

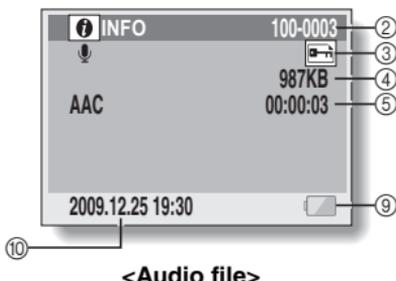

<Audio file>

# DISPLAY THE OPTION SETTING MENU


The camera settings are executed via the Option Setting Menu.

- 1 Set the operating mode to the **NORMAL** mode (page 36).
- 2 Press the **MENU** button to display the Menu Screen.



Option tab

- 3 Select an **Option tab** (1, 2 or 3), and press the **SET** button.
  - The Option Setting Menu appears.

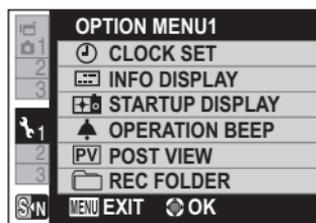

## To access a Setting Screen


- 4 Press the **[T/🔍]** or **[W/📄]** button to select the item you wish to set, and press the **SET** button.
  - The Setting Screen for the selected item appears.
  - To return to the Menu Screen, press the **MENU** button.

---

# INTRODUCTION TO THE OPTION SETTING MENU

---

Tab 1

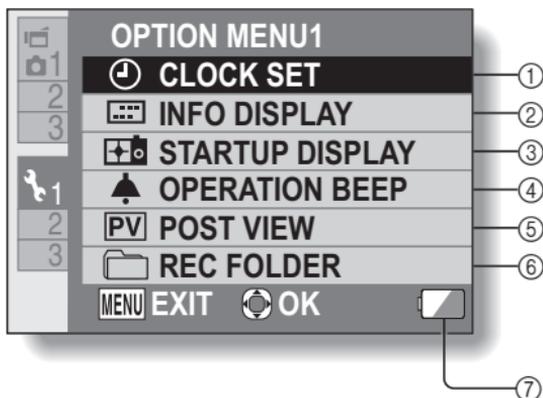

**① CLOCK SET setting (page 32)**

- Set the camera's clock.

**② INFO DISPLAY setting**

- Specify the information to display on the playback screen.

**SHOW ALL:**

Display the capture date and playback time (video clips).

**DATE & TIME:**

Display the capture date.

**COUNTER:**

Display the playback time when playing back a video clip.

**OFF:**

Do not display the capture date or playback time.

**③ STARTUP DISPLAY setting**

- Select the display that appears on the monitor when the camera is turned on in the recording mode.

**DATE & TIME:**

The camera's date and time setting is shown.

**Xacti:**

The Xacti logo is shown.

**PENGUIN:**

An animated character (penguin) is shown.

**OFF:**

No startup display.

**④ OPERATION BEEP setting**

- Settings for the camera's operation sounds, audio guide and volume.

**TURN ON/OFF:**

Mute or enable the sounds when the camera is turned on or off.

**SHUTTER:**

Select the sound that is produced when the [  ] button is pressed.

**KEY SW:**

Set the sounds that are produced when the camera is turned on or off, the audio guide setting, and the operation sounds for the camera buttons ([  ] button, SET button, etc.).

**AUDIO GUIDE:**

Mute or enable the camera's audio help guide.

**OPERATION VOL:**

Adjust the volume of the operation sounds.

**⑤ POST VIEW setting**

- Specify the duration that the captured image is shown on the monitor (post-view) after the [  ] button is pressed.


**⑥ REC FOLDER setting****⑦ Remaining battery charge display (page 134)**

---

## INTRODUCTION TO THE OPTION SETTING MENU

---

Tab 2

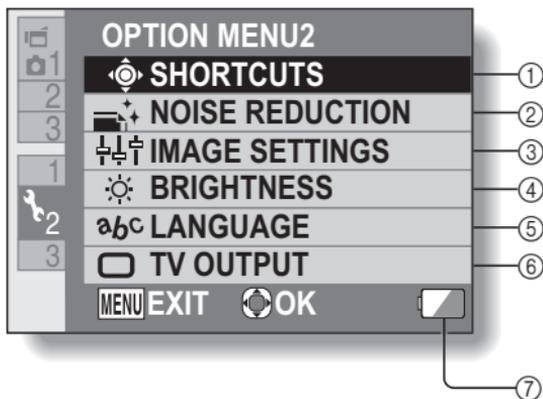

- ① **SHORTCUTS setting**  
(page 123)
- ② **NOISE REDUCTION setting**
  - Compared to normal shooting, when the PHOTO NR function is ON, the image processing time after shooting a still image is slightly longer.

**VIDEO NR:**  
Turn ON/OFF the image noise reduction function during video clip recording.

**PHOTO NR:**  
Turn ON/OFF the image noise reduction function during still image shooting.


**WIND SOUND NR:**  
Turn ON/OFF the wind noise reduction function during video clip/audio shooting.
- ③ **Image quality setting**
  - Set the vividness and sharpness of the images.
- ④ **BRIGHTNESS setting**
  - Adjust the brightness of the camera's monitor display.
- ⑤ **LANGUAGE setting**
- ⑥ **TV OUTPUT setting (page 125)**
- ⑦ **Remaining battery charge display (page 134)**

---

## INTRODUCTION TO THE OPTION SETTING MENU

---

Tab 3

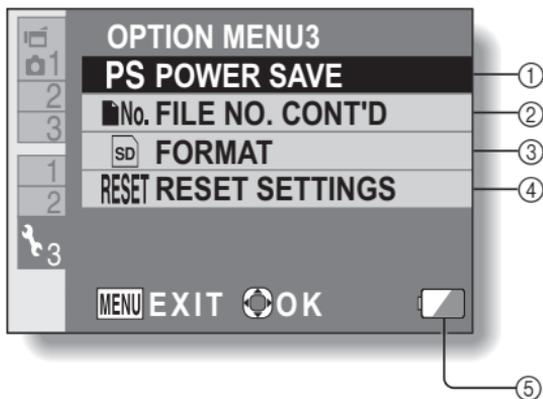

- ① **POWER SAVE setting (page 30)**
  - Specify the elapsed period of inactivity before the power save mode (to conserve battery power) is activated.
- ② **FILE NO. CONT'D setting (page 129)**
- ③ **FORMAT (page 131)**
- ④ **RESET SETTINGS**
  - Reset the camera settings to the factory-preset settings.
  - The following settings do not change with this procedure:
    - Date and time setting
    - Language setting
    - TV system setting
- ⑤ **Remaining battery charge display (page 134)**

# INTRODUCTION TO THE OPTION SETTING MENU

## Setting up the shortcuts

Assign functions (operation shortcuts) to the [◀] and [▶] buttons when they are pressed when the Recording Screen is displayed.


**1** Display the Option Setting Menu [2] (page 116).

**2** Select “SHORTCUTS”, and press the SET button.

- The Shortcuts Screen appears.
- : Assign the function when the [◀] button is pressed.
- : Assign the function when the [▶] button is pressed.

**RECOMMENDED SETTINGS:**

The most commonly used settings are automatically assigned.

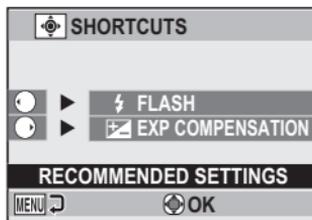

**3** Select the button to which you wish to assign the function, and press the SET button.

- The screen to assign a function to the button appears.

**OFF:** No operation shortcut is assigned to the button.

**AF LOCK:** Lock the focus (page 61).

**AE LOCK:** Lock the exposure setting.

**FLASH:** Set the flash operation (page 62).

**EXPOSURE:** Adjust the exposure (page 94).


**ISO:** Set the ISO sensitivity (page 89).

**SELF-TIMER:** Set the self-timer (page 85).

**EXPOSURE:** Set the exposure value for the exposure setting (pages 50 and 91)

**DISP. ON/OFF:** Turn the shooting settings display on/off.

**SEQUENTIAL:** Switch between sequential shots and single shots.

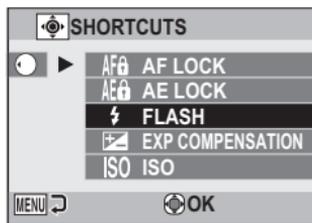

<When ○ is selected>

---


#### 4 Press the [T/🔍] or [W/📐] button.

- Select the function you wish to assign to the button.

---

#### 5 Press the SET button.

- The selected function is assigned to the button, and you are returned to the Shortcuts Screen.
- To assign functions to the other button, repeat steps 3 through 5.

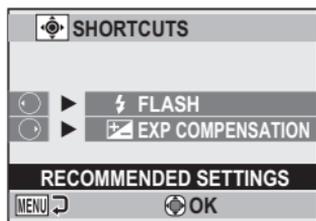

<When "RECOMMENDED SETTINGS" is selected>


---

#### 6 Press the MENU button.

- The screen to confirm the shortcut settings appears, and then you are returned to the Option Setting Menu.
- This completes the shortcuts setting.

<To confirm the assigned shortcuts>

- On the screen in step 2, press the MENU button, and the screen to confirm the shortcut settings appears.

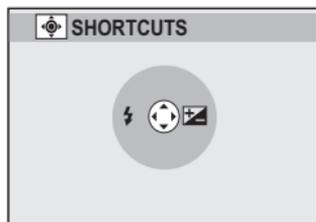

---

## INTRODUCTION TO THE OPTION SETTING MENU

---

### TV output setting

Specify the type of image signal that is output from your camera's USB/AV terminal.

---

- 1** Select "TV OUTPUT", and press the SET button.

**TV SYSTEM:**


Set the type of TV signal that is output from the USB/AV terminal.

**TV TYPE:**

Set the TV's aspect ratio.

**COMPONENT:**

Set the signal that is output from the USB/AV terminal.

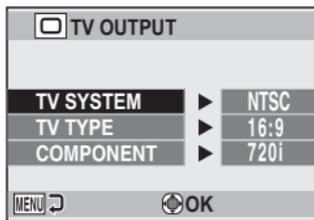

---

**2** Select the desired setting, and press the SET button.

- The screen to change the parameter for the selected setting appears.

**<If “TV SYSTEM” is selected>**

**NTSC:** Outputs NTSC video signals.

**PAL:** Outputs PAL video signals.

**<If “TV TYPE” is selected>**

**4:3:** Use this setting when a TV having an aspect ratio of 4:3 is connected.

**16:9:** Use this setting when a TV having an aspect ratio of 16:9 is connected.

**<If “COMPONENT” is selected>**

**720p:** Choose this setting if the video clip was recorded in the  mode. (Also, choose this setting if your TV is equipped with a 720p connector.)

**480p:** Choose this setting if the video clip was recorded in the  mode. (Also, choose this setting if your TV is equipped with a 480p connector.)

- Does not work with 480i connector.
- Select the setting that matches the mode in which the video clip was recorded. However, your TV may not support the recorded mode, so please refer to the specifications for the TV type indicated in parentheses.

---

**3** Press the [T/] or [W/] button to select the desired parameter.

---

**4** Press the SET button.

---

**5** Press the MENU button.

- This completes the TV output setting.

---

## INTRODUCTION TO THE OPTION SETTING MENU

---

### Relation between “TV TYPE” setting and TV display

The tables below show the video signal that is output when the “TV TYPE” setting is changed. However, note that for some TVs that have an auto-detect function, the output may not conform to the table, or the TV display may not change at all.

| “TVTYPE” setting | TV type to be connected | Image file to be displayed | TV display  |
|------------------|-------------------------|----------------------------|---|
| 4:3              | 4:3                     | Still image (4:3)          |  |
|                  |                         | Video clip in SD mode      |  |
|                  |                         | Video clip in HD mode      |  |

| "TVTYPE"<br>setting | TV type to be<br>connected | Image file to be<br>displayed | TV display  |
|---------------------|----------------------------|-------------------------------|---|
| 16:9                | 16:9                       | Still image<br>(4:3)          |  |
|                     |                            | Video clip in SD<br>mode      |  |
|                     |                            | Video clip in HD<br>mode      |  |

### CAUTION

#### If the TV display is not correct...

- If the appearance of the image on the TV monitor is not correct, you can either change the camera's "TV TYPE" setting, or change the screen size setting on your TV. To change the screen size setting on your TV, please refer to the instruction manual for your TV.

#### The aspect ratio of the output still image does not change to 16:9?

- The still image output will be 4:3 for images captured in a 4:3 still image mode.

---

## INTRODUCTION TO THE OPTION SETTING MENU

---

### File No. continued setting

If a newly formatted card is used, the file name (image number) of the captured image automatically begins from 0001. If the card is subsequently reformatted, or if a different reformatted card is used, the file names again begin from 0001. This is because the file number continued function is set to "OFF", and consequently it results in more than one card containing images with the same numbers. By setting the file number continued function to "ON", even if the card is reformatted or the card is replaced with another card, the consecutive numbering of file names continues from the last number recorded by the camera.

#### <File number continued function "OFF">

|        | File name (image number)    |
|--------|-----------------------------|
| Card A | 0001, 0002 ..... 0012, 0013 |

⋮  
Replace card

↓

|        |                             |
|--------|-----------------------------|
| Card B | 0001, 0002 ..... 0012, 0013 |
|--------|-----------------------------|

#### <File number continued function "ON">

|        | File name (image number)    |
|--------|-----------------------------|
| Card A | 0001, 0002 ..... 0012, 0013 |


⋮  
Replace card

↓


|        |                             |
|--------|-----------------------------|
| Card B | 0014, 0015 ..... 0025, 0026 |
|--------|-----------------------------|

- If Card B already has files in it when it replaces Card A, file names are assigned as follows.

**When the highest file number on Card B (before replacing) is lower than the highest file number on Card A:** the file name of the next recorded image continues from last file name recorded on Card A.

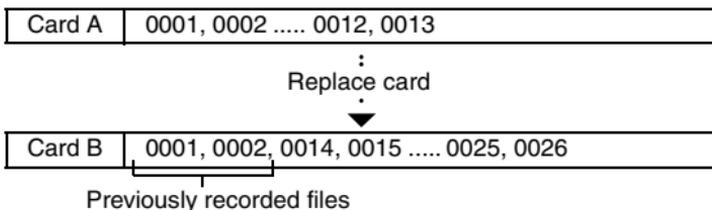

**When the highest file number on Card B (before replacing) is higher than the highest file number on Card A:** the file name of the next recorded image continues from last file name recorded on Card B.

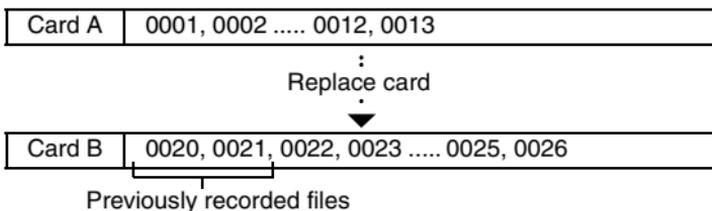

#### HINT

- Until the file number continued function is turned “OFF”, consecutive file names are assigned. It is recommended that the file number continued function be returned to “OFF” at the end of each photography session.

---

## INTRODUCTION TO THE OPTION SETTING MENU

---

### Formatting (initializing)

A card must be formatted with this camera:

- After purchasing, when used for the first time, or
- If it was formatted using a personal computer or another digital camera.

The card cannot be formatted if the lock switch is set to the "LOCK" position. Proceed with the format procedure after setting the lock switch to the unlocked position.

---

### CAUTION

#### Caution during formatting

- Do not turn off the power to the camera or eject the card during formatting.

#### Formatting erases the data

- When a storage medium is formatted, all recorded files on the medium are erased. Protected data (pages 51 and 97) is also erased, so before formatting a card, any data you want to keep should be copied to your personal computer's hard disk or other storage medium.

#### Caution regarding disposing/transferring the card (recovering data from a reformatted card)

- If a card is reformatted or the data is erased from the card using the camera or a computer, the card's control data may be merely modified and the data itself may not be completely erased from the card.
- In some cases it may be possible to recover the data from a reformatted card using special software for that purpose. However, if the camera is used to execute a full format, it will be impossible to recover the data even by the use of data recovery software.
- If you are disposing of a card, it is recommended that you physically destroy it. If you are transferring the card to someone else to use, it is recommended that you use the camera's full format function to reformat the card, or use commercially available software for erasing card data. Managing data is the responsibility of the user.


# CHECKING THE REMAINING CARD MEMORY

You can check how many images can be captured and how much recording time is available on the card. For a table showing the maximum number of images and recording time for specific cards, please see "Possible No. of Images/Possible Shooting Time/Possible Recording Time" on page 165.

## Checking the remaining number of images and video recording time

### 1 Set the camera to the recording mode (page 35).

- The remaining number of images appears in the upper left of the monitor.
- The remaining video recording time appears in the upper right of the monitor.
- The remaining number of images and video recording time will differ depending on the resolution and compression settings.

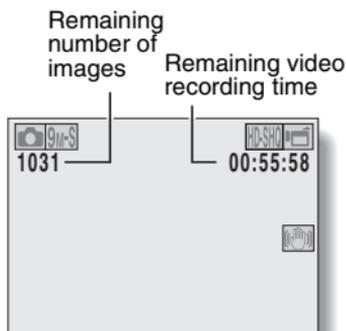


---

## CHECKING THE REMAINING CARD MEMORY

---

### For audio recordings

- 1 Set the camera to the audio recording mode (page 80).**
  - The remaining audio recording time is shown.

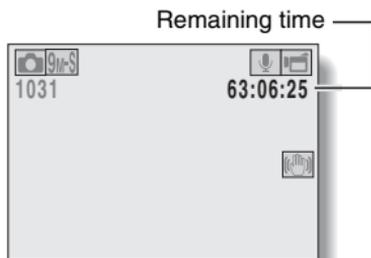

---

### HINT

- When the remaining number of images or the remaining video recording time is "0", you cannot capture any more images. To capture more images, either install a new card, or save the images to a computer and then delete them (page 74) from the card.
- When the remaining number of images or the remaining video recording time is "0", it may be possible to capture a few more images by setting a lower resolution setting (pages 56, 80 and 83), or selecting a different image quality setting.

---

# CHECKING THE REMAINING BATTERY PACK CHARGE

---

When using the battery pack, the remaining battery pack charge can be checked on the monitor. Make sure to check this indicator before capturing an image. For an indication of the possible length of time for battery pack operation, see page 164.

## 1 Display the Recording Menu or Playback Menu (page 37).

- The battery pack remaining charge indicator appears in the lower right corner of the monitor.
- Due to the battery pack characteristics, when the ambient temperature is low,  may appear early for an incorrect indication of the remaining charge.

Also, depending on the conditions of use of the camera or the ambient conditions (temperature, etc.), the indicated remaining charge may change. Therefore, this indication can only be used as a general approximation of the remaining charge.



Battery pack remaining charge indicator

---

## CHECKING THE REMAINING BATTERY PACK CHARGE

---

| Battery pack remaining charge indicator   | Battery remaining charge   |
|---|--|
|  | Approx. full.  |
|  | Power is low.  |
|  | It will soon be impossible to capture or play back images.   |
|  | If this icon flashes when the [  ] button or [  ] button is pressed, images cannot be captured. Recharge the battery pack. |

---

### HINT

- If any file is present, you can also check the remaining battery pack charge on the Information Screen (page 115).
- Battery life may differ even among battery packs of the same type.
- Depending on the usage of the camera (such as the number of times the flash is used, the use of the monitor, etc.) or the ambient temperature (temperatures below 10 °C [50°F]), the number of images that can be saved on a fully charged battery pack will vary greatly.
- It is recommended that you prepare an extra battery pack(s) when taking pictures at a wedding or while traveling, for example, so you don't miss capturing images of important moments due to the battery pack power running out. The same is recommended for taking photos in cold environments. (In a ski area, for example, the battery pack can be kept warm in your pocket until ready to use.)

---

# CONNECTING TO A TV

---

## CAUTION

### Insert and pull out the cable carefully

- When connecting the cables, make sure that the cable plugs are correctly oriented and that they match the shapes of the terminal sockets on the devices. Push the plugs in straight when connecting them. If undue force is used to connect a cable, it may permanently damage the connector pins in the terminal socket.
- Do not use excessive force when connecting and disconnecting cables.

**About image output:** The image output destination differs depending on the camera status.

| Connection cable             | Image output destination | Recording mode    |           | Playback mode |
|------------------------------|--------------------------|-------------------|-----------|---------------|
|                              |                          | Standby           | Recording |               |
| Dedicated AV interface cable | Camera monitor           | NTSC: ○<br>PAL: ○ | ○         | ○             |
|                              | TV                       | NTSC: ○<br>PAL: × | ×         | ○             |
| Dedicated component cable    | Camera monitor           | ×                 | ○         | ×             |
|                              | TV                       | ○                 | ×         | ○             |


○: Images are output    ×: Images are not output

---

## CONNECTING TO A TV

---

### Connecting to a standard video input terminal

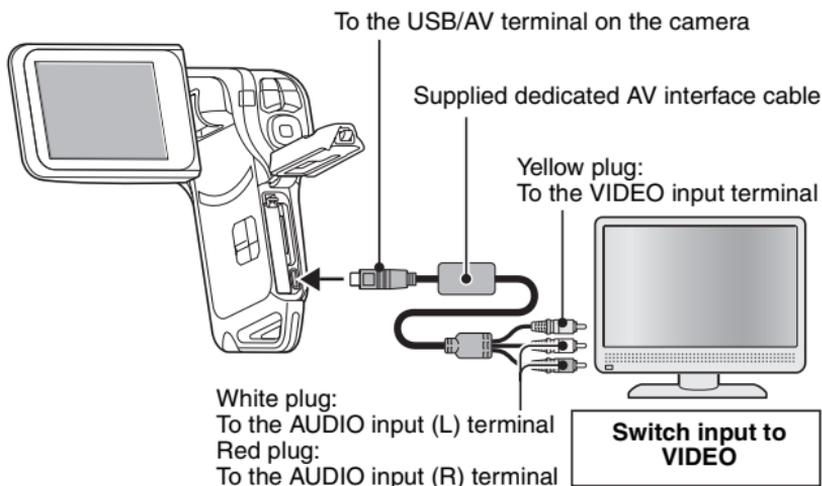

---


#### HINT

#### Copying (dubbing) images to a DVD recorder

- Please refer to the section on "Dubbing" in the instruction manual for your DVD recorder.

## Connect to the 480p/720p terminal

If your TV has a 480p/720p input terminal, you can enjoy the high video quality of component output from your camera.

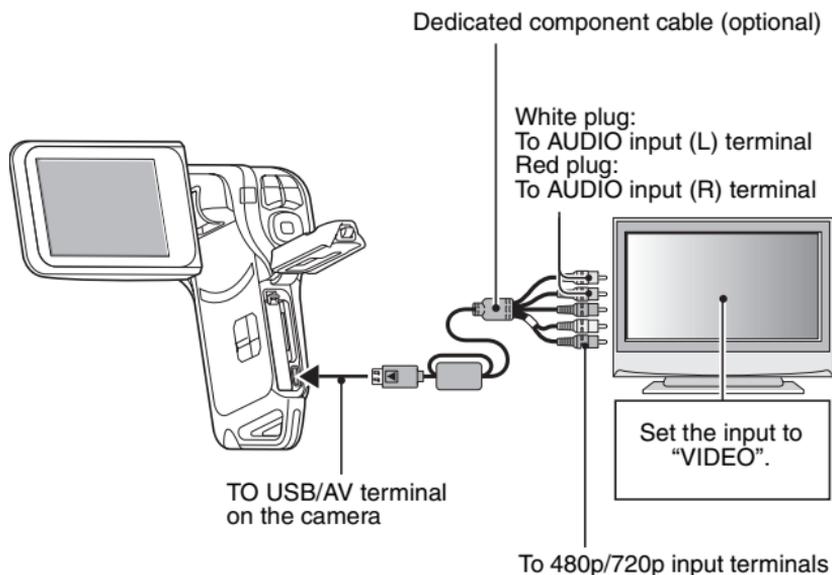

### CAUTION

If your TV does not have 480p/720p video input capability

- The images will not appear on the TV.

---

## PLAYING BACK ON A TV

---

- After connecting the camera to the television, switch the TV input to the terminal to which the camera is connected.
- The playback method is the same as when viewing images on the camera's monitor (use the TV to adjust the volume).
- The same playback procedure as when playing back with the camera is used to play back audio recordings as well.

# PRINTING

Your camera supports the PictBridge function. By connecting the camera directly to a PictBridge-enabled printer, the camera's monitor can be used to select images and initiate printing (PictBridge printing).

Use the dedicated USB interface cable to connect the camera to a printer.


## Print preparations

**1 Turn the printer on, and use the supplied USB interface cable to connect the camera to the printer.**

- Connect the camera's USB/AV terminal to the printer's USB connector.

**2 Turn on the camera (page 30).**

- The USB Connection Screen appears on the camera's monitor.

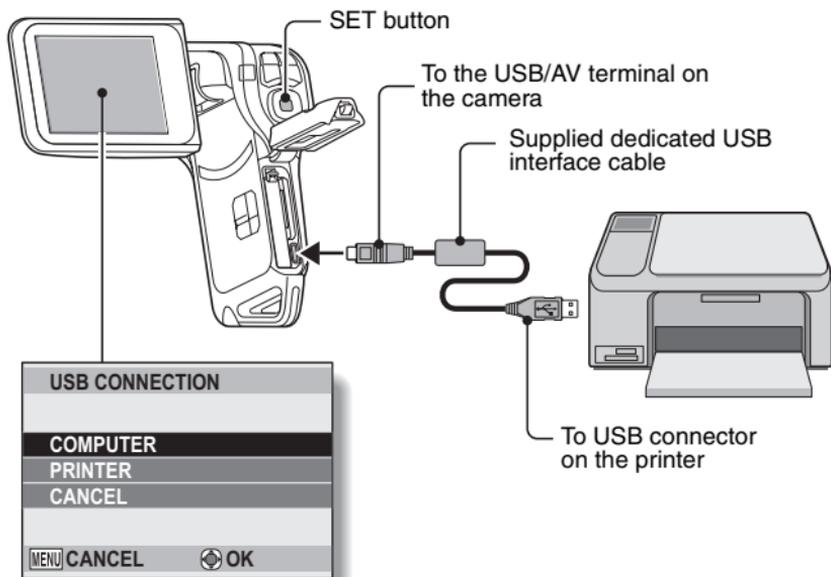

---


## PRINTING

---

**3** Select “PRINTER”, and press the SET button.

**4** The PictBridge printing mode is activated.

- The camera switches to the PictBridge printing mode, and the PictBridge Menu appears.

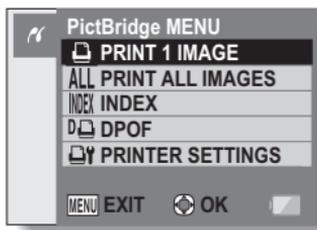

**5** Select the desired type of printing, and press the SET button.

**PRINT 1 IMAGE:** Select the still images you wish to print.

**PRINT ALL IMAGES:** Print all the still images.

**INDEX:** Print all the still images as thumbnail images, many images per print.

**DPOF:** Print images according to the print order settings.

**PRINTER SETTINGS:** Print images according to settings specified by the camera, such as paper size, type, size, layout, printing quality, etc.

---

**HINT****To cancel printing**

- ① **During printing, press the [W/ ] button.**
  - The confirmation screen to cancel printing appears.
- ② **Select “CANCEL” and press the SET button.**
  - If “EXIT” is selected and the SET button is pressed, printing resumes.

**About printing all the images**

- Printing is not possible if there are more than 999 images in the card.
- Delete unwanted images before printing.

**About DPOF printing**

- DPOF printing is not possible if your printer is not DPOF-compatible.

**About the printer settings**

- The printer setting parameters shown on the Printer Settings Screen will differ depending on the printer that is connected.
- To use printer values that do not appear on your camera's Printer Settings Screen, select “[ ]”.
- If a function set by the camera is not available in the printer, the camera's printer setting will automatically change to “[ ]”.

---

**CAUTION****Insert and pull out the cable carefully**

- When connecting the cables, make sure that the cable plugs are correctly oriented and that they match the shapes of the terminal sockets on the devices. Push the plugs in straight when connecting them. If undue force is used to connect a cable, it may permanently damage the connector pins in the terminal socket.
- Do not use excessive force when connecting and disconnecting cables.

**Caution when connecting a printer**

- If the power to the printer is turned off while it is connected, the camera may not operate correctly. If the camera does not operate correctly, disconnect the USB interface cable, turn off the camera, and then reconnect the cable.
- During PictBridge printing, the camera's button operation response is slower.
- If the camera is powered by the battery pack for printing, make sure that the remaining battery charge is sufficient.

# COMMONLY ASKED QUESTIONS

If you have a question about the camera operation, you might find the answer in this compilation of commonly asked questions.

|                 | Question  | Answer  | Action  |
|-----------------|---|---|---|
| <b>Power</b>    | Why doesn't the power turn on?  | Due to cold temperatures, the battery pack temporarily lost its power.                    | Place the camera in your pocket to warm it up before using it.                                      |
|                 | Why is the battery pack consumed so quickly even after it was fully recharged?                              | The ambient temperature is very low.  | Keep the battery pack in an environment of 10 to 40 °C (50 to 104 °F).                              |
|                 | Why doesn't recharging end?   | The battery pack life has expired.  | Replace with a new battery pack. If this is not effective, consult your dealer.                     |
|                 | Why does the  icon appear? | The remaining battery pack power is low.  | Use the AC adaptor, and DC adaptor (optional) or replace the battery pack with a fully charged one. |
| <b>Shooting</b> | Why does the multi-indicator flash red?   | A recorded file is being saved on the card.   | Not a malfunction. Wait until the multi-indicator turns off.  |
|                 | Why doesn't the flash operate?  | The camera has determined that the image is bright enough and the flash is not necessary. | Not a malfunction. Capture the image; the camera will determine when the flash is necessary.        |

|          | Question   | Answer | Action  |
|----------|--|--------|---|
| Shooting | Are the settings retained even after the camera is turned off? | —      | All settings except the self-timer and the exposure compensation are retained even after the camera is turned off.  |
|          | Which resolution setting should I use?                         | —      | Select the resolution setting according to the intended use.<br><b>12M</b> , <b>9M-H</b> , <b>9M-S</b> , <b>6.7M</b> , <b>9M</b> : Appropriate for printing letter-size or larger, and for printing a close-up of part of a photo (trimming).<br><b>2M</b> , <b>2M</b> : For printing standard photo (photo service) sizes.<br><b>0.9M</b> , <b>0.3M</b> : For photos displayed on a web page, or sent as e-mail attachments. |

## COMMONLY ASKED QUESTIONS

|          | Question  | Answer | Action   |
|----------|---|--------|--|
| Shooting | What is the difference between the digital zoom and the optical zoom? | —      | Because shooting with the optical zoom uses the optics of a physical lens, you can shoot without losing minute details in the image. The digital zoom, on the other hand, works by magnifying a portion of the image that hits the image sensor and may produce a coarser image. |
|          | How can I get the distant view into focus?                            | —      | Set the scene select function to the landscape  mode when photographing. Or, set the focus range setting to manual focus <b>[MF]</b> , and set the distance to $\infty$ .                       |

|                       | <b>Question</b>   | <b>Answer</b>                                 | <b>Action</b>  |
|-----------------------|---|---|--|
| <b>Monitor</b>        | When used in cold weather, why does the image seem to leave traces as it moves?                     | Condition due to the monitor characteristics. | Not a malfunction. Spots that appear in the monitor only appear in the monitor and will not be recorded with the images.   |
|                       | Why does the displayed image contain some red, blue and green dots, or why are black spots visible? |   |  |
| <b>Viewing images</b> | Why is the image too bright?  | The subject was too bright.                   | When capturing an image, devise a way to compensate for a bright subject, for example, by changing the shooting angle.   |
|                       | Why is the image out of focus?  | The focus is not locked properly.             | Hold the camera correctly and slowly press the [  ] button halfway to lock the focus. Then press the [  ] button all the way to capture the image. |
|                       | Why is a part of the image missing?   | The image was captured at close range.        | When capturing an image at close range, compose the image using the monitor.   |

## COMMONLY ASKED QUESTIONS

|                           | Question   | Answer   | Action   |
|---------------------------|--|--|--|
| <b>Viewing images</b>     | Why is there no image (□) is shown)?                                   | This may happen when trying to play back images stored on a card from a different digital camera.    | Play back images that were recorded on a card using this camera.                           |
|                           | Why is the playback image distorted?                                   | If the subject moves or the camera is moved during recording, a distorted image may sometimes occur. | Not a malfunction. This is a characteristic of the CMOS sensor.                            |
|                           | Why isn't the magnified image clear?                                   | Due to the characteristics of the camera, magnified images appear less clear.                        | Not a malfunction.   |
|                           | Why isn't the captured image clear?                                    | The image was captured using the digital zoom.   | Not a malfunction.   |
|                           | Can I play back image and sound files that I edited using my computer? | —  | We cannot guarantee the accurate playback of files that have been edited using a computer. |
|                           | Why is there a motor-like sound during video clip playback?            | The sound of the camera's mechanical action was recorded.  | Not a malfunction.   |
| <b>Connecting to a TV</b> | Why is there no sound?   | The volume on the TV is set to the minimum.  | Adjust the volume on the TV.   |

|                 | <b>Question</b>   | <b>Answer</b>   | <b>Action</b>   |
|-----------------|---|---|---|
| <b>Printing</b> | Why does a message appear during PictBridge printing?                     | There is a problem with the printer.  | Please refer to the instruction manual for your printer.  |
| <b>Misc.</b>    | The "Cannot edit video clips with unlike settings" message appears.       | You have attempted to join video clips having different resolutions or frame rates. | Select video clips that have the same resolution and frame rate.  |
|                 | Why is a noise heard from a nearby TV or radio during battery recharging? | Electromagnetic waves are emitted from the charger.                                 | Move the AC adaptor further away from the TV or radio when recharging the battery pack.                     |
|                 | Why does the "Insufficient memory remaining" message appear?              | There is no more available memory on the card or in the camera's internal memory.   | Delete unnecessary files, or use a card that has more memory available.                                     |
|                 | Why does the "Card is protected" message appear?                          | The lock switch on the card is in the locked (protect) position.                    | Move the lock switch to the unlocked position.  |
|                 | Why can't the camera be operated?   | A temporary internal circuitry problem may be the cause.                            | Remove the battery pack from the camera, wait a few minutes, then reinstall the battery pack and try again. |

## COMMONLY ASKED QUESTIONS

|       | Question   | Answer   | Action   |
|-------|--|--|--|
| Misc. | A problem such as inability to record or play back occurs. | The card contains files that were saved using a device other than this camera. | After saving your files to a different medium, format the card.  |
|       | Can I use my camera abroad?                                | —  | When the camera is connected to a TV, you can switch the camera's video output to NTSC or PAL. If you have questions about using the charger and power cord abroad, please consult with a dealer near you for advice.  |
|       | Why does the "System error" message appear?                | A problem has occurred within the camera or card.                              | Check the following items:<br>① Remove the card and then install it again.<br>② Remove the battery pack and then install it again.<br>③ Install a different card.<br>If "System error" still appears after performing the above steps, then take the camera to the dealer for service. |

# TROUBLESHOOTING

Before taking your camera to the repair shop, check the following table for a possible solution to the problem.

## Camera

|       | Problem  | Cause   | Action  | Reference page |
|-------|--|---|---|----------------|
| Power | No power.  | The battery pack is dead.                         | Recharge the battery pack, or replace with a fully charged battery pack. Or connect the AC adaptor and DC adaptor (optional). | 23, 25         |
|       |  | The battery pack has not been inserted correctly. | Reinsert the battery pack, making sure to orient it correctly.  |                |
|       | A blinking temperature warning icon  is shown, and the camera does not turn on. | The battery pack is too hot.                      | Wait for the battery pack to cool down.   | 29             |
|       | The camera turns off by itself.  | The power save function is operating.             | Turn on the camera again.   | 30             |

## TROUBLESHOOTING

|          | Problem  | Cause  | Action  | Reference page |
|----------|--|--|---|----------------|
| Shooting | An image is not captured when the [  ] button or [  ] button is pressed. | The power is not turned on.  | If the power save function was activated, turn on the camera before shooting.<br>If the camera was turned off, press the ON/OFF button to turn it on. | 30             |
|          |  | The maximum number of images that can be captured or the maximum video clip recording time has been reached. | Install a new card.   | 28             |
|          |  |  | Delete the images that are not necessary.   | 74             |
|          | The flash does not operate.  | The flash off mode is selected.  | Set the flash to automatic flash mode or forced flash mode.   | 46, 62         |
|          |  | The battery pack is dead.  | Recharge the battery pack, or replace with a fully charged battery pack.<br>Or connect the AC adaptor and DC adaptor (optional).                      | 23, 25         |

|                 | <b>Problem</b>  | <b>Cause</b>  | <b>Action</b>  | <b>Reference page</b> |
|-----------------|---|---|--|-----------------------|
| <b>Shooting</b> | The digital zoom does not work.   | The still image is set to  . The digital zoom setting is set to "OFF". | Set the still image to  or lower. Set the digital zoom setting to "ON". | 46, 50                |
|                 | A warning tone (beep-beep-beep) sounds, and it is not possible to take a picture using the self-timer.                            | The battery pack is consumed.   | Recharge the battery pack, or replace with a fully charged battery pack. Or connect the AC adaptor and DC adaptor (optional).                            | 23, 25                |
|                 | When zooming in or out, the zoom movement stops momentarily.  | The optical zoom has moved to the maximum magnification position.   | Not a malfunction. Release the  button once, then press it again.       | 66                    |
|                 | There is noise in the captured image.   | The ISO sensitivity setting is too high.  | Set the ISO sensitivity to a lower setting.  | 89                    |
|                 | The  icon appears, and shooting is not possible. | The camera's internal temperature is high.  | Discontinue shooting, and wait for the camera to cool down before using it again.  | 29                    |
| <b>Monitor</b>  | No playback image appears.  | The camera is not set to the playback mode.   | Press the REC/PLAY button to set the camera to the playback mode.  | 35                    |

## TROUBLESHOOTING

|                | Problem                  | Cause  | Action  | Reference page |
|----------------|--------------------------|--|---|----------------|
| Viewing images | The image is too dark.   | The flash was blocked by a finger or other object. | Hold the camera correctly, and make sure the flash is not obstructed. | 53             |
|                |                          | The subject was too far away.                      | Capture the image in the range of operation of the flash.             | 163            |
|                |                          | The subject was lit from behind.                   | Use the forced flash mode.  | 46, 62         |
|                |                          |  | Use the exposure compensation function.                               | 94             |
|                |                          |  | Use the spot light-measuring mode.                                    | 88             |
|                |                          | There is not enough light.                         | Adjust the ISO sensitivity setting.                                   | 89             |
| Viewing images | The image is too bright. | The forced flash mode is selected.                 | Select a different flash mode.  | 46, 62         |
|                |                          | The subject was too bright.                        | Use the exposure compensation function.                               | 94             |
|                |                          | The ISO sensitivity setting is incorrect.          | Set the ISO sensitivity to <b>AUTO</b> .                              | 89             |

|                    | Problem  | Cause  | Action   | Reference page |
|--------------------|--|--|--|----------------|
| Viewing images     | The image is not in focus.   | The subject is too close to the camera.  | Capture the image with the subject within the photographable range. Select the correct focus setting for your needs. | 57, 88         |
|                    |  | The focus setting is not correct.  |  |                |
|                    | The camera moved when the [  ] button was pressed. (camera shake) | Hold the camera correctly and slowly press the [  ] button halfway to lock the focus. Then press the [  ] button all the way to capture the image. | 53, 60   |                |
|                    | The focus is not locked properly.  |  |  |                |
| The lens is dirty. | Clean the lens.  | —  |  |                |

## TROUBLESHOOTING

|                           | Problem  | Cause   | Action   | Reference page |
|---------------------------|--|---|--|----------------|
| <b>Viewing images</b>     | The colors of the images captured indoors are not correct. | This is due to ambient lighting.                                  | Capture the image using the forced flash mode.                       | 46, 62         |
|                           |  | The white balance setting is incorrect.                           | Set the white balance setting correctly.                             | 90             |
|                           | A part of the image is missing.                            | The strap or a finger was blocking the lens.                      | Hold the camera correctly, and make sure the lens is not obstructed. | 53             |
|                           | "No image" is shown.                                       | There is no file in the internal memory or in the installed card. | Play back after capturing images or making audio recordings.         | —              |
|                           | During audio playback, there is no sound.                  | The playback volume setting on the camera is too low.             | Adjust the playback volume.  | 73             |
| <b>Connecting to a TV</b> | There is no color in the image. The image is distorted.    | The TV output setting is not correct.                             | Select the correct TV output setting.                                | 125            |

|                           | <b>Problem</b>   | <b>Cause</b>   | <b>Action</b>   | <b>Reference page</b> |
|---------------------------|--|--|---|-----------------------|
| <b>Connecting to a TV</b> | No image or sound.   | The camera is not correctly connected to the TV.                               | Follow the instructions to make the connection correctly.                               | 120, 136              |
|                           |  | The TV input is not set correctly.   | Set the input on the TV to "VIDEO".   |                       |
|                           | The edge of the image is cut off.  | This is a characteristic of the TV.  | Not a malfunction.  | —                     |
| <b>Image editing</b>      | You cannot edit or rotate an image.                                      | The protect mode is set.   | Cancel the protect mode.  | 97                    |
| <b>Charging</b>           | The battery pack is not charging.  | Correctly insert the battery pack in the charger.                              | Make sure that the battery pack is correctly oriented when inserting it in the charger. | 23                    |
| <b>Misc.</b>              | The "Image is protected" message appears and the file cannot be deleted. | You have attempted to delete a file that is protected from accidental erasure. | Set the protect setting for the file to "UNLOCK".                                       | 97                    |

## TROUBLESHOOTING

|       | Problem   | Cause   | Action   | Reference page |
|-------|---|---|--|----------------|
| Misc. | The audio guide does not sound.   | The audio guide setting is set to "OFF".  | Set the audio guide setting to "ON".   | 118            |
|       | The recording capacity is less than that indicated in the section "Possible No. of Images/Possible Shooting Time/Possible Recording Time" (page 165). | The recording capacity is less than the value specified for the card.   | Depending on the card, the capacity may be less than the specified value. Please refer to the instructions that accompanied the card.                      | —              |
|       | The battery pack appears to be swollen.   | Normal change occurring with battery use. Even with normal correct use of the lithium-ion battery, it has a tendency to swell as the number of charge and discharge cycles adds up and it gradually approaches the end of its service life. | Not a safety hazard. If the battery quickly becomes depleted, for example, it has reached the end of its service life. Replace it with a new battery pack. | —              |

## Notes regarding the Scene Select feature and filters

### Scene Select

| Setting  | Remarks   |
|--|---|
| Sports<br>              | Focus range: Fixed at  .   |
| Portrait<br>            | Exposure: Fixed at  .  |
| Landscape<br>           | Focus range: Fixed at <br>Face chaser: Fixed at "OFF".<br>Exposure: Fixed at  .   |
| Night view portrait<br> | Focus range: Fixed at <br>Exposure: Fixed at <br>Still image setting: When sequential shots is active, changes to  .   |
| Snow & beach<br>        | Focus range: Fixed at <br>Exposure: Fixed at  .   |
| Fireworks<br>           | Focus range: Fixed at <br>Flash: Fixed at <br>ISO sensitivity: Fixed at <br>Face chaser: Fixed at "OFF".<br>Exposure: Fixed at <br>Still image setting: When sequential shots is active, changes to  . |

## TROUBLESHOOTING

| Setting  | Remarks   |
|--|---|
| Lamp*<br> | Focus range: Fixed at  .<br>Flash: Fixed at  .<br>Still image NR: Fixed at "OFF".<br>Exposure: Fixed at <b>P</b> .<br>Still image setting: When sequential shots is active, changes to <b>2M</b> .<br>When set to <b>6.7M</b> or larger, the setting becomes <b>2M</b> .<br>ISO sensitivity: Fixed at <b>AUTO</b> . |

\* The shutter speed decreases to 1/15 sec.

### Filter

| Setting   | Remarks  |
|---|--|
| Monochrome<br> | Still image mode: <b>12M</b> cannot be selected. |
| Sepia<br>      |  |

### About the scene select function and focus range settings

- The scene select function changes to **AUTO** when the focus range is set to  or **MF**.
- Even if you set the focus range to  or **MF**, it changes to  when the scene select function is set to any setting other than **AUTO**.

# SPECIFICATIONS

## Camera

|   |   |
|---|---|
| Recorded image file format                            | <p><b>Still images:</b><br/>JPEG format (DCF, DPOF, Exif 2.2 compliant)<br/>Note: Designed mainly by the Japan Electronics and Information Technology Industries Association (JEITA), DCF (Design rule for Camera File system) is standard for digital still camera image files to provide interoperability between digital photography devices for the images stored on removable memory cards. However, it is not guaranteed that all devices will support the DCF standard.</p> <p><b>Video clips:</b><br/>Conforms to ISO-standard MPEG-4 AVC/H.264*</p> <p><b>Audio:</b><br/>MPEG-4 audio (AAC compression)<br/>48 kHz sampling rate, 16-bit stereo format</p> |
| Data storage media                                    | Internal memory: Approx. 43 MB<br>SD Memory Card (accepts a maximum 32 GB SDHC Memory Card)   |
| Image sensor/<br>camera effective<br>number of pixels | 1/2.5-inch (1.0 cm) CMOS sensor<br>Still images: Approx. 9 million pixels<br>Videos (HD mode): Approx. 7.31 million pixels<br>Videos (SD mode): Approx. 8.84 million pixels   |

\* Video clip files recorded with models VPC-CA65 and VPC-CG65 are in the same H.264 format as this model. However, such files cannot be played back, since they are not compatible due to differences such as the data compression method.

## SPECIFICATIONS

|   |   |
|---|---|
| <p>Still image shooting mode (recording resolution)</p> | <p><b>12M</b>: 4000 × 3000 pixels (approx. 12 million pixels)<br/> <b>9M-H</b>: 3456 × 2592 pixels (approx. 9 million pixels, low compression)<br/> <b>9M-S</b>: 3456 × 2592 pixels (approx. 9 million pixels, normal compression)<br/> <b>6.7M</b>: 3456 × 1944 pixels (approx. 6.7 million pixels, 16:9 aspect ratio)<br/> <b>2M</b>: 1600 × 1200 pixels (approx. 2 million pixels)<br/> <b>0.9M</b>: 1280 × 720 pixels (approx. 900,000 pixels, 16:9 aspect ratio)<br/> <b>0.3M</b>: 640 × 480 pixels (approx. 300,000 pixels)<br/> <b>9M</b>: 3456 × 2592 pixels (approx. 9 million pixels, sequential shots)<br/> <b>2M</b>: 1600 × 1200 pixels (approx. 2 million pixels, sequential shots)</p> |
| <p>Video clip recording mode (recording resolution)</p> | <p>HD mode<br/> <b>HD-SHQ</b>: 1280 × 720 pixels, 30 fps (30p)<br/> SD mode<br/> <b>TV-HR</b>: 640 × 480 pixels, 60 fps (60p)<br/> <b>TV-SHQ</b>: 640 × 480 pixels, 30 fps (30p)<br/> <ul style="list-style-type: none"> <li>The 60 fps frame rate of this camera is 59.94 fps, and the 30 fps frame rate is 29.97 fps.</li> </ul> </p>   |
| <p>Lens</p>   | <p>Focal length: f = 6.3 mm to 31.7 mm, Optical 5× zoom<br/> Open: F = 3.5 (Wide) to 4.7 (Tele)<br/> 8 groups, 11 elements (including three with five aspheric surfaces)<br/> Galvanometer iris<br/> Internal ND filter</p> <p>35 mm film camera conversion<br/> Still image shooting: 38 mm to 190 mm (5×)<br/> Video clip recording: 38 mm to 190 mm (5×)</p>   |
| <p>Exposure control type</p>                            | <p>Programmable AE/Shutter speed priority AE/<br/> Aperture priority AE/Manual exposure control<br/> Exposure compensation available from the shooting Setting Screen (0 ±1.8 EV in 0.3 EV steps)</p>   |
| <p>Light-measuring mode</p>                             | <p>Multi-section measuring, center-weighted measuring, spot measuring</p>   |

|                              |  |
|------------------------------|--|
| Range                        | Normal mode:<br>50 cm (19.69 in.) to infinity<br>Super macro mode:<br>1 cm (0.39 in.) to 80 cm (31.50 in.) (Wide end only)   |
| Digital zoom                 | For shooting:<br>1× to approx. 12×<br>For playback:<br>1× to 62.5× (varies with resolution)  |
| Shutter speed                | Still image shooting mode: 1/2 to 1/1,500 sec.<br>(Maximum approx. 2 seconds when scene select function set to lamp  )<br>(During flash: 1/30 to 1/1,500 sec.)<br>Sequential shots mode: 1/15 to 1/1,500 sec. (no flash)<br>Video clip recording mode: 1/30 to 1/10,000 sec.<br>(1/15 sec. max.: when the scene select function is set to lamp  or in the high sensitivity mode)   |
| Sensitivity                  | Still image shooting (standard output sensitivity*)/<br>video clip recording mode:<br>Auto (video clip recording: ISO 200 to 1600; still image shooting: ISO 50 to 400)/ISO 50, ISO 100, ISO 200, ISO 400, ISO 800, and ISO 1600 (switchable from shooting Setting Screen) <ul style="list-style-type: none"> <li>• Sensitivity measured in compliance with the ISO standard (ISO 12232:2006).</li> <li>• Maximum ISO sensitivity up to 3200 equivalent when Scene Select function is set to .</li> </ul> |
| Minimum subject illumination | 16 lux (1/30 sec in the scene select AUTO mode)<br>4 lux (1/15 sec in the HIGH SENSITIVITY or lamp mode)   |
| Image stabilizer             | Video: Electronic<br>Still image: Electronic   |

## SPECIFICATIONS

|                                    |   |   |
|------------------------------------|---|---|
| Monitor                            | 2.5" (6.4 cm) low-temperature polysilicon TFT color liquid crystal, approx. 150,000 pixels  |   |
| Flash working range                | GN = 3.0<br>Approx. 10 cm (3.94 in.) to 1.7 m (5.58 ft.) (Wide)<br>Approx. 80 cm (31.50 in.) to 1.3 m (4.27 ft.) (Tele)   |   |
| Flash modes                        | Auto-flash, forced flash, flash off   |   |
| Focus                              | TTL-type AF (still image shooting mode: 9-point range finder/spot focus; video clip recording mode: Continuous focus), manual focus (16 steps)                          |   |
| Self-timer                         | Approx. 2-second delay, 10-second delay   |   |
| Ambient environment                | Temperature   | 0 to 40 °C (32 to 104 °F) (operation),<br>-20 to 60 °C (-4 to 140 °F) (storage) |
|                                    | Humidity  | 30 to 90% (operating, no condensation)<br>10 to 90% (storage, no condensation)  |
| Water-resistant                    | Compliant with JIS protection grade 8 standards (according to tests conducted in-house by Sanyo)<br>Can be submerged at a maximum depth of 1.5 m, for up to 60 minutes. |   |
| Power supply                       | Battery pack (supplied)   | Li-ion battery pack (DB-L20):<br>1 supplied                                     |
|                                    | AC adaptor (sold separately)  | VAR-G8<br>For use with DC adaptor VAR-A2 (sold separately)                      |
| Power consumption                  | 3.1 W (When using the Li-ion battery during recording)  |   |
| Dimensions (excluding protrusions) | 70.4 (W) × 40.5 (D) × 111.4 (H) mm<br>2.77 (W) × 1.59 (D) × 4.39 (H) in.<br>(Maximum dimensions)<br>Volume: Approx. 192 cc  |   |
| Weight                             | Approx. 230 g (8.11 oz.) (camera only [without battery pack and card])<br>Approx. 249 g (8.78 oz.) (including battery pack and card)                                    |   |

## Camera connectors

|   |                          |   |
|---|--------------------------|---|
| USB/AV<br>(communication/audio<br>and video output)<br>terminal | Dedicated regrouped jack |   |
|   | Audio output             | 310 mVrms (−8 dBs), 47 kΩ, stereo   |
|   | Video output             | 1.0 Vp-p, 75 Ω unbalanced, sync negative, composite video, NTSC color TV system/PAL TV system (switchable from the Option Setting Menu) |
|   | USB                      | USB 2.0 High Speed<br>PC camera: USB video class  |

## Battery life

|          |                           |   |
|----------|---------------------------|---|
| Shooting | Still image shooting mode | Approx. 170 images:<br>CIPA standard (when a Sandisk 2 GB SD Memory Card is used)   |
|          | Video clip recording mode | Approx. 70 minutes:<br>Recorded in  mode |
| Playback |                           | Approx. 220 minutes:<br>Monitor on, continuous playback   |

- Until battery pack runs out when using a fully charged battery pack at a 25 °C (77 °F) ambient temperature.
- The operation time may vary depending on the conditions of the battery pack and the conditions of use. Especially when used at temperatures below 10 °C (50 °F), the battery pack operation time is significantly reduced.

## SPECIFICATIONS

### Possible No. of Images/Possible Shooting Time/ Possible Recording Time


| Shooting/<br>recording<br>mode | Resolution<br>setting | Internal<br>memory     | SD Memory Card               |                               |
|--------------------------------|-----------------------|------------------------|------------------------------|-------------------------------|
|                                |                       |                        | 8 GB                         | 16 GB                         |
| Still image<br>mode            | 12M                   | 9 images               | 1,680 images                 | 3,370 images                  |
|                                | 9M-H                  | 8 images               | 1,530 images                 | 3,080 images                  |
|                                | 9M-S                  | 11 images              | 2,120 images                 | 4,260 images                  |
|                                | 6.7M                  | 14 images              | 2,670 images                 | 5,360 images                  |
|                                | 2M                    | 32 images              | 5,790 images                 | 11,600 images                 |
|                                | 0.9M                  | 41 images              | 7,540 images                 | 15,100 images                 |
|                                | 0.3M                  | 53 images              | 9,570 images                 | 19,200 images                 |
|                                | 9M-L<br>2M-L          | 11 images<br>32 images | 2,120 images<br>5,790 images | 4,260 images<br>11,600 images |
| Video clip<br>mode             | HD-SHQ                | 38 sec.                | 1 hr. 55 min.                | 3 hr. 51 min.                 |
|                                | TV-HR                 | 56 sec.                | 2 hr. 51 min.                | 5 hr. 43 min.                 |
|                                | TV-SHQ                | 1 min. 49 sec.         | 5 hr. 32 min.                | 11 hr.                        |
| Audio<br>recording<br>mode     | —                     | 43 min.                | 130 hr.                      | 261 hr.                       |

- If the continuous recording time of a voice memo exceeds about 13 hours, the recorded file is saved once, and then recording continues in a new file. In the video clip recording mode, when the size of the file being recorded exceeds 4 GB, the recorded file is saved once, and then recording continues in a new file. (These 4 GB segments are automatically created. The recording session continues until you stop recording, but video clip or voice memo recording is temporarily interrupted while the file is being saved.)
- The above values apply when an SD Memory Card by Sandisk is used.
- Even with cards of the same capacity, the amount of data that can actually be stored may differ depending on the card brand, etc.
- The continuous shooting time for each video clip will differ depending, for example, on the card capacity, environmental conditions (temperature and shooting conditions, etc.).

## Concerning the multi-indicator

The camera's multi-indicator will light or flash depending on the different camera operations.

| Color  | Multi-indicator status |      | Camera status                          |
|--------|------------------------|------|--|
| Green  | Lit                    |      | Connected to computer or printer (USB) |
|        | Flashing               |      | Power save mode activated              |
| Red    | Flashing               | Slow | During self-timer operation            |
|        |                        | Fast | Accessing internal memory/card data    |
| Orange | Lit                    |      | Connected to TV/VIDEO (AV)             |

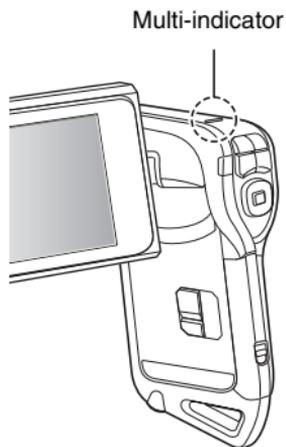

## SPECIFICATIONS

### Supplied battery pack charger

|                             |  |  |
|-----------------------------|--|--|
| Part No.                    | VAR-L20NI  |  |
| Power source                | AC 100 to 240 V, 50 to 60 Hz, 10 VA,<br>MAX: 0.1 A                     |  |
| Rated output                | DC 4.2 V, 650 mA   |  |
| Compatible batteries        | Supplied or separately sold Lithium-ion battery pack (DB-L20)          |  |
| Ambient environment         | Temperature  | 0 to 40 °C (32 to 104°F) (when charging)<br>-20 to 60 °C (-4 to 140°F) (storage) |
|                             | Humidity   | 10 to 90% (no condensation)  |
| Dimensions                  | 46 (W) × 92 (D) × 21.2 (H) mm<br>1.81" (W) × 3.62" (D) × 0.83" (H) in. |  |
| Weight (without power cord) | Approx. 55 g (1.9 oz.)   |  |
| Power cord rated value      | VPC-CA9  | AC 125 V, 7 A  |
|                             | VPC-CA9EX  | AC 250 V, 2.5 A  |

- The VPC-CA9GX model is supplied with a power cord that is appropriate for the region of destination.
- When using the supplied battery pack charger abroad, the power cord may need to be replaced in accordance with local requirements. Please contact your local dealer for details.

### Supplied Li-ion battery pack

|                     |  |   |
|---------------------|--|---|
| Model number        | DB-L20   |   |
| Voltage             | 3.7 V  |   |
| Capacity            | 720 mAh  |   |
| Ambient environment | Temperature  | 0 to 40 °C (32 to 104 °F) (during use, when charging)<br>-10 to 30 °C (14 to 86 °F) (storage) |
|                     | Humidity   | 10 to 90% (no condensation)   |
| Dimensions          | 39.4 (W) × 35.5 (D) × 6.0 (H) mm<br>1.55 (W) × 1.40 (D) × 0.24 (H) in. |   |
| Weight              | Approx. 19 g (0.7 oz.)   |   |

## Others

Mac OS and QuickTime are trademarks of Apple Inc., registered in the U.S. and other countries.

Microsoft and Windows are registered trademarks of Microsoft Corporation in the USA and other countries.

Intel and Pentium are registered trademarks of Intel Corporation (USA).

In this manual, the Microsoft® Windows® 2000 operating system, Microsoft® Windows® XP operating system, and Microsoft® Windows® Vista operating system are collectively referred to as "Windows".

Software Red Eye by FotoNation™ 2003-2005 is a trademark of FotoNation® Inc.

ArcSoft is a registered trademark of ArcSoft, Inc.

Red Eye software© 2003-2005 FotoNation In Camera Red Eye - covered by U.S. Patent No. 6,407,777. Other patents Pending.



SDHC is a trademark.



All other company and product names are registered trademarks or trademarks of their respective owners.

---

### CAUTION

- It is forbidden to copy this manual, whole or in part, without prior written permission.
- All images and illustrations given in this manual are for explanation purposes and may differ slightly from that of the actual product. Also, actual specifications are subject to change without prior notice and therefore may differ from the contents of this manual.

---

## SPECIFICATIONS

---

**Before capturing those important shots, be sure to first take a test shot to confirm that your camera is set up and ready to go**

- Sanyo Electric shall not be held responsible for any problems resulting from the use of this camera.
- Sanyo Electric declines all responsibility for damages due to improper use of the camera, failure to adhere to the instructions given in this manual, or repairs or changes done by those other than a technician authorized by the manufacturer.
- Sanyo Electric shall not be held responsible for any damage caused by optional devices or consumable items used with the camera other than those supplied with the camera or those specified by Sanyo Electric.
- Sanyo Electric shall not be held responsible for any losses or loss of revenue resulting from the loss of data caused by the malfunction, or the repairing of a malfunction, of the camera.
- The images captured with this camera will differ in quality from pictures taken with a standard film camera.

---

# HINTS FOR TAKING PICTURES

---

Taking great pictures in difficult surroundings is easier than you might think. By keeping a few points in mind and choosing the correct settings, you can create photos that you'll be proud to display and share.

## If images are blurred even when the autofocus is used

Your camera employs an autofocus function. When you snap a picture using the autofocus, the camera automatically adjusts the settings so that the image will be in focus. If you are getting blurred images even when using the autofocus, one or more of the following might be the reason.

### ■ How the autofocus works

The autofocus is activated when the [  ] button is gently pressed halfway. Press the [  ] button slightly, and the target mark will appear on the monitor to indicate that the autofocus has been activated. Next, continue to gently press the [  ] button all the way to snap the picture. This two-step method is the way to ensure that your photos are perfectly focused.

### <The shutter speed and aperture are displayed>

- In the NORMAL mode, the shutter speed and aperture settings are shown on the Shooting Screen. You can use them as a reference when shooting.

### ■ Reasons for unfocused images

- ① The [  ] button was pressed all the way in one step.
- ② After the image was focused, the subject moved.
  - Even if camera focuses the subject once, if the distance between the camera and the subject is changed, the subject may become out of focus.
- ③ The focus setting is not set for the correct distance.
  - If you shoot a close-up subject with the camera set to the normal focus mode, or if you shoot a subject at normal distance with the camera set to the super macro (close-up) mode (pages 57 and 87), the image will not be in focus.

### ■ Preventing blurred images

- ① Confirm that the camera is set to the correct focus mode for your subject.
- ② Hold the camera correctly, and press the [  ] button halfway.
- ③ Wait for the target mark to appear in the monitor, and holding the camera steady, gently continue to press the [  ] button all the way down.

Following these steps for a gentle but firm pressing of the [  ] button will ensure that you get beautifully focused photos.

---

## HINTS FOR TAKING PICTURES

---

### Photographing a moving subject

Situation: You would like to snap an action shot of a moving child or pet. The autofocus is activated, but because the subject is moving, the image may be blurred. In particular, when the distance between the camera and the subject is changing, it is difficult to lock the focus on the subject. Here are some hints for successfully capturing images of moving subjects.

#### ■ Reasons for unfocused images

When the [  ] button is gently pressed halfway, the camera's autofocus works by determining the distance between the camera and the subject. Once the subject is in focus, if it then moves before the picture is snapped, the image may be out of focus. This often happens when you once lock the focus on a subject and then wait for the right moment to snap the picture. And, conversely, a blurred image may result if you press the [  ] button all the way in one step in an attempt to quickly capture an action scene, thus failing to activate the autofocus in time.

#### ■ Preventing blurred images (How to use the manual focus [page 87])

In addition to the autofocus, a manual focus mode is also incorporated in your camera. In the autofocus mode, the distance between the camera and the subject is automatically determined when you press the [  ] button halfway. In contrast to this, with the manual focus mode, you manually set the focus by specifying the correct distance between the camera and the subject before taking the picture.

#### ■ How to photograph a moving subject

- ① Set the camera's focus mode to the manual focus. Set the focus distance to the correct distance between the camera and the subject.
- ② When the subject is at the set focus distance, gently press the [  ] button all the way down.

#### <Advantage of using the manual focus>

- Images can be quickly captured without waiting for the autofocus to activate.
- Because you are presetting the focus distance, the focus can be more accurate.

#### <Using the manual focus effectively>

- When photographing a moving subject, press the [  ] button just before the subject reaches the focus distance, and the shutter will be released when the subject is at the correct distance.
- Use manual focus to avoid incorrectly focused images when there is an object between the camera and the subject you wish to focus on.

## Shooting portraits (portrait mode )

### Points:

- Choose a background that doesn't detract from your subject.
- Move in close to your subject.
- Pay attention to lighting and how it affects your subject.

---

### NOTE

- If the background is distracting, it will not show your subject to his best advantage. Move in closer to your subject or zoom in so that the background does not compete with the subject.
- In portrait photography your subject is clearly the central figure, so try techniques that allow the subject to stand out.
- If light is coming from behind your subject (backlit), his face will appear dark. You can get a better picture by using the flash, for example, or changing the exposure compensation setting.

## Photographing moving subjects (sports mode )

### Points:

- Match the camera's movement with that of the subject.
- Set the zoom to the Wide end (wide-angle).
- Don't be too hesitant to press the [  ] button, or you'll miss the action.

---

### NOTE

- Tips to not missing those great action shots: Make sure you're holding the camera correctly. Keep the subject in the lens at all times, moving the camera with him while waiting for the right shot. Move your whole body—not just your arms—with the camera while shooting.
- Blurred images are more likely when the zoom is set to the Tele end than the Wide end. Set the zoom as close as possible to the Wide end.
- Learn to press the [  ] button quickly yet smoothly the instant your photo chance occurs.

---

## HINTS FOR TAKING PICTURES

---

### Night photography (night view portrait mode )

**Points:**

- Avoid camera shake.
- Increase the ISO sensitivity.

---

**NOTE**

- Camera shutter speed during night photography is considerably slower, so there is a much greater chance that your photographed images will be blurry. Stabilize the camera when shooting.
- You can photograph your subject with the night scene in the background by using the flash. Be careful not to shoot too close to the subject, however, or your subject's face will appear too bright.
- After the flash operates, keep the camera and the subjects motionless for about 2 seconds.

### Photographing scenery (landscape mode )

**Points:**

- Shoot using a high resolution.
- For zoom photography, use the optical zoom.
- Pay attention to picture composition.

---

**NOTE**

- When shooting with a wide-angle setting, or if you intend to enlarge the photo, the higher the resolution, the better.
- To zoom in on distant scenery, it's better to use the optical zoom. Using the digital zoom produces a coarser image. Hold the camera securely, keeping your elbows close to your body and making sure the camera is stable. Taking care to stabilize the camera will increase the likelihood of getting a clear photo.
- Don't forget to pay attention to picture composition; note perspective and be aware of how the placement of objects affects the scene.

**SANYO**

**SANYO Electric Co., Ltd.**